 


2012 **ALTIMA**

QUICK REFERENCE GUIDE



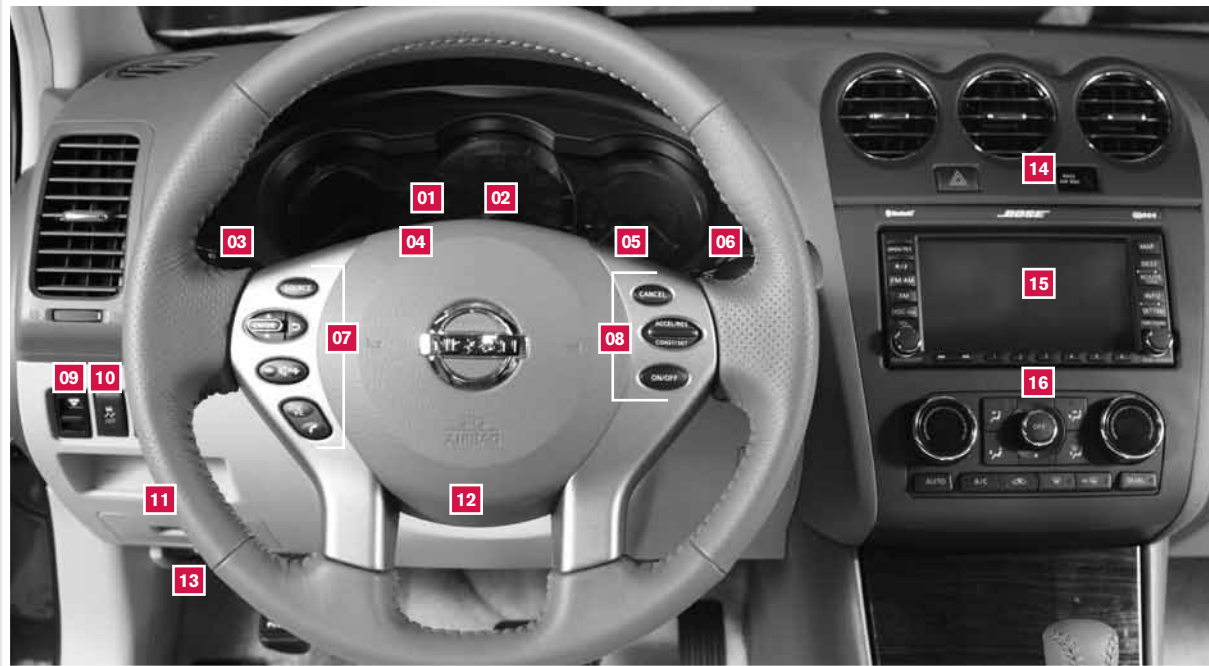

- |                                             |                                                                        |                                                     |                                                 |
|---------------------------------------------|------------------------------------------------------------------------|-----------------------------------------------------|-------------------------------------------------|
| <b>01</b> LOW TIRE PRESSURE WARNING LIGHT   | <b>05</b> TWIN TRIP ODOMETER / TRIP CHANGE BUTTON*                     | <b>09</b> TRUNK LID OPENER                          | <b>13</b> HOOD RELEASE*                         |
| <b>02</b> VEHICLE INFORMATION DISPLAY       | <b>06</b> WINDSHIELD WIPER / WASHER SWITCH                             | <b>10</b> VEHICLE DYNAMIC CONTROL (VDC) OFF SWITCH* | <b>14</b> FRONT PASSENGER AIR BAG STATUS LIGHT* |
| <b>03</b> HEADLIGHT AND TURN SIGNAL CONTROL | <b>07</b> STEERING WHEEL SWITCHES FOR AUDIO* / BLUETOOTH* / NAVIGATION | <b>11</b> INTELLIGENT KEY PORT                      | <b>15</b> AUDIO AND NAVIGATION SYSTEM           |
| <b>04</b> INSTRUMENT BRIGHTNESS CONTROL*    | <b>08</b> CRUISE CONTROL                                               | <b>12</b> TILT / TELESCOPIC STEERING COLUMN*        | <b>16</b> AUTOMATIC CLIMATE CONTROLS            |

\*See your Owner's Manual for information.

**ESSENTIAL INFORMATION**

Loose Fuel Cap . . . . . 2  
 Tire Pressure Monitoring System (TPMS) . . . . . 2

**FIRST DRIVE FEATURES**

NISSAN Intelligent Key® System . . . . . 3  
 Trunk Lid Release . . . . . 4  
 Power Seat Adjustments (if so equipped) . . . . . 4  
 Passenger Rear Seat Entry/Exit (Coupe models only) . . . . . 5  
 Outside Mirror Control Switch . . . . . 5  
 Starting/Stopping the Engine . . . . . 5  
 Headlight Control Switch . . . . . 6  
 Windshield Wiper/Washer Switch . . . . . 7  
 Automatic Climate Controls (if so equipped) . . . . . 7  
 FM/AM/XM® Satellite Radio with CD/DVD Player (if so equipped) . . . . . 9  
 Cruise Control . . . . . 10  
 Fuel-Filler Door . . . . . 10

**SYSTEM GUIDE**

Vehicle Information Display . . . . . 11  
 Bluetooth® Hands-free Phone System (if so equipped) . . . . . 11  
     System Operating Tips . . . . . 11  
     Bluetooth® System without Navigation (if so equipped) . . . . . 12  
     Bluetooth® System with Navigation (if so equipped) . . . . . 14  
 Navigation System (if so equipped) . . . . . 16  
 DVD Player (if so equipped) . . . . . 16  
 HomeLink® Universal Transceiver (if so equipped) . . . . . 17



- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**”, the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” and the “**Starting and driving (section 5)**” of your Owner’s Manual.



To view detailed instructional videos, go to [www.nissanownersinfo.mobi/2012/altima](http://www.nissanownersinfo.mobi/2012/altima) or snap this barcode with an appropriate barcode reader.



Additional information about your vehicle is also available in your Owner’s Manual, Navigation System Owner’s Manual and at [www.nissanusa.com](http://www.nissanusa.com).

## LOOSE FUEL CAP

- A **LOOSE FUEL CAP** warning message will display in the vehicle information display **01** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will disappear when the vehicle detects the fuel-filler cap is properly tightened and the reset button **02** is pressed.
- If the cap is not properly tightened, the Malfunction Indicator Light SERVICE ENGINE SOON may also illuminate.

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.



## TIRE PRESSURE MONITORING SYSTEM (TPMS)

- A **CHECK TIRE PRESSURE** warning message will appear in the vehicle information display **01** and the low tire pressure warning light **02** will illuminate when one or more tires are low on pressure and air is needed.

- The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mile (1.6km) at moderate speeds.

- After tire pressures are adjusted, drive the vehicle at speeds above 16 MPH (25km/h). The **CHECK TIRE PRESSURE** warning message and low tire pressure warning light will disappear.

 
- When the low tire pressure warning light flashes for 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked by a NISSAN dealer.

- Tire pressure rises and falls depending on the heat caused by the vehicle’s operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light to illuminate. If the warning light illuminates in low ambient temperature, check the tire pressure in your tires.

- Check the tire pressure (including the spare tire) often and always prior to long distance trips.

- The Tire and Loading Information label contains valuable information. Please refer to section 9, “Technical and consumer information”, in your Owner’s Manual for the location of the Tire and Loading Information label.

For more information, refer to the “**Instruments and controls (section 2)**”, the “**Starting and driving (section 5)**” and the “**Maintenance and do-it-yourself (section 8)**” of your Owner’s Manual.

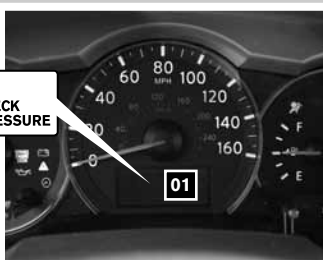






## NISSAN INTELLIGENT KEY® SYSTEM

The NISSAN Intelligent Key® system allows you to lock or unlock the vehicle, open the trunk and start the engine.

 
NOTE: It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).



- The operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, push either door handle request switch **01** once or press the  button **02** on the keyfob.
- To unlock the vehicle, perform one of the following procedures:
  - Push either door handle request switch **01** once; the corresponding door will unlock. Push the door handle request switch **01** again within 1 minute; all other doors will unlock, or
  - Press the  button **03** on the keyfob to unlock the driver's side door. Press the  button again; all other doors will unlock.
- To release the trunk lid, press the  button **04** for more than 0.5 seconds. Lift the trunk lid to access the trunk.
- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button **05** for more than 0.5 seconds. Once activated, the panic alarm and headlights will stay on for 25 seconds.

## NISSAN INTELLIGENT KEY® BATTERY DISCHARGE

- If the battery in the Intelligent Key is almost discharged, the guide light **06** of the Intelligent Key port blinks and the Intelligent Key battery discharge indicator **07** is displayed in the vehicle information display.
- To start the engine under these circumstances, insert the Intelligent Key into the key port with the buttons facing upward and the key ring end toward you until it latches into place. Then push the ignition switch to start the engine.
- To remove the Intelligent Key from the port, push the ignition switch to turn the engine off and then pull the Intelligent Key out of the port.
- The Intelligent Key port does not charge the Intelligent Key battery. If you see the low battery indicator **07**, replace the battery in the Intelligent Key.

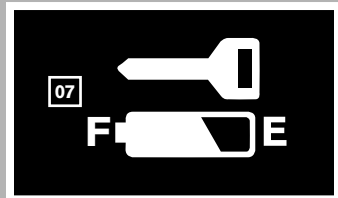

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**”, the “**Starting and driving (section 5)**” and the “**Maintenance and do-it yourself (section 8)**” of your Owner's Manual.


# first drive features

## TRUNK LID RELEASE

Use one of the following methods to open the trunk:

- Push the trunk opener request switch **01**, located on the far right under the trunk handle, for more than 1 second while carrying the NISSAN Intelligent Key® with you.



- Press the trunk release button  **02** on the Intelligent Key for more than 0.5 seconds.



- From inside the vehicle, push the trunk lid release switch **03** located on the instrument panel to the left of the steering wheel.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.



## POWER SEAT ADJUSTMENTS (if so equipped)

- To slide the seat forward or backward, push the control switch **01** forward or backward.
- To adjust the angle of the seatback, push the switch **02** forward or backward.

SEAT LIFTER (if so equipped for driver’s seat)

- To adjust the angle and height of the seat cushion, push the front or rear end of the switch **01** up or down.



LUMBAR SUPPORT (if so equipped for driver’s seat)

- To adjust the seat lumbar area, push the front or rear end of the switch **03**.

For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.

## PASSENGER REAR SEAT ENTRY/EXIT (Coupe models only)

 
### ENTRY FROM OUTSIDE THE VEHICLE

- Pull the seat recliner lever **01** to the uppermost position pushing the seatback forward. Slide the entire seat forward to access the rear seat.

### EXITING FROM INSIDE THE VEHICLE

- Pull the upper seatback release lever **02** to the uppermost position, pushing the seatback forward. Slide the entire seat forward to exit from the rear seat.

For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.

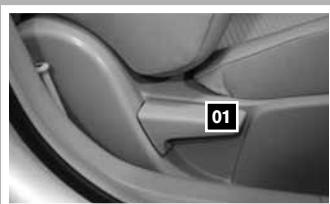

## OUTSIDE MIRROR CONTROL SWITCH

- To select the right or left side mirror, turn the control switch **01** right or left.
- To adjust the mirror angle, move the control switch up, down, right or left.
- To prevent accidentally moving the mirror, turn and set the switch to the middle “neutral” position.



For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

## STARTING/STOPPING THE ENGINE

### CONTINUOUSLY VARIABLE TRANSMISSION (if so equipped)

- Depress the brake pedal.
- Move the shift lever to **P (PARK)**.
- Push the ignition switch to start the engine.

NOTE: It is important to make sure the NISSAN Intelligent Key® is with you (that is, in your pocket or purse).

### MANUAL TRANSMISSION (if so equipped)

- Depress the brake pedal.
- Move the shift lever to **N (NEUTRAL)**.
- Depress the clutch pedal to the floor.
- Push the ignition switch to start the engine.



# first drive features

## TURNING THE ENGINE OFF

- For a Continuously Variable Transmission, move the shift lever to the **P (PARK)** position, apply the parking brake and push the ignition switch.
- For a manual transmission, apply the foot brake, place the vehicle in 1<sup>st</sup> gear, apply the parking brake and push the ignition switch.

## EMERGENCY ENGINE SHUT OFF

To shut off the engine in an emergency situation while driving, perform one of the following procedures:

- Rapidly push the push-button ignition switch 3 consecutive times, or
- Push and hold the push-button ignition switch for more than 2 seconds.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

## HEADLIGHT CONTROL SWITCH

### HEADLIGHT CONTROL

- Turn the headlight control switch to the  $\exists \text{D} \text{D}$  position **01** to turn on the front parking, tail, license plate and instrument panel lights. Turn the switch to the  $\exists \text{D}$  position **02** to turn on the headlights.

 


### AUTOLIGHT SYSTEM

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **03** then turn the ignition switch to **ON**. To deactivate the autolight system, turn the headlight control switch to the **OFF**,  $\exists \text{D} \text{D}$  **01** or  $\exists \text{D}$  position **02**.

### HIGH BEAM SELECT


- Push the headlight control switch forward **04** to select the high beam function. The blue indicator light  $\exists \text{D}$  illuminates in the instrument panel. Pull the headlight control switch back to the original position to select the low beam. The blue indicator light goes off.
- Pull and release the headlight control switch **05** to flash the headlight high beams on and off.

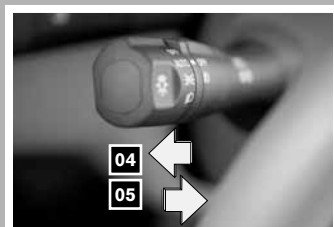

### FOG LIGHT SWITCH (if so equipped)

NOTE: The headlights must be on and the low beams  $\exists \text{D}$  selected for the fog lights to operate.

 - Turn the switch (inside collar) to the  $\exists \text{D}$  position **06** to turn the fog lights on.
- Turn the switch (inside collar) to the **OFF** position to turn the fog lights off.

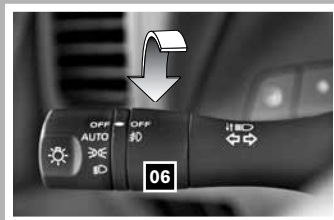



For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.



## WINDSHIELD WIPER/WASHER SWITCH

  - Move the lever to the following positions to operate the windshield wipers:

- 01** Mist (**MIST**) - One sweep operation of the wipers.
- 02** Intermittent (**INT**) - Wipers operate intermittently. The intermittent speed can be adjusted by twisting the time control ring **03**.
- 04** Low (**LO**) - Wipers operate at a continuous low-speed.
- 05** High (**HI**) - Wipers operate at a continuous high-speed.
- 06** Pull the lever toward you to activate the washer. The wipers will operate several times.

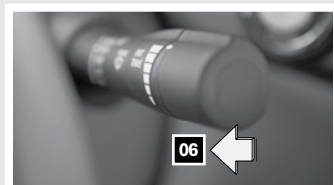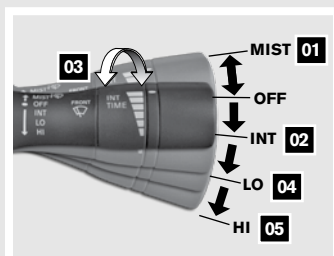

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.



## AUTOMATIC CLIMATE CONTROLS (if so equipped)

### **01** AUTO BUTTON

- The auto mode may be used year-round. Press the **AUTO** button to turn the system on and the system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.


### **02** DRIVER’S SIDE TEMPERATURE CONTROL DIAL

- Turn the driver’s side temperature control dial left for cooler or right for warmer air.

### **03** PASSENGER’S SIDE TEMPERATURE CONTROL DIAL

- Turn the passenger’s side temperature control dial left for cooler or right for warmer air.

### **04** FAN SPEED CONTROL DIAL/OFF BUTTON

- Turn the fan speed control dial  to the left to decrease fan speed or to the right to increase fan speed.
- Press the button to turn the system off.





# first drive features

## 05 DUAL BUTTON




- Press the **DUAL** button to turn the passenger's side temperature controls on or off. This will allow the passenger's side temperature to be adjusted independently from the driver's side by turning the passenger's side temperature control dial.

## 06 AIR FLOW CONTROL BUTTONS


- Press the preferred air flow control button to select the following air flow outlets:

-  Air flows from the center and side vents
-  Air flows from the center, side and foot vents
-  Air flows mainly from the foot vents
-  Air flows from the defroster and foot vents


## 07 AIR RECIRCULATION BUTTON

- Press the air recirculation button  to recirculate air inside the vehicle. The indicator light on the button will come on. This system is used to avoid certain outside odors and helps to adjust the inside vehicle temperature more effectively.
- The air recirculation mode can only be selected if the air flow control mode is in the  or  position.

## 08 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the front window defroster button  to turn the system on. The A/C automatically turns on when the defroster mode is selected. This feature removes humidity from the air.
- Set the fan speed control dial **04** and the temperature control dial **02** to their maximum settings.

## 09 REAR WINDOW AND OUTSIDE MIRROR (if so equipped) DEFROSTER SWITCH

- Push the rear window defroster switch **RR**  to turn the system on or off.
- The rear window defroster automatically turns off after approximately 15 minutes.

## 10 A/C BUTTON

- Press the **A/C** button to manually turn the A/C on or off.

For more information, refer to the "Instruments and controls (section 2)" and the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.



## FM/AM/XM<sup>®\*</sup> SATELLITE RADIO WITH CD/DVD PLAYER (if so equipped)

### 01 VOL/ON-OFF CONTROL KNOB

- Press the **VOL/ON-OFF** control knob to turn the system on or off.
- Turn the **VOL/ON-OFF** control knob right or left to increase or decrease the volume.

### 02 SEEKING BUTTON

- To scan quickly through each broadcasting station, press the seeking button left ◀◀ or right ▶▶.
- For XM<sup>®</sup> satellite radio, press ◀◀ or ▶▶ to switch to the first channel of the previous or next category.
- Press ◀◀ or ▶▶ to change tracks on a CD.
- Press and hold ◀◀ or ▶▶ to fast forward or rewind a track on a CD.

### 03 TUNE/FOLDER/AUDIO CONTROL KNOB

- To manually tune the radio, turn the **TUNE/FOLDER/AUDIO** control knob left or right.

### 04 STATION SELECT BUTTONS

Twelve stations can be set for the FM band, six for the AM band and eighteen for XM<sup>\*</sup> satellite radio.

- To store a station in a preset you must first select a radio band by pressing the **FM-AM** 05 or **XM** button 06, then tune to the desired AM, FM or XM satellite station.
- Then press and hold the desired station select button (1-6) until the preset number is updated on the display and the sound is briefly muted. The channel indicator will then come on and the sound will resume. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then press the corresponding station select button (1-6).

### 07 CD/DVD OPEN/TILT BUTTON

- Press and hold the CD/DVD **OPEN/TILT** button and the display screen will move down to expose the CD/DVD insert slot.
- Press and hold the button again to tilt the screen farther.

\*XM<sup>®</sup> Satellite Radio is only available on vehicles equipped with optional XM<sup>®</sup> satellite radio subscription service.

For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.

# first drive features

## CRUISE CONTROL

 
- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 mph.
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **ON/OFF** switch **01**. The **CRUISE** indicator light in the instrument panel will illuminate.
- To set cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **02** and release. The **SET** indicator light in the instrument panel will illuminate. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **03**. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **02**. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, tap the brake pedal or push the **CANCEL** switch **04**.
- To turn off cruise control, push the **ON/OFF** switch **01**. Both the **CRUISE** indicator light and **SET** indicator light in the instrument panel will turn off.



For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

## FUEL-FILLER DOOR

- To open the fuel-filler door, pull up on the release lever **01** located on the floor to the left of the driver’s seat.

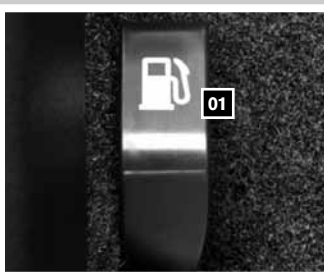




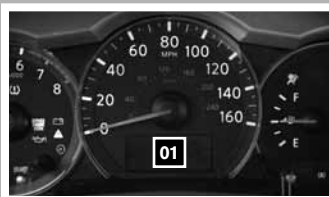 
- The fuel-filler door is located on the driver’s side of the vehicle.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.



## VEHICLE INFORMATION DISPLAY

- The vehicle information display **01** is located below the speedometer.
- Press the  button **02** to cycle through the following modes on the vehicle information display:
  - **MPG** – Displays the instant fuel economy since the last reset.
  - **MPG/MPH** – Displays the average fuel economy and average speed since the last reset.
  - **TIME/miles** – Displays the elapsed time and distance the vehicle has been driven since the last reset.
  - **RANGE** – Displays the estimated distance the vehicle can be driven before refueling.
  - **OUTSIDE TEMP** – Displays the temperature outside your vehicle.
  - **SETTING** – Allows you to set reminders or preferences for alerts, maintenance intervals or language displays in the system.
    - Press the  button **03** to cycle through the various setting modes.
    - Press the  button **02** to choose the selected mode.
  - **WARNING** – If there are any.


 



For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

## BLUETOOTH® HANDS-FREE PHONE SYSTEM (if so equipped)

 
 

 
 

- With an overhead microphone and sound transmitted through the audio system speakers, the Bluetooth® Hands-free Phone System utilizes Bluetooth wireless technology and voice recognition to provide hands-free cellular phone communication.
- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.\*

### SYSTEM OPERATING TIPS

- Close all windows. Surrounding noises may interfere with system operation and performance.
- Press the  or  button on the steering wheel to activate voice recognition.
- Wait for the tone before speaking.
- Begin speaking a command within 5 seconds of the tone.

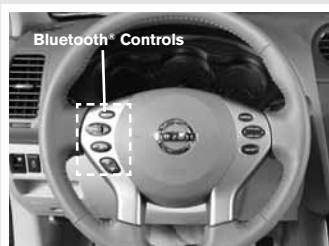


\*Some jurisdictions prohibit the use of cellular telephones while driving.

 
- Speak in a clear and natural voice without pausing between words.
- Look straight ahead and avoid speaking too loudly or too softly.
- To go back to the previous command, say "Go back".
- To cancel a voice recognition session, say "Exit" or press and hold the  or  button.
- To interrupt the system voice and give a command quickly, press the  or  button.
- When speaking Phonebook names, please be aware some phones require the last name to be spoken before the first name. For example, "Michael Smith" may be spoken as "Smith Michael".
- To increase or decrease the volume of the voice prompts, push the volume control switches  or  on the steering wheel or turn the **VOL/ON-OFF** control knob on the audio system while the system is responding.
- If the Voice Recognition system does not recognize your voice commands, train the system using the Speaker Adaptation Mode. See your Owner's Manual for detailed information.
- Some commands are not available while the vehicle is in motion.
- The "Help" command can be used to hear a list of available commands at any time.
- Please refer to the cellular phone manufacturer's Owner's Manual for detailed information regarding your Bluetooth phone.

## Bluetooth System without Navigation (if so equipped)


### CONNECTING PROCEDURE

NOTE: The vehicle must be stationary when connecting the phone.


1. Press the  button on the steering wheel. The system announces the available commands.
2. Say: "Connect phone". The system acknowledges the command and announces the next set of available commands.
3. Say: "Add phone". The system acknowledges the command and asks you to initiate connecting from the phone handset.
4. Initiate connecting from the phone:
  - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and compatible phones, please visit [www.nissanusa.com/bluetooth](http://www.nissanusa.com/bluetooth).
  - When prompted for a Passkey code, enter "1234" from the handset. (The Passkey code is assigned by NISSAN and cannot be changed.)
5. Say a name for the phone when the system asks you to provide one. You can give the phone a name of your choice.

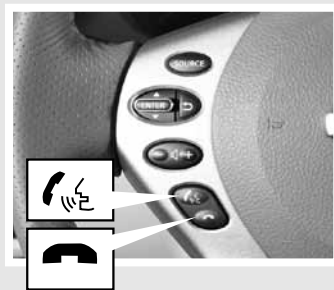

## PHONEBOOK SETUP


- Depending on your cell phone, the system may automatically download your cell phone's entire phonebook to the vehicle's Bluetooth system.
- If the phonebook does not download automatically, 40 entries can be individually downloaded.
- To manually download entries:
  1. Press the  button on the steering wheel.
  2. After the tone, say "Phonebook".
  3. After the next tone, say "Transfer Entry". The system acknowledges the command and asks you to initiate the transfer from the phone handset. The new contact phone number will be transferred from the cellular phone to the vehicle.
- The transfer procedure varies according to each cellular phone. See your cellular phone's owner's manual for details. You can also visit [www.nissanusa.com/bluetooth](http://www.nissanusa.com/bluetooth) for instructions on transferring phone numbers from NISSAN recommended cellular phones.
- 4. The system repeats the number and prompts you for the next command. When you have finished entering numbers or transferring an entry, choose "Store."
- 5. The system confirms the name, location and number.

## MAKING A CALL FROM THE PHONEBOOK




1. Press the  button.
2. After waiting for the tone, say "Call".
3. After the next tone, speak a name of a phonebook entry. For example "Michael Smith".
4. Confirm the correct name is recognized by saying "Dial" after the tone.

NOTE: In some cases, names stored in all UPPERCASE letters may not be recognized by the voice recognition system.

## MAKING A CALL BY PHONE NUMBER

1. Press the  button. A tone will sound.
2. Say: "Call". The system acknowledges the command and announces the next set of available commands.
3. Say: "Phone Number". The system acknowledges the command and announces the next set of available commands.
4. Say the number you wish to call starting with the area code in single digit format.
5. When you have finished speaking the phone number, the system repeats it back and announces the available commands.
6. Say: "Dial". The system acknowledges the command and makes the call.

 
## RECEIVING/ENDING A CALL

- When you receive a phone call, a ring tone sounds through the audio system.
- To accept the call, press the  button. To reject the call, press the  button.
- To hang up the phone at the end of a call or to disconnect during call placement, press the  button.

## Bluetooth System with Navigation (if so equipped)

### CONNECTING PROCEDURE

NOTE: The vehicle must be stationary when connecting the phone.

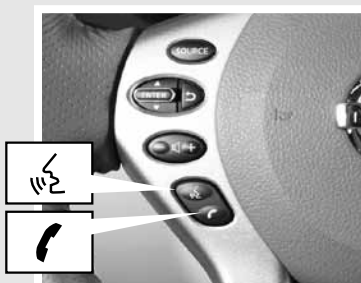

1. Press the **SETTING** button on the instrument panel and select the "Bluetooth" key on the display.



2. Select the "Connect Bluetooth" key.



3. A popup box will appear on the screen, prompting you to confirm that the connection is for the phone system. Select the "Yes" key.



4. Initiate connecting from the phone.

- The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible phones, please visit [www.nissanusa.com/bluetooth](http://www.nissanusa.com/bluetooth).




- When prompted for a PIN code, enter "1234" from the handset. (The PIN code is assigned by NISSAN and cannot be changed.)

5. When connecting is complete, the screen will return to the Bluetooth settings screen.




## PHONEBOOK SETUP

 - Depending on your cell phone, the system may automatically download your cell phone's entire phonebook to the vehicle's Bluetooth system.
- If the phonebook does not download automatically, the vehicle phonebook may be set for up to 40 entries.
- To manually download entries:
  1. Press the **PHONE** button and select the "Vehicle Phonebook" key.
  2. Select the "Add New" key at the top of the display. There are different methods to input a phone number. Select one of the following options:
    - "Copy from Call History" to save a number from the Outgoing, Incoming or Missed Calls lists.
    - "Copy from the Handset" to save a number that has been downloaded from your handset to the vehicle.
    - "Enter Number by Keypad" to input the number and name manually.

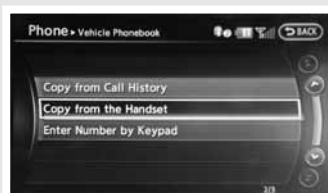



## MAKING A CALL

To make a call, follow this procedure:

 
1. Press the **PHONE** button on the instrument panel or the  button on the steering wheel. The "Phone" menu will appear on the control panel display.
2. Select the "Vehicle Phonebook", "Call History", "Handset Phonebook" or "Dial Number" key.
3. Select the desired entry from the list.
4. Dialing begins when the entry is selected or when the "OK" key is selected.



## RECEIVING/ENDING A CALL

- To accept the call, press the **PHONE** button on the instrument panel, the  button on the steering wheel or touch the "Answer" key. To reject the call, touch the "Reject Call" key.
- To hang-up, press the  button or touch the "Hang-Up" key.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual or visit [www.nissanusa.com/bluetooth](http://www.nissanusa.com/bluetooth).

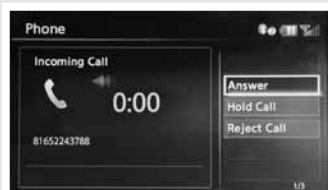



## NAVIGATION SYSTEM (if so equipped)

- Your Navigation System can calculate a route from the current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.

For more information, refer to your Navigation System Owner's Manual.

## DVD PLAYER (if so equipped)

- With this DVD player, you can play video files via a DVD or CD, providing images and sound from the front display.
- You can also connect auxiliary devices such as video games, camcorders or portable video players to the auxiliary jacks. (Your device will be controlled through its own control panel.)
- To view movies on the front display, stop the vehicle in a safe location, move the shift lever to the **P (PARK)** position and apply the parking brake.
- To reduce driver distraction, movies will not be shown on the front display while the vehicle is in any drive position.



For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.



## **HOMELINK® UNIVERSAL TRANSCEIVER (if so equipped)**

- The HomeLink® system can learn and consolidate the functions of up to three different hand-held transmitters, operating items such as garage doors, property gates, outdoor and indoor lights or alarm systems.

For more information, refer to the **"Instruments and controls (section 2)"** of your Owner's Manual, the HomeLink® website at [www.homelink.com](http://www.homelink.com) or call 1-800-355-3515.

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. See your Owner's Manual, which contains important safety warnings and information about the operation and maintenance of your vehicle, for complete details. Nissan North America, Inc. reserves the right to make changes, at anytime, without prior notice, in prices, colors, materials, equipment, specifications, and models and to discontinue models or equipment. Due to continuous product development and other pre- and post-production factors, actual vehicle, materials and specifications may vary. Some vehicles are shown with optional equipment. See the actual vehicle for complete accuracy. Specifications, options and accessories may differ in Hawaii, U.S. territories and other countries. For additional information on availability, options or accessories, see your NISSAN dealer or contact Nissan North America, Inc.



To view detailed instructional videos,  
go to **[www.nissanownersinfo.mobi/2012/altima](http://www.nissanownersinfo.mobi/2012/altima)**  
or snap this barcode with an appropriate barcode reader.

