


# 2013 **ALTIMA** SEDAN

## QUICK REFERENCE GUIDE



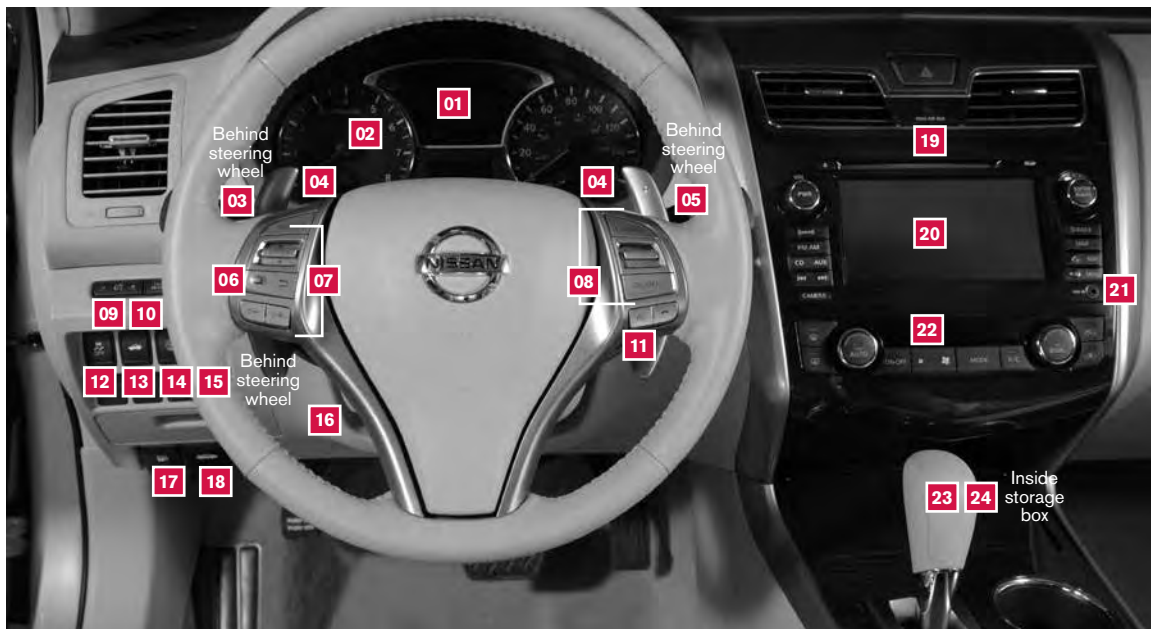

- |   |   |   |   |
|---|---|---|---|
| <b>01</b> VEHICLE INFORMATION DISPLAY             | <b>07</b> STEERING WHEEL SWITCHES FOR AUDIO* / BLUETOOTH® / VEHICLE INFORMATION DISPLAY | <b>12</b> VEHICLE DYNAMIC CONTROL (VDC) OFF SWITCH* | <b>18</b> HOOD RELEASE*                         |
| <b>02</b> LOW TIRE PRESSURE WARNING LIGHT         | <b>08</b> CRUISE CONTROL  | <b>13</b> TRUNK OPENER RELEASE SWITCH               | <b>19</b> FRONT PASSENGER AIR BAG STATUS LIGHT* |
| <b>03</b> HEADLIGHT AND TURN SIGNAL CONTROL       | <b>09</b> INSTRUMENT BRIGHTNESS CONTROL*  | <b>14</b> WARNING SYSTEMS SWITCH                    | <b>20</b> CONTROL PANEL DISPLAY SCREEN*         |
| <b>04</b> PADDLE SHIFTERS*                        | <b>10</b> TRIP COMPUTER RESET SWITCH  | <b>15</b> HEATED STEERING WHEEL SWITCH              | <b>21</b> AUXILIARY JACK*                       |
| <b>05</b> WINDSHIELD WIPER / WASHER SWITCH        | <b>11</b> BLUETOOTH® HANDS-FREE PHONE SYSTEM CONTROLS                                   | <b>16</b> TILT / TELESCOPIC STEERING COLUMN*        | <b>22</b> AUTOMATIC CLIMATE CONTROLS            |
| <b>06</b> VEHICLE INFORMATION DISPLAY MENU BUTTON |   | <b>17</b> FUEL FILLER DOOR RELEASE                  | <b>23</b> USB/iPOD® JACK                        |
|   |   |   | <b>24</b> POWER OUTLET*                         |

\*See your Owner's Manual for information.

**NEW SYSTEM FEATURES**

Remote Engine Start (if so equipped) .....	2
Text Messaging (if so equipped) .....	2
Pandora® Audio (if so equipped) .....	3
RearView Monitor with Moving Object Detection (MOD) (if so equipped) .....	3
Blind Spot Warning (BSW) System (if so equipped) .....	4
Lane Departure Warning System (if so equipped) .....	4
Heated Steering Wheel (if so equipped) .....	5

**ESSENTIAL INFORMATION**

Tire Pressure Monitoring System (TPMS) with Easy Fill Tire Alert .....	6
Loose Fuel Cap .....	7

**FIRST DRIVE FEATURES**

NISSAN Intelligent Key® with Door and Trunk Request Switches (if so equipped) .....	8
Trunk Lid Release .....	9
Power Seat Adjustments (if so equipped) .....	10
Outside Mirror Control Switch .....	10
Starting/Stopping the Engine .....	10
Headlight Control Switch .....	11
Windshield Wiper/Washer Switch .....	12
Automatic Climate Controls (if so equipped) .....	12
FM/AM/SiriusXM Satellite Radio with CD Player (if so equipped) .....	14
USB/iPod® Interface (if so equipped) .....	15
Cruise Control (if so equipped) .....	15
Fuel-Filler Door .....	15

**SYSTEM GUIDE**

Vehicle Information Display .....	16
Bluetooth® Hands-free Phone System .....	17
System Operating Tips .....	17
Connecting procedure without Navigation (Type A) (if so equipped) .....	18
Connecting procedure without Navigation (Type B) (if so equipped) .....	18
Bluetooth® System without Navigation (Type B) (if so equipped) .....	18
Bluetooth® System with Navigation (if so equipped) .....	19
Navigation System (if so equipped) .....	21
HomeLink® Universal Transceiver (if so equipped) .....	22



- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the **“Safety — Seats, seat belts and supplemental restraint system (section 1)”**, the **“Monitor, climate, audio, phone and voice recognition systems (section 4)”** and the **“Starting and driving (section 5)”** of your Owner’s Manual.






To view detailed instructional videos, go to  
[www.nissanownersinfo.mobi/2013/altimasedan](http://www.nissanownersinfo.mobi/2013/altimasedan)  
 or snap this barcode with an appropriate barcode reader.



Additional information about your vehicle is also available in your Owner’s Manual, Navigation System Owner’s Manual and at [www.nissanus.com](http://www.nissanus.com).

# NEW SYSTEM FEATURES

## REMOTE ENGINE START\* (if so equipped)

- Your NISSAN Intelligent Key® system allows the engine to start from outside your vehicle. To use the remote start feature, perform the following:
  1. Aim the Intelligent Key at the vehicle. Operating range is approximately 197 feet (60 m) from the vehicle.
  2. Press the  button **01** to lock all doors.
  3. Within 5 seconds, press and hold the remote start  button **02** until the turn signal lights illuminate. If the vehicle is not within view, press and hold the remote start button for about 2 seconds.
- The parking lights will turn on and remain on as long as the engine is running. The doors will be locked and the climate control system may come on.
- Repeat steps 1 - 3 to extend time an additional 10 minutes. A maximum of two remote starts, or a single start with an extension, are allowed between ignition cycles.
- Depress the brake pedal and place the ignition switch in the **ON** position before driving.
- To cancel a remote start, perform one of the following:
  - Aim the Intelligent Key at the vehicle and press and hold the  button until the parking lights turn off.
  - Turn the hazard warning flashers on.
  - Cycle the ignition switch **ON** and then **OFF**.



\*Laws in some communities may restrict the use of remote starters. Check local regulations before using this feature.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

## TEXT MESSAGING\* (if so equipped)


- This system allows for sending and receiving of text messages through the vehicle interface.
- Using predefined or custom messages, send a text to a name, phone number or previous incoming, outgoing or missed call stored in your Bluetooth® Hands-free Phone System.
- The text message, sender and delivery time are shown on the control panel display screen.

NOTE: Text messages are only displayed if the vehicle speed is less than 5 mph.

- This feature is not supported by all phones. See your phone’s Owner’s Manual for details and also visit [www.nissanusa.com/bluetooth](http://www.nissanusa.com/bluetooth).

\*Laws in some communities may restrict the use of text messaging. Check local regulations before using this feature.

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

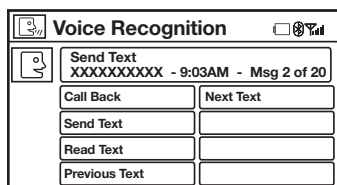

## PANDORA® AUDIO\* (if so equipped)

- Devices capable of streaming Pandora audio can be connected to the vehicle's audio system via the USB input jack. The USB input jack is located on the center console beneath the heater and air conditioner controls. Once connected, the Pandora controls will be displayed on the control panel display screen.

\*Pandora® Audio requires a compatible mobile phone with the Pandora application installed.

For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.


## REARVIEW MONITOR WITH MOVING OBJECT DETECTION (MOD) (if so equipped)

- When the shift lever is moved to the **R (REVERSE)** position, the front display will automatically change to show the rearview area **01** directly behind the vehicle.
- With the shift lever in the **R (REVERSE)** position, press the **CAMERA** button **02** to change the camera to rear wide view **03**.
- The colored lines on the display screen indicate approximate distances to objects.
  - Red 1.5 ft (0.5 m); Yellow 3 ft (1 m); Green 7 ft (2 m) and 10 ft (3 m)



### MOVING OBJECT DETECTION (MOD) (if so equipped)

- The MOD system helps inform the driver of moving objects in the rear view or rear wide view.
- The system will operate when the shift lever is in the **R (REVERSE)** position and the vehicle is driven at speeds of approximately 5 MPH (8 km/h) or less.
- If the MOD system detects moving objects, a yellow frame **04** will be displayed on the camera image and a chime sounds.
- When the following are displayed:
  - Blue **MOD** icon **05**; the system is active.
  - Gray **MOD** icon; the system is not active.
  - No **MOD** icon; the system is off. The indicator will also be off if all of the warning systems are deactivated using the settings menu.
- The MOD system will not operate if the trunk is open.

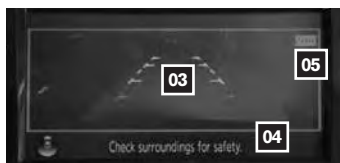


For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.

# NEW SYSTEM FEATURES

## BLIND SPOT WARNING (BSW) SYSTEM (if so equipped)

- The BSW system helps alert the driver of other vehicles in adjacent lanes when changing lanes.
- The system will operate when the vehicle is driven at speeds of approximately 20 MPH (32 km/h) and above.
- When the system detects a vehicle in the detection zone, the blind spot indicator light **01**, located near the outside mirrors, will illuminate. If the turn signal is then activated, the system chimes twice and the blind spot indicator light flashes to alert the driver. The blind spot indicator light continues to flash until the detected vehicle leaves the detection zone.
- Push the warning systems switch **02** to temporarily turn the system off. When the system is off, the indicator light **03** on the switch is off.
- The indicator light will also be off if all of the warning systems are deactivated using the settings menu.

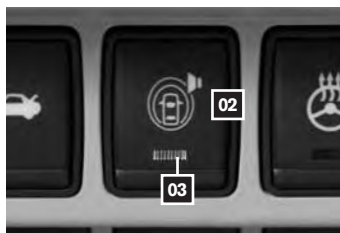

For more information, refer to the **"Instruments and controls (section 2)"** and **"Starting and driving (section 5)"** of your Owner's Manual.

## LANE DEPARTURE WARNING (LDW) SYSTEM (if so equipped)

- The LDW system helps alert the driver when the vehicle is traveling too close to either the left or the right of a traveling lane.
- The system will operate when the vehicle is driven at speeds of approximately 45 MPH (70 km/h) and above.
- When the vehicle approaches either the left or the right of the traveling lane, the LDW system will chime and the orange LDW light **01** on the instrument panel will blink to alert the driver.
- Push the warning systems switch **02** to temporarily turn the system off. When the system is off, the indicator light **03** on the switch is off.
- The indicator light will also be off if all of the warning systems are deactivated using the settings menu.



For more information, refer to the **"Instruments and controls (section 2)"** and **"Starting and driving (section 5)"** of your Owner's Manual.

## HEATED STEERING WHEEL (if so equipped)

- Press the heated steering wheel switch **01** to warm the steering wheel after the engine starts. The indicator light **02** will come on.
- Once activated, the heated steering wheel will automatically turn on and off to maintain a temperature above 68°F (20°C).
- When the surface temperature of the steering wheel is above 68°F (20°C) and the control switch is turned on, the system will not heat the steering wheel. This does not indicate a malfunction.



For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual

# ESSENTIAL INFORMATION

## TIRE PRESSURE MONITORING SYSTEM (TPMS) WITH EASY FILL TIRE ALERT

- A **Tire Pressure Low – Add Air** warning message will appear in the vehicle information display **01** and the low tire pressure warning light **02** will illuminate when one or more tires are low on pressure and air is needed.

Tire Pressure  
Low – Add Air

A close-up of a vehicle's instrument cluster. A digital display in the center shows the text 'Tire Pressure Low – Add Air'. A white box with the number '01' is placed over the display. A white arrow points from the text '01' in the main text to this box.


A close-up of the low tire pressure warning light. It is a yellow light with a tire cross-section icon and an exclamation mark inside. A white box with the number '02' is placed over the light.

  - The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mile (1.6km) at moderate speeds.- When adding air to an under-inflated tire, the TPMS with Easy Fill Tire Alert provides visual and audible signals to help you inflate the tires to the recommended COLD tire pressure.
- To use the Easy Fill Tire Alert system:
  1. Move the shift lever to the **P (PARK)** position and apply the parking brake.
  2. Place the ignition switch in the **ON** position. Do not start the engine.
  3. Add air to the under-inflated tire and within a few seconds, the hazard warning lights will start flashing.
  4. When the designated tire pressure is reached, the horn will beep once and the hazard warning flashers will stop.
  5. Repeat this procedure for any additional under-inflated tires.
- After tire pressures are adjusted, drive the vehicle at speeds above 16 MPH (25km/h). The **Tire Pressure Low – Add Air** warning message and low tire pressure warning light will disappear.
- When the low tire pressure warning light flashes for approximately 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked by a NISSAN dealer.
- Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light to illuminate. If the warning light illuminates in low ambient temperature, check the tire pressure in your tires.
  - Check the tire pressure (including the spare tire) often and always prior to long distance trips.
- The Tire and Loading Information label contains valuable information. Please refer to section 9, "Technical and consumer information" in your Owner's Manual for the location of the Tire and Loading Information label.


For more information, refer to the "**Instruments and controls (section 2)**", the "**Starting and driving (section 5)**" and the "**Maintenance and do-it-yourself (section 8)**" of your Owner's Manual.



## LOOSE FUEL CAP

- A **LOOSE FUEL CAP** warning message will display in the vehicle information display **01** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will disappear when the vehicle detects the fuel-filler cap is properly tightened and the reset button **02** is pressed for about 1 second.
- If the cap is not properly tightened, the Malfunction Indicator Light  may also illuminate.

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

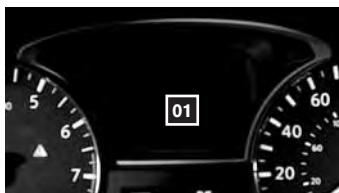



# FIRST DRIVE FEATURES

## NISSAN INTELLIGENT KEY® WITH DOOR AND TRUNK REQUEST SWITCHES (if so equipped)

The NISSAN Intelligent Key® system allows you to lock or unlock your vehicle, open your trunk and remotely start the engine.




NOTE: It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

### REMOTE ENGINE START (if so equipped)

- The remote engine start operating range is approximately 197 feet (60 m) from the vehicle.
- To use the remote start feature to start the engine:
  1. Aim the Intelligent Key at the vehicle.
  2. Press the  button **01** to lock all doors.
  3. Within 5 seconds, press and hold the remote start  button **02** until the turn signal lights illuminate. If the vehicle is not within view, press and hold the remote start button for about 2 seconds.




### LOCKING AND UNLOCKING THE VEHICLE


- The lock and unlock operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, push either door handle request switch **03** once or press the  button **01** on the keyfob.
- To unlock the vehicle, perform one of the following procedures:
  - Push either door handle request switch **03** once; the corresponding door will unlock. Push the door handle request switch again within 5 seconds; all other doors will unlock, or
  - Press the  button **04** on the keyfob to unlock the driver's side door. Press the  button again; all other doors will unlock.



### TRUNK LID RELEASE

- To open the trunk, press the  button **05** for more than 0.5 seconds.
- The trunk lid release button will not operate when the ignition switch is in the **ON** position.

### PANIC ALARM

- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button **06** for more than 0.5 seconds. Once activated, the panic alarm and headlights will stay on for 25 seconds.

 
## INTELLIGENT KEY BATTERY DISCHARGE

- If the **Key Battery Low** indicator **07** appears in the vehicle information display, replace the battery as soon as possible.
- If the battery of the Intelligent Key is discharged, the indicator **08** appears in the vehicle information display or environmental conditions interfere with the Intelligent Key operation, start the engine according to the following procedure:
  1. Move the shift lever to the **P (PARK)** position.
  2. Firmly apply the foot brake.
  3. Touch the ignition switch with the Intelligent Key and a chime will sound.
  4. Within 10 seconds after the chime sounds, push the ignition switch while depressing the brake pedal and the engine will start.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**”, the “**Starting and driving (section 5)**” and the “**Maintenance and do-it yourself (section 8)**” of your Owner’s Manual.



Key Battery Low **07**




**08**



## TRUNK LID RELEASE

Use one of the following methods to open the trunk:

- Push the trunk opener request switch **01**, located under the trunk handle, for more than 1 second, while carrying the NISSAN Intelligent Key® with you, (that is, in your pocket or purse).
- Press the trunk release button  **02** on the Intelligent Key for more than 0.5 seconds.
- From inside the vehicle, push the trunk lid release switch **03** located on the instrument panel to the left of the steering wheel.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.



**01**



**02**



**03**

# FIRST DRIVE FEATURES

## POWER SEAT ADJUSTMENTS (if so equipped)

- To slide the seat forward or backward, push the control switch **01** forward or backward.
- To adjust the angle of the seatback, push the switch **02** forward or backward.

### SEAT LIFTER (if so equipped for driver's seat)

- To adjust the angle and height of the seat cushion, push the front or rear end of the switch **01** up or down.

### LUMBAR SUPPORT (if so equipped for driver's seat)

- To adjust the seat lumbar area, push the front or rear end of the switch **03**.

For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner's Manual.



## OUTSIDE MIRROR CONTROL SWITCH

- To select the right or left side mirror, move the control switch **01** right or left.
- To adjust the mirror angle, push the control switch **02** up, down, right or left.
- To prevent accidentally moving the mirror, set the control switch **01** to the middle “neutral” position.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner's Manual.



## STARTING/STOPPING THE ENGINE

- Depress the brake pedal.
  - If the brake pedal is not depressed, pushing the ignition switch once enters the ACC mode.
  - If the ignition is pushed a second time, the vehicle will enter the ON mode.
- Move the shift lever to **P (PARK)**.
- Push the ignition switch to start the engine.

**NOTE:** It is important to make sure the NISSAN Intelligent Key® is with you (that is, in your pocket or purse).

### TURNING THE ENGINE OFF

 

- Move the shift lever to the **P (PARK)** position and apply the parking brake.
- Press the ignition switch **START/STOP** button to turn the engine off.


For more information, refer to the “**Starting and driving (section 5)**” of your Owner's Manual.





## HEADLIGHT CONTROL SWITCH

### HEADLIGHT CONTROL

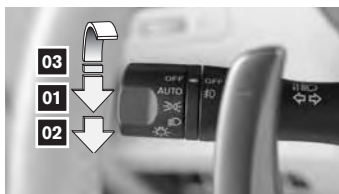
- Turn the headlight control switch to the  position **01** to turn on the front parking, tail, license plate and instrument panel lights. Turn the switch to the  position **02** to turn on the headlights.



### AUTOLIGHT SYSTEM (if so equipped)

 
- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **03** then push the ignition switch to **ON**. To deactivate the autolight system, turn the headlight control switch to the **OFF**,  position **01** or  position **02**.


### HIGH BEAM SELECT


- Push the headlight control switch forward **04** to select the high beam function. The blue indicator light  illuminates in the instrument panel. Pull the headlight control switch back to the original position to select the low beam. The blue indicator light goes off.
- Pull and release the headlight control switch **05** to flash the headlight high beams on and off.



### FOG LIGHT SWITCH (if so equipped)

NOTE: The headlights must be on and the low beams  selected for the fog lights to operate.

- Turn the switch (inside collar) to the  position **06** to turn the fog lights on.
- Turn the switch (inside collar) to the **OFF** position to turn the fog lights off.

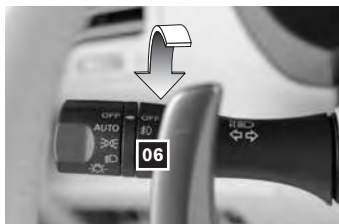


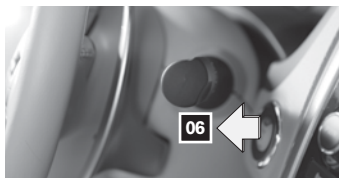
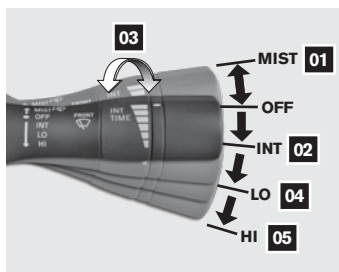
For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

# FIRST DRIVE FEATURES

## WINDSHIELD WIPER/WASHER SWITCH

- Move the lever to the following positions to operate the windshield wipers:

- 01** Mist (**MIST**) - One sweep operation of the front wipers.
- 02** Intermittent (**INT**) - Move the lever down to the **INT** position and then rotate the control ring **03** toward you to increase **INT** wiper speeds.
- 04** Low (**LO**) - Wipers operate at a continuous low-speed.
- 05** High (**HI**) - Wipers operate at a continuous high-speed.
- 06** Washer  - Pull the lever toward you to activate the washer. The wipers will operate several times.



For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.



## AUTOMATIC CLIMATE CONTROLS (if so equipped)


### **01** AUTO BUTTON/DRIVER’S SIDE TEMPERATURE CONTROL DIAL

- The auto mode may be used year-round. Press the **AUTO** button to turn the system on and the system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.
- Turn the driver’s side temperature control dial to the left for cooler air or right for warmer air.


### **02** DUAL BUTTON/PASSENGER’S SIDE TEMPERATURE CONTROL DIAL

- Press the **DUAL** button to turn the passenger’s side temperature controls on or off. This will allow the passenger’s side temperature to be adjusted independently from the driver’s side by turning the passenger’s side temperature control dial.
- Turn the passenger’s side temperature control dial left for cooler air or right for warmer air.

### 03 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the defroster control button  to turn the system on. The A/C automatically turns on when the defroster mode is selected. This feature removes humidity from the air.
- Turn the temperature control dial **01** to set the desired temperature.
- To defrost the front and side windows, set the temperature control **01** and fan speed control **06** to their maximum settings.

### 04 REAR WINDOW AND OUTSIDE MIRROR (if so equipped) DEFROSTER SWITCH

- Press the rear window defroster switch  to turn the system on or off.
- This function automatically turns off after approximately 15 minutes.

### 05 ON-OFF BUTTON





- Press the button to turn the system on or off.

### 06 FAN SPEED CONTROL BUTTONS

- Press the left  button to decrease fan speed or the right  button to increase fan speed.

### 07 MODE BUTTON


- Press the **MODE** button to cycle through the following air flow outlets:

-  Air flows from the center and side vents.
-  Air flows from the center, side and foot vents.
-  Air flows mainly from the foot vents.
-  Air flows from the defroster and foot vents.




### 08 A/C BUTTON

- Press the **A/C** button to turn the air conditioner system on or off. This system helps cool and dehumidify the air inside the cabin and defog the windows.

### 09 FRESH AIR INTAKE BUTTON


- Press the fresh air intake button  to draw outside air into the passenger compartment. The indicator light on the button will illuminate.

### 10 AIR RECIRCULATION BUTTON

- Press the air recirculation button  to recirculate interior air inside the vehicle. The indicator light on the button will come on. This system is used to avoid certain outside odors and helps to adjust the inside vehicle temperature more effectively.
- The air recirculation mode cannot be activated when the air conditioner is in the front defrosting mode  or the front defrosting and foot vent mode .

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner's Manual.

# FIRST DRIVE FEATURES

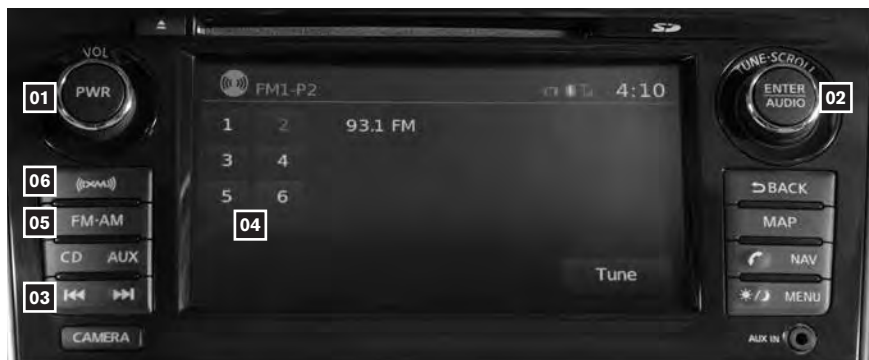

## FM/AM/SiriusXM\* SATELLITE RADIO WITH CD PLAYER (if so equipped)

- Your audio system is capable of streaming and controlling Pandora® Audio\*\* through a compatible mobile phone and your USB input jack.

### 01 VOLUME CONTROL DIAL/POWER BUTTON

- To increase or decrease the volume, turn the **VOL** control dial right or left.
- To turn the system on or off, press the **PWR** button.

### 02 TUNE/SCROLL DIAL

- To manually tune the radio, turn the **TUNE/SCROLL** dial left or right.

### 03 SEEK BUTTONS

- To tune and stop at the next or previous broadcast station, press the seek buttons ◀◀ or ▶▶.
- For SiriusXM Satellite Radio, to switch to the first channel of the previous or next category, press the seek buttons ◀◀ or ▶▶.
- To change tracks on a CD, press the seek buttons ◀◀ or ▶▶.
- To fast forward or rewind a track on a CD, press and hold the seek buttons ◀◀ or ▶▶.

### 04 STATION MEMORY KEYS

- Twelve stations can be set for the FM band, six for the AM band and eighteen for SiriusXM Satellite Radio.
- To store a station in a preset, you must first select a radio band by pressing the **FM-AM** button 05 or ((XM)) button 06, then tune to the desired AM, FM or SiriusXM Satellite Radio station.
- Now select and hold the desired station memory key (1-6) 04 until the preset number is updated on the display and a beep is heard. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then select the corresponding station memory key (1-6).

\*SiriusXM Satellite Radio is only available on vehicles equipped with optional SiriusXM Satellite Radio subscription service.

\*\*Pandora® Audio requires a compatible mobile phone with the Pandora application installed.

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.



## USB/IPOD® INTERFACE (if so equipped)

- The USB input jack **01** is located on the center console beneath the heater and air conditioner controls inside the storage box.
- When a compatible USB memory device or iPod® is plugged into the USB jack, compatible audio and video files stored on the device can be played through the vehicle's audio system and front display.

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner's Manual.



## CRUISE CONTROL (if so equipped)

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 mph.
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **ON/OFF** switch **01**. The **CRUISE** indicator light in the instrument panel will illuminate.
- To set cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **02** and release. The **SET** indicator light in the instrument panel will illuminate. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **03**. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **02**. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, tap the brake pedal or push the **CANCEL** switch **04**.
- To turn off cruise control, push the **ON/OFF** switch **01**. Both the **CRUISE** indicator light and **SET** indicator light in the instrument panel will turn off.



For more information, refer to the “**Starting and driving (section 5)**” of your Owner's Manual.

## FUEL-FILLER DOOR

- To open the fuel-filler door, pull the release lever **01** located on the instrument panel to the left of the steering wheel.
- The fuel-filler door is located on the driver's side of the vehicle.




For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner's Manual.

# SYSTEM GUIDE

## VEHICLE INFORMATION DISPLAY

The vehicle information display **01** displays such items as:

- Vehicle settings
- Trip computer information
- Drive system warnings and settings (if so equipped)
- Audio information
- Navigation turn by turn
- Cruise control system information
- NISSAN Intelligent Key® operation information
- Indicators and warnings
- Tire pressure information

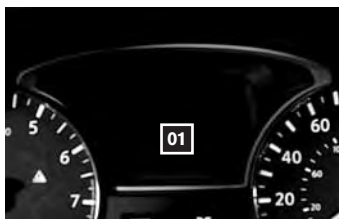

### USING THE VEHICLE INFORMATION DISPLAY

The vehicle information display can be changed using the **02** button and the ENTER **03** buttons located on the steering wheel.

- Press **02** to change the display mode
- Press **03** to navigate through the mode's menu
- Press **ENTER 03** to change or select an item
- Press **04** to go back to the previous menu



### STARTUP DISPLAY

When the ignition is in the ACC or ON position, the vehicle information display will support four of the following modes:

- Active system status (if so equipped)
- Trip computer
- Tire pressure information
- Fuel economy
- Warnings (if there are any)

### RESETTING THE TRIP COMPUTER

1. Press the **02** button until you reach the trip computer mode **05**.
2. Press the **02** button again for more than 1.5 seconds to reset the trip computer.



### SETTINGS

The setting mode allows you to change the information displayed in the vehicle information display:



- |                       |                    |
|-----------------------|--------------------|
| ■ Main Menu Selection | ■ Vehicle Settings |
| ■ Body Color          | ■ Language         |
| ■ Maintenance         | ■ Unit             |
| ■ Alarms              | ■ Welcome Effects  |



For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

## BLUETOOTH® HANDS-FREE PHONE SYSTEM

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation\*.

### SYSTEM OPERATING TIPS

- The “Help” command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing HVAC vents away from the ceiling.
- Say commands after the tone, or press the  button to say a command at any time.
- Speak naturally without long pauses and without raising your voice.
- When speaking Phonebook names, please be aware some phones require the last name to be spoken before the first name. For example, “Michael Smith” may be spoken as “Smith Michael”.
- To cancel a voice recognition session, simply wait 5 seconds, say “Cancel” or “Quit,” or press and hold the  button for 5 seconds.
- To increase or decrease the volume of the voice prompts, push the volume control switches + or - on the steering wheel or turn the control dial on the audio system while the audio system is responding.
- If the Voice Recognition system does not recognize your voice commands, train the system using the Voice Adaptation Mode. See your Owner’s Manual for detailed information.

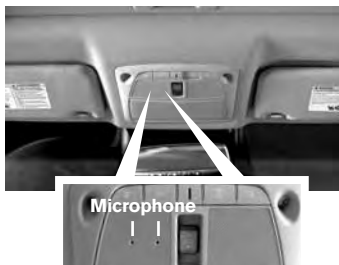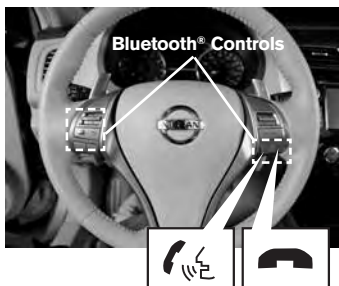

For more detailed information and instructions, refer to your cellular phone Owner’s Manual and visit [www.nissanusa.com/bluetooth](http://www.nissanusa.com/bluetooth).


\*Some jurisdictions prohibit the use of cellular telephones while driving..

\*\*Some jurisdictions prohibit the use of cellular telephones while driving.

To view detailed instructional videos regarding these and other features, please go to [www.nissanownersinfo.mobi](http://www.nissanownersinfo.mobi)

# SYSTEM GUIDE


## CONNECTING PROCEDURE WITHOUT NAVIGATION\* (Type A) (if so equipped)

1. Press the  button on the steering wheel.
2. After the command, say "Add Phone".
3. The system will confirm your command. After the tone, say "Connect Phone", and then follow the voice prompts to complete pairing from your handset.
  - The connecting procedure varies according to each phone. See the phone's Owner's Manual for details and also visit [www.nissanusa.com/bluetooth](http://www.nissanusa.com/bluetooth).


## CONNECTING PROCEDURE WITHOUT NAVIGATION\* (Type B) (if so equipped)

NOTE: The vehicle must be stationary when connecting the phone.

1. Press the **SETTING** button on the control panel.
2. Use the **TUNE/SCROLL** dial to select "Bluetooth" and then press the **ENTER** button.

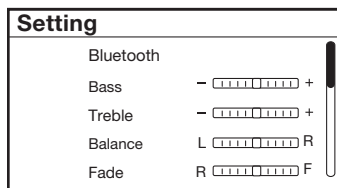


3. Use the **TUNE/SCROLL** dial to select "Add Phone or Device" and then press the **ENTER** button.
4. When a message with a PIN appears on the screen, operate the Bluetooth® phone to enter the PIN.
  - The connecting procedure varies according to each phone.

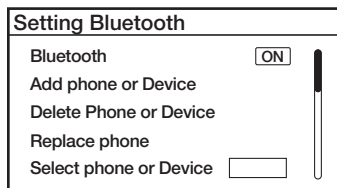

See the phone's Owner's Manual for details and also visit [www.nissanusa.com/bluetooth](http://www.nissanusa.com/bluetooth).


## Bluetooth® System without Navigation\* (Type B) (if so equipped)

### PHONEBOOK SETUP


- Depending on your cell phone, the system may automatically download your cell phone's entire phonebook to the vehicle's Bluetooth® system.
- If the phonebook does not download automatically, follow this procedure to manually download entries:
  1. Using the **MENU** button and "Settings" key, change the Phonebook Download setting to **OFF**.
  2. Press the  button on the steering wheel.
  3. After the tone, say "Phonebook".
  4. After the next tone, say "Transfer Entry". The system acknowledges the command and asks you to initiate the transfer from the phone handset. The new contact phone number will be transferred from the cellular phone to the vehicle.

\*Some jurisdictions prohibit the use of cellular telephones while driving.




MAKING A CALL FROM PHONEBOOK


- 1. Press the  button.
- 2. After the tone, say "Call <NAME>" where <NAME> is the name of a contact stored in your phonebook.
- 3. The system will confirm the name. If correct, say "Dial." Otherwise, say "Correction."
  - Please note that some phones require the name to be spoken in a <last name, first name> format.

MAKING A CALL BY PHONE NUMBER

- 1. Press the  button.
- 2. After the tone, say "Call".
- 3. The system will confirm the command. After the tone say "Phone Number".
- 4. The system will prompt you to speak the phone number. Say the 10-digit phone number.
- 5. The system will confirm the phone number. If correct, say "Dial." Otherwise say "Correction".
  - For vehicles without the 5" color display, you can simply say "Call <xxx-xxx-xxxx>" and jump to step 5.

RECEIVING/ENDING A CALL

- When you receive a phone call, a ring tone sounds through the audio system.
- To accept a call, press the  button.
- To reject a call, press the .
- To hang up the phone at the end of a call or to disconnect during call placement, press the .

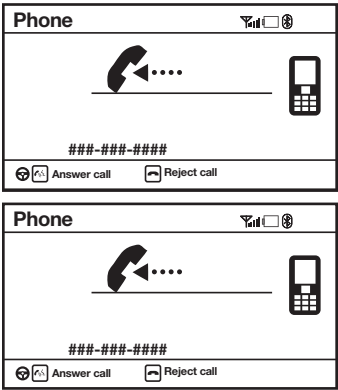

Bluetooth® System with Navigation\*\* (if so equipped)

- Send predefined or custom text messages\* through your vehicle's Bluetooth® system.
- Receive texts through your vehicle's Bluetooth® system that can be read to you.
- Bluetooth® Streaming Audio allows you to use a compatible Bluetooth® phone to play audio files on your device. Your compatible cellular phone can be connected to the vehicle's audio system allowing audio files to play through the vehicle's speakers.

CONNECTING PROCEDURE

- 1. Press the **MENU** button on the control panel.
- 2. Select the "Settings" key **01**.



\*Laws in some communities may restrict the use of text messaging. Check local regulations before using this feature.  
\*\*Some jurisdictions prohibit the use of cellular telephones while driving.

# SYSTEM GUIDE

3. Select the "Phone & Bluetooth" key **02**.



4. Select the "Connect New Device" key **03**.

5. Initiate the connecting process from the handset.

The system will display the message:


"Is PIN XXXXXX displayed on your Bluetooth device?"


If the PIN is displayed on your Bluetooth device, select "Yes" to complete the connecting process.





## VEHICLE PHONEBOOK


To access the vehicle phonebook:

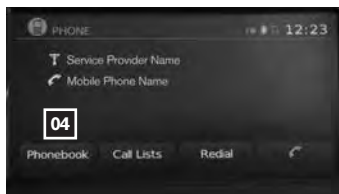1. Press the  button on the instrument panel.
2. Select the "Phonebook" key **04**.
3. Choose the desired entry from the displayed list.





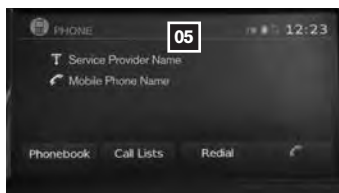

## MAKING A CALL

1. Press the  button on the instrument panel. The "Phone" screen **05** will appear on the display.
2. Select one of the following options to make a call:
  - "Phonebook": Select the name from an entry stored in the vehicle phonebook.
  - "Call Lists": Select the name from the incoming, outgoing or missed call history.
  - "Redial": Dial the last outgoing call from the vehicle.
  -  : Input the phone number manually using the keypad displayed on the screen.



## RECEIVING A CALL

- To accept the incoming call, either:
  - Press the  button on the steering wheel, or
  - Select the green  icon on the screen.
- To reject the incoming call, either:
  - Press the  button on the steering wheel, or
  - Select the red  icon on the screen.



For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual or visit [www.nissanusa.com/bluetooth](http://www.nissanusa.com/bluetooth).



## NAVIGATION SYSTEM (if so equipped)


- Your Navigation System can calculate a route from the current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.
- Your Navigation System, along with POIs powered by Google™\* (if so equipped), allows you to enter a destination using Google search results.
- Using Google™ Send-to-Car\* (if so equipped) you can send a destination from Google Maps to your vehicle's Navigation System.

- 01** **VOL** control dial – Rotate clockwise to increase the volume or counterclockwise to decrease the volume.
- 02** **Voice** key – Select to repeat the voice guidance while a route is active. Select and hold to switch the voice guidance on and off.
- 03** **Options** key – Select to access features such as “Show Destination Information”, “Store Current Position”, “Show Position/GPS Information” and “Map Setup”.
- 04** - Zoom in key – Select to zoom the map in.
- 05** - Zoom out key – Select to zoom the map out.
- 06** **TUNE/SCROLL** dial / **ENTER/AUDIO** button – Turn to scroll through the items in a list. Press to select a menu item.
- 07** **BACK** button – Press to return to the previous screen.
- 08** **MAP** button – Press to display the current location map screen.
- 09** **NAV** button – Press to access the functions of the Navigation System.
- 10** **MENU** button – Press to access the system settings key.
- 11** button – Press to change the display brightness between day and night modes. While the mode is being displayed, the brightness can be adjusted using the **TUNE/SCROLL** dial. Press and hold to turn the display off. Press again to turn the display on.

\*An account must first be registered from the Info Services settings screen and a compatible Bluetooth® Hands-free phone and subscription service is required. Please visit [www.nissanusa.com/bluetooth](http://www.nissanusa.com/bluetooth) for compatible phone information.

For more information, refer to your Navigation System Owner's Manual.

# SYSTEM GUIDE

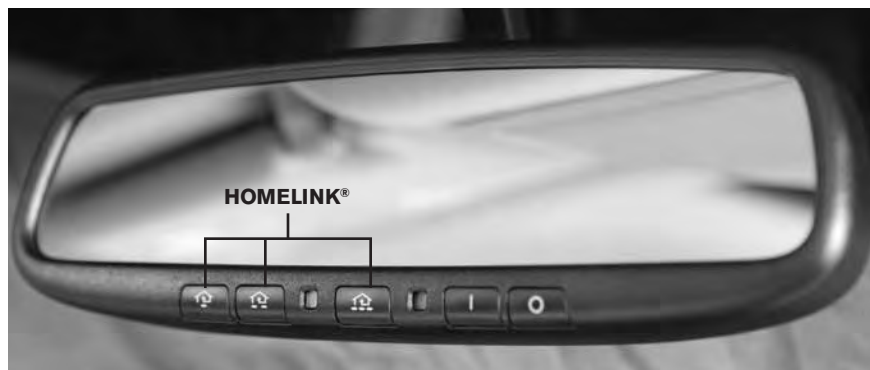

## HOMELINK® UNIVERSAL TRANSCEIVER (if so equipped)

- The HomeLink® system can learn and consolidate the functions of up to three different hand-held transmitters, operating items such as garage doors, property gates, outdoor and indoor lights or alarm systems.

For more information, refer to the **“Instruments and controls (section 2)”** of your Owner’s Manual, the HomeLink® website at [www.homelink.com](http://www.homelink.com) or call 1-800-355-3515.



# MEMO

# MEMO

# MEMO

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. See your Owner's Manual, which contains important safety warnings and information about the operation and maintenance of your vehicle, for complete details. Nissan North America, Inc. reserves the right to make changes, at any time, without prior notice, in prices, colors, materials, equipment, specifications, and models and to discontinue models or equipment. Due to continuous product development and other pre- and post-production factors, actual vehicle, materials and specifications may vary. Some vehicles are shown with optional equipment. See the actual vehicle for complete accuracy. Specifications, options and accessories may differ in Hawaii, U.S. territories and other countries. For additional information on availability, options or accessories, see your NISSAN dealer or contact Nissan North America, Inc.



To view detailed instructional videos,  
go to [www.nissanownersinfo.mobi/2013/altimasedan](http://www.nissanownersinfo.mobi/2013/altimasedan)  
or snap this barcode with an appropriate barcode reader.

