 


2015 **ALTIMA**

QUICK REFERENCE GUIDE



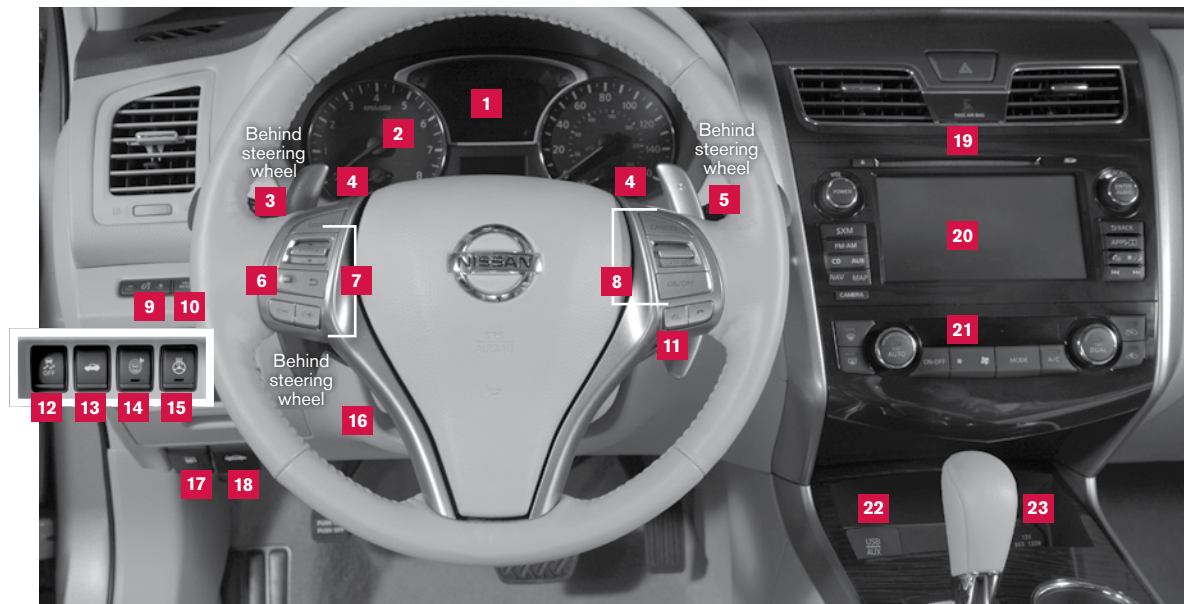

- | | | | |
|--|--|---|---|
| 1 Vehicle Information Display | 7 Steering Wheel Switches for Audio*/Bluetooth®/Vehicle Information Display | 12 Vehicle Dynamic Control (VDC) Off Switch* | 18 Hood Release* |
| 2 Low Tire Pressure Warning Light | 8 Cruise Control | 13 Trunk Opener Release Switch | 19 Front Passenger Air Bag Status Light* |
| 3 Headlight and Turn Signal Switch | 9 Instrument Brightness Control* | 14 Warning Systems Switch | 20 Control Panel Display Screen* |
| 4 Paddle Shifters* | 10 Trip Computer Reset Switch | 15 Heated Steering Wheel Switch | 21 Automatic Climate Controls |
| 5 Windshield Wiper/Washer Switch | 11 Bluetooth® Hands-free Phone System Controls | 16 Tilt/Telescopic Steering Column* | 22 USB Port/Aux Jack |
| 6 Vehicle Information Display Menu Button | | 17 Fuel-filler Door Release | 23 Power Outlet* |

*See your Owner's Manual for information.

TABLE OF CONTENTS

NEW SYSTEM FEATURES

Text Messaging (if so equipped)	2
RearView Monitor with Moving Object Detection (MOD) (if so equipped)	2
Blind Spot Warning (BSW) System (if so equipped)	3
Lane Departure Warning (LDW) (if so equipped)	3
Heated Steering Wheel (if so equipped)	4
SiriusXM Travel Link and SiriusXM Traffic (if so equipped)	4

ESSENTIAL INFORMATION

Tire Pressure Monitoring System (TPMS) with Easy Fill Tire Alert	5
Loose Fuel Cap	6
Fuel-filler Door	6
Clock Set/Adjustment	7

FIRST DRIVE FEATURES

NISSAN Intelligent Key® System	8
Trunk Lid Release	10
Power Seat Adjustments (if so equipped)	10
Outside Mirror Control Switch	10
Starting/Stopping the Engine	11
Headlight Control Switch	11
Windshield Wiper and Washer Switch	12
Automatic Climate Controls (if so equipped)	13
FM/AM/SiriusXM® Satellite Radio with CD Player (if so equipped)	14
USB (Universal Serial Bus) Connection Port/Aux Jack and iPod® Interface (if so equipped) ...	15
Cruise Control (if so equipped)	16
Tilt and Telescopic Steering Wheel	16

SYSTEM GUIDE

Vehicle Information Display	17
Vehicle Information Display Trip Computer Reset	18
NissanConnect SM Mobile Apps (if so equipped)	18
Bluetooth® Hands-free Phone System	18
▪ System Operating Tips	18
Bluetooth® System without Navigation (if so equipped)	19
Bluetooth® System with Navigation (if so equipped)	21
Navigation System (if so equipped)	23
HomeLink® Universal Transceiver (if so equipped)	24



Additional information about your vehicle is also available in your Owner's Manual, Navigation System Owner's Manual and at www.nissanusa.com.



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the **"Safety — Seats, seat belts and supplemental restraint system (section 1)"**, the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** and the **"Starting and driving (section 5)"** of your Owner's Manual.

NEW SYSTEM FEATURES

TEXT MESSAGING* (if so equipped)

- This system allows for sending and receiving text messages through the vehicle's interface.
- Using predefined or custom messages, send a text to a name or phone number stored in your Bluetooth® Hands-free Phone System.
- Once enabled, the text message, sender and delivery time are shown on the control panel display screen.
- Text messages have the option of being read aloud.
- Text messages are only displayed on the control panel if the vehicle speed is less than 5 mph (8 km/h).
- Many cellular phones may require special permission to enable text messaging. Check the cellular phone's screen during Bluetooth® menu for text messages to appear on the touch-screen display. For more information and instructions, refer to your cellular phone's Owner's Manual.
- Text message integration requires that the cellular phone support Message Access Profile (MAP) for both receiving and sending text messages. Some cellular phones may not support all text messaging features. Please see www.nissanusa.com/bluetooth for compatibility information as well as your device's Owner's Manual.



*Laws in some jurisdictions may restrict the use of "Text-to-Speech". Some of the applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

REARVIEW MONITOR WITH MOVING OBJECT DETECTION (MOD) (if so equipped)

- When the shift lever is moved to the **R (REVERSE)** position, the front display will automatically change to show the rear view area **1** directly behind the vehicle.
- With the shift lever in the **R (REVERSE)** position, press the **CAMERA** button **2** to change the camera to the rear-wide view **3**.
- The colored lines on the display screen indicate approximate distances to objects:
 - Red 1.5 ft (0.5 m); Yellow 3 ft (1 m); Green 7 ft (2 m) and 10 ft (3 m).



MOVING OBJECT DETECTION (MOD) (if so equipped)

- The MOD system helps inform the driver of moving objects in the rear view or rear-wide view.
- The system will operate when the shift lever is in the **R (REVERSE)** position and the vehicle is driven at speeds of approximately 5 mph (8 km/h) or less.



To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

- If the MOD system detects moving objects, a yellow frame **4** will be displayed on the camera image and a chime will sound.
- When the following are displayed:
 - Blue **MOD** icon **5**; the system is active.
 - Gray **MOD** icon; the system is not active.
 - No **MOD** icon; the system is off. The indicator will also be off if all of the warning systems are deactivated using the settings menu in the vehicle information display.
- The MOD system will not operate if the trunk is open.



For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

BLIND SPOT WARNING (BSW) SYSTEM (if so equipped)

- The BSW system helps alert the driver of other vehicles in adjacent lanes when changing lanes.
- The system will operate when the vehicle is driven at speeds of approximately 20 mph (32 km/h) and above.
- When the system detects a vehicle in the detection zone, the blind spot indicator light **1**, located near the outside mirror, will illuminate. If the turn signal is then activated, the system chimes twice and the blind spot indicator light flashes to alert the driver. The blind spot indicator light continues to flash until the detected vehicle leaves the detection zone.
- Push the warning systems switch **2** to temporarily turn the system off. When the system is off, the indicator light **3** on the switch is off.
- The indicator light will also be off if all of the warning systems are deactivated using the settings menu.



 
For more information, refer to the “**Instruments and controls (section 2)**” and the “**Starting and driving (section 5)**” of your Owner’s Manual.

LANE DEPARTURE WARNING (LDW) (if so equipped)

- The system helps alert the driver when the vehicle is traveling too close to either the left or the right side of a traveling lane.
- The system will operate when the vehicle is driven at speeds of approximately 45 mph (70 km/h) and above.

NEW SYSTEM FEATURES

- When the vehicle approaches either the left or the right side of the traveling lane, the LDW will chime and the orange LDW light **1** on the instrument panel will blink to alert the driver.
- If the system does not turn on at start-up, then it must be activated using the settings menu.
- Push the warning systems switch **2** to temporarily turn the system off. When the system is off, the indicator light **3** on the switch is off.
- The indicator light will also be off if all of the warning systems are deactivated using the settings menu.

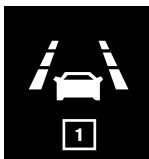

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Starting and driving (section 5)**” of your Owner’s Manual.

HEATED STEERING WHEEL (if so equipped)

 
- Push the heated steering wheel switch **1** to warm the steering wheel after the engine starts. The indicator light **2** will illuminate.
- Once activated, the heated steering wheel will automatically turn on and off to maintain a temperature above 68°F (20°C).
- When the surface temperature of the steering wheel is above 68°F (20°C) and the control switch is turned on, the system will not heat the steering wheel. This does not indicate a malfunction.



For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

SiriusXM TRAVEL LINK* AND SiriusXM TRAFFIC* (if so equipped)

- Your vehicle’s Navigation System is equipped with SiriusXM Travel Link and SiriusXM Traffic capabilities.
- SiriusXM Travel Link provides access to real-time weather information and forecasts, nearby fuel prices, movie listings and stock quotes.
- SiriusXM Traffic provides information that may help to avoid delays due to traffic incidents. Traffic jams, roadwork, road closures around the current location, etc., are represented graphically on the map by icons depicting the nature of the event. Incidents on the route are automatically displayed when they are approached.

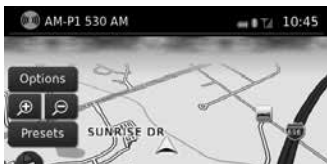

*These features, SiriusXM® Satellite Radio, Travel Link and Traffic, require an active subscription. Multiple subscriptions may be necessary to activate the various features.

For more information, refer to the “**Navigation (section 4)**” and the “**General system information (section 6)**” of your Navigation System Owner’s Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

ESSENTIAL INFORMATION

TIRE PRESSURE MONITORING SYSTEM (TPMS) WITH EASY FILL TIRE ALERT

■ A **Tire Pressure Low – Add Air** warning

message will appear in the vehicle information display **1** and the low tire pressure warning light **2** will illuminate when one or more tires are low in pressure and air is needed.



■ The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mi (1.6 km) at moderate speeds.

■ When adding air to an under-inflated tire, the TPMS with Easy Fill Tire Alert provides visual and audible signals to help you inflate the tire to the recommended COLD tire pressure.



■ To use the Easy Fill Tire Alert system:

1. Move the shift lever to the **P (PARK)** position and apply the parking brake.
2. Place the ignition switch in the **ON** position. Do not start the engine.
3. Add air to the under-inflated tire, and within a few seconds, the hazard warning lights will start flashing.
4. When the designated tire pressure is reached, the horn will beep once and the hazard warning flashers will stop.
5. Repeat this procedure for any additional under-inflated tires.

■ After tire pressures are adjusted, drive the vehicle at speeds above 16 mph (25 km/h). The **Tire Pressure Low – Add Air** warning message and low tire pressure warning light will extinguish.

■ When the low tire pressure warning light flashes for approximately 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked by a NISSAN dealer.

■ Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light to illuminate. If the warning light illuminates, check the tire pressure in your tires.


■ Check the tire pressure (including the spare tire) often and always prior to long distance trips.

 
■ The Tire and Loading Information label contains valuable information. Please refer to the "Technical and consumer information (section 9)" in your Owner's Manual for the location of the Tire and Loading Information label.

For more information, refer to the "**Instruments and controls (section 2)**", the "**Starting and driving (section 5)**" and the "**Maintenance and do-it-yourself (section 8)**" of your Owner's Manual.

ESSENTIAL INFORMATION

LOOSE FUEL CAP

- A **LOOSE FUEL CAP** warning message will display in the vehicle information display **1** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will extinguish when the vehicle detects the fuel-filler cap is properly tightened and the reset button **2** is pressed for about 1 second.
- If the cap is not properly tightened, the Malfunction Indicator Light  may also illuminate.

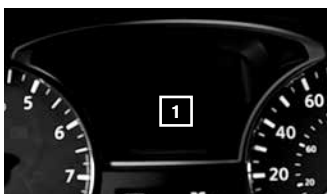

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

FUEL-FILLER DOOR

- To open the fuel-filler door, pull the release lever **1** located on the instrument panel to the left of the steering wheel.
- The fuel-filler door is located on the driver’s side of the vehicle.



For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.



CLOCK SET/ADJUSTMENT

- To adjust the time and the appearance of the clock on the display:

1. Press the **APPS** button **1**.
2. Touch the "Settings" key.
3. Touch the "System" key.
4. Touch the "Clock" key.

- The following settings can be adjusted:

- **Time Format:** The clock can be set to 12 hours or 24 hours.
- **Date Format:** The date can be changed to 1 of 5 different formats.
- **Clock Mode:** From here, the clock mode options are:
 - **Manual:** Allows for the option "Set Clock Manually". Touch this to begin setting the clock manually using the "+" or "-" to adjust the hours, minutes, day and month up or down.
 - **Time Zone:** Touch the "Time Zone" key **2** to choose from the applicable time zone list and/or touch "Daylight Savings Time" to switch between ON and OFF.
 - **Auto:** Automatically sets the clock to the vehicle's current location.



- Press the **BACK** button **3** to return to the previous screen.

 
For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.



FIRST DRIVE FEATURES

NISSAN INTELLIGENT KEY® SYSTEM

The NISSAN Intelligent Key® system allows you to lock or unlock your vehicle, open your trunk and remotely start the engine. It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

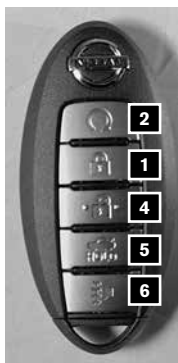REMOTE ENGINE START* (if so equipped)



- The remote start operating range is approximately 200 ft (60 m) from the vehicle. The remote engine start feature will not operate if the Intelligent Key is inside the vehicle. The effective operating range may be shorter if there are walls or other obstructions between the key and the vehicle.
- For remote start to function, the vehicle must be in the **P (PARK)** position with the ignition off and all doors must be closed and locked. Please see your Owner's Manual for additional information.
- To start your vehicle remotely:
 1. Press the  button **1**.
 2. Within 5 seconds, press and hold the engine start  button **2** for at least 2 seconds.
- The engine will start, and the parking lights will turn on.
- Automatic climate control will begin heating or cooling the vehicle, depending on the outside temperature.
- The engine will run for 10 minutes and then turn off.
 - You must wait at least 6 seconds before remotely starting the engine again.
- Repeat steps 1 and 2 to extend the time for an additional 10-minute period.
 - After 2 remote starts, the ignition switch must be cycled before remote start can be used again.
- To start driving, depress the brake pedal and push the ignition switch **START/STOP** button.


*Laws in some communities may restrict the use of remote starters. Check local regulations before using this feature.

LOCKING AND UNLOCKING THE VEHICLE


- The lock and unlock operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, push either door handle request switch **3** once or press the **1** button **1** on the key fob.
- To unlock the vehicle, perform one of the following procedures:
 - Push either door handle request switch **3** once; the corresponding door will unlock. Push the door handle request switch **3** again within 60 seconds; all other doors will unlock, or
 - Press the **1** button **4** on the key fob to unlock the driver's side door. Press the **1** button **4** again; all other doors will unlock.



TRUNK LID RELEASE

 
 
- To open the trunk, press the  **HOLD** button **5** for more than 1 second.
- The trunk lid release button will not operate when the ignition switch is in the **ON** position.

PANIC ALARM

- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button **6** for more than 0.5 seconds. Once activated, the panic alarm and headlights will stay on for a period of time.

INTELLIGENT KEY BATTERY DISCHARGE

- If the **Key Battery Low** indicator **7** appears in the vehicle information display, replace the battery as soon as possible.
- If the battery of the Intelligent Key is discharged, the indicator **8** appears in the vehicle information display, or if environmental conditions interfere with the Intelligent Key operation, start the engine according to the following procedure:
 1. Move the shift lever to the **P (PARK)** position.
 2. Firmly apply the foot brake.
 3. Touch the ignition switch with the Intelligent Key, and a chime will sound.
 4. Within 10 seconds after the chime sounds, push the ignition switch while depressing the brake pedal and the engine will start.




For more information, refer to the “**Pre-driving checks and adjustments (section 3)**”, the “**Starting and driving (section 5)**” and the “**Maintenance and do-it-yourself (section 8)**” of your Owner's Manual.

FIRST DRIVE FEATURES

TRUNK LID RELEASE

Use one of the following methods to open the trunk:

 
- Push the trunk opener request switch **1**, located under the trunk handle, for more than 1 second while carrying the NISSAN Intelligent Key® with you (that is, in your pocket or purse).
- Press the trunk release  button **2** on the Intelligent Key for more than 1 second.
- From inside the vehicle, push the trunk lid release switch **3** located on the instrument panel to the left of the steering wheel.



For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

POWER SEAT ADJUSTMENTS (if so equipped)

- To slide the seat forward or backward, push the switch **1** forward or backward.
- To adjust the angle of the seatback, push the switch **2** forward or backward.

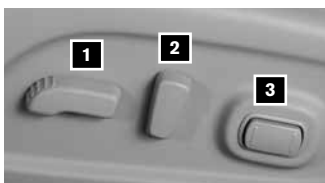

SEAT LIFTER (if so equipped for driver’s seat)

- To adjust the angle and height of the seat cushion, push the front or rear end of the switch **1** up or down.

LUMBAR SUPPORT (if so equipped for driver’s seat)

- To adjust the seat lumbar area, push the front or rear end of the switch **3**.

For more information, refer to the “**Safety – Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.

OUTSIDE MIRROR CONTROL SWITCH

- To select the right or left side mirror, move the control switch **1** right or left.
- To adjust the mirror angle, push the control switch **2** up, down, right or left.
- To prevent accidentally moving the mirror, set the control switch **1** to the middle (neutral) position.



For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

STARTING/STOPPING THE ENGINE

- It is important to make sure the NISSAN Intelligent Key® is with you (that is, in your pocket or purse).
- Depress the brake pedal.
 - If the brake pedal is not depressed, pushing the ignition switch once enters the ACC mode.
 - If the ignition is pushed a second time, the vehicle will enter the ON mode.
- Move the shift lever to the **P (PARK)** position.
- Press the ignition switch **START/STOP** button to start the engine.





TURNING THE ENGINE OFF

 
- Move the shift lever to the **P (PARK)** position and apply the parking brake.
- Press the ignition switch **START/STOP** button to turn the engine off.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.



HEADLIGHT CONTROL SWITCH

HEADLIGHT CONTROL

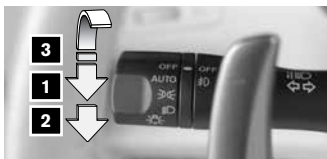
- Turn the headlight control switch to the  position **1** to turn on the front parking, tail, license plate and instrument panel lights. Turn the switch to the  position **2** to turn on the headlights.




AUTOLIGHT SYSTEM (if so equipped)

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all the doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **3** then push the ignition switch to **ON**. To deactivate the autolight system, turn the headlight control switch to the **OFF**,  position **1** or  position **2**.

 
HIGH BEAM SELECT

 - Push the headlight control switch forward **4** to select the high beam function. The blue indicator light  illuminates in the instrument panel. Pull the headlight control switch back to the original position to select the low beam. The blue indicator will extinguish.
- Pull and release the headlight control switch **5** to flash the headlight high beams on and off.

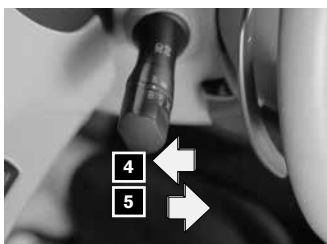

FIRST DRIVE FEATURES

FOG LIGHT SWITCH (if so equipped)

- The headlights must be on and the low beams  selected for the fog lights to operate.
- Turn the switch (inside collar) to the **ON** position **6** to turn the fog lights on.
- Turn the switch (inside collar) to the **OFF** position to turn the fog lights off.




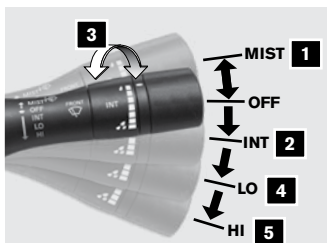 
LANE CHANGE SIGNAL

- Move the lever up or down until the turn signal begins to flash but the lever does not latch to signal a lane change. Hold the lever until the lane change is completed.
- Move the lever up or down until the turn signal begins to flash but the lever does not latch and release the lever. The turn signal will automatically flash 3 times.
- Choose the appropriate method to signal a lane change based on the road and traffic conditions.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

WINDSHIELD WIPER AND WASHER SWITCH

- Move the lever to one of the following positions to operate the windshield wipers:
 - 1** Mist (**MIST**) – One sweep operation of the front wipers.
 - 2** Intermittent (**INT**) – Move the lever down to the **INT** position and then rotate the control ring **3** to increase or decrease wiper speed.
 - 4** Low (**LO**) – Wipers operate at a continuous low-speed.
 - 5** High (**HI**) – Wipers operate at a continuous high-speed.
 - 6** Washer  – Pull the lever toward you to activate the washer. The wipers will operate several times.



For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.



AUTOMATIC CLIMATE CONTROLS (if so equipped)


1 AUTO BUTTON/DRIVER'S SIDE TEMPERATURE CONTROL DIAL

- The automatic mode may be used year-round. Press the **AUTO** button to turn the system on, and the system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.
- Turn the driver's side temperature control dial to the left for cooler air or right for warmer air.


2 DUAL BUTTON/PASSENGER'S SIDE TEMPERATURE CONTROL DIAL

- Press the **DUAL** button to turn the passenger's side temperature controls on or off. This will allow the passenger's side temperature to be adjusted independently from the driver's side by turning the passenger's side temperature control dial.
- Turn the passenger's side temperature control dial left for cooler air or right for warmer air.

3 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the defroster control button  to turn the system on. The A/C automatically turns on when the defroster mode is selected. This feature removes humidity from the air.
- Turn the temperature control dial **1** to set the desired temperature.
- To defrost the front and side windows, set the temperature control **1** and fan speed control **6** to their maximum settings.



4 REAR WINDOW AND OUTSIDE MIRROR (if so equipped) DEFROSTER SWITCH

- Press the rear window defroster switch  to turn the system on or off.
- This function automatically turns off after approximately 15 minutes.

5 ON-OFF BUTTON

- Press the button to turn the climate control system on or off.



 

6 FAN SPEED CONTROL BUTTONS

- Press the left  button to decrease fan speed or the right  button to increase fan speed.

FIRST DRIVE FEATURES

7 MODE BUTTON


- Press the **MODE** button to cycle through the following air flow outlets:

-  Air flows from the center and side vents.
-  Air flows from the center, side and foot vents.
-  Air flows mainly from the foot vents.
-  Air flows from the defroster and foot vents.




8 A/C BUTTON

- Press the **A/C** button to turn the air conditioner system on or off. This system helps cool and dehumidify the air inside the cabin and defog the windows.

9 FRESH AIR INTAKE BUTTON

- Press the fresh air intake button  to draw outside air into the passenger compartment. The indicator light on the button will illuminate.

10 AIR RECIRCULATION BUTTON

- Press the air recirculation button  to recirculate interior air inside the vehicle. The indicator light on the button will illuminate. This system is used to avoid certain outside odors and to help adjust the inside vehicle temperature more effectively.
- The air recirculation mode cannot be activated when the climate control system is in the front defroster mode  or the front defroster and foot vent mode .

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.



FM/AM/SiriusXM®* SATELLITE RADIO WITH CD PLAYER (if so equipped)

1 POWER BUTTON/VOL (volume) CONTROL KNOB

- To turn the system on or off, press the **POWER** button.
- To increase or decrease the volume, turn the **VOL (volume)** control knob right or left.

*SiriusXM® Satellite Radio is only available on vehicles equipped with an optional satellite radio subscription service. XM radio signal may be interrupted by buildings, bridges and tunnels depending on the position of the XM satellites and signal repeaters relative to your vehicle.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

2 TUNE-SCROLL CONTROL KNOB/ENTER-AUDIO BUTTON

- To manually tune the radio, turn the **TUNE-SCROLL** control knob left or right.
- Press the **ENTER-AUDIO** button to go to the audio settings screen.

3 SEEK BUTTONS

- To tune and stop at the previous or next broadcast station, press the seek buttons **◀◀** or **▶▶**.
- For satellite radio to switch to the first channel of the previous or next category, press the seek buttons **◀◀** or **▶▶**.
- To change tracks on a CD, press the seek buttons **◀◀** or **▶▶**.
- To rewind or fast forward a track on a CD, press and hold the seek buttons **◀◀** or **▶▶**.

4 STATION MEMORY KEYS

- Twelve stations can be set for the FM band, 6 for the AM band and 18 for satellite radio.
- To store a station in a preset, you must first select a radio band by pressing the **FM-AM** button **5** or **SXM** button **6** then tune to the desired FM, AM or satellite radio station.
- Now select and hold the desired station memory key **(1-6)** **4** until the preset number is updated on the display and a beep is heard. Programing is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then select the corresponding station memory key **(1-6)** **4**.

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

USB (Universal Serial Bus) CONNECTION PORT/AUX JACK AND IPOD® INTERFACE (if so equipped)

- The USB port/Aux jack **1** is located on the center console beneath the heater and air conditioner controls inside the storage box.
- When a compatible USB memory device or iPod® is plugged into the USB port/Aux jack, compatible audio files stored on the device can be played through the vehicle’s audio system.

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.



FIRST DRIVE FEATURES

CRUISE CONTROL (if so equipped)

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 mph (40 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **ON/OFF** switch **1**. The **CRUISE** indicator light in the instrument panel will illuminate.
- To set a cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **2** and release. The **SET** indicator light in the instrument panel will illuminate. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **3**. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **2**. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, tap the brake pedal or push the **CANCEL** switch **4**.
- To turn off cruise control, push the **ON/OFF** switch **1**. Both the **CRUISE** indicator light and **SET** indicator light in the instrument panel will extinguish.



For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

TILT AND TELESCOPIC STEERING WHEEL

Release the lock lever by pulling it down.

- Adjust the steering wheel forward or backward by moving it to the desired position.
- Adjust the steering wheel up or down to the desired position.

Lock the steering wheel in place by pushing the lock lever up firmly.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

 


SYSTEM GUIDE



VEHICLE INFORMATION DISPLAY

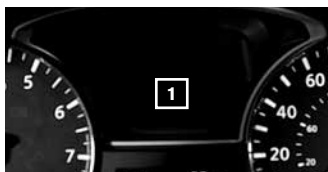


The vehicle information display **1** displays such items as:

- Vehicle settings
- Trip computer information
- Drive system warnings and settings
(if so equipped)
- Audio information
- Navigation turn-by-turn (if so equipped)
- Cruise control system information
- NISSAN Intelligent Key® operation information
- Indicators and warnings
- Tire pressure information



USING THE VEHICLE INFORMATION DISPLAY

The vehicle information display can be changed using the  button **2** and the ENTER  buttons **3** located on the steering wheel.

- Press the  button **2** to change the display mode.
- Press the  button **3** to navigate through the mode's menu.
- Press the **ENTER** button **3** to change or select an item.
- Press the  button **4** to go back to the previous menu.



STARTUP DISPLAY

When the ignition is in the ACC or ON position, the vehicle information display will support four of the following modes:

- Active system status (if so equipped)
- Trip computer
- Tire pressure information
- Fuel economy
- Warnings (displays when a warning is present)

SETTINGS



The setting mode allows you to change the information displayed in the vehicle information display:

- | | |
|--------------------------------------|-------------------|
| ■ Driver Assistance (if so equipped) | ■ Alarms |
| ■ Vehicle Settings | ■ Language |
| ■ Main Menu Selection | ■ Unit |
| ■ Body Color | ■ Welcome Effects |
| ■ Maintenance | ■ Factory Reset |

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner's Manual.

SYSTEM GUIDE

VEHICLE INFORMATION DISPLAY TRIP COMPUTER RESET

1. Press the  button on the steering wheel until you reach the trip computer mode **1**.
2. Press the  button on the steering wheel again for more than 1.5 seconds to reset average fuel consumption, average speed, distance to empty and journey time.



For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

NISSANCONNECTSM MOBILE APPS (if so equipped)

- Integrates popular smartphone apps and services into your vehicle.
- The NissanConnect Mobile Apps companion app must be downloaded to your smartphone, and you must be enrolled.

FOR SYSTEM WITH NAVIGATION

- iPhone[®]: Please connect over USB when using an iPhone[®] with NissanConnect Mobile Apps.
- Android: Please connect over Bluetooth[®] when using an Android device with NissanConnect Mobile Apps.

FOR SYSTEM WITHOUT NAVIGATION


 
- iPhone[®]: Please connect over Bluetooth[®] when using an iPhone[®] with NissanConnect Mobile Apps.
- Android: Please connect over Bluetooth[®] when using an Android device with NissanConnect Mobile Apps.
- For more information on how to pair your phone and set up NissanConnect Mobile Apps, visit: **www.nissanusa.com/connect/support**.



For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

BLUETOOTH[®] HANDS-FREE PHONE SYSTEM

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation*.


SYSTEM OPERATING TIPS

  - Press the  button to interrupt the voice prompts at any time and speak a command after the tone.
- To use the system faster, you may speak the second level commands with the main menu command on the main menu. For example, press the  button and after the tone say “Call Redial”.
- The “Help” command can be used to hear a list of available commands at any time.

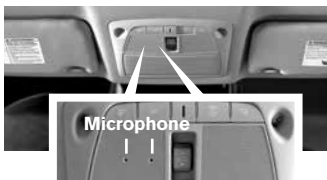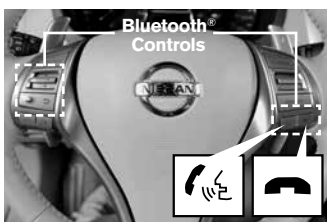


*Some jurisdictions prohibit the use of cellular telephones while driving.

To view detailed instructional videos regarding these and other features, please go to **www.nissanownersinfo.mobi**.

- Reduce background noise as much as possible by closing windows and pointing HVAC vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.
- When speaking phonebook names, please be aware some phones require the last name to be spoken before the first name. For example, "Michael Smith" may be spoken as "Smith Michael".
- To cancel a Voice Recognition session, say "Exit" or press and hold the  button.
- To decrease or increase the volume of the voice prompts, push the volume control switches **—** or **+** on the steering wheel or turn the **VOL (volume)** control knob on the audio system while the system is responding.
- Voice commands can be used to operate various Bluetooth® system features using the NISSAN Voice Recognition system. See your Owner's Manual for detailed information.
- If the Voice Recognition system does not recognize your voice commands, train the system using the Voice Adaptation Mode.
- For more detailed information and instructions, refer to your cellular phone's Owner's Manual and visit www.nissanusa.com/bluetooth.

 
 
BLUETOOTH® SYSTEM WITHOUT NAVIGATION* (if so equipped)

CONNECTING PROCEDURE WITHOUT NAVIGATION* (Type A) (if so equipped)

1. Press the  button on the steering wheel.
2. After the command, say "Connect Phone".
3. The system will confirm your command. After the tone, say "Add Phone", and then follow the voice prompts to complete the connecting procedure from your handset.
 - The connecting procedure varies according to each cellular phone. See your cellular phone's Owner's Manual for details and also visit www.nissanusa.com/bluetooth.

CONNECTING PROCEDURE WITHOUT NAVIGATION* (Type B) (if so equipped)


- The vehicle must be stationary when connecting the phone.
1. Press the **SETTING** button on the control panel.
 2. Use the **TUNE/SCROLL** knob to select "Bluetooth" and then press the **ENTER** button.
 3. Use the **TUNE/SCROLL** knob to select "Add phone or Device" and then press the **ENTER** button.
 4. Follow the instructions on the screen to complete the connecting procedure from your handset.
 - The connecting procedure varies according to each cellular phone. See your cellular phone's Owner's Manual for details and also visit www.nissanusa.com/bluetooth.

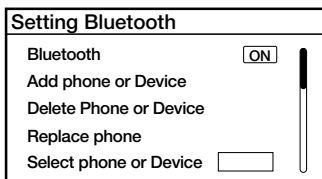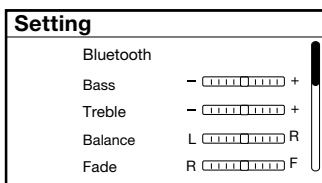


*Some jurisdictions prohibit the use of cellular telephones while driving.

SYSTEM GUIDE


PHONEBOOK SETUP

- Depending on your cellular phone, the system may automatically download your cellular phone's entire phonebook to the vehicle's Bluetooth® system.
- If the phonebook does not download automatically, follow this procedure to manually download entries:
 1. Using the **SETTING** button and **TUNE/SCROLL** knob, change the "Phonebook Download" setting to OFF.
 2. Press the  button on the steering wheel.
 3. After the tone, say "Phonebook".
 4. After the next tone, say "Transfer Entry". The system acknowledges the command and asks you to initiate the transfer from the phone handset. The new contact phone number will be transferred from the cellular phone to the vehicle.




MAKING A CALL FROM THE PHONEBOOK

 
1. Press the  button.
2. After the tone, say "Call <NAME>" where <NAME> is the name of a contact stored in your phonebook.
3. The system will confirm the name. If correct, say "Yes". Otherwise, say "No".
 - Please note that some cellular phones require the name to be spoken in a <last name, first name> format.

MAKING A CALL BY PHONE NUMBER

1. Press the  button.
2. After the tone, say "Call <PHONE NUMBER>", or say "Call".
3. The system will confirm the command. After the tone, say "Phone Number".
4. The system will prompt you to speak the phone number. Say the 7-10 digit phone number.
5. The system will confirm the phone number. If correct, say "Dial". Otherwise, say "Correction".

RECEIVING/ENDING A CALL


- When you receive a phone call, a ring tone sounds through the audio system.
- To accept a call, press the  button.
- To reject a call, press the  button.
- To hang-up the phone at the end of a call or to disconnect during call placement, press the  button.

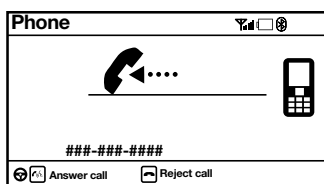


BLUETOOTH® SYSTEM WITH NAVIGATION (if so equipped)

- Send predefined or custom text messages* through your vehicle's Bluetooth® system.
- Receive texts through your vehicle's Bluetooth® system that can be read to you.
- Bluetooth® Streaming Audio allows you to use a compatible Bluetooth® phone to play audio files from your device through your vehicle's audio system. Once your compatible cellular phone is connected to the vehicle's audio system, the audio files will play through the vehicle's speakers.

 CONNECTING PROCEDURE

 1. Press the **APPS**  button on the control panel.
2. Touch the "Settings" key **1**.

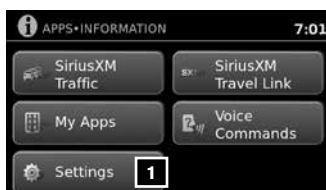

3. Touch the "Phone & Bluetooth" key **2**.

 


4. Touch the "Connect New Device" key **3**.
5. Initiate the connecting process from the handset.

The system will display the message:

"Is PIN XXXXXX displayed on your Bluetooth device?"

If the PIN is displayed on your Bluetooth® device, touch "Yes" to complete the connecting process.

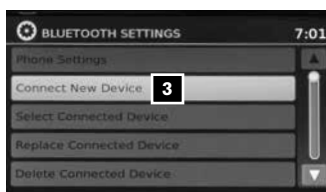




*Laws in some jurisdictions may restrict the use of "Text-to-Speech". Some applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

SYSTEM GUIDE




VEHICLE PHONEBOOK

 To access the vehicle phonebook:

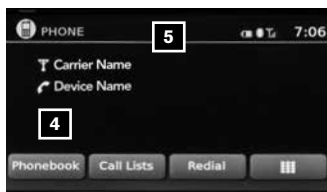





1. Press the  button on the instrument panel.
2. Touch the “Phonebook” key .
3. Choose the desired entry from the displayed list.

 


MAKING A CALL

1. Press the  button on the instrument panel. The “PHONE” screen  will appear on the display.
2. Select one of the following options to make a call:
 - “Phonebook”: Select the name from an entry stored in the vehicle phonebook.
 - “Call Lists”: Select the name from the incoming, outgoing or missed call history.
 - “Redial”: Dial the last outgoing call from the vehicle.
 -  : Input the phone number manually using the keypad displayed on the screen.

RECEIVING/ENDING A CALL

- To accept the incoming call, either:
 - Press the  button on the steering wheel, or
 - Select the  icon on the screen.
- To reject the incoming call, either:
 - Press the  button on the steering wheel, or
 - Select the  icon on the screen.
- To end a phone call, either:
 - Press the  button on the steering wheel, or
 - Select the  icon on the screen.

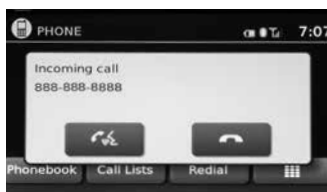

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner's Manual or visit www.nissanusa.com/bluetooth.



NAVIGATION SYSTEM (if so equipped)

 
- Your Navigation System can calculate a route from the current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.
- To help promote safe driving, some functions cannot be operated or have limited operation when the vehicle driving speed is above 5 mph (8 km/h). The on-screen text and keys for these restricted functions will be "grayed-out" or muted and cannot be selected while driving. These functions will become available again when the vehicle speed is reduced to 5 mph (8 km/h). Voice commands may be available for some of the restricted functions. For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

- 1 POWER button/VOL (volume) control knob** – Press the button to turn the system on or off. Rotate the dial clockwise to increase the volume or counterclockwise to decrease the volume.
- 2 Options key** – Select to access features such as "Show Destination Information", "Store Current Position", "Show Position/GPS Information" and "Map Setup".
- 3** - Zoom in key – Select to zoom the map in.
- 4** - Zoom out key – Select to zoom the map out.
- 5 NAV button** – Press to access the functions of the Navigation System.
- 6 MAP button** – Press to display the current location map screen.
- 7 TUNE-SCROLL control knob / ENTER-AUDIO button** – Turn to navigate the items in a list. Press to select a menu item.
- 8** **BACK button** – Press to return to the previous screen.
- 9 APPS** button – Press to access the system settings key.
- 10** button – Press to change the display brightness between day and night modes. While the mode is being displayed, the brightness can be adjusted using the **TUNE/SCROLL** control knob. Press and hold to turn the display off. Press again to turn the display on.

For more information, refer to your Navigation System Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

SYSTEM GUIDE

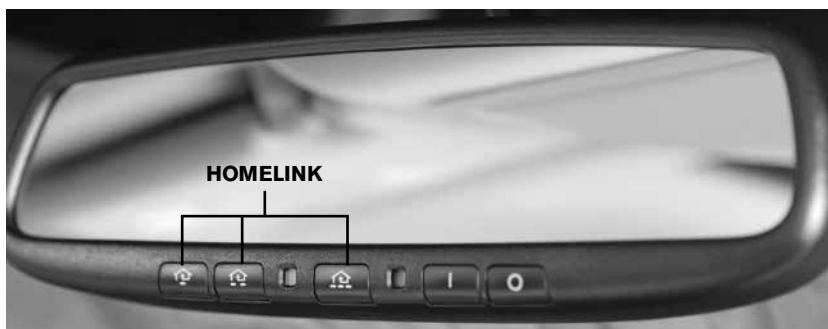

HOMELINK® UNIVERSAL TRANSCEIVER (if so equipped)

- The HomeLink® Universal Transceiver can learn and consolidate the functions of up to three different hand-held transmitters, operating items such as garage doors, property gates, outdoor and indoor lights or alarm systems.
- To program the HomeLink® Universal Transceiver:
 - Position the handheld transceiver 1-3 in (26-76 mm) away from the HomeLink surface, keeping the HomeLink indicator light in view.
 - Press and hold the desired HomeLink button and the handheld transmitter button simultaneously until the HomeLink indicator light flashes slowly and then rapidly.
 - Both buttons may be released when the indicator light flashes rapidly.
- To verify the programing is complete, press and hold the HomeLink button and observe the indicator light:
 - A solid, continuous light indicates the programing is complete and the HomeLink button will activate your device.
 - A blinking light that turns to a solid, continuous light after 2 seconds indicates additional steps are required to complete the programing.
- An additional person may make the remaining steps easier. To complete the programing process:
 - At the receiver of the device that you are programing to the HomeLink system, press and release the “learn” or “smart” button (the name may vary by manufacturer but it is usually located near where the hanging antenna wire is attached to the unit). You have approximately 30 seconds to initiate the following step.
 - Press and hold the programed HomeLink button for 2 seconds and release.
- You may have to repeat the previous two steps up to 3 times to complete the programing process. HomeLink should now activate your device.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual, the HomeLink website at www.homelink.com or call 1-800-355-3515.

MEMO



Helpful Resources

Below is a list of helpful resources that can be used to learn more about the vehicle's systems and feature operations.

- Vehicle Owner's Manual
- Navigation Owner's Manual (if so equipped)
- Printed Quick Reference Guide (this document)
- www.NissanUSA.com/bluetooth
- www.NissanUSA.com/connect
- www.youtube.com/user/NissanUSA
- NISSAN Consumer Affairs 1-800-647-7261
- Electronic Quick Reference Guide
(Use Quick Response (QR) code or URL below.)



To view detailed instructional videos,
go to www.nissanownersinfo.mobi/2015/altima
or snap this barcode with an appropriate barcode reader.



This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain with this Quick Reference Guide all revision updates sent to you by NISSAN to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the NISSAN website at <https://owners.nissanusa.com/owners/navigation/manualsGuide>. If you have questions concerning any information in your Owner's Manual, contact NISSAN Consumer Affairs. See the NISSAN CUSTOMER CARE PROGRAM page in the Owner's Manual for contact information.

Nissan, the Nissan Brand Symbol, Z and Nissan model names are Nissan trademarks.

© 2015 Nissan North America, Inc.

QR15EA 0L33U3

Printing: March 2015 (12)

