


2018 **ALTIMA**

QUICK REFERENCE GUIDE



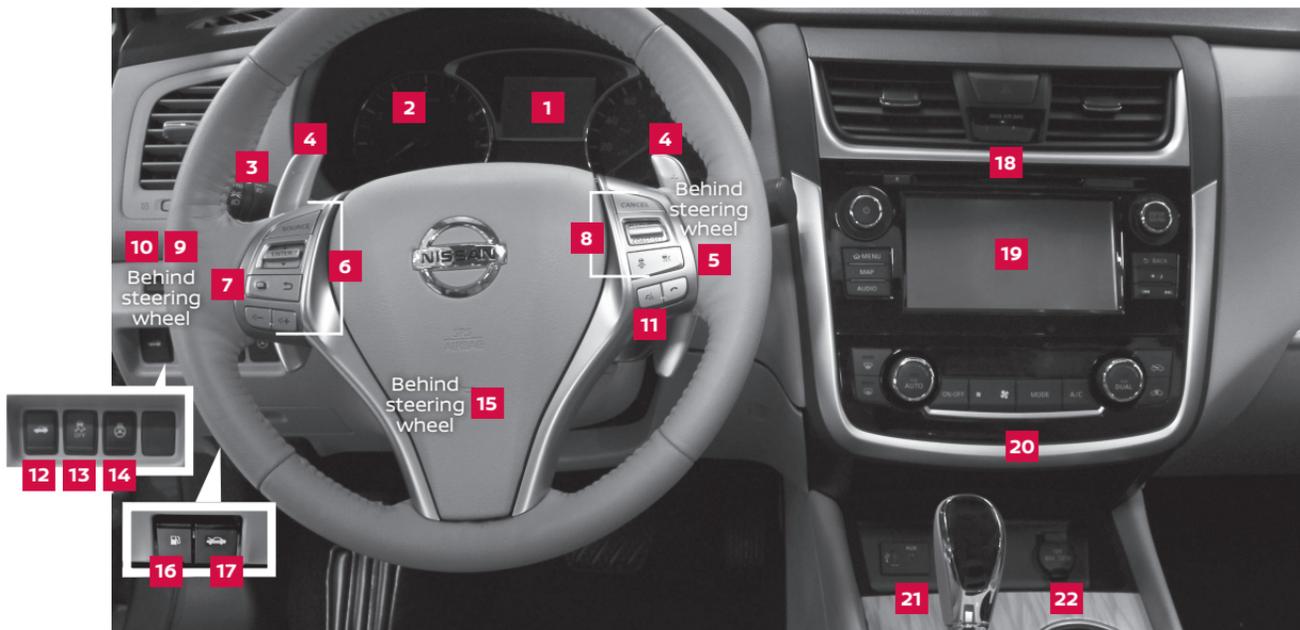

- | | | | |
|--|---|---|---|
| 1 Vehicle Information Display | 7 Vehicle Information Display Switch | 13 Vehicle Dynamic Control (VDC) OFF Switch* | 18 Front Passenger Air Bag Status Light* |
| 2 Low Tire Pressure Warning Light | 8 Intelligent Cruise Control Switches | 14 Heated Steering Wheel Switch | 19 Control Panel Display Screen |
| 3 Headlight and Turn Signal Switch | 9 Instrument Brightness Control* | 15 Tilt/Telescopic Steering Column | 20 Heater and Air Conditioner |
| 4 Paddle Shifters* | 10 Trip Computer Reset Switch | 16 Fuel-filler Door Release | 21 USB Port/Aux Jack |
| 5 Wiper and Washer Switch | 11 Bluetooth® Hands-free Phone System Controls | 17 Hood Release* | 22 Power Outlet* |
| 6 Steering Wheel Switches for Audio*/Bluetooth® | 12 Trunk Opener Release Switch | | |

*See your Owner's Manual for information.

TABLE OF CONTENTS

NEW SYSTEM FEATURES

| | |
|---|----|
| How to Use Your Altima's Touch-screen Display (if so equipped)..... | 2 |
| NissanConnect® Services Powered by SiriusXM® (if so equipped)..... | 3 |
| Heated Steering Wheel (if so equipped)..... | 4 |
| Hands-free Text Messaging Assistant (if so equipped)..... | 5 |
| RearView Monitor..... | 5 |
| Blind Spot Warning (BSW) with Rear Cross Traffic Alert (RCTA) (if so equipped)..... | 6 |
| Automatic Emergency Braking (AEB)..... | 6 |
| Apple CarPlay™ (if so equipped)..... | 7 |
| Android Auto™ (if so equipped)..... | 8 |
| SiriusXM Travel Link and SiriusXM Traffic (if so equipped)..... | 10 |

ESSENTIAL INFORMATION

| | |
|---|----|
| Tire Pressure Monitoring System (TPMS) with Easy-Fill Tire Alert..... | 11 |
| Loose Fuel Cap..... | 12 |
| Fuel-filler Door..... | 12 |
| Clock Set/Adjustment..... | 12 |

FIRST DRIVE FEATURES

| | |
|--|----|
| Nissan Intelligent Key® System..... | 14 |
| Trunk Lid Release..... | 16 |
| Front Power Seat Adjustments (if so equipped)..... | 16 |
| Outside Mirror Control Switch..... | 17 |
| Starting/Stopping the Engine..... | 17 |
| Headlight Control Switch..... | 18 |
| Wiper and Washer Switch..... | 19 |
| Tilt and Telescopic Steering Wheel..... | 19 |
| Heater and Air Conditioner (automatic) (if so equipped)..... | 20 |
| FM/AM/SiriusXM® Satellite Radio with CD Player (if so equipped)..... | 21 |
| USB (Universal Serial Bus) Connection Port/Aux Jack and iPod® Interface..... | 23 |
| Cruise Control (if so equipped)..... | 23 |
| Intelligent Cruise Control (ICC) (if so equipped)..... | 24 |

SYSTEM GUIDE

| | |
|--|----|
| Vehicle Information Display..... | 25 |
| Bluetooth® Hands-free Phone System..... | 26 |
| • System Operating Tips..... | 26 |
| Bluetooth® System without Navigation (if so equipped)..... | 27 |
| Bluetooth® System with Navigation (if so equipped)..... | 28 |
| Navigation System (if so equipped)..... | 30 |
| HomeLink® Universal Transceiver (if so equipped)..... | 32 |



Additional information about your vehicle is also available in your Owner's Manual, NissanConnect® Owner's Manual and at www.NissanUSA.com.



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)", the "Monitor, climate, audio, phone and voice recognition systems (section 4)" and the "Starting and driving (section 5)" of your Owner's Manual.

NEW SYSTEM FEATURES



HOW TO USE YOUR ALTIMA'S TOUCH-SCREEN DISPLAY (if so equipped)

- 1** Launch Bar - Various functions can be accessed by touching the items on the Launch Bar **1**, which is displayed on most of the main screens. Touching these keys will bring up the corresponding screens.
- 2** Widget - These items can be interchanged, moved, or deleted from the MENU pages.
- 3** Touch either arrow to navigate to the next or previous page of the "HOME MENU" screen.
- 4** These dots indicate the page you are currently on, in white, out of the number of pages there are available, in gray.
- 5** Shortcut - Shortcuts, once touched, will bring up the system they correspond to for quick, one-touch convenience for commonly used features.
- Shortcuts and Widgets can be set up through the "Edit Menu" screen, which can be accessed by touching the "Settings" key **6** followed by the "Edit Home Menu" key **7**. This will display the "Edit Menu" screen, which allows Shortcuts and Widgets to be moved and rearranged **8**, deleted **9** or created **10**.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to your NissanConnect® Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.



NISSANCONNECT® SERVICES POWERED by SiriusXM® (if so equipped)

NissanConnect® Services is a collection of security and convenience services that add innovation to your daily drive.

- To enroll in NissanConnect Services, create an account or log into your Nissan Owner Portal with your Vehicle Identification Number (VIN). Under the NissanConnect Services tab, select the red button next to Manage Subscription. Follow the prompts to enroll in NissanConnect Services. Next, download the NissanConnect Services companion app and log into it using your Nissan Owner Portal ID and password.

For full details on NissanConnect Services or to enroll your vehicle, please visit www.NissanUSA.com/connect or call 855-426-6628.

Here is a quick overview of some of the features that may be available for your vehicle. A full description of these and other NissanConnect Services can be found in your NissanConnect Owner's Manual.

- Automatic Collision Notification, a service that generates an automatic connection between the vehicle and the Emergency Response Center when the vehicle has been involved in an accident that was severe enough to deploy the air bags.
- Emergency Call, which connects you to a NissanConnect Services Specialist who will assist in the dispatch of emergency services to the vehicle's location. To use this feature, press the **SOS** button **1** on the overhead console. The **SOS** button **1** should only be used in emergency situations.
- Roadside Assistance, which dispatches roadside assistance to the vehicle's location in non-emergency situations. Roadside Assistance can be accessed by touching the  headset icon **2** on the map screen, via NissanConnect Services Companion app or by calling the Roadside Assistance provider directly.
- Stolen Vehicle Locator, a service that works in coordination with law enforcement agencies to assist in the recovery of a stolen vehicle.
- Remote Door Lock/Unlock, for use when you forget to lock your car or if you need to open it and don't have the keys. To use this feature, log into the NissanConnect Services companion app or website or contact a NissanConnect Services Response Specialist.
- Remote Engine Start/Stop – Start your engine remotely using the NissanConnect Services companion app or website.
- Destination Assistance, a feature that allows you to verbally request point-of-interest or destination data by touching the  headset icon **2** on the map screen.




To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

NEW SYSTEM FEATURES

- Journey Planner, with which you can send a route with a destination and up to five way points directly to the vehicle.
- Boundary Alert, a feature that allows you to monitor the movement of your vehicle in and out of specified regions you have set on the Monitoring section of the NissanConnect Services web portal or companion app.
- Speed Alert, which sends you alerts when your vehicle speed exceeds a threshold you have set on the web portal or companion app.
- Alarm Notification – This system will notify you when the factory-installed vehicle alarm system has been activated.



- Maintenance Alert – Receive notifications via a selected method of a vehicle system malfunction that triggers instrument panel warning lights.
- Connected Search – Select “Connected Search” from the Destination menu on the vehicle’s Navigation System to conduct a Point Of Interest (POI) search within a certain distance of the vehicle’s location.
- Valet Alert – Use Valet Alert to set up a 0.2-mile radius around your vehicle. Activate alerts via the NissanConnect Services companion app or website.
- Curfew Alert – Specify curfew limits via the NissanConnect Services companion app or website and be notified via a selected method if curfew is violated.

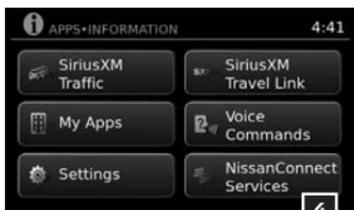

To access these features in your vehicle:

- Touch the **i** Info key **3** on the control panel, then
- Touch the “NissanConnect Services” key **4**.

Please see your Owner’s Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to your NissanConnect® Owner’s Manual.

HEATED STEERING WHEEL (if so equipped)

- Push the heated steering wheel switch **1** to warm the steering wheel after the engine starts. The indicator light **2** on the heated steering wheel switch will illuminate.
- Once activated, the heated steering wheel will automatically turn on and off to maintain a temperature above 68°F (20°C).
- When the surface temperature of the steering wheel is above 68°F (20°C) and the heated steering wheel switch **1** is turned on, the system will not heat the steering wheel. This does not indicate a malfunction.



Please see your Owner’s Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

HANDS-FREE TEXT MESSAGING ASSISTANT* (if so equipped)

- This system allows for sending and receiving text messages through the vehicle's interface.
- Using predefined or custom messages, send a text to an entry stored in your Bluetooth® Hands-free Phone System.
- Once enabled, the text message, sender and delivery time are shown on the control panel display when the vehicle speed is less than 5 mph (8 km/h).
- Text messages have the option of being read aloud at all vehicle speeds.
- Many cellular phones may require special permission to enable text messaging. Check the cellular phone's screen during Bluetooth® pairing. For some cellular phones, you need to enable "Notifications" in the cellular phone's Bluetooth® menu for text messages to appear on the touch-screen display. For more information and instructions, refer to your cellular phone's Owner's Manual.
- Text message integration requires that the cellular phone support Message Access Profile (MAP) for both receiving and sending text messages. Some cellular phones may not support all text messaging features. Please see www.NissanUSA.com/bluetooth for compatibility information as well as your device's Owner's Manual.



* Laws in some jurisdictions may restrict the use of "Text-to-Speech". Some of the applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

REARVIEW MONITOR

- When the shift lever is moved to the **R (REVERSE)** position, the front display will automatically change to show the rear view area **1** directly behind the vehicle.
- The colored lines on the display screen indicate approximate distances to objects.



- Red 1.5 ft (0.5 m); Yellow 3 ft (1 m); Green 7 ft (2 m) and 10 ft (3 m).

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

NEW SYSTEM FEATURES

BLIND SPOT WARNING (BSW) WITH REAR CROSS TRAFFIC ALERT (RCTA) (if so equipped)

- The BSW system helps to alert the driver when another vehicle moves into the vehicle's detection zone.
- An indicator light located near the outside mirrors **1** will illuminate if the radar sensors detect a vehicle in the detection zone.
- The indicator light **2** will illuminate after the ignition switch is placed in the ON position and the BSW system is enabled.
- The RCTA system helps to alert the driver of an approaching vehicle when the driver is backing out of a parking space. The system operates when the shift lever is in the **R (REVERSE)** position and the vehicle speed is less than approximately 5 mph (8 km/h).



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Starting and driving (section 5)" of your Owner's Manual.

AUTOMATIC EMERGENCY BRAKING (AEB)

- The AEB system can assist the driver when there is a risk of a forward collision with a vehicle ahead in the traveling lane.
- The AEB operates at speeds greater than 3 mph (5 km/h).
- If there is a risk of a forward collision, an audible tone will sound and the vehicle ahead detection indicator light **1** will illuminate. If the driver applies the brakes after the warning and the AEB system detects that there is still the possibility of a forward collision, the system will automatically increase the braking force. If the driver does not take action, the AEB system will issue a second visual warning **2**, an audible warning and also apply partial braking.




Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.



APPLE CARPLAY™ (if so equipped)

- The in-vehicle system can be used as a controller for some of the iPhone® functions through Apple CarPlay™.
- If your iPhone® is compatible, the Apple CarPlay™ can be used.
 - Select the **↑ MENU** key **1** on the screen.
 - Select “Apple CarPlay” **2** from the menu.
- To connect your CarPlay capable iPhone® to the system, you must connect the iPhone® cable to the USB port below the center console.
 - Depending on the setting, the “Startup Information” screen will appear.
 - Touch “Yes” to use Apple CarPlay™.
 - The Apple CarPlay™ top menu screen will appear, and the iPhone® functions displayed on the screen can be operated by the in-vehicle system.
 - To return to the Apple CarPlay™ top menu screen after operation, touch the **⏪** key **4** on the lower left corner of the Apple CarPlay™ screen.
 - To exit the Apple CarPlay™ screen and display the other screens, press the **↑ MENU** button or one of the other buttons on the control panel and touch the preferred menus.
 - To return to the Apple CarPlay™ screen, touch the **i Info** key **3** on the Launch Bar and then touch the Apple CarPlay™ key **2**.
- When connected to Apple CarPlay™, Siri® operation can also be accessed.

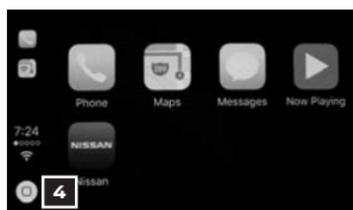

NEW SYSTEM FEATURES

- There are two ways to start a Siri® session.
 1. Press and hold the  button on the steering wheel.
 2. Touch and hold the  key **4** at the lower left corner of the Apple CarPlay™ screen.
 3. Say "Hey Siri" (requires appropriate permissions enabled via phone.)
- Press the  button on the steering wheel or touch the  key **4** at the lower left corner of the Apple CarPlay™ screen to end Siri® operation.
- Keep the interior of the vehicle as quiet as possible. Close the windows to eliminate the surrounding noises (traffic noises, vibration sounds, etc.), which may prevent the system from recognizing the voice commands correctly.
- Some Siri® functions may not be available during driving.
- For functions that can be used with Siri®, please refer to the Apple® website.
- Nissan Phone menu and Nissan Voice Recognition cellular phone commands will not be available when Apple CarPlay™ is active.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to your NissanConnect® Owner's Manual.



ANDROID AUTO™ (if so equipped)

- The in-vehicle system can be used as a controller for some of the Android® functions through Android Auto™.



INITIAL SETUP

- Download the Android Auto app from the Google Play™ store to your compatible Android phone.
- Launch the app from your Android® phone and follow the directions for setting up the application.

- Complete the initial set-up as prompted on your Android phone. Several permissions will need to be given to the app for Android Auto to fully function on your in-vehicle system.

USING ANDROID AUTO

- To connect your Android Auto capable phone to the system, you must connect a USB cable to the USB port located below the center console.
 - Depending on the setting, the “Startup Information” screen will appear on the center display.
 - Touch “Yes” to use Android Auto.
 - The Android Auto top menu screen will appear, and the Android functions displayed on the screen can be operated by the in-vehicle system.
- When connected to Android Auto, voice operation can be accessed. There are three ways to start voice operation:
 1. Press and hold the  button on the steering wheel until a beep is heard.
 2. Touch the  key **1** on the upper right corner of the Android Auto screen.
 3. Say “OK Google” (requires appropriate permissions enabled via phone).
- To return to the Android Auto top menu screen after operation, touch the  key **2** on the bottom of the Android Auto screen.
- To exit the Android Auto screen and display the other screens, press the  **MENU** button **5** or touch the  key **3**.
- To return to the Android Auto screen, touch the  “i” Info” key **4** on the Launch Bar and then touch the Android Auto key **6**.
- Nissan Phone menu and Nissan Voice Recognition cellular phone commands will not be available when Android Auto is active.
- If you have difficulties with connection or performance, try a different USB cable.

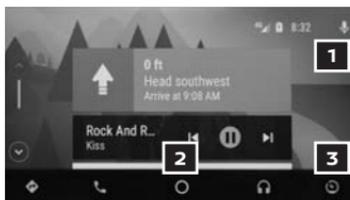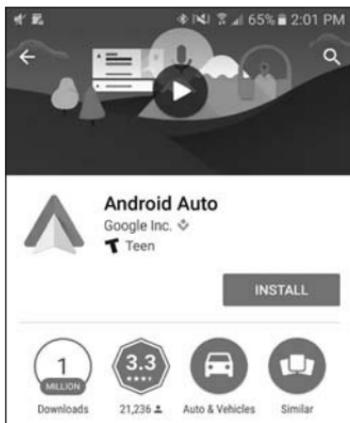


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to your NissanConnect® Owner's Manual.

NEW SYSTEM FEATURES

SiriusXM TRAVEL LINK AND SiriusXM TRAFFIC (if so equipped)

- Your vehicle's Navigation System is equipped with SiriusXM Travel Link and SiriusXM Traffic capabilities.
- SiriusXM Travel Link provides access to real-time weather information and forecasts, nearby fuel prices, movie listings, sports scores and stock quotes.
- SiriusXM Traffic provides information that may help to avoid delays due to traffic incidents. Traffic jams, roadwork, road closures around the current location, etc., are represented graphically on the map by icons depicting the nature of the event. Incidents on the route are automatically displayed as they are approached.

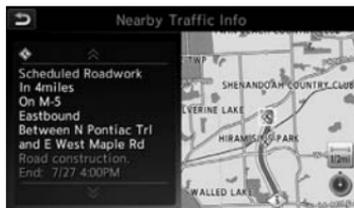


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to your NissanConnect® Owner's Manual.

ESSENTIAL INFORMATION

TIRE PRESSURE MONITORING SYSTEM (TPMS) WITH EASY-FILL TIRE ALERT

- A **Tire Pressure Low – Add Air** warning message will appear in the vehicle information display **1** and the low tire pressure warning light **2** will illuminate when one or more tires are low in pressure and air is needed.
 - The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mi (1.6 km) at moderate speeds.
- When adding air to an under-inflated tire, the TPMS with Easy-Fill Tire Alert provides visual and audible signals to help you inflate the tire to the recommended COLD tire pressure.
- To use the Easy-Fill Tire Alert system:
 1. Move the shift lever to the **P (PARK)** position and apply the parking brake.
 2. Place the ignition switch in the ON position. Do not start the engine.
 3. Add air to the under-inflated tire, and within a few seconds, the hazard warning lights will start flashing.
 4. When the designated tire pressure is reached, the horn will beep once and the hazard warning flashers will stop.
 5. Repeat this procedure for any additional under-inflated tires.
- After tire pressures are adjusted, drive the vehicle at speeds above 16 mph (25 km/h). The **Tire Pressure Low – Add Air** warning message and low tire pressure warning light **2** will extinguish.
- When the low tire pressure warning light **2** flashes for approximately 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked. It is recommended that you visit a Nissan dealer for this service.
- Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light **2** to illuminate. If the warning light illuminates, check the tire pressure in your tires.
 - Check the tire pressure (including the spare tire) often and always prior to long distance trips.
- The Tire and Loading Information label contains valuable information. Please refer to the "Technical and consumer information (section 10)" of your Owner's Manual for the location of the Tire and Loading Information label.

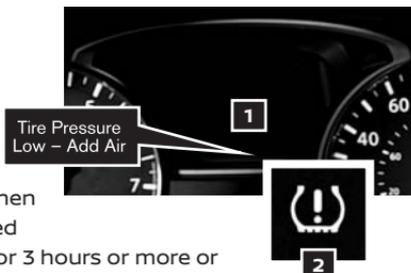

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)", the "Starting and driving (section 5)", the "In case of emergency (section 6)" and the "Do-it-yourself (section 8)" of your Owner's Manual.

ESSENTIAL INFORMATION

LOOSE FUEL CAP

- A **LOOSE FUEL CAP** warning message will display in the vehicle information display **1** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will extinguish when the vehicle detects the fuel-filler cap is properly tightened and the reset button **2** on the steering wheel is pressed for about 1 second.
- If the cap is not properly tightened, the Malfunction Indicator Light  may also illuminate.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Instruments and controls (section 2)"** and the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.

FUEL-FILLER DOOR

- To open the fuel-filler door, pull the release lever **1** located on the instrument panel to the left of the steering wheel.
- The fuel-filler door is located on the driver's side of the vehicle.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.

CLOCK SET/ADJUSTMENT

FM/AM RADIO WITH COMPACT DISC (CD) PLAYER
(if so equipped)

1. Press the **ENTER/SETTING** button **3** to highlight the hours or minutes.
2. Use the **TUNE/FOLDER** knob **4** to adjust the value.
3. Press the **ENTER/SETTING** button **3** again to set the value.



To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

FM/AM/SAT RADIO WITH COMPACT DISC (CD) PLAYER (if so equipped)

1. Press the **ENTER/SETTING** button **5** to highlight the hours or minutes.
2. Use the **TUNE/SCROLL** knob **6** to adjust the value.
3. Press the **ENTER/SETTING** button **5** again to set the value.



WITH NAVIGATION (if so equipped)

- To adjust the time and the appearance of the clock on the display:

1. Press the **MENU** button on the control panel.
2. Touch the "Settings" key on the Launch Bar.
3. Touch the "Clock" key.

- The following settings can be adjusted:

- **On-screen Clock:** The clock in the upper right corner of the display can be turned ON or OFF.

- **Clock Format (24h):** The clock can be set to 12 hours or 24 hours.

- **Offset (hour):** The time can be adjusted by increasing or decreasing per hour.

- **Offset (min):** The time can be adjusted by increasing or decreasing per minute.

- **Daylight Savings Time:** The application of Daylight Savings Time can be turned ON or OFF.

- **Time Zone:** Adjust the time zone. Choose a time zone from the available list.

- Touch the **BACK** key or press the **BACK** button on the Display Commander to return to the previous screen.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

FIRST DRIVE FEATURES

NISSAN INTELLIGENT KEY® SYSTEM

The Nissan Intelligent Key® system allows you to lock or unlock your vehicle, open your trunk and remotely start the engine. It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

REMOTE ENGINE START WITH INTELLIGENT CLIMATE CONTROL* (if so equipped)



- The remote engine start operating range is approximately 200 ft (60 m) from the vehicle. The remote engine start feature will not operate if the Intelligent Key is inside the vehicle. The effective operating range may be shorter if there are walls or other obstructions between the key and the vehicle.
- For remote engine start to function, the vehicle must be in the **P (PARK)** position with the ignition off and all of the doors must be closed and locked. Please see your Owner's Manual for additional information.
- To start your vehicle remotely:
 1. Press the  button **1**.
 2. Within 5 seconds, press and hold the engine start  button **2** for at least 2 seconds.
- The engine will start, and the parking lights will turn on.
- Automatic climate control will begin heating or cooling the vehicle depending on the outside temperature.
- The engine will run for 10 minutes and then turn off.
 - You must wait at least 6 seconds before remotely starting the engine again.
- Repeat steps 1 and 2 to extend the time for an additional 10-minute period.
 - After two remote engine starts, the ignition switch must be cycled before remote engine start can be used again.
- To start driving, depress the brake pedal and push the ignition switch **START/STOP** button.

LOCKING AND UNLOCKING THE VEHICLE

- The lock and unlock operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, push either door handle request switch **3** once or press the  button **1** on the key fob.
- To unlock the vehicle, perform one of the following procedures:
 - Push either door handle request switch **3** once; the corresponding door will unlock. Push the door handle request switch **3** again within 60 seconds; all other doors will unlock, or
 - Press the  button **4** on the key fob to unlock the driver's side door. Press the  button **4** again; all other doors will unlock.



To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

TRUNK LID RELEASE



- To open the trunk, press the trunk lid release  button **5** for more than 1 second.
- The trunk lid release button will not operate when the ignition switch is in the ON position.

PANIC ALARM

- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button **6** for more than 0.5 seconds. Once activated, the panic alarm and headlights will stay on for a period of time.

INTELLIGENT KEY BATTERY DISCHARGE

- If the **Key Battery Low** indicator **7** appears in the vehicle information display, replace the battery as soon as possible.
- If the battery of the Intelligent Key is discharged, the indicator **8** appears in the vehicle information display or environmental conditions interfere with the Intelligent Key operation, start the engine according to the following procedure:
 1. Move the shift lever to the **P (PARK)** position.
 2. Firmly apply the foot brake.
 3. Push the ignition switch with the Intelligent Key, and a chime will sound.
 4. Within 10 seconds after the chime sounds, push the ignition switch while depressing the brake pedal and the engine will start.

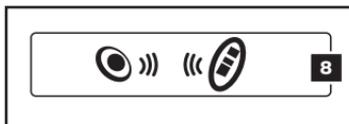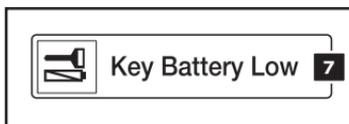

*State laws may apply; review local laws before using.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Pre-driving checks and adjustments (section 3)**", the "**Starting and driving (section 5)**" and the "**Do-it-yourself (section 8)**" of your Owner's Manual.

FIRST DRIVE FEATURES

TRUNK LID RELEASE

Use one of the following methods to open the trunk:

- Push the trunk opener request switch **1**, located under the trunk handle, for more than 1 second while carrying the Nissan Intelligent Key® with you (that is, in your pocket or purse).
- Press the trunk lid release  **HOLD** button **2** on the Intelligent Key for more than 1 second.
- From inside the vehicle, push the trunk lid release switch **3** located on the instrument panel to the left of the steering wheel.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.



FRONT POWER SEAT ADJUSTMENTS (if so equipped)

- To slide the seat forward or backward, push the switch **1** forward or backward.
- To adjust the angle of the seatback, push the switch **2** forward or backward.

SEAT LIFTER (driver's seat)

- To adjust the angle and height of the seat cushion, push the front or rear end of the switch **1** up or down.

LUMBAR SUPPORT (if so equipped for driver's seat)

- To adjust the seat lumbar area, push the front or rear end of the switch **3**.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Safety - Seats, seat belts and supplemental restraint system (section 1)" of your Owner's Manual.



OUTSIDE MIRROR CONTROL SWITCH

- To select the right or left side mirror, move the control switch **1** right or left.
- To adjust the mirror angle, push the control switch **2** up, down, right or left.
- To prevent accidentally moving the mirror, set the control switch **1** to the center (neutral) position.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

STARTING/STOPPING THE ENGINE

- It is important to make sure the Nissan Intelligent Key® is with you (that is, in your pocket or purse).
- Depress the brake pedal.
 - If the brake pedal is not depressed, pushing the ignition switch once enters the ACC mode.
 - If the ignition switch is pushed a second time, the vehicle will enter the ON mode.
- Push the ignition switch to start the engine.



TURNING THE ENGINE OFF

- Move the shift lever to the **P (PARK)** position and apply the parking brake.
- Push the ignition switch to turn the engine off.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

FIRST DRIVE FEATURES

HEADLIGHT CONTROL SWITCH

HEADLIGHT CONTROL

- Turn the headlight control switch to the  position **1** to turn on the front parking, tail, license plate and instrument panel lights. Turn the switch to the  position **2** to turn on the headlights.




AUTOLIGHT SYSTEM

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all the doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **3** then place the ignition switch in the ON position. To deactivate the autolight system, turn the headlight control switch to the **OFF** position,  position **1** or  position **2**.

HIGH BEAM SELECT

- With the headlights ON (either in the **AUTO** or  position), push the headlight control switch forward **4** to select the high beam function. The blue indicator light  will illuminate in the instrument panel. Pull the headlight control switch back to the original position to select the low beam. The blue indicator light will extinguish.
- Pull and release the headlight control switch **5** to flash the headlight high beams on and off.

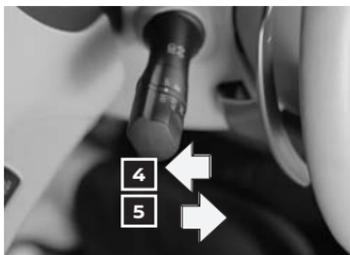

FOG LIGHT SWITCH (if so equipped)

- The headlights must be on and the low beams  selected for the fog lights to operate.
- Turn the switch (inside collar) to the  position **6** to turn the fog lights on.
- Turn the switch (inside collar) to the **OFF** position to turn the fog lights off.
- If your vehicle is equipped with Daytime Running Lights in the fog light assembly, the fog lights may appear on even with the switch in the **OFF** position.



LANE CHANGE SIGNAL

- Move the lever up or down until the turn signal begins to flash but the lever does not latch to signal a lane change. Hold the lever until the lane change is completed.

- Move the lever up or down until the turn signal begins to flash but the lever does not latch and release the lever. The turn signal will automatically three times.


Choose the appropriate method to signal a lane change based on the road and traffic conditions.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

WIPER AND WASHER SWITCH

- Move the lever to one of the following positions to operate the windshield wipers:
 - 1** Mist (**MIST**) – One sweep operation of the front wipers.
 - 2** Intermittent (**INT**) – Operates the speed-sensing front wipers intermittently. The intermittent speed can be adjusted by twisting the time control ring **3** to increase or decrease wiper speed.
 - 3** Low (**LO**) – Wipers operate at a continuous low-speed.
 - 4** High (**HI**) – Wipers operate at a continuous high-speed.
 - 6** Washer  – Pull the lever toward you to activate the washer. The wipers will operate several times.

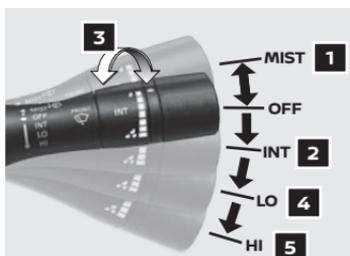

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

TILT AND TELESCOPIC STEERING WHEEL

Release the lock lever by pulling it down.

- Adjust the steering wheel forward or backward by moving it to the desired position.
- Adjust the steering wheel up or down to the desired position.

Lock the steering wheel in place by pushing the lock lever up firmly.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.



To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

FIRST DRIVE FEATURES



HEATER AND AIR CONDITIONER (automatic) (if so equipped)

1 AUTO BUTTON/DRIVER'S SIDE TEMPERATURE CONTROL DIAL

- The automatic mode may be used year-round. Press the **AUTO** button to turn the system on, and the system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.
- Turn the driver's side temperature control dial to the left for cooler air or to the right for warmer air.

2 DUAL BUTTON/PASSENGER'S SIDE TEMPERATURE CONTROL DIAL

- Press the **DUAL** button to turn the passenger's side temperature controls on or off. This will allow the passenger's side temperature to be adjusted independently from the driver's side by turning the passenger's side temperature control dial.
- Turn the passenger's side temperature control dial to the left for cooler air or to the right for warmer air.

3 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the front defroster button  to turn the system on. The A/C automatically turns on when the front defroster mode is selected. This feature removes humidity from the air.
- Turn the temperature control dial **1** to set the desired temperature.
- To defrost the front and side windows, set the temperature control **1** and fan speed control **6** to their maximum settings.

4 REAR WINDOW AND OUTSIDE MIRROR (if so equipped) DEFROSTER SWITCH

- Push the rear window defroster switch  to turn the system on or off.
- This function automatically turns off after approximately 15 minutes.

5 ON-OFF BUTTON

- Press the **ON-OFF** button to turn the climate control system on or off.

6 FAN SPEED CONTROL BUTTONS

- Press the left  button to decrease fan speed or the right  button to increase fan speed.

7 MODE BUTTON

- Press the **MODE** button to cycle through the following air flow outlets:

-  Air flows from the center and side vents.
-  Air flows from the center, side and foot vents.
-  Air flows mainly from the foot vents.
-  Air flows from the front defroster and foot vents.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

8 A/C BUTTON

- Press the **A/C** button to turn the air conditioner system on or off. This system helps cool and dehumidify the air inside the cabin and defog the windows.

9 FRESH AIR INTAKE BUTTON

- Press the fresh air intake button  to draw outside air into the passenger compartment.

10 AIR RECIRCULATION BUTTON

- Press the air recirculation button  to recirculate interior air inside the vehicle. This system is used to avoid certain outside odors and to help adjust the inside vehicle temperature more effectively.
- The air recirculation mode cannot be activated when the climate control system is in the front defroster mode .

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.



FM/AM/SiriusXM® SATELLITE RADIO WITH CD PLAYER (if so equipped)

Touch the "🎵 Audio" key on the Launch Bar to display the current audio source. Touch the "🎵 Audio" key a second time to access the source selection screen.

1 (ON-OFF) BUTTON/VOL (volume) CONTROL KNOB

- Press the  (ON-OFF) button to turn the audio system on or off.
- Turn the **VOL** (volume) control knob right or left to increase or decrease the volume.

2 AUDIO KEY

- Touch the "🎵 Audio" key on the Launch Bar to bring up the current source's control screen.

FIRST DRIVE FEATURES

3 ◀◀ / ▶▶ (SEEK and CAT/TRACK) BUTTONS

- Press the ◀◀ button or the ▶▶ button to seek up or down to the next receivable station.
- For satellite radio to switch to the first channel of the previous or next category, press the ◀◀ button or the ▶▶ button.
- To change tracks on a CD, press the ◀◀ button or the ▶▶ button.
- To rewind or fast forward a track on a CD, press and hold the ◀◀ button or the ▶▶ button.

4 ENTER SOUND BUTTON/TUNE-SCROLL KNOB

- Press the **ENTER SOUND** button to cycle through the audio settings individually and use the **TUNE-SCROLL** knob to adjust the current setting.
- Touch the  "Settings" key on the Launch Bar and then touch the "Sound" key to view all audio settings.
- To manually tune the radio, turn the **TUNE-SCROLL** knob left or right.

5 AUDIO (SOURCE) BUTTON

- Pressing this button will give access to the **AM, FM, SXM, CD, USB/iPod, Bluetooth Audio** or **AUX** audio source.
- Twelve memory stations can be set for the FM band, six for the AM band and 18 for satellite radio. These appear at the bottom of the screen when one of these sources is selected.
- To store a station in a preset, you must first select a radio band by touching the "AM" key **6**, "FM" key **7** or "SXM" key **8** then tune to the desired AM, FM or satellite radio station. Next, press and hold the desired station preset key until you hear a beep. The channel indicator will then display, and the sound will resume. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then press the corresponding station select key.

6 AM KEY / 7 FM KEY

- Touch the "AM" or "FM" key to view the station list or turn HD mode on or off.
- Tag favorite songs to save to an iPod®.
 - Apple® website: If you are listening to a radio station that supports iTunes® Tagging, you can tag a song you hear so you can preview and purchase it later on the iTunes Store®. Songs that can be tagged are marked with a tag icon next to the song title or on the "Now Playing" screen.

8 SXM KEY

- Touch the "SXM" key to bring up the categories, favorites and replay options.

9 CD KEY

- Touch the "CD" key to view the track list.

10 AUX KEY

- A cable with 1/8 in (3.5 mm) stereo mini plugs is required for audio playback.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Audio system (section 3)"** of your NissanConnect® Owner's Manual.

USB (Universal Serial Bus) CONNECTION PORT/AUX JACK AND iPod® INTERFACE

- The USB port/Aux jack **1** is located on the center console beneath the heater and air conditioner controls inside the storage box. The port is illuminated for better visibility when the headlight switch is in the ON position.
- When a compatible USB memory device or iPod® is plugged into the USB port/Aux jack, compatible audio files stored on the device can be played through the vehicle's audio system.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

CRUISE CONTROL (if so equipped)

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 mph (40 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **ON/OFF** switch **1** on the steering wheel. The  indicator light in the instrument panel will illuminate.
- To set a cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **2** on the steering wheel and release. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **3** on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **2** on the steering wheel. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, tap the brake pedal or push the **CANCEL** switch **4** on the steering wheel.
- To turn off cruise control, push the **ON/OFF** switch **1** on the steering wheel. The  indicator light will extinguish.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

 
For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

FIRST DRIVE FEATURES

INTELLIGENT CRUISE CONTROL (ICC) (if so equipped)

VEHICLE-TO-VEHICLE DISTANCE CONTROL MODE

- To set Vehicle-To-Vehicle Distance Control mode, push the **CRUISE**  switch **1** on the steering wheel. The **CRUISE** indicator light **2** will illuminate.
- Accelerate to the desired speed.
- Push down on the **COAST/SET** switch **3** on the steering wheel and release it. ICC will be set to the desired speed.
- Push the distance  switch **4** on the steering wheel repeatedly to change the set distance between long, middle and short.
- When a vehicle is not detected ahead of you in the lane, the set distance and set vehicle speed indicator lights will illuminate **5** in set mode.
- When a vehicle is detected ahead of you in the lane, the vehicle ahead detection, set distance and set vehicle speed indicator lights will illuminate **6** in set mode.
- To reset at a faster cruising speed, push up and hold the **ACCEL/RES** switch **7** on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push down and hold the **COAST/SET** switch **3** on the steering wheel. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, push the **CANCEL** switch **8** on the steering wheel or tap the brake pedal. The set vehicle speed indicator **5** will extinguish.
- To turn off ICC, push the **CRUISE**  switch **1** on the steering wheel. The **CRUISE** indicator light **2** in the instrument panel will extinguish.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.


For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

SYSTEM GUIDE

VEHICLE INFORMATION DISPLAY

The vehicle information display **1** displays items such as:

- Vehicle settings
- Trip computer information
- Drive system warnings and settings (if so equipped)
- Audio information
- Navigation turn-by-turn (if so equipped)
- Cruise control system information
- Nissan Intelligent Key® operation information
- Indicators and warnings
- Tire pressure information

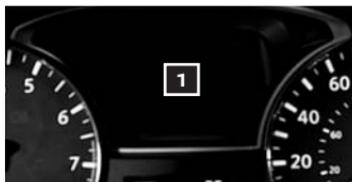

USING THE VEHICLE INFORMATION DISPLAY

The vehicle information display can be changed using the **1** button **2** and the **ENTER** \updownarrow buttons **3** located on the steering wheel.

- Press the **1** button **2** on the steering wheel to change the display mode.
- Press the \updownarrow buttons **3** on the steering wheel to navigate through the mode's menu.
- Press the **ENTER** button **3** on the steering wheel to change or select an item.
- Press the \curvearrowright button **4** on the steering wheel to go back to the previous menu.



START-UP DISPLAY

When the ignition switch is in the ACC or ON position, the vehicle information display will support four of the following modes:

- Active system status (if so equipped)
- Trip computer
- Tire pressure information
- Fuel economy
- Warnings (displays when a warning is present)



RESETTING THE TRIP COMPUTER

1. Press the **1** button **2** on the steering wheel until you reach the trip computer mode **5**.
2. Press the **1** button **2** on the steering wheel again for more than 1.5 seconds to reset average fuel consumption, average speed, distance to empty and journey time.

SYSTEM GUIDE

SETTINGS

The setting mode allows you to change the information displayed in the vehicle information display:

- Driver Assistance (if so equipped)
- Vehicle Settings
- Main Menu Selection
- Body Color
- Maintenance
- Alarms
- Language
- Unit
- Welcome Effects
- Factory Reset

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual

BLUETOOTH® HANDS-FREE PHONE SYSTEM*

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.

SYSTEM OPERATING TIPS

- Press the  button on the steering wheel to interrupt the voice prompts at any time and speak a command after the tone.
- To use the system faster, you may speak the second level commands with the main menu command on the main menu. For example, press the  button on the steering wheel, and after the tone, say "Call Redial".
- The "Help" command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing heater and air conditioner vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.
- To cancel a Voice Recognition session, say "Exit" or press and hold the  button on the steering wheel.
- To decrease or increase the volume of the voice prompts, push the volume control switches  or  on the steering wheel or turn the **VOL (volume)** control knob on the audio system while the system is responding.
- Voice commands can be used to operate various Bluetooth® system features using the Nissan Voice Recognition System. See your Owner's Manual for detailed information.
- If the Voice Recognition System does not recognize your voice commands, train the system using the Voice Adaptation Mode.



* Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual or visit www.NissanUSA.com/bluetooth.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

BLUETOOTH® SYSTEM WITHOUT NAVIGATION*(if so equipped)

- The vehicle must be stationary when connecting the cellular phone.
- 1. Press the **ENTER/SETTING** button on the control panel.
- 2. Use the **TUNE/SCROLL** or **TUNE/FOLDER** knob to select "Bluetooth" and then press the **ENTER/SETTING** button on the control panel.
- 3. Use the **TUNE/SCROLL** or **TUNE/FOLDER** knob to select "Add Phone" and then press the **ENTER/SETTING** button on the control panel.
- 4. Follow the instructions on the screen to complete the connecting procedure from your handset.
 - The connecting procedure varies according to each cellular phone. See your cellular phone's Owner's Manual for details and also visit www.NissanUSA.com/bluetooth.



PHONEBOOK SETUP

- Depending on your cellular phone, the system may automatically download your cellular phone's entire phonebook to the vehicle's Bluetooth® system.
- If the phonebook does not download automatically, follow this procedure to manually download entries:
 1. Using the **ENTER/SETTING** button and **TUNE/SCROLL** or **TUNE/FOLDER** knob on the control panel, change the "Phonebook Download" setting to OFF.
 2. Press the  button on the steering wheel.
 3. After the tone, say "Phonebook".
 4. After the next tone, say "Transfer Entry". The system acknowledges the command and asks you to initiate the transfer from the cellular phone handset. The new contact phone number will be transferred from the cellular phone to the vehicle.

MAKING A CALL FROM THE PHONEBOOK

1. Press the  button on the steering wheel.
2. After the tone, say "Call <NAME>" where <NAME> is the name of a contact stored in your phonebook.
3. The system will confirm the name. If correct, say "Yes". Otherwise, say "No".
 - Please note that some cellular phones require the name to be spoken in a <LAST NAME, FIRST NAME> format.

SYSTEM GUIDE

MAKING A CALL BY PHONE NUMBER

1. Press the  button on the steering wheel.
2. After the tone, say "Call <PHONE NUMBER>" or say "Call", and follow the steps below.
3. The system will confirm the command. After the tone, say "Phone Number".
4. The system will prompt you to speak the phone number. Say the 7-10 digit phone number.
5. The system will confirm the phone number. If correct, say "Dial". Otherwise, say "Correction".

RECEIVING/ENDING A CALL

- When you receive a cellular phone call, a ring tone sounds through the audio system.
- To accept a call, press the  button on the steering wheel.
- To reject a call, press the  button on the steering wheel.
- To hang up the cellular phone at the end of a call or to disconnect during call placement, press the  button on the steering wheel.



*Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.


To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual or visit www.NissanUSA.com/bluetooth.

BLUETOOTH® SYSTEM WITH NAVIGATION* (if so equipped)

CONNECTING PROCEDURE

- The vehicle must be stationary when connecting the cellular phone.
- 1. Press the "Phone" key on the Launch Bar and touch the "Connect Phone" key.
- 2. Initiate connecting from the cellular phone.
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible cellular phones, please visit www.NissanUSA.com/bluetooth.
 - When prompted, confirm the PIN on the display with the PIN shown on the handset. If your device does not support Secure Simple Pairing and requests you to input a PIN, enter "1234" from the handset.

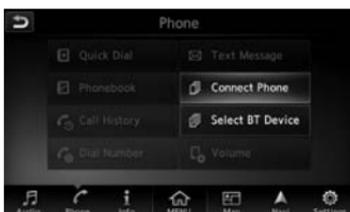

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

- Some cellular phones may incorrectly state that the connection was unsuccessful. Please verify that the touch-screen displays that the connection is successful, or touch **Settings** > **Bluetooth** > **Select BT Device** > **Phone** and confirm that your cellular phone is listed.




3. When connecting is complete, the screen will return to the Phone menu display.

PHONEBOOK SETUP

- Press the **MENU** button on the control panel.
- Touch the **Settings** key on the Launch Bar, touch the **Phone** key and then touch the **Phonebook** key.
- Depending on your cellular phone, the system may automatically download your cellular phone's entire phonebook to the vehicle's Bluetooth® system.
- The Quick Dial phonebook can also be set for up to five entries that can be used with your cellular phone.

1. Touch the **Phone** key on the Launch Bar and touch the **Quick Dial** key.
2. Touch the **Add New** key at the top of the display. There are different methods to input a phone number. Select one of the following options:

- **Copy from Call History** to save a number from the Outgoing, Incoming or Missed Calls lists.
- **Copy from the Phonebook** to save a number that has been downloaded from your handset to the vehicle.
- **Enter Number by Keypad** to input the number and name manually.

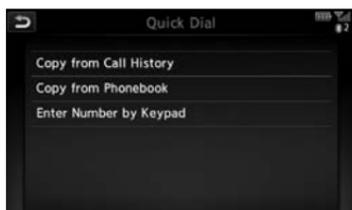

MAKING A CALL

To make a call, follow this procedure:

1. Press the **Phone** key on the Launch Bar. The Phone menu will appear on the control panel display.
2. Touch one of the following:
 - **Quick Dial**, **Phonebook** or **Call History** key. Select the desired entry from the list and then the desired number, or
 - To enter a number manually, touch the **Dial Number** key, then enter the number and touch **OK**.



SYSTEM GUIDE

RECEIVING/ENDING A CALL


- To accept the call:
 - Press the  button on the steering wheel, or
 - Touch the “Answer” key on the touch-screen display.
- To reject the call:
 - Press the  arrow buttons on the steering wheel to highlight “Decline” through the vehicle information display and press the **OK** button on the steering wheel, or
 - Touch the “Decline” key on the touch-screen display.
- To hang up:
 - Press the  button on the steering wheel, or
 - Touch the “Hang up” key on the touch-screen display.



* Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “**Hands-Free Phone (section 4)**” of your NissanConnect® Owner's Manual or please visit www.NissanUSA.com/bluetooth.

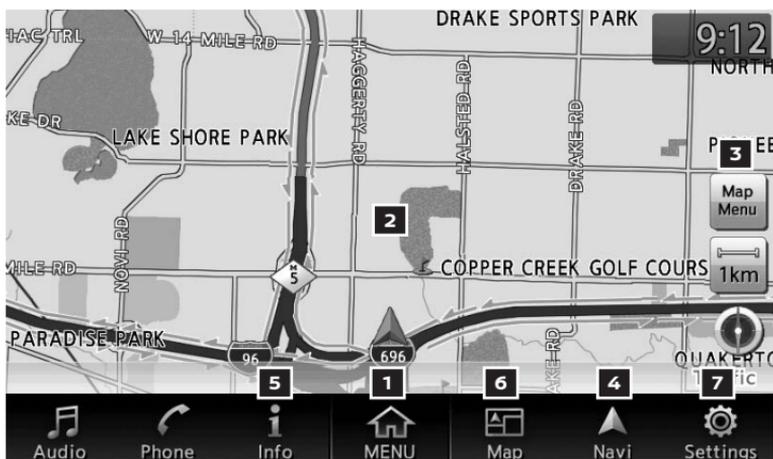

NAVIGATION SYSTEM (if so equipped)

- Your Navigation System can calculate a route from your current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

- To help promote safe driving, some functions cannot be operated or have limited operation when the vehicle speed is above 5 mph (8 km/h). The on-screen text and keys for these restricted functions will be grayed-out or muted and cannot be selected while driving. These functions will become available again when the vehicle is not in motion. Voice commands may be available for some of the restricted functions. For more information, refer to the "Voice recognition (section 7)" of your NissanConnect® Owner's Manual.

- 1**  **MENU** - Touch to access all available shortcut and widget items in the "Menu" screen.
- 2** Touch-screen
- 3** **Map Menu** - Touch to access different options related to either a selected location by touch or one that you have navigated to. Some options include "Save Location", "Nearby POIs", "Map Icons" or "New Destination".
- 4**  **Navi** (Navigation) - Touch to access the Navigation function.
- 5**  **Info** (Information) - Touch to display the vehicle, traffic (if so equipped) and weather (if so equipped) information.
- 6**  **Map** - Touch to display the map.
- 7**  **Settings** - Touch to display the system settings.

SETTING A DESTINATION

You can set a destination with your Navigation System using the touch-screen display or Voice Recognition.

- Touch-screen Display
 - Touch the  "Navi" key on the Launch Bar.
 - When a destination is set, touch the "New Destination" key and then select one of the displayed options for choosing your destination.
- Voice Recognition
 - Press the  button on the steering wheel, and after the tone, say "Navigation". From here, the system will give you the options available for setting a destination.

SETTING A DESTINATION USING POINTS OF INTEREST (POI)

- Touch-screen Display
 - Touch the  "Navi" key on the Launch Bar, and if a destination is already set, touch the "New Destination" key.
 - Touch the "Points of Interest" key and then select one of the displayed options for choosing your destination.
- Voice Recognition
 - Press the  button on the steering wheel, and after the tone, say "Navigation" then say "Points of Interest". From here, the system will give you the options available for setting a POI.

SYSTEM GUIDE

NAVIGATION SWIPE TO METER

- Turn-by-turn route guidance can also be viewed in the vehicle information display by using Navigation Swipe to Meter. This can be done by programming a route, touching the turn-by-turn route icon on the center display, and swiping toward the general direction of the vehicle information display.
- The turn-by-turn route icon will move across the center display and transfer the route information to the vehicle information display when the vehicle is not moving.
- The icon will not move across the screen if the vehicle speed is over 4 mph (7 km/h), but the information will still transfer to the vehicle information display.
- The turn-by-turn route guidance cannot be transferred to the vehicle information display if the navigation screen is already shown or if a warning is present.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to your NissanConnect® Owner's Manual.



HOMELINK® UNIVERSAL TRANSCEIVER (if so equipped)

- The HomeLink® Universal Transceiver can learn and consolidate the functions of up to three different hand-held transmitters, operating items such as garage doors, property gates, outdoor and indoor lights or alarm systems.
- To program the HomeLink® Universal Transceiver:
 - Position the handheld transceiver 1-3 in (26-76 mm) away from the HomeLink surface, keeping the HomeLink indicator light in view.
 - Press and hold the desired HomeLink button and the handheld transmitter button simultaneously until the HomeLink indicator light flashes slowly and then rapidly.
 - Both buttons may be released when the indicator light flashes rapidly.
- To verify the programming is complete, press and hold the HomeLink button and observe the indicator light:
 - A solid, continuous light indicates the programming is complete and the HomeLink button will activate your device.
 - A blinking light that turns to a solid, continuous light after 2 seconds indicates additional steps are required to complete the programming.

- An additional person may make the remaining steps easier. To complete the programming process:
 - At the receiver of the device that you are programming to the HomeLink system, press and release the learn or smart button (the name may vary by manufacturer, but it is usually located near where the hanging antenna wire is attached to the unit). You have approximately 30 seconds to initiate the following step.
 - Press and hold the programmed HomeLink button for 2 seconds and release.
- You may have to repeat the previous two steps up to three times to complete the programming process. HomeLink should now activate your device.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" of your Owner's Manual, the HomeLink website at www.homelink.com or call 1-800-355-3515.

MEMO

MEMO



Helpful Resources

Below is a list of helpful resources that can be used to learn more about the vehicle's systems and feature operations.

- Vehicle Owner's Manual
- NissanConnect® Owner's Manual (if so equipped)
- Printed Quick Reference Guide (this document)
- www.NissanUSA.com/bluetooth
- www.NissanUSA.com/connect
- www.youtube.com/user/NissanUSA
- Nissan Consumer Affairs: 1-800-647-7261
- Electronic Quick Reference Guide (Use Quick Response (QR) code or URL below.)
- Nissan Quick Guide (available in the App Store® or Google Play™ Store for download to your smartphone)



To view detailed instructional videos, go to www.nissanownersinfo.mobi/2018/altima or snap this barcode with an appropriate barcode reader.



This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain with this Quick Reference Guide all revision updates sent to you by NISSAN to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the NISSAN website at <https://owners.nissanusa.com/owners/navigation/manualsGuide>. If you have questions concerning any information in your Owner's Manual, contact NISSAN Consumer Affairs. See the NISSAN CUSTOMER CARE PROGRAM page in the Owner's Manual for contact information.

