 


2014 **ARMADA**

QUICK REFERENCE GUIDE



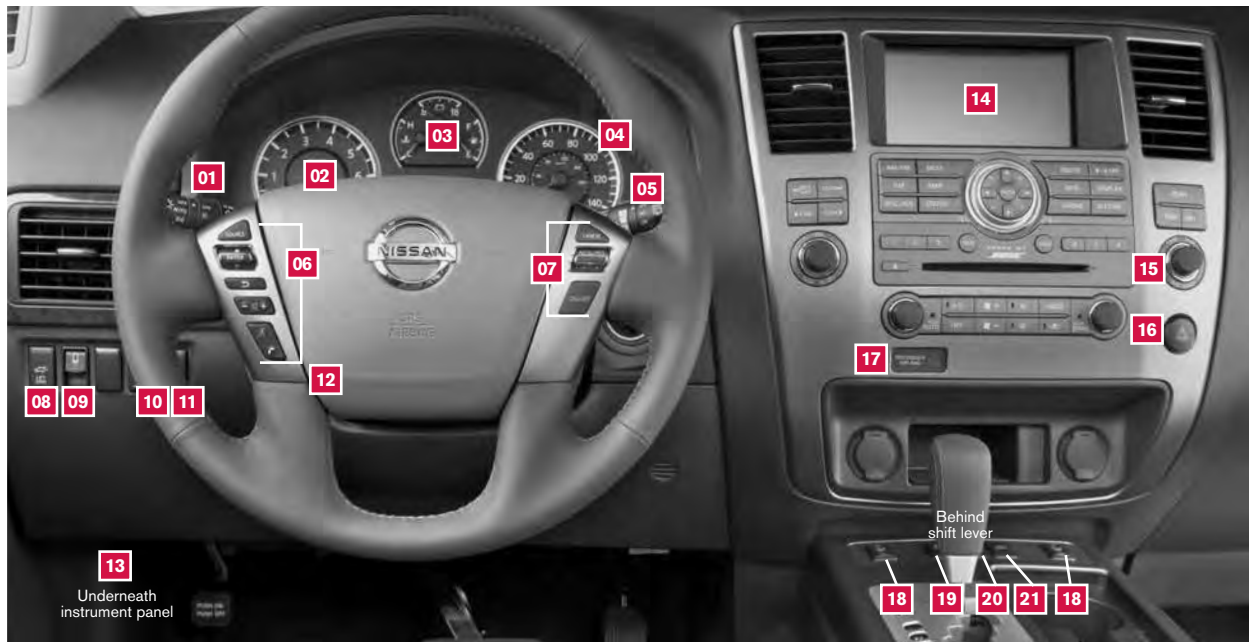

- 01** HEADLIGHT AND TURN SIGNAL CONTROL
- 02** INSTRUMENT BRIGHTNESS CONTROL*
- 03** VEHICLE INFORMATION DISPLAY*
- 04** LOW TIRE PRESSURE WARNING LIGHT
- 05** WINDSHIELD WIPER AND WASHER SWITCH

- 06** STEERING WHEEL SWITCHES FOR AUDIO* / BLUETOOTH* / NAVIGATION
- 07** CRUISE CONTROL
- 08** POWER LIFTGATE SWITCH
- 09** POWER VENT WINDOWS*
- 10** PEDAL POSITION ADJUSTMENT SWITCH*

- 11** REAR SONAR SYSTEM OFF SWITCH*
- 12** STEERING WHEEL TILT ADJUSTMENT*
- 13** HOOD RELEASE*
- 14** CONTROL PANEL DISPLAY*
- 15** AUDIO SYSTEM
- 16** AUTOMATIC CLIMATE CONTROLS

- 17** FRONT PASSENGER AIR BAG STATUS LIGHT*
- 18** HEATED SEAT SWITCH*
- 19** HEATED STEERING WHEEL SWITCH*
- 20** VEHICLE DYNAMIC CONTROL (VDC) OFF SWITCH*
- 21** TOW MODE SWITCH*

*See your Owner's Manual for information.

NEW SYSTEM FEATURES

RearView Monitor (if so equipped) 2

ESSENTIAL INFORMATION

Tire Pressure Monitoring System (TPMS) 2
 Loose Fuel Cap 3
 Fuel-filler Door 3
 Clock Set/Adjustment 3

FIRST DRIVE FEATURES

NISSAN Intelligent Key® System (if so equipped) 4
 Power Liftgate Release (if so equipped) 4
 Power Front Seat Adjustments 5
 2nd Row Seat Adjustments (if so equipped) 5
 3rd Row Power Folding Seats (if so equipped) 6
 Automatic Drive Positioner (if so equipped) 6
 Outside Mirror Control Switch 7
 Starting/Stopping the Engine
 (NISSAN Intelligent Key® models only - if so equipped) 7
 Headlight Control Switch 7
 Windshield Wiper and Washer Switch 8
 Automatic Climate Controls 9
 FM/AM/SiriusXM® Satellite Radio with CD/DVD Player (if so equipped) . . 10
 USB/Aux Jack and iPod® Interface 11
 Cruise Control 11
 Power Outlets 12

SYSTEM GUIDE

Vehicle Information Display 13
 Bluetooth® Hands-free Phone System 13
 System Operating Tips 13
 Bluetooth® System without Navigation (if so equipped) 14
 Bluetooth® System with Navigation (if so equipped) 16
 Navigation System (if so equipped) 18
 Dual Head Restraint DVD System (if so equipped) 19
 HomeLink® Universal Transceiver (if so equipped) 20



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)", "Monitor, climate, audio, phone and voice recognition systems (section 4)" and the "Starting and driving (section 5)" of your Owner's Manual.



To view detailed instructional videos, go to www.nissanownersinfo.mobi/2014/armada or snap this barcode with an appropriate barcode reader.



Additional information about your vehicle is also available in your Owner's Manual, Navigation System Owner's Manual and at www.nissanusa.com.

NEW SYSTEM FEATURES

REARVIEW MONITOR (if so equipped)

- When the shift lever is shifted into the **R (REVERSE)** position, the monitor display shows a rearward view from the vehicle.
- The colored guide lines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line:
 - Red 1.5 ft (0.5 m); Yellow 3 ft (1 m); Green 7 ft (2 m) and 10 ft (3 m).

 


For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

ESSENTIAL INFORMATION


TIRE PRESSURE MONITORING SYSTEM (TPMS)

- A **CHECK TIRE PRESSURE** warning message will appear in the vehicle information display **01** and the low tire pressure warning light **02** will illuminate when one or more tires are low on pressure and air is needed.
 - The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mile (1.6 km) at moderate speeds.
- After tire pressures are adjusted, drive the vehicle at speeds above 16 MPH (25 km/h). The **CHECK TIRE PRESSURE** warning message and the low tire pressure warning light will extinguish.
- When the low tire pressure warning light flashes for 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked by a NISSAN dealer.
- Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light to illuminate. If the warning light illuminates, check the tire pressure in your tires.
 - Check the tire pressure (including the spare tire) often and always prior to long distance trips.
- The Tire and Loading Information label contains valuable information. Please refer to "Technical and consumer information (section 9)", in your Owner's Manual for the location of the Tire and Loading Information label.

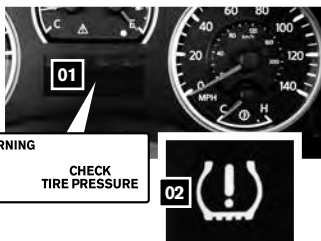

For more information, refer to the "**Instruments and controls (section 2)**", the "**Starting and driving (section 5)**" and the "**Maintenance and do-it-yourself (section 8)**" of your Owner's Manual.

LOOSE FUEL CAP

- A **LOOSE FUEL CAP** warning message will appear in the vehicle information display **01** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will disappear when the vehicle detects the fuel-filler cap is properly tightened and the reset button **02** is pressed.
- If the cap is not properly tightened, the Malfunction Indicator Light  may illuminate.



For more information, refer to the “**Instruments and controls (section 2)**” and the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.


FUEL-FILLER DOOR

- The fuel-filler door is located on the driver’s side of the vehicle.
- To open the fuel-filler door, pull the lid open.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.



CLOCK SET/ADJUSTMENT

- To adjust the time and the appearance of the clock on the display:
 1. Press the **SETTING** button on the control panel.
 2. Touch the “Clock” key.
- The following settings can be adjusted:
 - **On-screen Clock:** The clock in the upper right corner of the display can be turned **ON** or **OFF**.
 - **Clock Format (24h):** The clock can be set to 12 hours or 24 hours.
 - **Offset (hour):** The time can be adjusted by increasing or decreasing per hour.
 - **Offset (min):** The time can be adjusted by increasing or decreasing per minute.
 - **Daylight Savings Time:** The application of daylight savings time can be turned **ON** or **OFF**.
 - **Time Zone:** Adjust the time zone. Choose a time zone from the available list.
- Press the  **BACK** button to return to the previous screen.

 






For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

FIRST DRIVE FEATURES

NISSAN INTELLIGENT KEY® SYSTEM (if so equipped)

The NISSAN Intelligent Key® System allows you to lock or unlock the vehicle, open the liftgate and start the engine. It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

- The operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, push either door handle request switch **01** once or press the  button **02** on the key fob.
- To unlock the vehicle, perform one of the following procedures:
 - Push either door handle request switch **01** once; the corresponding door will unlock. Push the door handle request switch **01** again within 30 seconds; all other doors will unlock, or
 - Press the  button **03** on the key fob to unlock the driver's side door. Press the  button again; all other doors will unlock.
- To open the liftgate, press the  button **04** for more than 1 second.
- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button **05** for more than 0.5 seconds. Once activated, the panic alarm and headlights will stay on for a period of time.



For more information, refer to the “Pre-driving checks and adjustments (section 3)”, the “Starting and driving (section 5)” and the “Maintenance and do-it-yourself (section 8)” of your Owner’s Manual.

POWER LIFTGATE RELEASE (if so equipped)

When the liftgate is closed, the liftgate will fully open automatically by:

- Pushing the power liftgate switch **01** on the instrument panel.
- Pulling the power liftgate handle **02**, once the vehicle is unlocked.
- Pressing the rear liftgate release button **03** on the key fob for more than 1 second.



For more information, refer to the “Pre-driving checks and adjustments (section 3)” of your Owner’s Manual.

POWER FRONT SEAT ADJUSTMENTS

- To slide the seat forward or backward, push the control switch **01** forward or backward.
- To adjust the angle of the seatback, push the switch **02** forward or backward.

SEAT LIFTER (driver's seat only)

- To adjust the angle and height of the seat cushion, push the front or rear end of the switch **01** up or down.



MANUAL LUMBAR SUPPORT (driver's seat only)

- To adjust the lumbar area, move the lever **03** up or down.

For more information, refer to the **“Safety — Seats, seat belts and supplemental restraint system (section 1)”** of your Owner's Manual.

2ND ROW SEAT ADJUSTMENTS (if so equipped)

- To recline the seatback, pull up on the recline handle **01** and lean back. To bring the seatback forward, pull the handle up and lean your body forward. Release the handle to lock the seatback in position.



TIP UP FOR EASY ENTRY/EXIT OF THE 3RD ROW

1. Raise the armrest (captain's chairs – if so equipped) so it is parallel to the seatback and in the stowed position.
2. Then lift up on the seatback latch **02** located on the upper corner of the seatback and fold the seatback forward onto the seatbase.



3. Finally, lift up on the lower corner of the seat base and fold the seat forward.



For more information, refer to the **“Safety — Seats, seat belts and supplemental restraint system (section 1)”** of your Owner's Manual.

 


FIRST DRIVE FEATURES

3RD ROW POWER FOLDING SEATS (if so equipped)

- Before operating the 3rd row seats:
 - Make sure the 2nd row seatback is not reclined.
 - Lower the 3rd row headrest to the full down position.
 - Disconnect and secure the center seat belt and tongues into the retractor base. Always reconnect the center seat belt when the seat is returned to the upright position.
 - Make sure that there are no objects on the seatback cushion.
- The 3rd row power folding seat controls are located behind the 2nd row seat (passenger's side) on the 3rd row cup holder console **01** and on the rear quarter trim panel behind the 3rd row seats (passenger's side) **02**.
- To fold down the 3rd row seats, push and hold the bottom portion of the switch.
- To raise the 3rd row seats, push and hold the top portion of the switch.
- If the ignition switch is in the **OFF** position, the power folding seats are always operational.
- If the ignition switch is in the **ON** position, the power folding seats are only operational when the shift lever is in the **P (PARK)** or **N (NEUTRAL)** position.

For more information, refer to the "**Safety — Seats, seat belts and supplemental restraint system (section 1)**" of your Owner's Manual.

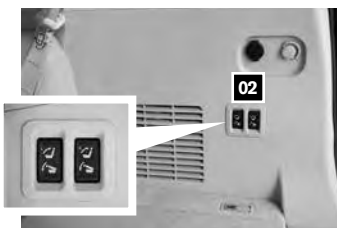

AUTOMATIC DRIVE POSITIONER (if so equipped)

- Two positions for the driver's seat, accelerator and brake pedals and outside mirrors can be stored in the automatic drive positioner memory.
- Follow these procedures to set the memory positions:
 - Confirm the shift lever is in the **P (PARK)** position.
 - Place the ignition switch in the **ON** position.
 - Adjust the driver's seat, accelerator and brake pedals and outside mirrors to the desired positions using the adjusting switches for each feature.
 - Push the **SET** switch and within 5 seconds, push the memory switch (**1** or **2**) for at least 1 second.
 - The indicator light on the memory switch you select will illuminate for approximately 5 seconds.
 - The driver's seat, accelerator and brake pedals and outside mirror positions are now set to your preference.
- These memorized positions can also be linked to your NISSAN Intelligent Key®.



For more information, refer to the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.

OUTSIDE MIRROR CONTROL SWITCH

- To select the right or left side mirror, turn the control switch **01** right or left.
- To adjust the mirror angle, move the control switch **01** up, down, right or left.
- To prevent accidentally moving the mirror, turn and set the switch to the middle (neutral) position.



POWER FOLDING OUTSIDE MIRRORS (if so equipped)

- To open or close the mirrors, push the switch **02**.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

STARTING/STOPPING THE ENGINE (NISSAN Intelligent Key® models only - if so equipped)

- Depress the brake pedal.
- Push the ignition switch in.
- Turn the ignition switch to the **START** position.

TURNING THE ENGINE OFF

- Move the shift lever to the **P (PARK)** position, apply the parking brake and turn the ignition switch to the **LOCK** position.

 
For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.



HEADLIGHT CONTROL SWITCH

HEADLIGHT CONTROL

- Turn the headlight control switch to the $\Xi \Delta \square$ position **01** to turn on the front parking, tail, license plate and instrument panel lights. Turn the switch to the $\Xi \Delta$ position **02** to turn on the headlights.

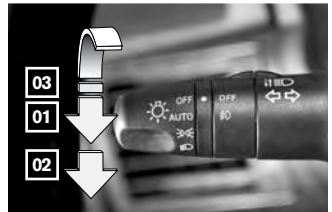


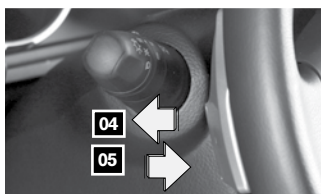 
AUTOLIGHT SYSTEM

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **03** then turn the ignition switch to **ON**. To deactivate the autolight system, turn the headlight control switch to the **OFF**, $\Xi \Delta \square$ position **01** or $\Xi \Delta$ position **02**.



FIRST DRIVE FEATURES

 
HIGH BEAM SELECT

- Push the headlight control switch forward **04** to select the high beam function. The blue indicator light  illuminates in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light will extinguish.
- Pull and release the headlight control switch **05** to flash the headlight high beams on and off.



FOG LIGHT SWITCH (if so equipped)


- The headlights must be on and the low beams  selected for the fog lights to operate.
- Turn the switch (inside collar) to the  position **06** to turn the fog lights on.
- Turn the switch (inside collar) to the **OFF** position to turn the fog lights off.


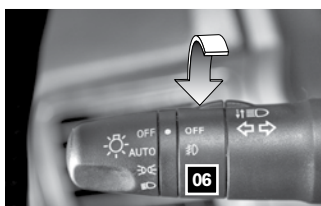


For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.


WINDSHIELD WIPER AND WASHER SWITCH


- Move the lever to the following positions to operate the windshield wipers:

  - 01** Mist (**MIST**) - One sweep operation of the front wipers.
- 02** Intermittent (**INT**) - Front wipers operate intermittently. The intermittent operation speed can be adjusted by twisting the time control ring **03** to increase or decrease wiper speed.
- 04** Low (**LO**) - Front wipers operate at a continuous low-speed.
- 05** High (**HI**) - Front wipers operate at a continuous high-speed.
- 06** Front washer  - Pull the lever toward you to activate the front washer. The front wipers will operate several times.

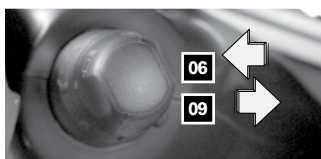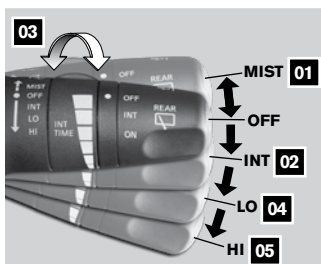

REAR WINDSHIELD WIPER AND WASHER

  - 07** Intermittent (**INT**) - Rear wiper operates intermittently.
- 08** Low (**ON**) - Rear wiper operates at a continuous low-speed.
- 09** Rear washer  - Push the lever forward to activate the rear washer. The rear wiper will operate several times.

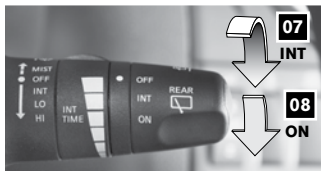

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.



AUTOMATIC CLIMATE CONTROLS

01 AUTO BUTTON/DRIVER'S SIDE TEMPERATURE CONTROL DIAL

- The auto mode may be used year-round. Press the **AUTO** button to turn the system on and the system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.
- Turn the driver's side temperature control dial left for cooler air or right for warmer air.

02 DUAL BUTTON/PASSENGER'S SIDE TEMPERATURE CONTROL DIAL

- Press the passenger's side **DUAL** control button to turn the passenger's side temperature controls on or off. This will allow the passenger's side temperature to be adjusted independently from the driver's side.
- Turn the passenger's side temperature control dial left for cooler air or right for warmer air.

03 FAN SPEED CONTROL BUTTONS

- Press the fan speed control buttons to manually adjust the fan speed faster or slower .

04 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the front window defroster button to turn the system on. The A/C automatically turns on when the defroster mode is selected. This feature removes humidity from the air.
- Use the temperature control dial **01** to set the desired temperature.
- To set the defroster on high, press the fan speed control button to increase the fan speed to the maximum setting.

05 MODE BUTTON

- Press the **MODE** button **05** to cycle through the following air flow outlets:





- Air flows from the center and side vents.
- Air flows from the center, side, and foot vents.
- Air flows mainly from the foot vents.
- Air flows from the defroster and foot vents.

06 REAR WINDOW AND OUTSIDE MIRROR DEFROSTER SWITCH

- Push the rear window defroster switch to turn the system on or off.
- The rear window defroster automatically turns off after approximately 15 minutes.

FIRST DRIVE FEATURES

07 AIR RECIRCULATION BUTTON

- Press the air recirculation button  to recirculate air inside the vehicle. The indicator light on the button will illuminate. This mode helps to adjust the inside vehicle temperature more effectively.
- Press the air recirculation button  again to turn air recirculation off. This allows outside air to be drawn into the passenger compartment to prevent fogging in defrost, floor or defrost/floor modes.
- The air recirculation mode cannot be activated when the climate control system is in the front defroster mode  or front defroster and foot vent  mode.

08 A/C BUTTON

- Press the **A/C** button to manually turn the A/C on or off.

09 OFF BUTTON

- Press the **OFF** button to turn the climate control system off.

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.



FM/AM/SiriusXM®* SATELLITE RADIO WITH CD/DVD PLAYER (if so equipped)

01 VOLUME/ON-OFF CONTROL KNOB

- Press the **VOL/ON-OFF** control knob to turn the system on or off.
- Turn the knob right or left to increase or decrease the volume.

02 TUNE/FOLDER/AUDIO CONTROL KNOB

- To manually tune the radio, turn the **TUNE/FOLDER/AUDIO** knob left or right.

03 SEEK/CAT AND TRACK BUTTONS

- To scan quickly and stop at the previous or next broadcast station, press the **SEEK/CAT** button or the **TRACK** button.
- For satellite radio, press the **SEEK/CAT** button or the **TRACK** button to switch to the first channel of the previous or next category.
- To change tracks on a CD, press the **SEEK/CAT** button or the **TRACK** button.
- To fast forward or rewind a track on a CD, press and hold the **SEEK/CAT** button or the **TRACK** button.

*SiriusXM® Satellite Radio is only available on vehicles equipped with an optional satellite radio subscription service.

04 STATION PRESET BUTTONS

- Twelve stations can be set for the FM band, six for the AM band and eighteen for satellite radio.
- To store a station in a preset, you must first select a radio band by pressing the **AM/FM** button **05** or **XM** button **06**, then tune to the desired AM, FM or XM satellite radio station.
- Then press and hold the desired station preset button (**1-6**) until the preset number is updated on the display and the sound is briefly muted. The channel indicator will then come on and the sound will resume. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then press the corresponding station select button (**1-6**).

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

USB/AUX JACK AND IPOD® INTERFACE

- The USB/Aux jack **01** is located in the center console under the arm rest.
- When a compatible USB memory device, iPod® or auxiliary device is plugged into the USB/Aux jack, compatible audio files stored on the device can be played through the vehicle’s audio system.

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.



CRUISE CONTROL

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 MPH (40 km/hr).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **ON/OFF** switch **01**. The **CRUISE** indicator light in the vehicle information display will illuminate.
- To set cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **02** and release. The **SET** indicator light in the vehicle information display will illuminate. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **03**. When the vehicle attains the desired speed, release the switch.



- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **02**. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, tap the brake pedal or push the **CANCEL** switch **04**.
- To turn off cruise control, push the **ON/OFF** switch **01**. Both the **CRUISE** indicator light and **SET** indicator light in the vehicle information display will extinguish.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

POWER OUTLETS

- The power outlets are used for powering electrical accessories such as cellular telephones. They are rated at 12 volt, 120W (10A) maximum.
- Power outlets are located on the instrument panel **01**, on the rear console **02** and in the cargo area **03**.
- To use a power outlet, open the cap.
- The power outlets are powered only when the ignition switch is in the **ACC** or **ON** position.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.



SYSTEM GUIDE

VEHICLE INFORMATION DISPLAY

- The vehicle information display **01** is located to the left of the speedometer.
- Press the vehicle information display **INFO** button **02** located on the instrument panel to toggle through the following modes:
 - **MPG** – Displays the instant fuel economy since the last reset.
 - **RANGE** – Displays the estimated distance the vehicle can be driven before refueling.
 - **WARNING** – Displays when a warning is present.
- To highlight the desired menu option within the selected mode, turn the **INFO** button.
- To enter the highlighted menu, press the **INFO** button.
- To reset **TRIP A** or **TRIP B**, go to the desired mode on the trip computer and press and hold the change button **03** for more than 1 second.




 
 
 
For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

BLUETOOTH® HANDS-FREE PHONE SYSTEM

- Bluetooth Streaming Audio (available with Navigation System only) allows you to use a compatible Bluetooth phone to play audio files on your device. Your compatible cellular phone can be connected to the vehicle’s audio system allowing audio files to play through the vehicle’s speakers.
- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.*





SYSTEM OPERATING TIPS

- Press the  or  button to interrupt the voice prompts at any time and speak a command after the tone.
- To use the system faster, you may speak the second level commands with the main menu command on the main menu. For example, press the  or  button and after the tone say “Call Redial”.
- The “Help” command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing HVAC vents away from ceiling.
- Speak naturally without long pauses and without raising your voice.




*Some jurisdictions prohibit the use of cellular telephones while driving.

SYSTEM GUIDE

- When speaking Phonebook names, please be aware some phones require the last name to be spoken before the first name. For example, "Michael Smith" may be spoken as "Smith Michael".
- To cancel a voice recognition session, say "Cancel" or "Quit", or press and hold the  or  button.
- If the Voice Recognition system does not recognize your voice commands, train the system using the Speaker Adaptation Mode. See your Owner's Manual for detailed information.
- For more detailed information and instructions, refer to your cellular phone Owner's Manual and visit www.nissanusa.com/bluetooth.

Bluetooth® System without Navigation* (if so equipped)

PAIRING PROCEDURE

- The vehicle must be stationary when pairing the phone.
1. Press the  button on the steering wheel. The system announces the available commands.
 2. Say: "Setup". The system acknowledges the command and announces the next set of available commands.
 3. Say: "Pair phone". The system acknowledges the command and announces the next set of available commands.
 4. Say: "New phone". The system acknowledges the command and asks you to initiate pairing from the phone handset.
 5. Initiate connecting from the phone.
 - The pairing procedure varies according to each cellular phone model. For detailed pairing instructions and a list of compatible phones, please visit www.nissanusa.com/bluetooth.
 - When prompted for a PASSKEY code, enter "1234" from the handset. (The PASSKEY code is assigned by NISSAN and cannot be changed.)
 6. When the system asks you to provide a name for the phone, say the name. You can give the phone a name of your choice.
 7. When the system asks you for a priority level, say a number between 1 and 5. The priority level determines which phone interacts with the system when two or more paired phones are active in the vehicle at the same time. Choose 1 if this is the only phone or the primary phone.
 8. When the system asks if you would like to select a custom ring tone, say "Yes" or "No". Follow the instructions provided by the system to choose a ring tone.




*Some jurisdictions prohibit the use of cellular telephones while driving.


PHONEBOOK SETUP

Each paired phone has its own dedicated phonebook. Each phonebook can store up to 40 names. Each name can have up to four locations/numbers: Home, Office, Mobile and Other.

- The vehicle must be stationary when adding new entries.

1. Press the  button and wait for the tone.
2. Say: "Phonebook".
3. Wait for the tone, then say "New entry".
4. When prompted, say the name for the new entry. For example, say "Michelle". If the name is too short or too long, or if it sounds too much like a name that is already stored in the phonebook, the system tells you and prompts you to say a name again. Choose a new name.
5. When the system asks you to confirm the name is correct, say: "Yes" or "No".
6. When the system asks you to provide a location, say the name of the location ("Home," "Office," "Mobile" or "Other"). The system acknowledges the location.
 - By voice command - When prompted, say a phone number for the location. For example, say "five five five one two one two." The system repeats the number and prompts you for the next command.
 - By Bluetooth® transfer - Say: "Transfer entry". The system acknowledges the command and asks you to initiate the transfer from the phone handset. The new contact phone number will be transferred from the cellular phone via the Bluetooth® communication link. The transfer procedure varies according to each cellular phone. See the cellular phone Owner's Manual for details.
7. When you are finished entering numbers, say "Store". The system confirms the name, location and number.
8. When the system asks if you would like to store another location for the same name, say "Yes" or "No". If you do not respond to the system prompt, the system ends the New Entry session.




MAKING A CALL

1. Press the  button.
2. After the tone, do one of the following:
 - Say: "Call [name] [location]". For example, say "Call Michelle Home".
 - Say: "Call [number]". For example, say "Call 123-456-7891".
 - Say: "Redial" to redial the previous phone number called by the system.
 - Say: "Call International" to dial more than 10 digits or any special characters.
3. When you have finished speaking the phone number, wait for the system to repeat it back to you, then say "Dial".

SYSTEM GUIDE

RECEIVING/ENDING A CALL

When you receive a phone call, a ring tone sounds through the audio system.

- To accept the call, press the  button.
- To reject the call, press the  button.
- To hang-up the phone at the end of a call or to disconnect during call placement, press the  button.

Bluetooth® System with Navigation* (if so equipped)

CONNECTING PROCEDURE

- The vehicle must be stationary when connecting the phone.



1. Press the **SETTING** button on the instrument panel and select the "Bluetooth" key on the display.



2. Select the "Connect Bluetooth" key.
3. A pop-up box will appear on the screen, prompting you to confirm that the connection is for the phone system. Select the "Yes" key.



4. Initiate connecting from the phone.
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible phones, please visit www.nissanusa.com/bluetooth.



- When prompted for a PIN code, enter "1234" from the handset. (The PIN code is assigned by NISSAN and cannot be changed.)

5. When connecting is complete, the screen will return to the Bluetooth settings screen.

*Some jurisdictions prohibit the use of cellular telephones while driving.


PHONEBOOK SETUP

- Depending on your cell phone, the system may automatically download your cell phone's entire phonebook to the vehicle's Bluetooth system.
- If the phonebook does not download automatically, the vehicle phonebook may be set for up to 40 entries.
- To manually download entries:
 1. Press the **PHONE** button and select the "Vehicle Phonebook" key.
 2. Select the "Add New" key at the top of the display. There are different methods to input a phone number. Select one of the following options:
 - "Copy from Call History" to save a number from the Outgoing, Incoming or Missed Calls lists.
 - "Copy from the Handset" to save a number that has been downloaded from your handset to the vehicle.
 - "Enter Number by Keypad" to input the number and name manually.



 
 

MAKING A CALL

To make a call, follow this procedure:



1. Press the **PHONE** button on the instrument panel or the  button on the steering wheel. The "Phone" menu will appear on the control panel display.
2. Select the "Vehicle Phonebook", "Call History", "Handset Phonebook" or "Dial Number" key.
3. Select the desired entry from the list.
4. Dialing begins when the entry is selected or when the "OK" key is selected.



RECEIVING/ENDING A CALL

- To accept the call, press the **PHONE** button on the instrument panel, the  button on the steering wheel or touch the "Answer" key.
- To reject a call, touch the "Reject Call" key on the display or press and hold the  button on the steering wheel.
- To hang-up, press the  button or touch the "Hang Up" key.

  For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual or visit www.nissanusa.com/bluetooth.

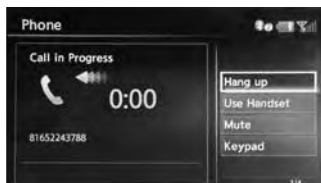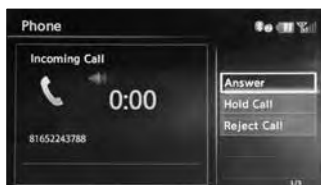

SYSTEM GUIDE



NAVIGATION SYSTEM (if so equipped)

- Your Navigation System can calculate a route from the current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.

01 Touch-screen display



02 Destination (**DEST**) – Press to enter a destination.

03 **ROUTE** – Press to access guidance control functions (guidance cancellation, route priority, waypoint setting on the route, etc.).

04 **☀/☾ OFF** – Press to switch between the day screen (bright) and the night screen (dark). Press and hold the button to turn the display off. Press again to turn the display on.

05 **MAP** – Press to display the map. While following a programmed route, press multiple times to change the type of route information.

06 Multi-Function Controller

- ENTER** – Press to select the highlighted item on the screen. If this button is pressed while a map is displayed, the map menu screen is displayed.
- Main directional buttons – Press to move across the map, highlight an item on the screen or adjust a setting.
- Additional directional buttons – Press to move across the map or highlight an item on the character input screen.
- Center dial   – Turn the dial to highlight an item on the screen, adjust a setting or adjust the map scale.

 
07 Information (**INFO**) – Press to display the vehicle, traffic (if so equipped), weather (if so equipped) or voice recognition information.

- 08 DISPLAY** – Press to access the display settings.
- 09 STATUS** – Press multiple times to display audio information with either the air conditioner status, fuel economy or navigation directions.
- 10 SETTING** – Press to access the system settings.
- 11 BACK** – Press to return to the previous screen. In a settings screen, this button can also be used to apply the setting. In a character input screen, this button can also delete the characters that have been entered.
- 12 VOICE** – Press to hear the current voice guidance for a programmed route.

For more information, refer to your Navigation System Owner's Manual.

DUAL HEAD RESTRAINT DVD SYSTEM (if so equipped)

- With this Dual Head Restraint DVD System you can play video files via a DVD or CD, providing images and sound both from the front and rear display screens.
- You can also connect auxiliary devices such as video games, camcorders or portable video players to the auxiliary jacks **01** located on the back of the center console. (Your device will be controlled through its own control panel.)
- Rear Auxiliary Mode allows rear seat passengers to independently display different sources on each screen.
- Use the remote controller **02** provided with the system to operate the rear display screens.
- Use the headphones **03**, also provided with the system, to listen to audio wirelessly and independently. You may also connect your own wired-headphones to the headphone jacks **04** located on the back of the center console.
- For optimum performance, select the appropriate headphone channel **05** that corresponds to the headrest display being viewed directly in front of you.
- To watch or control videos on the front display make sure the vehicle is in the **P (PARK)** position and the parking brake is applied.
- To reduce driver distraction, the wireless headphones will not operate while located in the front seats and movies will not be shown on the front display while the vehicle is in any drive position.
- To access standard DVD controls on the front display while playing a DVD on the rear display, press the **DISC-AUX** button on the audio control panel while the vehicle is in the **P (PARK)** position and the parking brake is applied.

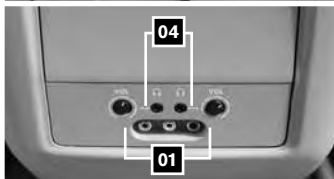

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner's Manual.

SYSTEM GUIDE



HOMELINK® UNIVERSAL TRANSCEIVER (if so equipped)

- The HomeLink® Universal Transceiver can learn and consolidate the functions of up to 3 different hand-held transmitters, operating items such as garage doors, property gates, outdoor and indoor lights or alarm systems.
- To program the HomeLink® Universal Transceiver:
 - Position the handheld transceiver 1-3 in (26-76 mm) away from the HomeLink surface, keeping the HomeLink indicator light in view.
 - Press and hold the desired HomeLink button and the handheld transmitter button simultaneously until the HomeLink indicator light flashes slowly and then rapidly.
 - Both buttons may be released when the indicator light flashes rapidly.
- To verify the programming is complete, press and hold the HomeLink button and observe the indicator light:
 - A solid, continuous light indicates the programming is complete and the HomeLink button will activate your device.
 - A blinking light that turns to a solid, continuous light after 2 seconds indicates additional steps are required to complete the programming.
- An additional person may make the remaining steps easier. To complete the programming process:
 - At the receiver of the device that you are programming to the HomeLink button, press and release the learn or smart button (the name may vary by manufacturer, but it is usually located near where the hanging antenna wire is attached to the unit). You have approximately 30 seconds to initiate the following step.
 - Press and hold the programmed HomeLink button for 2 seconds and release.
- You may have to repeat the previous 2 steps up to 3 times to complete the programming process. HomeLink should now activate your device.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual, the HomeLink website at www.homelink.com or call 1-800-355-3515.

MEMO

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. See your Owner's Manual, which contains important safety warnings and information about the operation and maintenance of your vehicle, for complete details. NISSAN North America, Inc. reserves the right to make changes, at any time, without prior notice, in prices, colors, materials, equipment, specifications, and models and to discontinue models or equipment. Due to continuous product development and other pre- and post-production factors, actual vehicle, materials and specifications may vary. Some vehicles are shown with optional equipment. See the actual vehicle for complete accuracy. Specifications, options and accessories may differ in Hawaii, U.S. territories and other countries. For additional information on availability, options or accessories, see your NISSAN dealer or contact NISSAN North America, Inc.



To view detailed instructional videos,
go to **www.nissanownersinfo.mobi/2014/armada**
or snap this barcode with an appropriate barcode reader.

