 


2014 **FRONTIER**

QUICK REFERENCE GUIDE



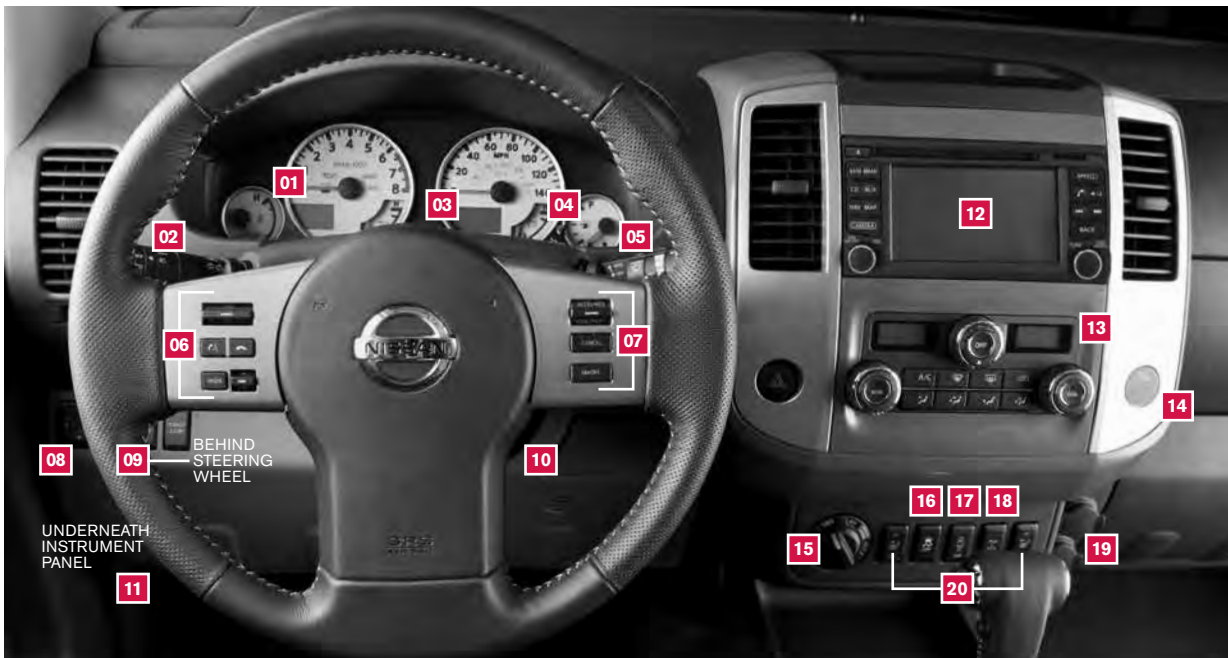

- 01** LOW TIRE PRESSURE WARNING LIGHT
- 02** HEADLIGHT AND TURN SIGNAL CONTROL
- 03** TRIP COMPUTER
- 04** INSTRUMENT BRIGHTNESS CONTROL* / TRIP CHANGE BUTTON
- 05** WINDSHIELD WIPER AND WASHER SWITCH

- 06** STEERING WHEEL SWITCHES FOR AUDIO CONTROL* / BLUETOOTH*
- 07** CRUISE CONTROL
- 08** OUTSIDE MIRROR CONTROL SWITCH
- 09** HILL DESCENT CONTROL SWITCH*
- 10** STEERING WHEEL TILT ADJUSTMENT*

- 11** HOOD RELEASE*
- 12** AUDIO AND NAVIGATION SYSTEM
- 13** CLIMATE CONTROLS
- 14** FRONT PASSENGER AIR BAG STATUS LIGHT*
- 15** 4-WHEEL DRIVE (4WD) SHIFT SWITCH*

- 16** VEHICLE DYNAMIC CONTROL (VDC) OFF SWITCH*
- 17** REAR SONAR OFF SWITCH
- 18** E-LOCK SWITCH*
- 19** POWER OUTLETS
- 20** HEATED SEAT SWITCHES*

*See your Owner's Manual for information.

NEW SYSTEM FEATURES

Rear Sonar System (if so equipped) 2
 RearView Monitor (if so equipped). 2

ESSENTIAL INFORMATION

Tire Pressure Monitoring System (TPMS). 3
 Loose Fuel Cap 3
 Fuel-filler Door 4
 Clock Set/Adjustment 4

FIRST DRIVE FEATURES

Remote Keyless Entry System (if so equipped) 5
 Opening the Tailgate 5
 Power Seat Adjustments (if so equipped). 5
 Outside Mirror Control Switch 6
 Starting/Stopping the Engine. 6
 Headlight Control Switch 7
 Windshield Wiper and Washer Switch 8
 Automatic Climate Controls (if so equipped) 8
 FM/AM/SiriusXM® Satellite Radio with CD Player (if so equipped). 10
 USB/AUX Jack and iPod® Interface (if so equipped). 11
 Cruise Control (if so equipped) 11

SYSTEM GUIDE

Trip Computer 12
 Bluetooth® Hands-free Phone System (if so equipped) 12
 System Operating Tips. 12
 Bluetooth® System without Navigation (if so equipped) 13
 Bluetooth® System with Navigation (if so equipped) 14
 Navigation System (if so equipped). 16
 HomeLink® Universal Transceiver (if so equipped). 17



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the **"Safety — Seats, seat belts and supplemental restraint system (section 1)"**, the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** and the **"Starting and driving (section 5)"** of your Owner's Manual.



To view detailed instructional videos, go to www.nissanownersinfo.mobi/2014/frontier or snap this barcode with an appropriate barcode reader.



Additional information about your vehicle is also available in your Owner's Manual, Navigation System Owner's Manual and at www.nissanusa.com.

NEW SYSTEM FEATURES

REAR SONAR SYSTEM (if so equipped)

- With the shift lever in the **R (REVERSE)** position, this system will sound a tone to alert you of obstacles up to 5.9 ft (1.8 m) from the bumper with a decreased coverage area at the outer corners of the bumper.
- The rate of the tone increases as the vehicle gets closer to the obstacle. A continuous tone sounds when an obstacle is less than 10 in (25 cm) from the bumper.
- Turn the system off by pushing the Rear Sonar System off switch **01**. Push the switch again to activate the system.



For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

REARVIEW MONITOR (if so equipped)

- When the shift selector is shifted into the **R (REVERSE)** position, the monitor display shows a rearward view from the vehicle.
- The colored guide lines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line.
 - Red 1.5 ft (0.5 m); Yellow 3 ft (1 m); Green 7 ft (2 m) and 10 ft (3 m).



For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

ESSENTIAL INFORMATION

TIRE PRESSURE MONITORING SYSTEM (TPMS)

- A **CHECK TIRE PRES** warning message will display in the trip computer **01** and the low tire pressure warning light **02** will illuminate when one or more tires are low on pressure and air is needed.



- The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mi (1.6 km) at moderate speeds.


- After tire pressures are adjusted, drive the vehicle at speeds above 16 MPH (25 km/h). The **CHECK TIRE PRES** warning message and the low tire pressure warning light will extinguish.

 


- When the low tire pressure warning light flashes for approximately 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked by a NISSAN dealer.
- Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light to illuminate. If the warning light illuminates, check the tire pressure in your tires.
 - Check the tire pressures (including the spare tire) often and always prior to long distance trips.
- The Tire and Loading Information label contains valuable information. Please refer to "Technical and consumer information (section 9)" in your Owner's Manual for the location of the Tire and Loading Information label.

For more information, refer to the "Instruments and controls (section 2)", the "Starting and driving (section 5)" and the "Maintenance and do-it-yourself (section 8)" of your Owner's Manual.

LOOSE FUEL CAP

- A **LOOSE FUEL CAP** warning message will appear in the trip computer **01** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will disappear when the vehicle detects the fuel-filler cap is properly tightened and the reset button **02** is pressed for more than 1 second.
- If the cap is not properly tightened, the Malfunction Indicator Light  may illuminate.

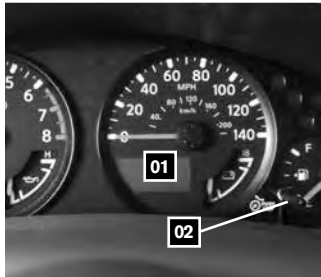

For more information, refer to the "Instruments and controls (section 2)" and the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

ESSENTIAL INFORMATION

FUEL-FILLER DOOR

 
- The fuel-filler door **01** is located on the driver's side of the vehicle.
- To open the fuel-filler door, pull the lid open.

For more information, refer to the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.



CLOCK SET/ADJUSTMENT

- To adjust the time and the appearance of the clock on the display:

1. Press the **APPS**  button **01**.
2. Touch the "Settings" key.
3. Touch the "System" key.
4. Touch the "Clock" key.

- The following settings can be adjusted:

- **Time Format:** The clock can be set to 12 hours or 24 hours.

- **Date Format:** The date can be changed to one of 5 different formats.

- **Clock Mode:** From here the clock mode options are:

- **Manual:** Allows for the option "Set Clock Manually". Touch this to begin setting the clock manually using the "+" or "-" to adjust the hours, minutes, day, and month up or down.
- **Time Zone:** Touch the "Time Zone" key **02** to choose from the applicable time zone list, and/or touch "Daylight savings time" to switch between on and off.
- **Auto:** Automatically sets the clock to the vehicle's current location.

- Press the **BACK** button **03** to return to the previous screen.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.



FIRST DRIVE FEATURES

REMOTE KEYLESS ENTRY SYSTEM (if so equipped)

The Remote Keyless Entry System allows you to lock or unlock your vehicle and turn on the interior lights.

- To lock the vehicle, press the **1** button on your key fob.
- To unlock the driver's door, press the **2** button on your key fob.
- Press the **1** button again within 5 seconds and all doors will unlock.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner's Manual.



OPENING THE TAILGATE

- Pull the tailgate handle **01** upward and lower the tailgate. Support cables hold the tailgate open.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner's Manual.



POWER SEAT ADJUSTMENTS (if so equipped)

- To slide the seat forward or backward, push the control switch **01** forward or backward.
- To adjust the angle of the seatback, push the switch **02** forward or backward.

SEAT LIFTER (if so equipped for driver's seat)

- To adjust the angle and the height of the seat cushion, push the front or rear end of the switch **01** up or down.

LUMBAR SUPPORT (if so equipped for driver's seat)

- To adjust the lumbar area, move the lever **03** forward or backward.

For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner's Manual.



FIRST DRIVE FEATURES

OUTSIDE MIRROR CONTROL SWITCH

- The outside mirror control switch is located on the left side of the instrument panel.
- To select the left or right mirror, move the switch **01**.
- Adjust each mirror to the desired position using the switch **02**.
- To prevent accidentally moving the mirror, move switch **01** to the center (neutral) position.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.



STARTING/STOPPING THE ENGINE

AUTOMATIC TRANSMISSION (if so equipped)

- Depress the brake pedal.
- Move the shift lever to **P (PARK)**.
- Turn the ignition switch to **START**.

MANUAL TRANSMISSION (if so equipped)

- Depress the brake pedal.
- Move the shift lever to **N (NEUTRAL)**.
- Depress the clutch pedal to the floor.
- Turn the ignition switch to **START**.



 
 
TURNING THE ENGINE OFF

 
- For an automatic transmission, move the shift lever to the **P (PARK)** position, apply the parking brake and turn the ignition switch to the **LOCK** position.
- For a manual transmission, apply the foot brake, move the shift lever to 1st gear, apply the parking brake and turn the ignition switch to the **LOCK** position.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

 
 
HEADLIGHT CONTROL SWITCH

HEADLIGHT CONTROL

 
- Turn the headlight control switch to the  position **01** to turn on the front parking, tail, license plate and instrument panel lights. Turn the switch to the  position **02** to turn on the headlights.

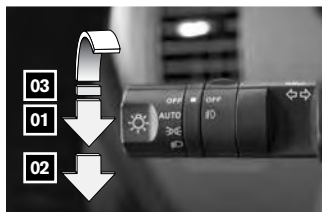 


AUTOLIGHT SYSTEM (if so equipped)

 
 
- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **03** then turn the ignition switch to **ON**. To deactivate the autolight system, turn the headlight control switch to the **OFF**,  position **01** or  position **02**.

HIGH BEAM SELECT

- Push the headlight control switch forward **04** to select the high beam function. The blue indicator light  illuminates in the instrument panel. Pull the headlight control switch back to the original position to select the low beam. The blue indicator will extinguish.
- Pull and release the headlight control switch **05** to flash the headlight high beams on and off.

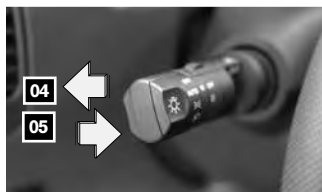

FOG LIGHT SWITCH (if so equipped)

- The headlights must be on and the low beams  position **02** selected for the fog lights to operate.
- Turn the switch (inside collar) to the  position **06** to turn the fog lights on.
- Turn the switch (inside collar) to the **OFF** position to turn the fog lights off.



For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

 
 
 
FIRST DRIVE FEATURES

WINDSHIELD WIPER AND WASHER SWITCH

Move the lever to the following positions to operate the windshield wipers:

- 01** Mist (**MIST**) - One sweep operation of the wipers.
- 02** Intermittent (**INT**) - Move the lever down to the **INT** position and then rotate the control ring **03** to increase or decrease the wiper speed.
- 04** Low (**LO**) - Wipers operate at a continuous low-speed.
- 05** High (**HI**) - Wipers operate at a continuous high-speed.
- 06** Pull the lever toward you to activate the washer. The wipers will operate several times.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

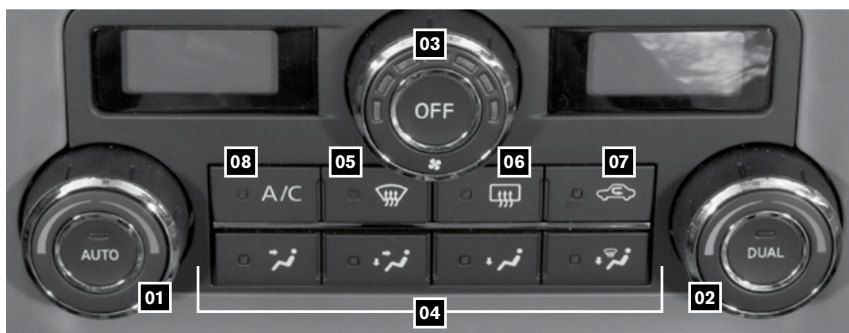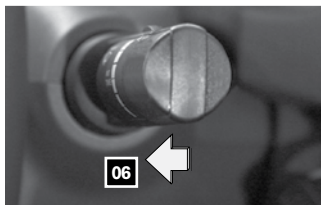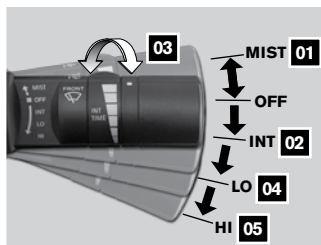

AUTOMATIC CLIMATE CONTROLS (if so equipped)

01 AUTO BUTTON/DRIVER'S SIDE TEMPERATURE CONTROL DIAL

- The auto mode may be used year-round. Press the **AUTO** button to turn the system on and the system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.
- Turn the driver's side temperature control dial left for cooler air or right for warmer air.

02 DUAL BUTTON/PASSENGER'S SIDE TEMPERATURE CONTROL DIAL


- Press the passenger's side **DUAL** control button to turn the passenger's side temperature controls on or off. This will allow the passenger's side temperature to be adjusted independently from the driver's side.
- Turn the passenger's side temperature control dial left for cooler air or right for warmer air.

03 FAN SPEED CONTROL DIAL/OFF BUTTON


- Turn the dial to the left to decrease fan speed or to the right to increase fan speed.
- Push the button to turn the system off.
- To stop air from coming through the vents with the blower off, press the air recirculation button **07**.

04 AIR FLOW CONTROL BUTTONS


- Press the air flow control buttons to manually control air flow:

 Air flows from the center and side vents.


 Air flows from the center, side and foot vents.

 Air flows mainly from the foot vents.

 
 Air flows from the defroster and foot vents.

 Air flows from the defroster vents.





05 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the front window defroster button  to turn the system on. The A/C automatically turns on when the defroster mode is selected. This feature removes humidity from the air.
- Set the temperature control dial **01** and the fan speed control dial **03** to their maximum settings.

06 REAR WINDOW AND OUTSIDE MIRROR (if so equipped) DEFROSTER SWITCH

- Push the rear window defroster switch  to turn the system on or off.
- The rear window defroster automatically turns off after approximately 15 minutes.

07 AIR RECIRCULATION BUTTON

- Press the air recirculation button  to recirculate air inside the vehicle. The indicator light on the button will illuminate. This system is used to avoid certain outside odors and helps to adjust the inside vehicle temperature more effectively.
- Press the air recirculation button  again to turn air recirculation off. This allows outside air to be drawn into the passenger compartment to prevent fogging in defrost, floor or defrost/floor modes.
- The air recirculation mode cannot be activated when the climate control system is in the front defroster mode  or the front defroster and foot outlet mode .

08 A/C BUTTON

- Press the **A/C** button to manually turn the A/C on or off.

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

FIRST DRIVE FEATURES



FM/AM/SiriusXM®* SATELLITE RADIO WITH CD PLAYER (if so equipped)

01 VOL (volume) CONTROL KNOB/ON-OFF BUTTON

- Turn the **VOL** control knob to the right or left to increase or decrease the volume.
- Press the **ON-OFF** button to turn the system on or off.

02 TUNE KNOB/AUDIO BUTTON

- To manually tune the radio, turn the **TUNE** knob left or right.
- Press the **AUDIO** button to go to the audio settings screen.

03 SEEK BUTTONS

- To tune and stop at the next or previous broadcast station, press the seek buttons ◀◀ or ▶▶.
- For satellite radio, to switch to the first channel of the previous or next category, press the seek buttons ◀◀ or ▶▶.
- To change tracks on a CD, press the seek buttons ◀◀ or ▶▶.
- To fast forward or rewind a track on a CD, press and hold the seek buttons ◀◀ or ▶▶.

04 STATION SELECT KEYS

- Twelve stations can be set for the FM band, six for the AM band and eighteen for satellite radio.
- To store a station in a preset, you must first select a radio band by pressing the **FM-AM** button 05 or **SXM** button 06 then tune to the desired FM, AM or satellite radio station.
- Then press and hold the desired station select button (1-6) until a beep is heard and the sound is briefly muted. The channel indicator will appear on the display and the sound will resume. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then press the corresponding station select button (1-6).

*SiriusXM® Satellite Radio is only available on vehicles equipped with an optional satellite radio subscription service.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

To view detailed instructional videos regarding these and other features,
please go to www.nissanownersinfo.mobi.

USB/AUX JACK AND IPOD® INTERFACE (if so equipped)

- The USB/Aux jack **01** is located inside the center console storage box.
- When a compatible USB memory device, iPod® or auxiliary device is plugged into the USB/Aux jack, compatible audio files stored on the device can be played through the vehicle's audio system.

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner's Manual.



CRUISE CONTROL (if so equipped)

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 MPH (40 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **ON-OFF** switch **01**. The **CRUISE** indicator light in the instrument panel will illuminate.
- To set cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **02** and release. The **SET** indicator light in the instrument panel will illuminate. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **03**. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **02**. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, tap the brake pedal or push the **CANCEL** switch **04**.
- To turn off cruise control, push the **ON-OFF** switch **01**. Both the **CRUISE** indicator light and **SET** indicator light in the instrument panel will extinguish.

 


For more information, refer to the “**Starting and driving (section 5)**” of your Owner's Manual.

SYSTEM GUIDE

TRIP COMPUTER

- With the ignition switch in the **ON** position, modes of the trip computer **01** can be selected by pressing the trip computer change button **02** on the instrument panel.
- The following modes can be selected in the display:
 - Trip **A** – measures the distance of one specific trip.
 - Trip **B** – measures the distance of a second specific trip.
 - **dte** (distance to empty) – displays the estimated distance to empty (dte) the vehicle can be driven before refueling.
 - **mph** – displays the average speed since the last reset.
 - **mpg** – displays the average fuel consumption since the last reset.
 - (Journey time) – displays the elapsed time since the last reset.
- To reset Trip **A**, Trip **B**, **mph**, **mpg** and (Journey time), go to the desired mode on the trip computer and hold the trip computer change button **02** for more than 3 seconds.

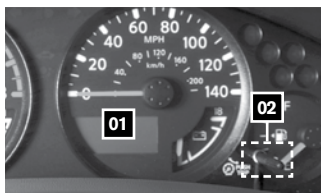
 
 


 
For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

BLUETOOTH® HANDS-FREE PHONE SYSTEM (if so equipped)

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.*

SYSTEM OPERATING TIPS

- Press the  button to interrupt the voice prompts at any time and speak a command after the tone.
- To use the system faster, you may speak the second level commands with the main menu command on the main menu. For example, press the  button and after the tone say “Call Redial”.
- The “Help” command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing HVAC vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.
- When speaking Phonebook names, please be aware some phones require the last name to be spoken before the first name. For example, “Michael Smith” may be spoken as “Smith Michael”.
- To cancel a voice recognition session, simply wait 5 seconds, say “Cancel” or “Quit”, or press and hold the  button for 5 seconds.
- To increase or decrease the volume of the voice prompts, push the volume control switches **+** or **-** on the steering wheel or turn the control dial on the audio system while the audio system is responding.

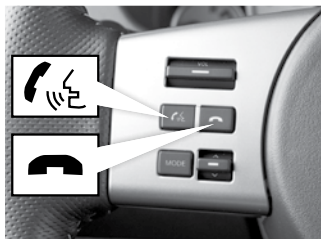


*Some jurisdictions prohibit the use of cellular telephones while driving.

- If the Voice Recognition system does not recognize your voice commands, train the system using the Voice Adaptation Mode. See your Owner's Manual for detailed information.
- For more detailed information and instructions, refer to your cellular phone's Owner's Manual and visit www.nissanusa.com/bluetooth.


BLUETOOTH® SYSTEM WITHOUT NAVIGATION (if so equipped)

CONNECTING PROCEDURE

- The vehicle must be stationary when connecting the phone.
1. Press the  button on the steering wheel. The system announces the available commands.
 2. Say: "Connect phone". The system acknowledges the command and announces the next set of available commands.
 3. Say: "Add phone". The system acknowledges the command and asks you to initiate connecting from the phone handset.
 4. Initiate connecting from the phone:
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and compatible phones, please visit www.nissanusa.com/bluetooth.
 - When prompted for a PIN code, enter "1234" from the handset. (The PIN code is assigned by NISSAN and cannot be changed.)
 5. Say a name for the phone when the system asks you to provide one. You can give the phone a name of your choice.




PHONEBOOK SETUP


- The phonebook stores up to 1,000 names for each phone paired with the system.
- Depending on your cellular phone, the system may automatically download your cellular phone's entire phonebook to the vehicle's Bluetooth® system.
- If the phonebook does not download automatically, entries can be individually downloaded.
- To manually download entries:
 1. Push the  button on the steering wheel.
 2. After the tone, say "Phonebook".
 3. After the next tone, say "Transfer Entry". The system acknowledges the command and asks you to initiate the transfer from the phone handset. The new contact phone number will be transferred from the cellular phone to the vehicle.
 - The transfer procedure varies according to each cellular phone. See your cellular phone's Owner's Manual for details. You can also visit www.nissanusa.com/bluetooth for instructions on transferring phone numbers from NISSAN recommended cellular phones.
 4. The system repeats the number and prompts you for the next command. When you have finished entering numbers or transferring an entry, choose "Store".
 5. The system confirms the name, location and number.

SYSTEM GUIDE




MAKING A CALL FROM THE PHONEBOOK

- In some cases, names stored using all UPPERCASE letters may not be recognized by the Voice Recognition system.
1. Press the  button.
 2. After waiting for the tone, say "Call".
 3. After the next tone, speak a name of a phonebook entry. For example, "Michael Smith".
 4. Confirm the correct name is recognized by saying "Dial" after the tone.

MAKING A CALL BY PHONE NUMBER

1. Press the  button. A tone will sound.
2. Say: "Call". The system acknowledges the command and announces the next set of available commands.
3. Say: "Phone Number". The system acknowledges the command and announces the next set of available commands.
4. Say the number you wish to call starting with the area code in single digit format.
5. When you have finished speaking the phone number, the system repeats it back and announces the available commands.
6. Say: "Dial". The system acknowledges the command and makes the call.

RECEIVING/ENDING A CALL

- When you receive a phone call, a ring tone sounds through the audio system.
- To accept the call, press the  button.
- To reject the call, press the  button.
- To hang-up the phone at the end of a call or to disconnect during call placement, press the  button.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual or please visit www.nissanusa.com/bluetooth.

 

BLUETOOTH® SYSTEM WITH NAVIGATION (if so equipped)

 
- Send predefined or custom text messages* through your vehicle's Bluetooth® system.
- Receive texts through your vehicle's Bluetooth® system that can be read to you.
- Bluetooth® Streaming Audio allows you to use a compatible Bluetooth® phone to play audio files on your device. Your compatible cellular phone can be connected to the vehicle's audio system, allowing audio files to play through the vehicle's speakers.

SMARTPHONE INTEGRATION

- For information on how to pair your phone and use popular smartphone apps in your Nissan, please visit: www.nissanusa.com/connect/support.

CONNECTING PROCEDURE

1. Press the APPS  button on the control panel.
2. Select the "Settings" key  01.

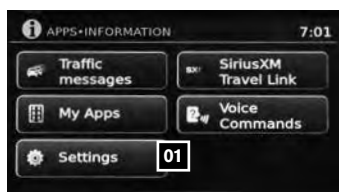

 
*Laws in some jurisdictions may restrict the use of "Text-to-Speech." Some applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

3. Select the “Phone & Bluetooth” key **02**.



4. Select the “Connect New Device” key **03**.

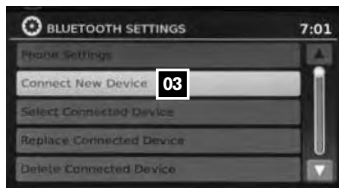

5. Initiate the connecting process from the handset.


The system will display the message:

 
“Is PIN XXXXXX displayed on your Bluetooth device?”

If the PIN is displayed on your Bluetooth® device, select “Yes” to complete the connecting process.



VEHICLE PHONEBOOK

To access the vehicle phonebook:

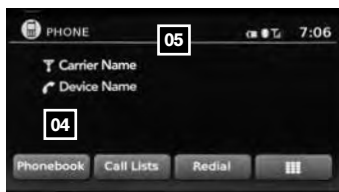



1. Press the  button on the instrument panel.
2. Select the “Phonebook” key **04**.
3. Choose the desired entry from the displayed list.

 


MAKING A CALL

1. Press the  button on the instrument panel. The “Phone” screen **05** will appear on the display.
2. Select one of the following options to make a call:
 - “Phonebook”: Select the name from an entry stored in the vehicle phonebook.
 - “Call Lists”: Select the name from the incoming, outgoing or missed call history.
 - “Redial”: Dial the last outgoing call from the vehicle.
 -  — Input the phone number manually using the keypad displayed on the screen.

RECEIVING A CALL

- To accept the incoming call, either:
 - Press the  button on the steering wheel, or
 - Select the  icon on the screen.
- To reject the incoming call, either:
 - Press the  button on the steering wheel, or
 - Select the  icon on the screen.

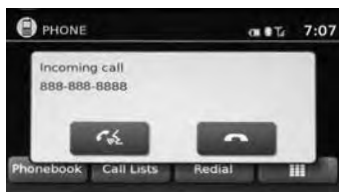

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

SYSTEM GUIDE



NAVIGATION SYSTEM (if so equipped)

- Your Navigation System can calculate a route from the current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.
- NissanConnect™ Apps integrates popular smartphone apps and services into your vehicle. NissanConnect™ Apps requires a subscription. Please visit www.nissanconnect.com for more information.

- 01 NAV** button – Press to access the functions of the Navigation System.
- 02 MAP** button – Press to display the current location map screen.
- 03 VOL** knob – Turn right to increase the volume or left to decrease the volume.
- 04** key – Select to zoom the map in.
- 05** key – Select to zoom the map out.
- 06 APPS** button – Press to access Traffic messages, MyApps, SiriusXM® Travel Link, Voice Commands, and Settings.
- 07** button – Press to change the display brightness between day and night modes. While the mode is being displayed, the brightness can be adjusted using the **TUNE** knob. Press and hold to turn the display off. Press again to turn the display on.
- 08 BACK** button – Press to return to the previous screen.
- 09 TUNE** knob – Turn to scroll through the items in a list. Press to select a menu item.
- 10** Touch-screen display.
- 11** SD-card location - An SD-card with map data must be inserted here for map functions to operate.

An account must first be registered from the Info Services settings screen and a compatible Bluetooth® Hands-free phone and subscription service is required. Please visit www.nissanusanusa.com/bluetooth for compatible phone information. For more information, refer to your Navigation System Owner's Manual.



HOMELINK® UNIVERSAL TRANSCEIVER (if so equipped)

- The HomeLink® Universal Transceiver can learn and consolidate the functions of up to 3 different hand-held transmitters, operating items such as garage doors, property gates, outdoor and indoor lights or alarm systems.
- To program the HomeLink® Universal Transceiver:
 - Position the handheld transceiver 1-3 in (26-76 mm) away from the HomeLink surface, keeping the HomeLink indicator light in view.
 - Press and hold the desired HomeLink button and the handheld transmitter button simultaneously until the HomeLink indicator light flashes slowly and then rapidly.
 - Both buttons may be released when the indicator light flashes rapidly.
- To verify the programming is complete, press and hold the HomeLink button and observe the indicator light:
 - A solid, continuous light indicates the programming is complete and the HomeLink button will activate your device.
 - A blinking light that turns to a solid, continuous light after 2 seconds indicates additional steps are required to complete the programming.
- An additional person may make the remaining steps easier. To complete the programming process:
 - At the receiver of the device that you are programming to the HomeLink system, press and release the "learn" or "smart" button (the name may vary by manufacturer but it is usually located near where the hanging antenna wire is attached to the unit). You have approximately 30 seconds to initiate the following step.
 - Press and hold the programmed HomeLink button for 2 seconds and release.
- You may have to repeat the previous 2 steps up to 3 times to complete the programming process. HomeLink should now activate your device.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual, the HomeLink website at www.homelink.com or call 1-800-355-3515.

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. See your Owner's Manual, which contains important safety warnings and information about the operation and maintenance of your vehicle, for complete details. NISSAN North America, Inc. reserves the right to make changes, at any time, without prior notice, in prices, colors, materials, equipment, specifications, and models and to discontinue models or equipment. Due to continuous product development and other pre- and post-production factors, actual vehicle, materials and specifications may vary. Some vehicles are shown with optional equipment. See the actual vehicle for complete accuracy. Specifications, options and accessories may differ in Hawaii, U.S. territories and other countries. For additional information on availability, options or accessories, see your NISSAN dealer or contact NISSAN North America, Inc.



To view detailed instructional videos,
go to **www.nissanownersinfo.mobi/2014/frontier**
or snap this barcode with an appropriate barcode reader.

