 




2014
QUICK REFERENCE GUIDE



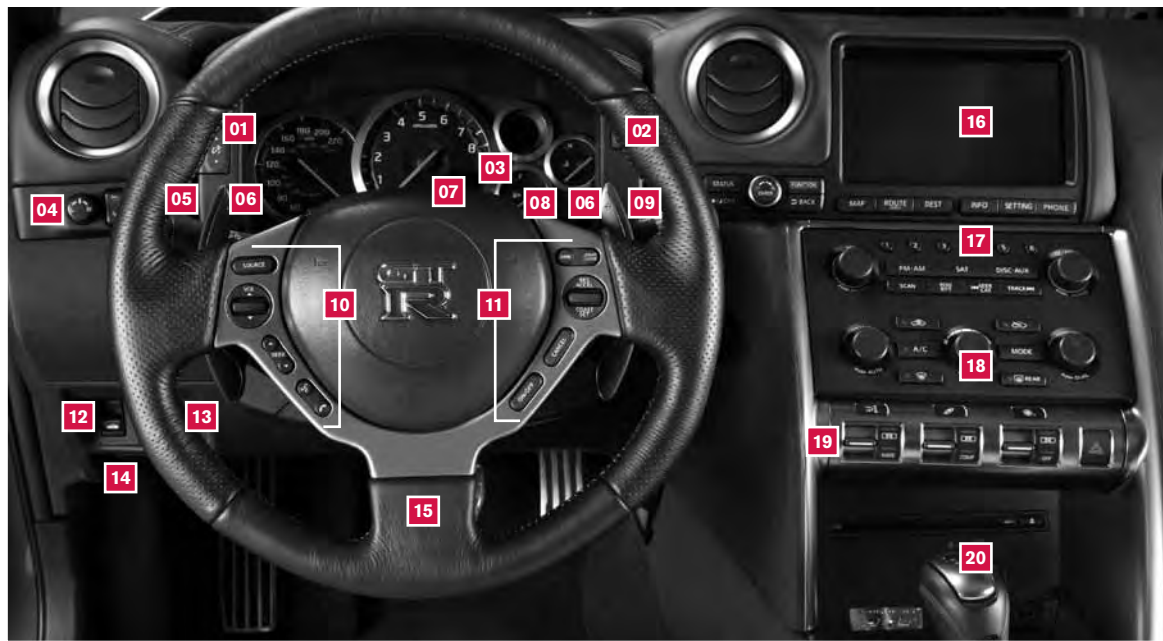

- 01** INSTRUMENT BRIGHTNESS CONTROL*
- 02** NEXT / ENTER SWITCHES
- 03** DRIVE COMPUTER
- 04** OUTSIDE MIRROR CONTROL SWITCH
- 05** HEADLIGHT AND TURN SIGNAL CONTROL

- 06** PADDLE SHIFTERS*
- 07** VEHICLE INFORMATION DISPLAY*
- 08** LOW TIRE PRESSURE WARNING LIGHT
- 09** WINDSHIELD WIPER AND WASHER SWITCH
- 10** STEERING WHEEL SWITCHES FOR AUDIO CONTROL* / BLUETOOTH* / NAVIGATION

- 11** CRUISE CONTROL
- 12** TRUNK RELEASE
- 13** INTELLIGENT KEY PORT
- 14** HOOD RELEASE*
- 15** STEERING WHEEL TILT AND TELESCOPIC ADJUSTMENT*

- 16** MULTI FUNCTION DISPLAY
- 17** AUDIO SYSTEM
- 18** AUTOMATIC CLIMATE CONTROLS
- 19** VDC, TRANSMISSION AND SUSPENSION SETUP SWITCHES*
- 20** FRONT PASSENGER AIR BAG STATUS LIGHT*

*See your Owner's Manual and Multi Function Display Owner's Manual for information.

NEW SYSTEM FEATURES

RearView Monitor	2
USB/iPod® Interface	2
DVD Player	2
XM NavTraffic and XM NavWeather (if so equipped)	3

ESSENTIAL INFORMATION

Tire Pressure Monitoring System (TPMS)	4
Fuel-Filler Cap	4
Unique Noises	5
Vehicle Modifications	5
Vehicle Dynamic Control (VDC)	5
Dry Carbon Fiber Rear Spoiler (if so equipped)	5

FIRST DRIVE FEATURES

NISSAN Intelligent Key® System	6
Trunk Lid Release	7
Seat Adjustments	7
Outside Mirror Control Switch	8
Starting/Stopping the Engine	8
Headlight Control Switch	8
Windshield Wiper and Washer Switch	9
Automatic Climate Controls	10
FM/AM/XM Satellite Radio with CD/DVD Player	11
Clock Set/Adjustment	12
Cruise Control	13
Fuel-Filler Door	13

SYSTEM GUIDE

Drive Computer	14
Bluetooth® Hands-free Phone System	14
Navigation System	17
HomeLink® Universal Transceiver	20



- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the **“Safety — Seats, seat belts and supplemental restraint system (section 1)”** and the **“Starting and driving (section 5)”** of your Owner’s Manual and the **“Audio System (section 3)”** of your Multi Function Display Owner’s Manual.



To view detailed instructional videos, go to www.nissanownersinfo.mobi/2014/gtr or snap this barcode with an appropriate barcode reader.

new system features

REARVIEW MONITOR

- When the shift lever is moved to the **R (REVERSE)** position, the Multi Function Display will automatically change to show the area directly behind the vehicle.
- The colored lines on the display screen indicate the approximate distances to objects:
 - Red 1.5 ft (0.5 m); Yellow 3 ft (1 m); Green 7 ft (2 m) and 10 ft (3 m).



For more information, refer to the **"Monitor system (if so equipped) (section 9)"** of your Multi Function Display Owner's Manual.

USB/IPOD® INTERFACE

- The USB jack is located in the center console under the arm rest.
- When a compatible USB memory device or iPod® is plugged into the USB jack, compatible audio or video files stored on the device can be played through the vehicle's audio system.
- The device can be operated using the vehicle's audio system, the touch screen or the steering wheel controls while connected to the vehicle.



For more information, refer to the **"Audio system (section 3)"** of your Multi Function Display Owner's Manual.

DVD PLAYER

- With this DVD player, you can play video files via a DVD or CD, providing images and sound from the front display.
- To view movies on the front display, stop the vehicle in a safe location, move the shift lever to the **P (PARK)** position and apply the parking brake.
- To reduce driver distraction, movies will not be shown on the front display while the vehicle is in any drive position.

For more information, refer to the **"Audio system (section 3)"** of your Multi Function Display Owner's Manual.



XM NAVTRAFFIC* AND XM NAVWEATHER* (if so equipped)

- Your vehicle's Navigation System is equipped with XM NavTraffic and XM NavWeather capabilities.
- XM NavTraffic enables your vehicle's Navigation System to display real-time traffic conditions, such as accidents or road construction and may provide a detour to help avoid congestion.
- XM NavWeather tracks nationwide weather information, provides real-time weather reports and automatically alerts you to severe weather conditions around the current vehicle location.

*XM Satellite Radio, NavTraffic and NavWeather are only available on vehicles equipped with optional XM Satellite subscription service.

For more information, refer to the **"Navigation (section 2)"** of your Multi Function Display Owner's Manual.



TIRE PRESSURE MONITORING SYSTEM (TPMS)

- A **TIRE LOW PRESSURE** warning message will appear in the vehicle information display **01** and the low tire pressure warning light **02** will illuminate when one or more tires are low on pressure and air is needed.



- The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mi (1.6 km) at moderate speeds.
- After tire pressures are adjusted, drive the vehicle at speeds above 16 MPH (25 km/h). The **TIRE LOW PRESSURE** warning message and low tire pressure warning light will disappear.
- Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light to illuminate. If the warning light illuminates, check the tire pressure in your tires.
- Check the tire pressure often and always prior to long distance trips.
- The Tire and Loading Information Label contains valuable information. Please refer to section 9, "Technical and consumer information" in your Owner's Manual for the location of the Tire and Loading Information Label.

For more information, refer to the "**Instruments and controls (section 2)**", the "**Starting and driving (section 5)**" and the "**Maintenance and do-it-yourself (section 8)**" of your Owner's Manual.

FUEL-FILLER CAP

- To tighten, turn the fuel-filler cap clockwise until a single click is heard. If the cap is not fully tightened, the Malfunction Indicator Light (MIL) **SERVICE ENGINE SOON** may illuminate.
- If the **SERVICE ENGINE SOON** light illuminates because the fuel-filler cap is loose or missing, tighten or reinstall the cap. The **SERVICE ENGINE SOON** light should turn off after a few driving trips.



For more information, refer to the "**Instruments and controls (section 2)**" and the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.

UNIQUE NOISES

- The GT-R is a high-performance vehicle and therefore has unique operating characteristics.
- You will hear more noises emitted from this vehicle than from a conventional passenger car.

For more information, refer to the **“GT-R Overview (section GTR)”** and the **“Starting and driving (section 5)”** of your Owner's Manual.

VEHICLE MODIFICATIONS

- Do not modify the vehicle with aftermarket parts or accessories.
- To maintain your vehicle's performance, only use genuine GT-R specific components.

For more information, refer to the **“GT-R Overview (section GTR)”** of your Owner's Manual.

VEHICLE DYNAMIC CONTROL (VDC)

- Always make sure the VDC is ON before driving the vehicle.
- The VDC OFF mode should ONLY be used briefly to help free the vehicle if stuck in snow or mud.

For more information, refer to the **“GT-R Overview (section GTR)”**, the **“Instruments and controls (section 2)”** and the **“Starting and driving (section 5)”** of your Owner's Manual.

DRY CARBON FIBER REAR SPOILER (if so equipped)

- Do not wax this type of rear spoiler.
- Waxing speeds up the deterioration by allowing water under the carbon layer.

For more information, refer to the **“GT-R Overview (section GTR)”**, and the **“Appearance and care (section 7)”** of your Owner's Manual.






first drive features

NISSAN INTELLIGENT KEY® SYSTEM

The NISSAN Intelligent Key® system allows you to lock or unlock the vehicle, open the trunk and start the engine.

NOTE: It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

 


- The operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, push either door handle request switch **01** once or press the  button **02** on the keyfob.
- To unlock the vehicle, perform one of the following procedures:
 - Push either door handle request switch **01** once; the corresponding door will unlock. Push the door handle request switch **01** again within 1 minute; all other doors will unlock, or
 - Press the  button **03** on the keyfob to unlock the driver's side door. Press the  button again; all other doors will unlock.
- To release the trunk lid, press the  **HOLD** button **04** for more than 1 second. Lift the trunk lid to access the trunk.
- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button **05** for more than 1 second. Once activated, the panic alarm and headlights will stay on for a period of time.



NISSAN INTELLIGENT KEY® BATTERY DISCHARGE

- If the battery in the Intelligent Key is almost discharged, the guide light **06** of the Intelligent Key port blinks and the Intelligent Key insertion indicator **07** is displayed in the vehicle information display.
- To start the engine under these circumstances, insert the Intelligent Key into the key port with the mechanical key facing backward until it latches into place. Then push the ignition switch to start the engine.
- To remove the Intelligent Key from the port, push the ignition switch to turn the engine off and then pull the Intelligent Key out of the port.
- The Intelligent Key port does not charge the Intelligent Key battery. If you see the Intelligent Key warning light **08**, replace the battery in the Intelligent Key.

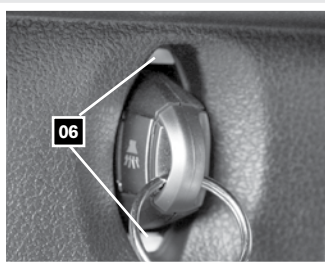

NOTE: Do not insert the mechanical key or other objects into the key port because it will damage the key port.




For more information, refer to the “Pre-driving checks and adjustments (section 3)”, “Starting and driving (section 5)” and the “Maintenance and do-it yourself (section 8)” of your Owner's Manual.

 
To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

TRUNK LID RELEASE

Use one of the following methods to unlatch the trunk, then raise the trunk lid to open:

- Push the trunk open request switch **01** under the trunk handle for more than 1 second.
- Press the trunk button  on the NISSAN Intelligent Key® for more than 1 second.
- From inside the vehicle, push down on the trunk lid release switch **02** located on the left side of the instrument panel.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

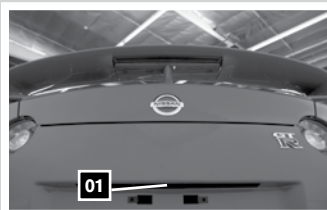


SEAT ADJUSTMENTS

- To slide the seat forward or backward, push the control switch **01** forward or backward. To adjust the angle of the seatback, rotate the knob **01** forward or backward.

SEAT LIFTER (driver’s seat)

 - To raise or lower the rear portion of the seat, move the control switch **01** up or down. To raise or lower the front portion of the seat, push the top or bottom of the switch **02**.

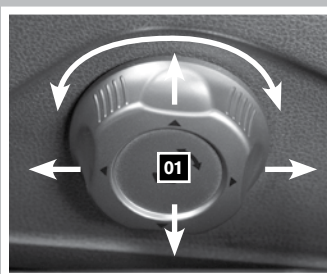

REAR SEAT ENTRY (if so equipped)

- Lift up the lever **03** and tilt the seatback forward. Push the seat adjustment control switch **01** forward to the desired position. To return the seat to its original position, tilt the seatback rearward and push the seat adjustment control switch **01** backward or forward.



For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.





first drive features

OUTSIDE MIRROR CONTROL SWITCH

- To select the right or left side mirror, turn the control switch **01** right or left.
- To adjust the mirror angle, move the control switch **01** up, down, right or left.
- To prevent accidentally moving the mirror, turn and set the switch to the middle “neutral” position.



POWER FOLDING OUTSIDE MIRRORS

- Push the switch **02** to the  position to fold the outside rearview mirrors and push the switch **02** to the  position to unfold the outside rearview mirrors.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner's Manual.

STARTING/STOPPING THE ENGINE

- Depress the brake pedal.
- Press the ignition switch **START/STOP** button to start the engine.

NOTE: It is important to make sure the NISSAN Intelligent Key® is with you (that is, in your pocket or purse).

TURNING THE ENGINE OFF

 

- Move the shift lever to the **P (PARK)** position and apply the parking brake.
- Press the ignition switch **START/STOP** button to turn the engine off.


For more information, refer to the “**Starting and driving (section 5)**” of your Owner's Manual.



HEADLIGHT CONTROL SWITCH

HEADLIGHT CONTROL

 - Turn the headlight control switch to the  position **01** to turn on the front parking, side marker, tail, license plate and instrument panel lights. Turn the switch to the  position **02** to turn on the headlights.

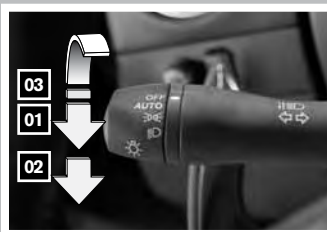


To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.


AUTOLIGHT SYSTEM

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **03** then push the ignition switch to **ON**. To deactivate the autolight system, turn the headlight control switch to the **OFF**, **01** or **02** position **02**.

 HIGH BEAM

- Push the headlight control switch forward **04** to select the high beam function. The blue indicator light  illuminates in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light goes off.
- Pull and release the headlight control switch **05** to flash the headlight high beams on and off.

 For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

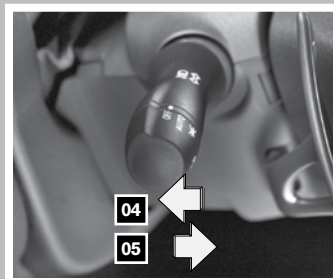

WINDSHIELD WIPER AND WASHER SWITCH

- The ignition switch must be in the **ON** position to activate the windshield wipers.
- Move the lever to the following positions to operate the windshield wipers:

 
01 Mist (**MIST**) – Push the lever up for one sweep of the wipers.

02 Speed-Sensing Intermittent (**INT**) – Push the lever down. Wipers operate intermittently and wiper speed varies in accordance with vehicle speed. Intermittent operation can be further adjusted by twisting the time control ring **03**.

04 Low Speed (**LO**) – Push the lever down for continuous low-speed operation of wipers.

05 High Speed (**HI**) – Push the lever down for continuous high-speed operation of wipers.

06 Pull the lever toward you to activate the washer. The wipers will operate several times.

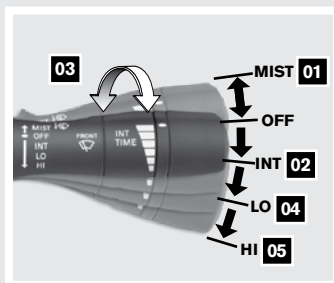

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.



AUTOMATIC CLIMATE CONTROLS

01 AUTO BUTTON/DRIVER'S SIDE TEMPERATURE CONTROL DIAL

- The **AUTO** mode can be used year round. Press the **AUTO** button and the system will automatically control the inside temperature (automatic cooling and/or dehumidified heating). Air flow distribution and fan speed are also controlled automatically.
- To set the desired temperature, turn the temperature control dial left for cooler air or right for warmer air.

02 FAN SPEED CONTROL DIAL/OFF BUTTON

- Turn the dial to the left to decrease fan speed or to the right to increase fan speed. Press the **OFF** button to turn the system off and to return to automatic control of the fan speed.

03 DUAL BUTTON/PASSENGER'S SIDE TEMPERATURE CONTROL DIAL





- Press the **DUAL** button to operate the passenger's side temperature controls. This button allows the passenger to independently adjust temperature from driver's side control.
- To set the desired temperature, turn the passenger's side temperature control dial left for cooler air or right for warmer air.

04 A/C BUTTON


- Press the **A/C** button on the instrument panel to manually turn the A/C on or off.
- This feature not only provides cooler air, but it also dehumidifies the air to help avoid window fogging in cool or cold conditions.

05 MODE BUTTON


- Press the **MODE** button to select the following air flow outlets:

-  Air flows from the center and side vents.
-  Air flows from the center, side, and foot vents.
-  Air flows mainly from the foot vents.
-  Air flows from the defroster and foot vents.




06 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the defroster control button  to turn the system on. The A/C automatically turns on when the defroster mode is selected. This feature removes humidity from the air.
- Turn the driver's side temperature control dial **01** left or right to set the desired temperature.
- To set the defroster on high, turn the fan speed control dial **02** to the right until fan speed increases.


07 DEFROSTING/DEFOGGING REAR WINDOW AND OUTSIDE HEATED MIRROR

- Push the rear window defroster switch  to turn the system on or off.
- This function automatically turns off in approximately 15 minutes.

08 AIR RECIRCULATION BUTTON

- Press the air recirculation button  to recirculate interior air inside the vehicle.
- This setting can be used to assist in avoiding outside odors and in cooling down the vehicle's interior.
- The air recirculation mode can only be selected if the air flow mode control is in the  or  positions.

09 OUTSIDE AIR CIRCULATION BUTTON

- Press the outside air circulation button  to bring fresh outside air into the vehicle.
- This setting helps defog the vehicle's windows.

For more information, refer to the “Instruments and controls (section 2)” of your Owner's Manual and the “Heater and air conditioner (section 5)” of your Multi Function Display Owner's Manual.



FM/AM/XM* SATELLITE RADIO WITH CD/DVD PLAYER

01 VOL/ON-OFF CONTROL KNOB

- Press the **VOL/ON-OFF** control knob to turn the system on or off.
- Turn the knob right to increase or left to decrease the volume.

02 TUNE/FOLDER/AUDIO CONTROL KNOB

- To manually tune the radio, turn the **TUNE/FOLDER/AUDIO** knob left or right.

03 SEEK/CAT AND TRACK BUTTONS

- To scan quickly through each broadcasting station, press the **SEEK/CAT** button or the **TRACK** button to stop at the previous or next broadcast station.
- For XM Satellite Radio, to switch to the first channel of the previous or next category, press the **SEEK/CAT** button or the **TRACK** button.
- To change tracks on a CD, press the **SEEK/CAT** button or the **TRACK** button.
- To rewind or fast forward a track on a CD, press and hold the **SEEK/CAT** button or the **TRACK** button.

*XM Satellite Radio is only available on vehicles equipped with optional XM Satellite Radio subscription service.

To view detailed instructional videos regarding these and other features,
please go to www.nissanownersinfo.mobi.

first drive features

04 STATION PRESET BUTTONS

- Twelve stations can be set for the FM band, six for the AM band and eighteen for SiriusXM Satellite Radio.
- To store a station in a preset, you must first select a radio band by pressing the **FM•AM** button **05** or **SAT** button **06**, then tune to the desired AM, FM or SiriusXM Satellite Radio station.
- Then press and hold the desired station preset button (**1-6**) until the sound is briefly muted. The station indicator will then display and the sound will resume. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then press the corresponding station select button (**1-6**).

For more information, refer to the “**Audio system (section 3)**” of your Multi Function Display Owner’s Manual.



CLOCK SET/ADJUSTMENT

Press the **SETTING** button **01**, then select the “Clock” key using the center dial and press the **ENTER** button **02** to access the following clock settings:

 


- On-screen Clock – When this feature is turned to **ON**, a clock is always displayed in the upper right corner of the Multi Function Display screen. The clock is automatically adjusted by the GPS system.
- Clock Format – Choose either the 12-hour clock display or the 24-hour clock display.
- Offset Adjust – Adjust the time by increasing or decreasing per minute.
- Daylight Savings Time – Turn this item to **ON** for daylight savings time application.
- Time Zone – Choose the time zone.

For more information, refer to the “**Other settings (section 7)**” of your Multi Function Display Owner’s Manual.

CRUISE CONTROL

- The cruise control system enables you to set a constant cruising speed above 25 MPH (40 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **ON/OFF** switch **01**. The **CRUISE** indicator light in the instrument panel will illuminate.
- To set cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **02** and release. The **SET** indicator light in the instrument panel will illuminate. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **RES/ACCEL** switch **03**. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **02**. Release the switch when the vehicle slows to the desired speed.
- To turn cruise control off without erasing the set speed, push the **CANCEL** switch **04**. The **SET** indicator light in the instrument panel will turn off.
- To turn off cruise control, push the **ON/OFF** switch **01**. Both the **CRUISE** indicator light and the **SET** indicator light in the instrument panel will turn off.

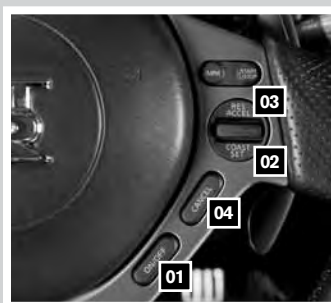


For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

 FUEL-FILLER DOOR



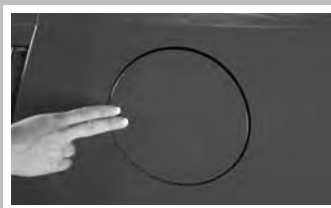

The fuel-filler door is located on the right, rear side of the vehicle.

- When the doors of the vehicle are locked or unlocked, the fuel-filler door is automatically locked or unlocked at the same time.
- Push one of the power door lock switches to unlock the fuel-filler door from inside the vehicle or push the door handle request switch to unlock the fuel-filler door from outside the vehicle.
- To open the fuel-filler door, press the left side of the door to release the door lock and pull the door open.



For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

DRIVE COMPUTER

- The drive computer is located in the vehicle information display **01** on the bottom of the tachometer.
- Press the  button **02** to cycle through the following modes on the vehicle information display:
 - **MPG** – Displays the current fuel consumption.
 - **MPH** – Displays the current vehicle speed.
 - **CRUISE/MPH** – Displays the set cruise control status.
 - **MPG/MPH** – Displays the average fuel economy and average speed since the last reset.
 - **TIME/MILES** – Displays the elapsed time and distance driven since the last reset.
 - **RANGE** – Displays the estimated distance the vehicle can be driven before refueling.
 - **OUTSIDE TEMP** – Displays the outside air temperature.
 - **SETTING** – Allows you to set reminders or preferences for alerts, maintenance intervals or language displays in the system.
 - Press the  button **03** to cycle through the various **SETTING** modes.
 - Press the  button **02** to choose the selected mode.
 - **WARNING** – If there are any.
- To reset the trip odometer and elapsed time press and hold the  button for more than 1 second.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

 


BLUETOOTH® HANDS-FREE PHONE SYSTEM


- With an overhead microphone and sound transmitted through the audio system speakers, the Bluetooth® Hands-free Phone System utilizes Bluetooth® wireless technology and voice recognition to provide hands-free cellular phone communication.
- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.*

SYSTEM OPERATING TIPS

- The “Help” command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing HVAC vents away from the ceiling.

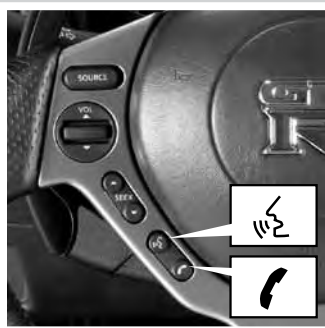

 *Some jurisdictions prohibit the use of cellular telephones while driving.


- Say commands after the tone, or press the  button to say a command at any time.
- Speak naturally without long pauses and without raising your voice.
- When speaking phonebook names, please be aware some phones require the last name to be spoken before the first name. For example, "Michael Smith" may be spoken as "Smith Michael".
- To cancel a voice recognition session, simply wait 5 seconds, say "Exit".
- To increase or decrease the volume of the voice prompts, push the volume control switches **+** or **-** on the steering wheel or turn the control dial on the audio system while the audio system is responding.
- If the Voice Recognition system does not recognize your voice commands, train the system using the Voice Adaptation Mode. See your Owner's Manual for detailed information.
- For recommended phones and detailed instructions, please visit **www.nissanusa.com/bluetooth**.

CONNECTING YOUR PHONE

- Before using the hands-free feature, you need to set-up or connect the system to recognize your compatible cellular phone(s). Five Bluetooth®-enabled phones can be connected. After set-up, the system automatically connects with a connected phone when the ignition is in the **ACC** or **ON** position, as long as the phone is on and in the vehicle.

CONNECTING PROCEDURE

NOTE: The vehicle must be stationary when connecting the phone.

1. Press the **PHONE** button **01** on the control panel or press the  button on the steering wheel.



2. Touch the "Connect Phone" key on the touch-screen.



3. A pop up box will appear on the screen, prompting you to confirm that the connection is for the phone system. Select the "Yes" key.



4. Initiate connecting from the phone.

- The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible phones, please visit **www.nissanusa.com/bluetooth**.




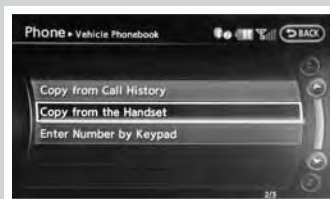 
system guide

- When prompted for a PIN code, enter “1234” from the handset. (The PIN code is assigned by NISSAN and cannot be changed.)


5. When connecting is complete, the screen will return to the Phone menu display.

PHONEBOOK SETUP

- Depending on your cell phone, the system may automatically download your cell phone's entire phonebook to the vehicle's Bluetooth® system.
- If the phonebook does not download automatically, 40 entries can be individually downloaded.
- To manually download entries:
 1. Press the  button and select the “Vehicle Phonebook” key.
 2. Select the “Add New” key at the top of the display. There are different methods to input a phone number. Select one of the following options:
 - “Copy from Call History” to save a number from the Outgoing, Incoming or Missed Calls lists.
 - “Copy from the Handset” to save a number that has been downloaded from your handset to the vehicle.
 - “Enter Number by Keypad” to input the number and name manually.




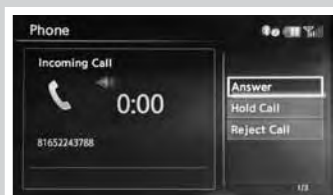 
MAKING A CALL

- To make a call, follow this procedure:
 1. Press the **PHONE** button on the control panel or press the  button on the steering wheel. The “Phone” screen will appear on the control panel display.
 2. Select the “Handset Phonebook”, “Vehicle Phonebook”, “Call History” or “Dial Number” key.
 3. Select the desired entry from the list.
 4. Select “Call” to start dialing the number.



RECEIVING/ENDING A CALL

- To accept the call, press the  button on the steering wheel or touch the "Answer" key.
- To reject the call, touch the "Reject Call" key.



- To hang-up, press the  button or touch the "Hang-Up" key.

For more information, refer to the "**Bluetooth® Hands-Free Phone System (section 4)**" of your Multi Function Display Owner's Manual.



NAVIGATION SYSTEM

- The Navigation System starts up when the ignition switch is placed in the **ACC** or **ON** position. To help ensure safe driving, some functions are grayed out or muted while driving. Park the vehicle in a safe location and then operate the Navigation System.

STORING YOUR HOME IN YOUR ADDRESS BOOK

- Press the **DEST** button.
- Touch the "Home (Add New)" key. If you have already stored your home this key may not appear.



system guide

- When you touch the “Home (Add New)” key, a confirmation message is displayed. Touch the “Yes” key.
- Ensure the correct region is selected. To change region, touch the “Change Region” key and select the appropriate region.
- Touch the “Street Address” key. A character input screen is displayed.
- Enter the street number of your home, then touch the “OK” key.
- Enter your street name, then touch the “OK” key. The map screen is displayed.
- Press the directional buttons to adjust your home location, if necessary. After adjusting the location, touch the “ENTER” key.
- Your home is displayed at the center of the map. A confirmation message is displayed, and the system sets your home as the destination.
- Press the **MAP** button to return to the current location map screen. The home icon is displayed on the screen.

SETTING A STREET ADDRESS AS A DESTINATION

- Press the **DEST** button.
- Touch the “Street Address” key. A character input screen is displayed.



- Enter the house number; when finished touch the “OK” key. If you do not know the house number, touch the “No House #” key.



 
- Enter the name of the street. After finishing the entry, touch the “List” key. A list of possible street addresses is displayed.



- Touch the correct address of the destination from the list. You might need to touch the “UP” or “DOWN” key to find the preferred street address key.



- The selected destination is displayed at the center of the map. Touch the “Start” key after confirming the location of the displayed destination. The system sets the destination to the selected location and starts calculating a route.

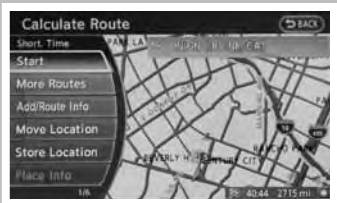

For more information, refer to the “**Navigation (section 2)**” of your Multi Function Display Owner’s Manual.



HOMELINK® UNIVERSAL TRANSCEIVER

- The HomeLink® System can learn and consolidate the functions of up to three different hand-held transmitters, operating items such as garage doors, property gates, outdoor and indoor lights or alarm systems.

For more information, refer to the **"Instruments and controls (section 2)"** of your Owner's Manual, the HomeLink® website at www.homelink.com or call 1-800-355-3515.

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. See your Owner's Manual, which contains important safety warnings and information about the operation and maintenance of your vehicle, for complete details. Nissan North America, Inc. reserves the right to make changes, at any time, without prior notice, in prices, colors, materials, equipment, specifications, and models and to discontinue models or equipment. Due to continuous product development and other pre- and post-production factors, actual vehicle, materials and specifications may vary. Some vehicles are shown with optional equipment. See the actual vehicle for complete accuracy. Specifications, options and accessories may differ in Hawaii, U.S. territories and other countries. For additional information on availability, options or accessories, see your NISSAN dealer or contact Nissan North America, Inc.



To view detailed instructional videos,
go to www.nissanownersinfo.mobi/2014/gtr
or snap this barcode with an appropriate barcode reader.

