



2018  
QUICK REFERENCE GUIDE





- |   |  |  |  |
|---|--|--|--|
| <b>1</b> Instrument Brightness Control*   | <b>7</b> Vehicle Information Display   | <b>12</b> Trunk Release                                  | <b>17</b> Automatic Climate Controls                       |
| <b>2</b> Next / Enter Switches            | <b>8</b> Low Tire Pressure Warning Light                                       | <b>13</b> Intelligent Key Port                           | <b>18</b> VDC, Transmission and Suspension Setup Switches* |
| <b>3</b> Drive Computer                   | <b>9</b> Wiper and Washer Switch   | <b>14</b> Hood Release*                                  | <b>19</b> Front Passenger Air Bag Status Light*            |
| <b>4</b> Outside Mirror Control Switch    | <b>10</b> Audio Controls   | <b>15</b> Steering Wheel Tilt and Telescopic Adjustment* |  |
| <b>5</b> Headlight and Turn Signal Switch | <b>11</b> Steering Wheel Switches for Cruise Control / Bluetooth® / Navigation | <b>16</b> Multi Function Display / Audio System          |  |
| <b>6</b> Paddle Shifters*                 |  |  |  |

\*See your Owner's Manual and Multi Function Display Owner's Manual for information.

# TABLE OF CONTENTS

## NEW SYSTEM FEATURES

USB (Universal Serial Bus) Connection Port/Aux Jack and iPod® Interface .....	2
SiriusXM Travel Link and SiriusXM Traffic .....	2
NissanConnect® Services Powered by SiriusXM® (if so equipped).....	3
RearView Monitor .....	4
Hands-free Text Messaging Assistant .....	5
Apple Carplay™ .....	6

## ESSENTIAL INFORMATION

Tire Pressure Monitoring System (TPMS) .....	8
Unique Noises.....	8
Fuel-filler Door/Cap .....	9
Vehicle Modifications .....	9
Vehicle Dynamic Control (VDC) .....	9
Carbon-based Parts (if so equipped) .....	10
Clock Set/Adjustment .....	10

## FIRST DRIVE FEATURES

Nissan Intelligent Key® System .....	11
Trunk Lid Release .....	12
Seat Adjustments .....	12
Outside Mirror Control Switch .....	13
Starting/Stopping the Engine .....	13
Headlight Control Switch .....	13
Wiper and Washer Switch .....	14
Heater and Air Conditioner (automatic) .....	15
AM/FM/SiriusXM® Satellite Radio with CD Player.....	16
Cruise Control.....	18

## SYSTEM GUIDE

Drive Computer .....	19
Bluetooth® Hands-free Phone System .....	20
• System Operating Tips .....	20
Bluetooth® Streaming Audio.....	23
Navigation System.....	24
HomeLink® Universal Transceiver.....	26



Additional information about your vehicle is also available in your Owner's Manual, Multi Function Display Owner's Manual and at [www.NissanUSA.com](http://www.NissanUSA.com).



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the "Hands-Free Phone (section 4)" of the Multi Function Display Owner's Manual and the "Safety — Seats, seat belts and supplemental restraint system (section 1)" and the "Starting and driving (section 5)" of your Owner's Manual.

# NEW SYSTEM FEATURES

## USB (Universal Serial Bus) CONNECTION PORT/AUX JACK AND IPOD® INTERFACE

- Two USB ports and the AUX input jack are located in the center console box.
- When a compatible USB memory device or iPod® is plugged into the USB port, compatible audio or video files stored on the device can be played through the vehicle's audio system.
- The device can be operated using the vehicle's audio system, the touch-screen or the steering wheel controls while it is connected to the vehicle.
- For Apple Carplay™ USB1 should be selected.

 


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Audio system (section 3)"** of your Multi Function Display Owner's Manual.

## SiriusXM TRAVEL LINK AND SiriusXM TRAFFIC

- Your vehicle's Navigation System is equipped with SiriusXM Travel Link and SiriusXM Traffic capabilities.
- Touch the **"i Info"** key to access SiriusXM Travel Link and SiriusXM Traffic.
- SiriusXM Travel Link provides access to real-time weather information and forecasts, nearby fuel prices, movie listings, sports scores and stock quotes.
- SiriusXM Traffic provides information that may help to avoid delays due to traffic incidents. Traffic jams, roadwork, road closures around the current location, etc., are represented graphically on the map by icons depicting the nature of the event. Incidents on the route are automatically displayed as they are approached.

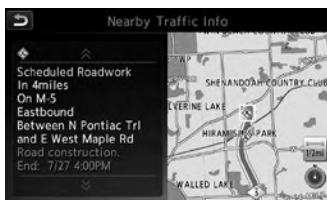

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Information (section 5)"** of your Multi Function Display Owner's Manual.


## NISSANCONNECT® SERVICES POWERED by SiriusXM® (if so equipped)

NissanConnect® Services is a collection of security and convenience services that add innovation to your daily drive.

- To enroll in NissanConnect Services, create an account or log into your Nissan Owner Portal with your Vehicle Identification Number (VIN). Under the NissanConnect Services tab, select the red button next to Manage Subscription. Follow the prompts to enroll in NissanConnect Services. Next, download the NissanConnect Services companion and log into it using your Nissan Owner Portal ID and password.

For full details on NissanConnect Services or to enroll your vehicle, please visit **[www.NissanUSA.com/connect](http://www.NissanUSA.com/connect)** or call 855-426-6628.

Here is a quick overview of some of the features that may be available for your vehicle. A full description of these and other NissanConnect Services can be found in your Multi Function Display Owner's Manual.

- Automatic Collision Notification, a service that generates an automatic connection between the vehicle and the Emergency Response Center when the vehicle has been involved in an accident that was severe enough to deploy the air bags.
- Emergency Call, which connects you to a NissanConnect Services Specialist who will assist in the dispatch of emergency services to the vehicle's location. To use this feature, press the **SOS** button **1** on the overhead console. The **SOS** button **1** should only be used in emergency situations.
- Roadside Assistance, which dispatches roadside assistance to the vehicle's location in non-emergency situations. Roadside Assistance can be accessed by touching the  headset icon **2** on the map screen, via NissanConnect Services Companion app or by calling the Roadside Assistance provider directly.
- Stolen Vehicle Locator, a service that works in coordination with law enforcement agencies to assist in the recovery of a stolen vehicle.
- Remote Door Lock/Unlock, for use when you forget to lock your car or if you need to open it and don't have the keys. To use this feature, log into the NissanConnect Services companion app or website or contact a NissanConnect Services Response Specialist.
- Journey Planner, with which you can send a route with a destination and up to five way points directly to the vehicle.
- Boundary Alert, a feature that allows you to monitor the movement of your vehicle in and out of specified regions you have set on the Monitoring section of the NissanConnect Services web portal or companion app, and



# NEW SYSTEM FEATURES

- Speed Alert, which sends you alerts when your vehicle speed exceeds a threshold you have set on the web portal or companion app.
- Alarm Notification – This system will notify you when the factory-installed vehicle alarm system has been activated.
- Maintenance Alert – Receive notifications via a selected method of a vehicle system malfunction that triggers instrument panel warning lights.
- Connected Search – Select “Connected Search” from the Destination menu on the vehicle’s Navigation System to conduct a Point Of Interest (POI) search within a certain distance of the vehicle’s location.
- Valet Alert – Use Valet Alert to set up a 0.2-mile radius around your vehicle. Activate alerts via the NissanConnect Services companion app or website.
- Curfew Alert – Specify curfew limits via the NissanConnect Services companion app or website and be notified via a selected method if curfew is violated.

To access these features in your vehicle:

- Touch the “Info” key **3** on the control panel.
- Touch the NissanConnect Services key **4**.

Please see your Owner’s Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “**Information (section 5)**” of your Multi Function Display Owner’s Manual.



## REARVIEW MONITOR


- When the shift lever is moved to the **R (REVERSE)** position, the Multi Function Display will automatically change to show the area directly behind the vehicle.
- The colored lines on the display screen indicate the approximate distances to objects:
  - Red 1.5 ft (0.5 m); Yellow 3 ft (1 m); Green 7 ft (2 m) and 10 ft (3 m).



Please see your Owner’s Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “**Monitor system (section 9)**” of your Multi Function Display Owner’s Manual.

## HANDS-FREE TEXT MESSAGING ASSISTANT\*

- This text messaging feature allows for sending and receiving text messages through the vehicle's interface.
- Using predefined or custom messages, send a text to a name or phone number d in your Bluetooth® Hands-free Phone System.
- Once enabled, the text message, sender and delivery time are shown on the control panel display when the vehicle speed is less than 5 mph (8 km/h).
- Text messages have the option of being read aloud at all vehicle speeds.
- Once the vehicle is in motion, text messages can only be replied to using the Voice Recognition  button on the steering wheel.
- Text messages can be created manually when the vehicle is not in motion.
- Custom text messages must be created in advance.
- Many cellular phones may require special permission to enable text messaging. Check the cellular phone's screen during Bluetooth® pairing. For some cellular phones, you may need to enable "Notifications" in the cellular phone's Bluetooth® menu for text messages to appear on the touch-screen display. For more detailed information and instructions, refer to your cellular phone's Owner's Manual.
- Text message integration requires that the cellular phone support Message Access Profile (MAP) for both receiving and sending text messages. Some cellular phones may not support all text messaging features. Please see [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth) for compatibility information as well as your device's Owner's Manual.



\* Laws in some jurisdictions may restrict the use of "Text-to-Speech". Some of the applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

 
For more information, refer to the **"Hands-Free Phone (section 4)"** of the Multi Function Display Owner's Manual.

# NEW SYSTEM FEATURES





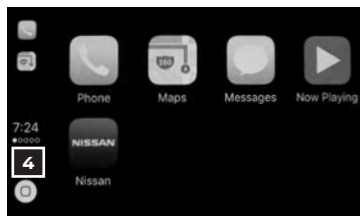 


## APPLE CARPLAY™

- The in-vehicle system can be used as a controller for some of the iPhone® functions through Apple CarPlay™.
- If your iPhone® is compatible, the Apple CarPlay™ can be used.
  - Select the  **MENU** key **1** on the screen.
  - Select “Apple CarPlay™” **2** from the menu.
- Before using Apple CarPlay™, confirm the following settings on your iPhone®:
  - Turn on “CarPlay” on your iPhone®.
  - Select “Settings” > “General” > “Restrictions” and turn off “Restrictions” or turn on CarPlay.
  - Turn on “Siri®” on your iPhone®. Select “Settings” > “General” > “Siri®” and turn on Siri®.
- To connect your CarPlay capable iPhone® to the system, you must connect the iPhone® cable to USB1.
  - Depending on the setting, the “Startup Information” screen will appear.
  - Touch “Yes” to use Apple CarPlay™.
  - The Apple CarPlay™ top menu screen will appear, and the iPhone® functions displayed on the screen can be operated by the in-vehicle system.
  - To return to the Apple CarPlay™ top menu screen after operation, touch the  key **4** on the lower left corner of the Apple CarPlay™ screen.





- To exit the Apple CarPlay™ screen and display the other screens, press the  **MENU** key **1** or one of the other buttons on the control panel and touch the preferred menus.
- To return to the Apple CarPlay™ screen, touch the “**i** Info” key **3** on the Launch Bar and then touch the Apple CarPlay™ key **2**.
- When connected to Apple CarPlay™, Siri® Eyes Free operation can also be accessed.
- There are two ways to start a Siri® Eyes Free session.
  1. Press and hold the  button on the steering wheel.
  2. Touch and hold the  key **4** at the lower left corner of the Apple CarPlay™ screen.
- Press the  button on the steering wheel or touch the  key **4** at the lower left corner of the Apple CarPlay™ screen to end Siri® Eyes Free operation.
- Keep the interior of the vehicle as quiet as possible. Close the windows to eliminate the surrounding noises (traffic noises, vibration sounds, etc.), which may prevent the system from recognizing the voice commands correctly.
- Some Siri® Eyes Free functions may not be available during driving.
- For functions that can be used with Siri® Eyes Free, please refer to the Apple® website.
- Nissan Phone menu and Nissan Voice Recognition cellular phone commands will not be available when Apple CarPlay™ is active.
- Always update your phone to use the latest level iOS available.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “**Getting started (section 2)**” and the “**Information (section 5)**” of your Multi Function Display Owner's Manual.

# ESSENTIAL INFORMATION

## TIRE PRESSURE MONITORING SYSTEM (TPMS)

### ■ A TIRE LOW PRESSURE VISIT DEALER

warning message will appear in the vehicle information display **1** and the low tire pressure warning light **2** will illuminate when one or more tires are low in pressure and air is needed.

- The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mi (1.6 km) at moderate speeds.

### ■ After tire pressures are adjusted, drive the vehicle at speeds above 16 mph (25 km/h). The **TIRE LOW PRESSURE VISIT DEALER** warning message and low tire pressure warning light **2** will extinguish.

### ■ When the low tire pressure warning light **2** flashes for 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked. It is recommended you visit a Nissan dealer for this service.

### ■ Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light **2** to illuminate. If the warning light **2** illuminates, check the tire pressure in your tires.

- Check the tire pressure often and always prior to long distance trips.

### ■ NISSAN recommends refilling with nitrogen for maximum tire performance. If nitrogen is not available, compressed air may be safely used under normal driving conditions.

### ■ The Tire and Loading Information label contains valuable information. Please refer to the "Technical and consumer information (section 9)" of your Owner's Manual for the location of the Tire and Loading Information label.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**", the "**Starting and driving (section 5)**" and the "**Maintenance and do-it-yourself (section 8)**" of your Owner's Manual.



## UNIQUE NOISES

- The GT-R is a high-performance vehicle that has unique operating characteristics.
- You will hear more noises emitted from this vehicle than from a conventional passenger car.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**GT-R Overview (section GTR)**" and the "**Starting and driving (section 5)**" of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to [www.nissanownersinfo.mobi](http://www.nissanownersinfo.mobi).

## FUEL-FILLER DOOR/CAP

The fuel-filler door is located on the passenger's side toward the rear of the vehicle.

- When the doors of the vehicle are locked or unlocked, the fuel-filler door is automatically locked or unlocked at the same time.
- Push one of the power door lock switches to unlock the fuel-filler door from inside the vehicle, or push the door handle request switch to unlock the fuel-filler door from outside the vehicle.
- To open the fuel-filler door, press the left side of the door to release the door lock then pull the door open.
- To tighten, turn the fuel-filler cap clockwise until a single click is heard. If the cap is not fully tightened, the Malfunction Indicator Light (MIL) SERVICE ENGINE SOON may illuminate.
- If the SERVICE ENGINE SOON light illuminates because the fuel-filler cap is loose or missing, tighten or reinstall the cap. The SERVICE ENGINE SOON light should extinguish after a few driving trips.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Instruments and controls (section 2)"** and the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.

---

## VEHICLE MODIFICATIONS

- Do not modify the vehicle with aftermarket parts or accessories.
- To maintain your vehicle's performance, only use genuine GT-R specific components.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"GT-R Overview (section GTR)"** of your Owner's Manual.

---

## VEHICLE DYNAMIC CONTROL (VDC)

- Always make sure that the VDC is on before driving the vehicle.
- The VDC OFF mode should ONLY be used briefly to help free the vehicle if it is stuck in snow or mud.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"GT-R Overview (section GTR)"**, the **"Instruments and controls (section 2)"** and the **"Starting and driving (section 5)"** of your Owner's Manual.

# ESSENTIAL INFORMATION

## CARBON-BASED PARTS (if so equipped)

- Do not wax carbon parts, such as the rear diffuser or the optional dry carbon fiber rear spoiler.
- Waxing speeds up deterioration by allowing water under the carbon layer.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



For more information, refer to the "GT-R Overview (section GTR)" and the "Appearance and care (section 7)" of your Owner's Manual.

## CLOCK SET/ADJUSTMENT

- To adjust the time and the appearance of the clock on the display:

1. Press the  **MENU** button on the control panel.
2. Touch the "⚙ Settings" key on the Launch Bar.
3. Touch the "Clock" key.



- The following settings can be adjusted:
  - **On-screen Clock:** The clock in the upper right corner of the display can be turned ON or OFF.
  - **Clock Format (24h):** The clock can be set to 12 hours or 24 hours.
  - **Offset (hour):** The time can be adjusted by increasing or decreasing per hour.
  - **Offset (min):** The time can be adjusted by increasing or decreasing per minute.
  - **Daylight Savings Time:** The application of Daylight Savings Time can be turned ON or OFF.
  - **Time Zone:** Adjust the time zone. Choose a time zone from the available list.
- Touch the  key or press the  **BACK** button on the Display Commander to return to the previous screen.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started (section 2)" of your Multi Function Display Owner's Manual.

# FIRST DRIVE FEATURES

## NISSAN INTELLIGENT KEY® SYSTEM

 
The Nissan Intelligent Key® system allows you to lock or unlock the vehicle and open the trunk. It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

- The operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, push either door handle request switch **1** once or press the **L** button **2** on the key fob.
- To unlock the vehicle, perform one of the following procedures:
  - Push either door handle request switch **1** once; the corresponding door will unlock. Push the door handle request switch **1** again within 1 minute; all other doors will unlock, or
  - Press the **L** button **3** on the key fob to unlock the driver's side door. Press the **L** button **3** again; all other doors will unlock.
- To release the trunk lid, press the  button **4** for more than 1 second. Lift the trunk lid to access the trunk.
- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button **5** for more than 1 second. Once activated, the panic alarm and headlights will stay on for a period of time.



## NISSAN INTELLIGENT KEY® BATTERY DISCHARGE

- If the battery in the Intelligent Key is almost discharged, the guide light **6** of the Intelligent Key port blinks and the Intelligent Key insertion indicator **7** is displayed in the vehicle information display.
- To start the engine under these circumstances, insert the Intelligent Key into the key port with the mechanical key facing backward until it latches into place. Then push the ignition switch to start the engine.
- To remove the Intelligent Key from the port, push the ignition switch to turn the engine off and then pull the Intelligent Key out of the port.
- The Intelligent Key port does not charge the Intelligent Key battery. If you see the Intelligent Key warning light **8**, replace the battery in the Intelligent Key.
- Do not insert the mechanical key or other objects into the key port because they will damage the key port.

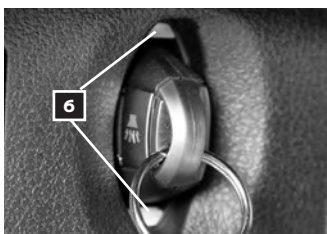

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.


For more information, refer to the "Pre-driving checks and adjustments (section 3)", the "Starting and driving (section 5)" and the "Maintenance and do-it-yourself (section 8)" of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to [www.nissanownersinfo.mobi](http://www.nissanownersinfo.mobi).

# FIRST DRIVE FEATURES

## TRUNK LID RELEASE

Use one of the following methods to unlatch the trunk then raise the trunk lid to open:

- Push the trunk open request switch **1** under the trunk handle for more than 1 second.
- Press the trunk button  on the Nissan Intelligent Key® for more than 1 second.
- From inside the vehicle, push the trunk lid release switch **2** located on the left side of the instrument panel.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.



## SEAT ADJUSTMENTS

- To slide the seat forward or backward, push the control switch **1** forward or backward. To adjust the angle of the seatback, rotate the knob **1** forward or backward.

### SEAT LIFTER (driver's seat)

- To raise or lower the rear portion of the seat, move the control switch **1** up or down. To raise or lower the front portion of the seat, push the top or bottom of the switch **2**.



### REAR SEAT ENTRY

- Lift the lever **3**, hold the knob **4** and tilt the seatback forward. Push the seat adjustment control switch **1** forward to the desired position. To return the seat to its original position, tilt the seatback rearward and push the seat adjustment control switch **1** backward or forward.



### HEATED SEATS

Your vehicle's front seats have built-in heaters that are operated by a switch found on the side of the seat.

- With the ignition switch in the **ON** position, push the **HI** **5** or **LO** **6** side of the switch, and the seat heater will turn on and the indicator light will illuminate.
- To turn off the seat heater, push the switch to the level (neutral) position.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Safety — Seats, seat belts and supplemental restraint system (section 1)"** of your Owner's Manual.



To view detailed instructional videos regarding these and other features, please go to [www.nissanownersinfo.mobi](http://www.nissanownersinfo.mobi).

## OUTSIDE MIRROR CONTROL SWITCH

- To select the right or left side mirror, turn the control switch **1** right or left.
- To adjust the mirror angle, move the control switch **1** up, down, right or left.
- To prevent accidentally moving the mirror, turn and set the control switch **1** to the center (neutral) position.



### POWER FOLDING OUTSIDE MIRRORS

- Push the switch **2** to the  position to fold the outside rearview mirrors, and push the switch **2** to the  position to unfold the outside rearview mirrors.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

## STARTING/STOPPING THE ENGINE

- It is important to make sure the Nissan Intelligent Key® is with you (that is, in your pocket or purse).
- Depress the brake pedal.
- Press the ignition switch to start the engine.



### TURNING THE ENGINE OFF



- Move the shift lever to the **P (PARK)** position and apply the parking brake.
- Push the ignition switch to turn the engine off.

 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

 

## HEADLIGHT CONTROL SWITCH

### HEADLIGHT CONTROL

- Turn the headlight control switch to the  position **1** to turn on the front parking, side marker, tail, license plate and instrument panel lights. Turn the switch to the  position **2** to turn on the headlights.

 
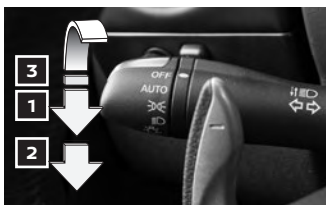 


 
### AUTOLIGHT SYSTEM

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **3** then push the ignition switch to ON. To deactivate the autolight system, turn the headlight control switch to the  position **1** or  position **2**.

# FIRST DRIVE FEATURES

## HIGH BEAM SELECT

- With the headlights ON (either in the **AUTO** or  position), push the headlight control switch forward **4** to select the high beam function. The blue indicator light  will illuminate in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light will extinguish.
- Pull and release the headlight control switch **5** to flash the headlight high beams on and off.

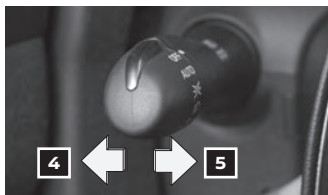

## LANE CHANGE SIGNAL

 
 
- Move the lever up or down until the turn signal begins to flash but the lever does not latch to signal a lane change. Hold the lever until the lane change is completed.
- Move the lever up or down until the turn signal begins to flash but the lever does not latch and release the lever. The turn signal will automatically flash three times.
- Choose the appropriate method to signal a lane change based on the road and traffic conditions.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" of your Owner's Manual.

## WIPER AND WASHER SWITCH

- The ignition switch must be in the **ON** position to activate the windshield wipers.
- Move the lever to one of the following positions to operate the windshield wipers:
  - 1** Mist (**MIST**) – Push the lever up for one sweep of the wipers.
  - 2** Speed-sensing Intermittent (**INT**) – Push the lever down. The wipers operate intermittently, and wiper speed varies in accordance with vehicle speed. Intermittent operation can be further adjusted by twisting the time control ring **3** to increase or decrease wiper speed.
  - 4** Low-Speed (**LO**) – Push the lever down for continuous low-speed operation of the wipers.
  - 5** High-Speed (**HI**) – Push the lever down for continuous high-speed operation of the wipers.
  - 6** Pull the lever toward you to activate the washer. The wipers will operate several times.

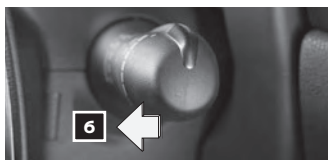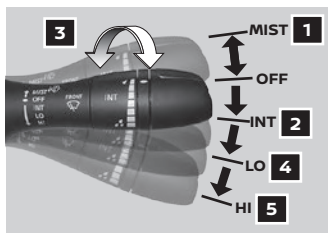

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to [www.nissanownersinfo.mobi](http://www.nissanownersinfo.mobi).





## HEATER AND AIR CONDITIONER (automatic)

### 1 AUTO BUTTON/DRIVER'S SIDE TEMPERATURE CONTROL DIAL

- The automatic mode may be used year-round. Press the **AUTO** button to turn the system on, and the system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.
- Turn the driver's side temperature control dial left for cooler air or right for warmer air.

### 2 DUAL BUTTON/PASSENGER'S SIDE TEMPERATURE CONTROL DIAL

- Press the **DUAL** button to turn the passenger's side temperature controls on or off. This will allow the passenger's side temperature to be adjusted independently from the driver's side by turning the passenger's side temperature control dial.
- Turn the passenger's side temperature control dial left for cooler air or right for warmer air.





### 3 ON-OFF BUTTON

- Press the **ON-OFF** button to turn the system on or off.

### 4 FAN SPEED CONTROL BUTTONS

- Press either the  or the  button to decrease or increase fan speed.


### 5 MODE BUTTON

- Press the **MODE** button to cycle through the following air flow outlets:
  -  Air flows from the center and side vents.
  -  Air flows from the center, side and foot vents.
  -  Air flows mainly from the foot vents.
  -  Air flows from the front defroster and foot vents.

### 6 A/C BUTTON




- Press the **A/C** button to turn the air conditioner system on or off. This system helps cool and dehumidify the air inside the cabin and defog the windows.

### 7 FRESH AIR INTAKE CONTROL BUTTON


- Press the fresh air intake control  button **7** to draw outside air into the passenger compartment.

# FIRST DRIVE FEATURES


## 8 AIR RECIRCULATION BUTTON

- Press the air recirculation control  button **8** to recirculate interior air inside the vehicle. The indicator light on the button will illuminate. This system is used to avoid certain outside odors and to adjust the inside vehicle temperature more effectively.
- The air recirculation mode cannot be activated when the climate control system is in the front defroster mode  or the front defroster and foot vent mode .

## 9 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the front defroster  button to turn the system on. This feature removes humidity from the air.
- Turn the temperature control dial **1** to set the desired temperature.
- To defrost the front and side windows quickly, set the temperature controls and fan speed controls to their maximum settings.

## 10 DEFROSTING REAR WINDOW AND OUTSIDE MIRRORS (if so equipped)


 
- Push the rear window and outside mirror (if so equipped) defroster  switch to turn the system on or off.
- This function automatically turns off after approximately 15 minutes.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.


For more information, refer to the "Instruments and controls (section 2)" and the "Display screen, heater, air conditioner and audio systems (section 4)" of your Owner's Manual.



## AM/FM/SiriusXM® SATELLITE RADIO WITH CD PLAYER

Touch the  Audio key on the Launch Bar to display the current audio source. Touch the  Audio key a second time to access the source selection screen.

### 1 (ON-OFF) BUTTON/ VOL (volume) CONTROL KNOB









- Press the  (on-off) button to turn the audio system on or off.
- Turn the **VOL** control knob right or left to increase or decrease the volume.

To view detailed instructional videos regarding these and other features, please go to [www.nissanownersinfo.mobi](http://www.nissanownersinfo.mobi).


## 2 AUDIO KEY

- Touch the “ Audio” key on the Launch Bar to bring up the current source’s control screen.

## 3 / (seek/cat and track) BUTTONS

- Press the  button or the  button to seek up/down to the next receivable station.
- For satellite radio to switch to the first channel of the previous or next category, press the  button or the  button.
- To change tracks on a CD, press the  button or the  button.
- To rewind or fast forward a track on a CD, press and hold the  button or the  button.

## 4 **PUSH SOUND BUTTON/TUNE-SCROLL KNOB**

- Press the **PUSH SOUND** button to cycle through the audio settings individually and use the **TUNE-SCROLL** knob to adjust the current setting.
- Touch the “ Settings” key on the Launch Bar and then touch the “Sound” key to view all audio settings.
- To manually tune the radio, turn the **TUNE-SCROLL** knob left or right.

## 5 **AUDIO (source) BUTTON**

- Pressing this button will give access to the **AM, FM, SXM, CD, USB1/iPod, USB2/iPod, Bluetooth Audio** or **AUX** audio source.
- Twelve memory stations can be set for the FM band, six for the AM band and 18 for satellite radio. These appear at the bottom of the screen when one of these sources is selected.
- To store a station in a preset, you must first select a radio band by touching the “AM” key **6**, “FM” key **7** or “SXM” key **8** then tune to the desired AM, FM or satellite radio station. Next, press and hold the desired station preset key until you hear a beep. The channel indicator will then display, and the sound will resume. Programing is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then press the corresponding station select button.

## 6 **AM KEY** / **7 FM KEY**

- Touch the “AM Menu” or “FM Menu” key to view the station list or turn HD mode on or off.
- Tag favorite songs to save to an iPod®.
  - Apple® website: If you are listening to a radio station that supports iTunes Tagging, you can tag a song you hear so you can preview and purchase it later on the iTunes Store. Songs that can be tagged are marked with a tag icon next to the song title or on the “Now Playing” screen.

## 8 **SXM KEY**

- Touch the “SXM Menu” key to bring up the categories, favorites and replay options.

# FIRST DRIVE FEATURES

## 9 CD KEY

- Touch the "CD" key to view the track list.

## 10 AUX KEY

- A cable with 1/8 in (3.5 mm) stereo mini plug is required for audio playback.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Audio system (section 3)**" of your Multi Function Display Owner's Manual.

## CRUISE CONTROL

- The cruise control system enables you to set a constant cruising speed above 25 mph (40 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **MAIN** switch **1** on the steering wheel. The **CRUISE** indicator light in the instrument panel will illuminate.
- To set a cruising speed, accelerate the vehicle to the desired speed, push the **SET-** switch **2** on the steering wheel and release. The **SET** indicator light in the instrument panel will illuminate. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **RES+** switch **3** on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **SET-** switch **2** on the steering wheel. Release the switch when the vehicle slows to the desired speed.
- To turn cruise control off without erasing the set speed, push the **CANCEL** switch **4** on the steering wheel. The **SET** indicator light in the instrument panel will extinguish.
- To turn off cruise control, push the **MAIN** switch **1** on the steering wheel. Both the **CRUISE** indicator light and the **SET** indicator light in the instrument panel will extinguish.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.


For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

# SYSTEM GUIDE

## DRIVE COMPUTER


 







- The drive computer is located in the vehicle information display **1** at the bottom of the tachometer.



- Push the  switch **2** to cycle through the following modes on the vehicle information display:

- **MPG** – Displays the current fuel economy.
- **MPH** – Displays the current vehicle speed.
- **CRUISE/MPH** – Displays the set cruise control status.
- **MPG/MPH** – Displays the average fuel economy and average speed since the last reset.



- To reset, push and hold the  switch **3** for more than 1 second. Both the average fuel economy and average speed are reset at the same time.
- **TIME/MILES** – Displays the elapsed time and distance driven since the last reset.
  - To reset, push and hold the  switch **3** for more than 1 second. Both elapsed time and distance driven are reset at the same time.
- **RANGE** – Displays the estimated distance the vehicle can be driven before refueling.
- **OUTSIDE TEMP** – Displays the outside air temperature.
- **SETTING** – Allows you to set reminders or preferences for alerts, maintenance intervals or language displays in the system.
  - Push the  switch **3** to cycle through the various setting modes.
  - Push the  switch **2** to choose the selected mode.
  - To return to the previous setting screen, push and hold the  switch **2** for more than 1 second.
- **WARNING** – Displays when a warning is present.
  - Push the  switch **3** to select “Detail” then confirm with the  switch **2**. When there are multiple warnings, push the  switch **2** to cycle through all of them. To return to the initial warning, push and hold the  switch **2** for more than 1 second.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.


 

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner's Manual.

# SYSTEM GUIDE

## BLUETOOTH® HANDS-FREE PHONE SYSTEM\*


- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.

 
### SYSTEM OPERATING TIPS

- Press the  button on the steering wheel to interrupt the voice prompts at any time and speak a command after the tone.
- To use the system faster, you may speak the second level commands with the main menu command on the main menu. For example, press the  button on the steering wheel, and after the tone, say "Call Redial".
- The "Help" command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing HVAC vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.
- If you experience difficulty with the Voice Recognition System recognizing a contact name, please try saying both the first and last name of the contact as this improves recognition accuracy.
- To cancel a Voice Recognition session, say "Cancel" or "Quit" or press and hold the  button on the steering wheel for 5 seconds.
- For more detailed information and instructions, refer to your cellular phone's Owner's Manual and visit [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth).



### CONNECTING PROCEDURE

- The vehicle must be stationary when connecting the cellular phone.
  1. Press the  button on the steering wheel and touch the "Connect Phone" key.
  2. Initiate connecting from the cellular phone.
    - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible cellular phones, please visit [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth).

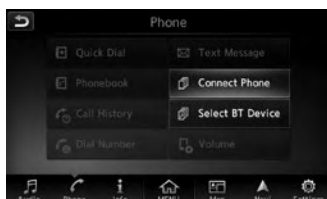

- When prompted, confirm the PIN on the display with the PIN shown on the handset. If your device does not support Secure Simple Pairing and requests you to input a PIN, enter "1234" from the handset.



- Some cellular phones may incorrectly state that the connection was unsuccessful. Please verify that the touch-screen displays that the connection is successful, or touch **Settings** > **Bluetooth** > **Select BT Device** > **Phone** and confirm that your cellular phone is listed.

3. When connecting is complete, the screen will return to the Phone menu display.

### PHONEBOOK SETUP

- Press the **MENU** button on the control panel.
- Touch the **Settings** key on the Launch Bar, touch the "Phone" key and then touch the "Phonebook" key.
- Depending on your cellular phone, the system may automatically download your cellular phone's entire phonebook to the vehicle's Bluetooth® system.
- The Quick Dial phonebook can also be set for up to five entries that can be used with your cellular phone.

1. Touch "Phone" on the Launch Bar and then touch the "Quick Dial" key.
2. Touch the "Add New" key at the top of the display. There are different methods to input a phone number. Select one of the following options:




- **Copy from Call History** to save a number from the Outgoing, Incoming or Missed Calls lists.
- **Copy from Phonebook** to save a number that has been downloaded from your handset to the vehicle.
- **Enter Number by Keypad** to input the number and name manually.

 


# SYSTEM GUIDE




## MAKING A CALL

To make a call, follow this procedure:

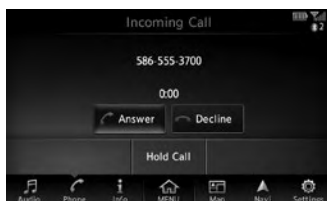1. Press the  button on the steering wheel.  
The Phone menu will appear on the control panel display.
2. Touch one of the following:
  - "Quick Dial", "Phonebook" or "Call History" key. Select the desired entry from the list and then the desired number, or
  - To enter a number manually, touch the "Dial Number" key, then enter the number and touch "OK".



## RECEIVING/ENDING A CALL

- To accept the call:
  - Press the  button on the steering wheel, or
  - Touch the "Answer" key on the touch-screen display.
- To reject the call:
  - Press the  arrows on the steering wheel to highlight "Decline" through the vehicle information display and press the OK button on the steering wheel, or
  - Touch the "Decline" key on the touch-screen display.
- To hang up:
  - Press the  button on the steering wheel, or
  - Touch the "Hang up" key on the touch-screen display.

\*Some jurisdictions prohibit the use of cellular telephones while driving.

 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Hands-Free Phone (section 4)"** of the Multi Function Display Owner's Manual or please visit [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth).



## BLUETOOTH® STREAMING AUDIO\*

- If you have a compatible Bluetooth® device with streaming audio (A2DP profile), you can set up the wireless connection between your Bluetooth®, device and your vehicle's audio system. This connection allows you to listen to audio from the Bluetooth® device using your vehicle's speakers.
- A cellular phone should not be used while driving so full attention may be given to vehicle operation.
  1. Touch the "🎵 Audio" key and select the "Bluetooth Audio" key.
  2. A prompt to connect your device will display.
    - If the device is already paired:
      - a. Touch the "Select Devices" key to play from an already paired device.
      - b. Select the desired device and touch the "Connect" key **1**.
      - c. The last played audio will start playing once the device is connected.
    - If the device needs to be connected:
      - a. Touch the "⚙️ Settings" key.
      - b. Touch the "Bluetooth" key.
      - c. Touch the "Connect Device" key.
- Touch the "BT Menu" key to view track listing, artist, songs or albums.
- Touch the "BT Settings" key to change which device is playing audio.

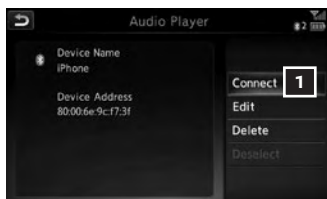

\*Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Hands-Free Phone (section 4)**" of the Multi Function Display Owner's Manual or please visit [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth).

# SYSTEM GUIDE



## NAVIGATION SYSTEM

- Your Navigation System can calculate a route from your current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.
- To help promote safe driving, some functions cannot be operated or have limited operation when the vehicle speed is above 5 mph (8 km/h). The on-screen text and keys for these restricted functions will be grayed-out or muted and cannot be selected while driving. These functions will become available again when the vehicle speed is in motion. Voice commands may be available for some of the restricted functions. For more information, refer to the "Voice recognition (section 7)" of your Multi Function Display Owner's Manual.

- 1** **MENU** - Touch to access all available shortcut and widget items in the "Menu" screen.
- 2** Touch-screen
- 3** **Map Menu** - Touch to access different options related to either a selected location by touch or one that you have navigated to. Some options include "Save Location", "Nearby POIs", "Map Icons" or "New Destination".
- 4** **Navi** (Navigation) - Touch to access the Navigation function.
- 5** **Info** (Information) - Touch to display the vehicle, traffic (if so equipped) and weather (if so equipped) information.
- 6** **ZOOM OUT**, **7** **ZOOM IN** - Touch to adjust the map scale. When parked, you can pinch in or out to zoom on the screen.
- 8** **Map** - Touch to display the map.
- 9** **Settings** - Touch to display the system settings.

To view detailed instructional videos regarding these and other features, please go to [www.nissanownersinfo.mobi](http://www.nissanownersinfo.mobi).

 
## SETTING A DESTINATION

You can set a destination with your Navigation System using the touch-screen display or Voice Recognition.

### ■ Touch-screen Display

- Touch the "▲ Navi" key on the Launch Bar.
- When a destination is set, touch the "New Destination" key and then select one of the displayed options for choosing your destination.

### ■ Voice Recognition

 
- Press the  button on the steering wheel, and after the tone, say "Navigation". From here, the system will give you the options available for setting a destination.

## SETTING A DESTINATION USING POINTS OF INTEREST (POI)

### ■ Touch-screen Display

- Touch the "▲ Navi" key on the Launch Bar, and if a destination is already set, touch the "New Destination" key.
- Touch the "Points of Interest" key and then select one of the displayed options for choosing your destination.

### ■ Voice Recognition

- Press the  button on the steering wheel, and after the tone, say "Navigation" then say "Points of Interest". From here, the system will give you the options available for setting a POI.

 
## NAVIGATION SWIPE TO METER

- Turn-by-turn route guidance can also be viewed in the vehicle information display by using Navigation Swipe to Meter. This can be done by programming a route, touching the turn-by-turn route icon on the center display, and swiping toward the general direction of the vehicle information display.
- The turn-by-turn route icon will move across the center display and transfer the route information to the vehicle information display when the vehicle is not moving.
- The icon will not move across the screen if the vehicle speed is over 4 mph (7 km/h), but the information will still transfer to the vehicle information display.
- The turn-by-turn route guidance cannot be transferred to the vehicle information display if the navigation screen is already shown or if a warning is present.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to your Multi Function Display Owner's Manual.

# SYSTEM GUIDE

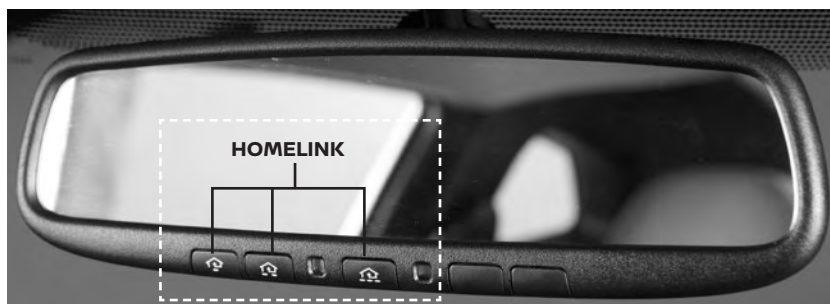

## HOMELINK® UNIVERSAL TRANSCEIVER

- The HomeLink® Universal Transceiver can learn and consolidate the functions of up to three different hand-held transmitters, operating items such as garage doors, property gates, outdoor and indoor lights or alarm systems.
- To program the HomeLink® Universal Transceiver:
  - Position the handheld transceiver 1-3 in (26-76 mm) away from the HomeLink surface, keeping the HomeLink indicator light in view.
  - Press and hold the desired HomeLink button and the handheld transmitter button simultaneously until the HomeLink indicator light flashes slowly and then rapidly.
  - Both buttons may be released when the indicator light flashes rapidly.
- To verify the programming is complete, press and hold the HomeLink button and observe the indicator light:
  - A solid, continuous light indicates the programming is complete and the HomeLink button will activate your device.
  - A blinking light that turns to a solid, continuous light after 2 seconds indicates additional steps are required to complete the programming.
- An additional person may make the remaining steps easier. To complete the programming process:
  - At the receiver of the device that you are programming to the HomeLink button, press and release the learn or smart button (the name may vary by manufacturer, but it is usually located near where the hanging antenna wire is attached to the unit). You have approximately 30 seconds to initiate the following step.
  - Press and hold the programmed HomeLink button for 2 seconds and release.
- You may have to repeat the previous two steps up to three times to complete the programming process. HomeLink should now activate your device.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual, the HomeLink website at [www.homelink.com](http://www.homelink.com) or call 1-800-355-3515.





## Helpful Resources

Below is a list of helpful resources that can be used to learn more about the vehicle's systems and feature operations.

- Vehicle Owner's Manual
- Multi Function Display Owner's Manual (if so equipped)
- Printed Quick Reference Guide (this document)
- [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth)
- [www.NissanUSA.com/connect](http://www.NissanUSA.com/connect)
- [www.youtube.com/user/NissanUSA](http://www.youtube.com/user/NissanUSA)
- Nissan Consumer Affairs: 1-800-647-7261
- Electronic Quick Reference Guide (Use Quick Response (QR) code or URL below.)
- Nissan Quick Guide (available in the App Store® or Google Play™ store for download to your smartphone)



To view detailed instructional videos,  
go to [www.nissanownersinfo.mobi/2018/gtr](http://www.nissanownersinfo.mobi/2018/gtr)  
or snap this barcode with an appropriate barcode reader.



This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain, with this Quick Reference Guide, all revision updates sent to you by NISSAN to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the NISSAN website at <https://owners.nissanusa.com/owners/navigation/manualsGuide>. If you have questions concerning any information in your Owner's Manual, contact NISSAN Consumer Affairs. See the NISSAN CUSTOMER CARE PROGRAM page in the Owner's Manual for contact information.

