


2011 **JUKE**

QUICK REFERENCE GUIDE



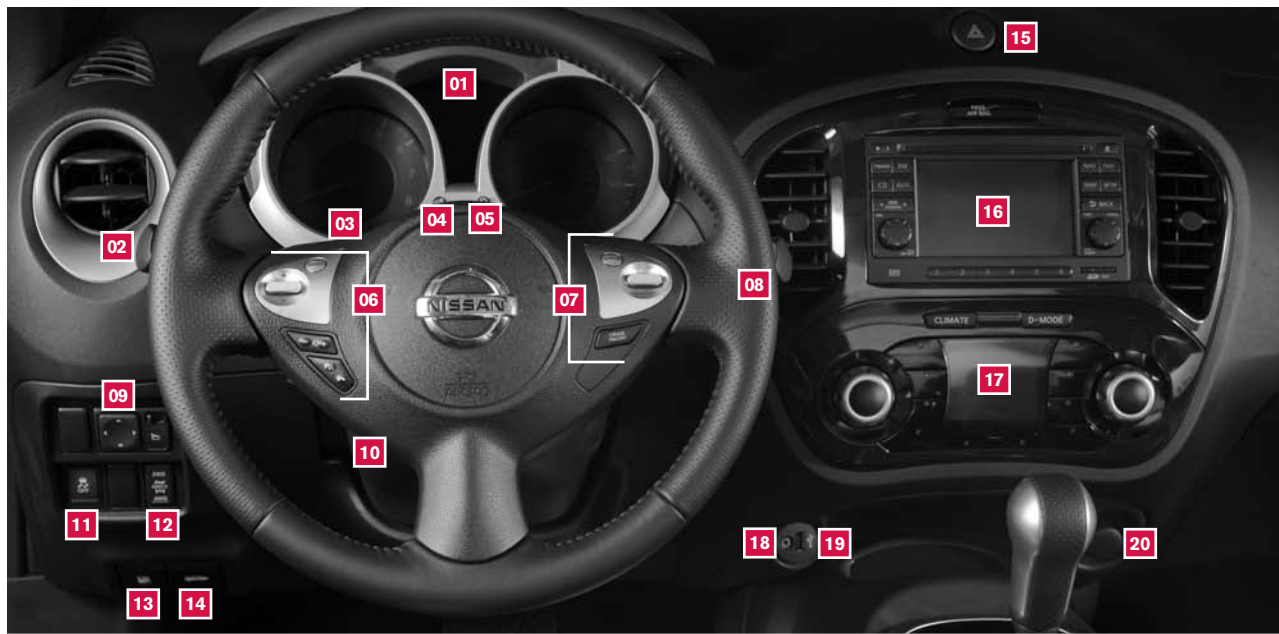

- 01** VEHICLE INFORMATION DISPLAY\*
- 02** HEADLIGHT AND TURN SIGNAL CONTROL
- 03** LOW TIRE PRESSURE WARNING LIGHT
- 04** INSTRUMENT BRIGHTNESS CONTROL SWITCH\*
- 05** TWIN TRIP ODOMETER RESET SWITCH\* / TRIP COMPUTER MODE SWITCH\*

- 06** STEERING WHEEL SWITCHES FOR AUDIO / BLUETOOTH\*
- 07** CRUISE CONTROL
- 08** WINDSHIELD WIPER / WASHER SWITCH
- 09** OUTSIDE MIRROR CONTROL SWITCH
- 10** TILT STEERING ADJUSTMENT\*

- 11** VEHICLE DYNAMIC CONTROL (VDC) OFF SWITCH\*
- 12** ALL-WHEEL DRIVE (AWD) SWITCH\*
- 13** FUEL-FILLER DOOR RELEASE
- 14** HOOD RELEASE\*
- 15** HAZARD WARNING LIGHT\*

- 16** AUDIO AND NAVIGATION SYSTEM
- 17** INTEGRATED CONTROL SYSTEM
- 18** AUXILIARY JACK\*
- 19** USB / IPOD® CONNECTOR\*
- 20** POWER OUTLET\*

\*See your Owner's Manual for more information.

**NEW SYSTEM FEATURES**

Integrated Control (I-CON) System (if so equipped) . . . . . 2

**ESSENTIAL INFORMATION**

Loose Fuel Cap . . . . . 3  
 Tire Pressure Monitoring System (TPMS) . . . . . 3

**FIRST DRIVE FEATURES**

NISSAN Intelligent Key™ System (if so equipped) . . . . . 4  
 Seat Adjustments . . . . . 4  
 Outside Mirror Control Switch . . . . . 4  
 Starting/Stopping the Engine (NISSAN Intelligent Key™ models only) . . . 5  
 Headlight Control Switch . . . . . 5  
 Windshield Wiper Switch . . . . . 6  
 Automatic Climate Controls (with Integrated Control System -  
 if so equipped) . . . . . 6  
 FM/AM/XM® Radio with CD Player (if so equipped) . . . . . 7  
 Parking Brake . . . . . 7  
 Liftgate Release . . . . . 8  
 Fuel-Filler Door . . . . . 8

**SYSTEM GUIDE**

Cruise Control . . . . . 9  
 Bluetooth® Hands-free Phone System . . . . . 9  
 Navigation System (if so equipped) . . . . . 9



- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the **“Safety -- Seats, seat belts and supplemental restraint system (section 1)”** of your Owner’s Manual.



Additional information about your vehicle is also available in your Owner’s Manual, Navigation System Owner’s Manual, Electronic Quick Reference Guide (EQRG) and at [www.nissanusa.com](http://www.nissanusa.com).



This easy-to-use Quick Reference Guide is intended to help you more fully appreciate some of the unique features and functions of your new vehicle. However, it is not intended to replace your Owner’s Manual. The Owner’s Manual contains more detailed information to help you better understand the important safety warnings, features, operation and maintenance of your vehicle. All information, specifications, photographs and illustrations in this publication are those in effect at the time of printing. NISSAN reserves the right to change specifications or design without notice and without obligation.

# new system features



## INTEGRATED CONTROL (I-CON) SYSTEM (if so equipped)

Your vehicle's I-CON system allows vehicle performance to be adjusted by selecting three drive modes: **NORMAL**, **SPORT** or **ECO**.

- **NORMAL 01** drive mode is recommended for normal, everyday driving.
- **SPORT 02** drive mode is recommended for an enhanced performance feel. Fuel economy may be reduced.
- **ECO 03** drive mode is recommended for maximum fuel economy. Performance may be reduced.

For more information, refer to the "**Instruments and controls (section 2)**" and the "**Starting and driving (section 5)**" of your Owner's Manual.

## LOOSE FUEL CAP

- A LOOSE FUEL CAP warning message will display in the vehicle information display **01** when the fuel-filler cap is not tightened correctly.
- The indicator will disappear when the vehicle detects the fuel-filler cap is properly tightened and the reset button **02** is pressed.
- If the cap is not properly tightened, the Malfunction Indicator Light SERVICE ENGINE SOON may illuminate.

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.



## TIRE PRESSURE MONITORING SYSTEM (TPMS)

- A CHECK TIRE PRESSURE warning message will display in the vehicle information display **01** and the TPMS light will illuminate when one or more tires are low on pressure and air is needed.
- After tire pressures are adjusted, drive the vehicle at speeds above 16 MPH (25km/h) and the warning and indicator light will disappear.
- When the low tire pressure warning light flashes for approximately 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked by a NISSAN dealer.
- Tire pressure rises and falls depending on the heat caused by the vehicle’s operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light to illuminate. If the warning light illuminates in low ambient temperature, check the tire pressure in all four tires.



For more information, refer to the “**Instruments and controls (section 2)**” and the “**Starting and driving (section 5)**” of your Owner’s Manual.

# first drive features

## NISSAN INTELLIGENT KEY™ SYSTEM (if so equipped)

The NISSAN Intelligent Key™ System allows you to lock or unlock your vehicle, open your liftgate and start the engine.

- To lock or unlock a door, push any door handle request switch **01** once.
- Push any door handle request switch **01** within 1 minute of unlocking the door and all other doors will unlock.

NOTE: It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

For more information, refer to the “Pre-driving checks and adjustments (section 3)” of your Owner’s Manual.




## SEAT ADJUSTMENTS

- Pull up on the lever **01** under the front of the seat and slide forward or backward. Release the lever to lock the seat in position.
- Pull up on the lever **02** and lean back to recline the seatback. To bring the seatback forward, pull the lever up and lean your body forward. Release the lever to lock the seatback in position.

SEAT LIFTER (driver’s seat only)

- Pull up or push down on the adjusting lever **03** repeatedly to adjust the seat height.

For more information, refer to the “Safety — Seats, seat belts and supplemental restraint system (section 1)” of your Owner’s Manual.

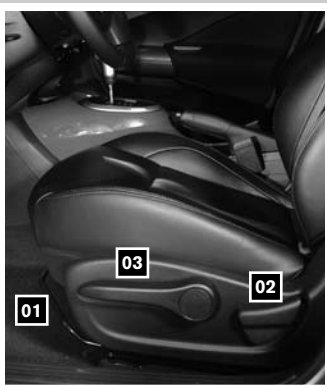

## OUTSIDE MIRROR CONTROL SWITCH

- Move the switch **01** right or left to select the right or left mirror.
- Adjust each mirror to the desired position using the switch **02**.

For more information, refer to the “Pre-driving checks and adjustments (section 3)” of your Owner’s Manual.



## STARTING/STOPPING THE ENGINE (NISSAN Intelligent Key™ models only)

CONTINUOUSLY VARIABLE TRANSMISSION  
(if so equipped)

- Depress the brake pedal.
- Move the shift lever to P (PARK).
- Push the ignition switch to start the engine.

NOTE: It is important to make sure the NISSAN Intelligent Key™ is with you (that is, in your pocket or purse)



MANUAL TRANSMISSION (if so equipped)

- Depress the brake pedal.
- Move the shift lever to N (NEUTRAL).
- Depress the clutch pedal to the floor while pushing the ignition switch to start the engine.

TURNING THE ENGINE OFF

- For a Continuously Variable Transmission, move the shift lever to the P (PARK) position, apply the parking brake and push the ignition switch.
- For a manual transmission, apply the foot brake and place the vehicle in first gear, then apply the parking brake and push the ignition switch.

 
EMERGENCY ENGINE SHUT OFF

To shut off the engine in an emergency situation while driving, perform one of the following procedures:


- Rapidly push the push-button ignition switch 3 consecutive times, or
- Push and hold the push-button ignition switch for more than 2 seconds.

For more information, refer to the “Starting and driving (section 5)” of your Owner’s Manual.

## HEADLIGHT CONTROL SWITCH

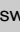- Turn the headlight control switch **01** to the  position to turn on the front parking, side marker, tail, license plate and instrument panel lights.
- Turn the switch **01** to the  position to turn on the headlights.

For more information, refer to the “Instruments and controls (section 2)” of your Owner’s Manual.

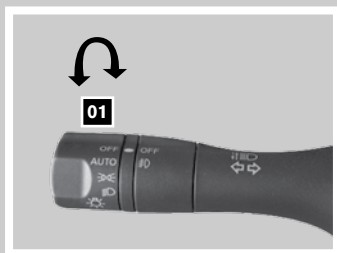


# first drive features

## WINDSHIELD WIPER SWITCH

- Move the lever to the following positions to operate the windshield wipers:

- 01** Intermittent (**INT**) - Front wipers operate intermittently.
- 02** Low (**LO**) - Front wipers operate at a continuous low-speed.
- 03** High (**HI**) - Front wipers operate at a continuous high-speed.
- 04** Rear Wiper (**REAR**) – Twist the end of the lever to operate the first (**INT**) or second (**ON**) speed settings for the rear wiper.

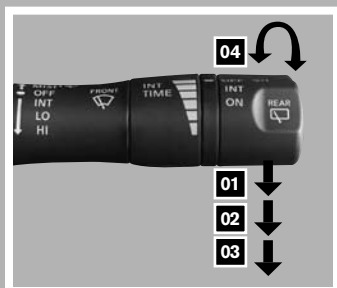

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.



## AUTOMATIC CLIMATE CONTROLS (with Integrated Control System - if so equipped)


### **01 CLIMATE BUTTON**

- Press the **CLIMATE** button to access the Climate Control Mode.


### **02 AUTO BUTTON/TEMPERATURE CONTROL DIAL**

- Press the **AUTO** button to turn the system on and the fan speed, air flow distribution and temperature will be automatically maintained. Turn the temperature control dial left for cooler air or right for warmer air.


### **03 FAN SPEED CONTROL DIAL**

- Turn the fan speed control dial  to the left to decrease fan speed or to the right to increase fan speed.

### **04 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS**

- Press the front window defroster button  to turn the system on or off.

### **05 REAR WINDOW AND OUTSIDE MIRROR DEFROSTER SWITCH (if so equipped)**

- Push the rear window defroster switch  to turn the system on or off.

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Heater, air conditioner, audio and phone systems (section 4)**” of your Owner’s Manual.





## FM/AM/XM<sup>®</sup>\* RADIO WITH CD PLAYER (if so equipped)

### 01 VOL/ON-OFF CONTROL KNOB

- Press the **VOL/ON-OFF** control knob to turn the system on or off.
- Turn the **VOL/ON-OFF** control knob to the right or left to increase or decrease the volume.

### 02 TUNE/SCROLL KNOB

- To manually tune the radio, turn the **TUNE/SCROLL** knob left or right.


\*XM<sup>®</sup> Satellite Radio is only available on vehicles equipped with optional XM<sup>®</sup> Satellite subscription service.

For more information, refer to the “**Heater, air conditioner, audio and phone systems (section 4)**” of your Owner’s Manual.

## PARKING BRAKE


- To apply, pull the parking brake lever **01** up.
- To release, firmly press the foot brake while slightly pulling up on the parking brake lever. Press the button **02** and lower the lever completely.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

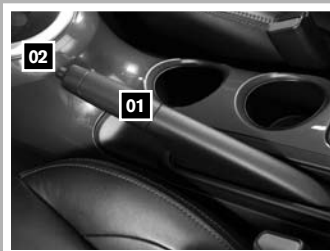

# first drive features

## LIFTGATE RELEASE

- Unlock the liftgate by pressing the  button on the keyfob twice.



- To open the liftgate, push the liftgate opener switch and pull up.

For more information, refer to the **“Pre-driving checks and adjustments (section 3)”** of your Owner’s Manual.



## FUEL-FILLER DOOR

- To open the fuel-filler door, pull the release **01**.



- The fuel-filler door is located on the right, rear side of the vehicle.

For more information, refer to the **“Pre-driving checks and adjustments (section 3)”** of your Owner’s Manual.



## CRUISE CONTROL

- The cruise control system enables you to set a constant cruising speed.
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.

For more information, refer to the **"Starting and driving (section 5)"** of your Owner's Manual.



## BLUETOOTH® HANDS-FREE PHONE SYSTEM

- With an overhead microphone and sound transmitted through the audio system speakers, the Bluetooth® Hands-free Phone System utilizes Bluetooth wireless technology and voice recognition to provide hands-free cellular phone communication.

For more information, refer to the **"Heater, air conditioner, audio and phone systems (section 4)"** of your Owner's Manual or visit [www.nissanusa.com/bluetooth](http://www.nissanusa.com/bluetooth).



## NAVIGATION SYSTEM (if so equipped)

- Your Navigation System can calculate a route from the current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.

For more information, refer to the Navigation System of your Owner's Manual.



Nissan, the Nissan Brand Symbol, "SHIFT\_" tagline,  
Z and Nissan model names are Nissan trademarks.  
© 2010 Nissan North America, Inc.  
QR1E 0F15U0  
Printing: July 2010 (01)

