


2014 **JUKE**

QUICK REFERENCE GUIDE



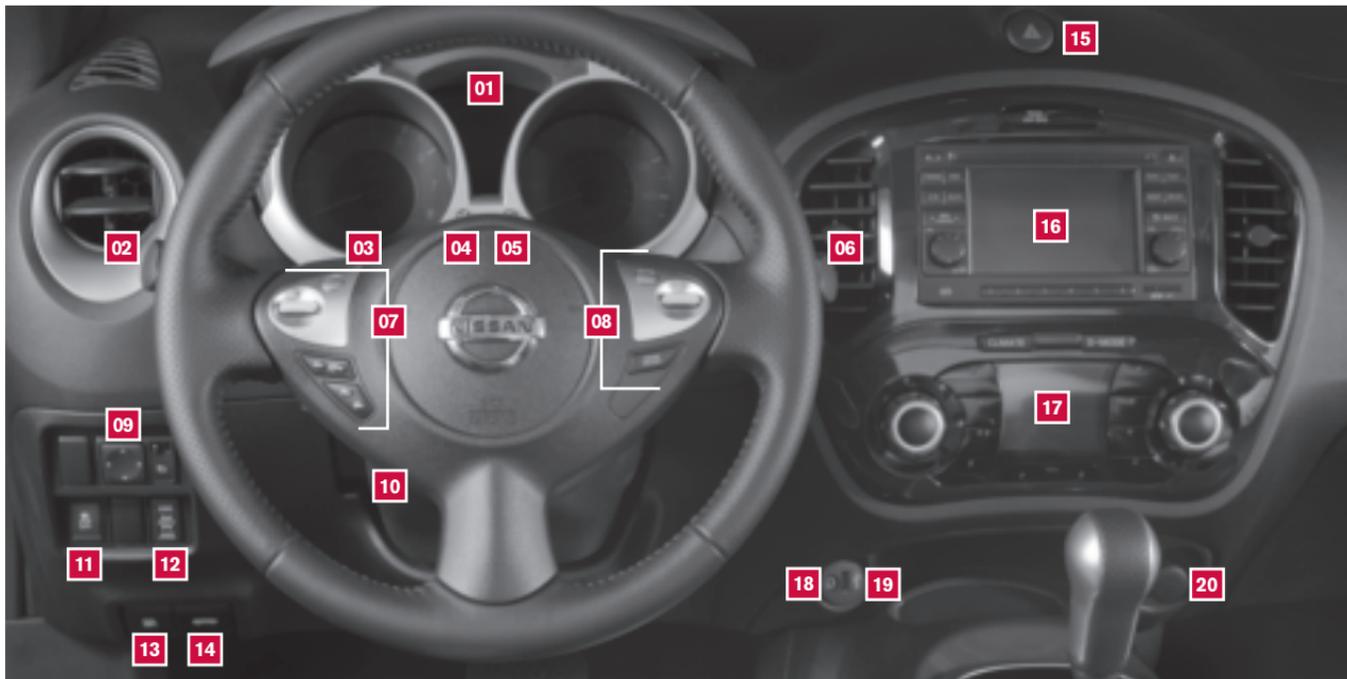

- 01** VEHICLE INFORMATION DISPLAY\*
- 02** HEADLIGHT AND TURN SIGNAL CONTROL
- 03** LOW TIRE PRESSURE WARNING LIGHT
- 04** INSTRUMENT BRIGHTNESS CONTROL SWITCH\*
- 05** TWIN TRIP ODOMETER RESET SWITCH\* / TRIP COMPUTER MODE SWITCH

- 06** WINDSHIELD WIPER AND WASHER SWITCH
- 07** STEERING WHEEL SWITCHES FOR AUDIO\* / BLUETOOTH\*
- 08** CRUISE CONTROL
- 09** OUTSIDE MIRROR CONTROL SWITCH
- 10** TILT STEERING ADJUSTMENT\*

- 11** VEHICLE DYNAMIC CONTROL (VDC) OFF SWITCH\*
- 12** ALL-WHEEL DRIVE (AWD) SWITCH\*
- 13** FUEL-FILLER DOOR RELEASE
- 14** HOOD RELEASE\*
- 15** HAZARD WARNING FLASHER SWITCH\*

- 16** AUDIO AND NAVIGATION SYSTEM
- 17** INTEGRATED CONTROL SYSTEM
- 18** AUXILIARY JACK\*
- 19** USB / IPOD® CONNECTOR
- 20** POWER OUTLET\*

\*See your Owner's Manual for information.

**ESSENTIAL INFORMATION**

Fuel Efficient Driving ..... 2  
 Tire Pressure Monitoring System (TPMS)..... 2  
 Loose Fuel Cap ..... 3  
 Fuel-filler Door ..... 3  
 Clock Set/Adjustment ..... 3

**FIRST DRIVE FEATURES**

NISSAN Intelligent Key® System (if so equipped) ..... 5  
 Liftgate Release (NISSAN Intelligent Key® models only - if so equipped) . . 6  
 Seat Adjustments ..... 6  
 Heated Seats (if so equipped)..... 7  
 Outside Mirror Control Switch ..... 7  
 Starting/Stopping the Engine (NISSAN Intelligent Key® models only -  
 if so equipped)..... 7  
 Headlight Control Switch ..... 8  
 Windshield Wiper and Washer Switch ..... 9  
 Automatic Climate Controls (with Integrated Control System)  
 (if so equipped) ..... 10  
 Drive Mode (with Integrated Control System) (if so equipped)..... 11  
 FM/AM/SiriusXM Satellite Radio with CD Player (if so equipped)..... 12  
 USB/Aux Jack and iPod® Interface (if so equipped) ..... 13  
 Cruise Control ..... 13

**SYSTEM GUIDE**

Trip Computer ..... 14  
 Bluetooth® Hands-free Phone System ..... 14  
     System Operating Tips ..... 14  
 Navigation System (if so equipped)..... 17



Please see your owner's manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the **“Safety — Seats, seat belts and supplemental restraint system (section 1)”**, the **“Heater, air conditioner, audio and phone systems (section 4)”** and the **“Starting and driving (section 5)”** of your Owner's Manual.



To view detailed instructional videos, go to [www.nissanownersinfo.mobi/2014/juke](http://www.nissanownersinfo.mobi/2014/juke) or snap this barcode with an appropriate barcode reader.



Additional information about your vehicle is also available in your Owner's Manual, Navigation System Owner's Manual and at [www.nissanusa.com](http://www.nissanusa.com).

# ESSENTIAL INFORMATION

## FUEL EFFICIENT DRIVING


- Fuel Efficient Driving Tips can be found in your Owner's Manual. These tips are intended to help you achieve the most fuel economy from your vehicle.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

## TIRE PRESSURE MONITORING SYSTEM (TPMS)

- A **CHECK... TIRE... PRES...** warning message **01** will appear as scrolling text in the vehicle information display **02** and the low tire pressure warning light **03** will illuminate when one or more tires are low on pressure and air is needed.
  - The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mi (1.6 km) at moderate speeds.
- After tire pressures are adjusted, drive the vehicle at speeds above 16 MPH (25 km/h). The **CHECK TIRE PRES** warning message and the low tire pressure warning light will disappear.
- When the low tire pressure warning light flashes for approximately 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked by a NISSAN dealer.
- Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light to illuminate. If the warning light illuminates, check the tire pressure in your tires.
  - Check the tire pressures (including the spare tire) often and always prior to long distance trips.
- The Tire and Loading Information label contains valuable information. Please refer to "Technical and consumer information (section 9)", in your Owner's Manual for the location of the Tire and Loading Information label.

For more information, refer to the "Instruments and controls (section 2)"; the "Starting and driving (section 5)" and the "Maintenance and do-it-yourself (section 8)" of your Owner's Manual.

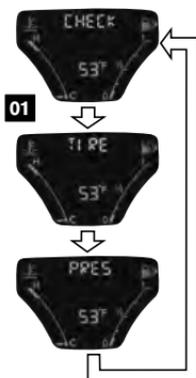

## LOOSE FUEL CAP

- A **LOOSE FUEL CAP** warning message will appear in the vehicle information display **01** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The indicator will disappear when the vehicle detects the fuel-filler cap is properly tightened and the reset button **02** is pressed for more than 1 second.
- If the cap is not properly tightened, the Malfunction Indicator Light SERVICE ENGINE SOON may illuminate.

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.



## FUEL-FILLER DOOR

- To open the fuel-filler door, pull the release **01** located on the lower instrument panel to the left of the steering wheel.



- The fuel-filler door is located on the passenger’s side of the vehicle.



For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

## CLOCK SET/ADJUSTMENT

### WITHIN THE AUDIO SYSTEM

1. Push and hold the **CLOCK** button **01** until the clock display starts to flash.
2. To adjust the hours, press the **SEEK/TRACK** button **02**.
3. To adjust the minutes, press the **TUNE/FF-REW** button **03**.
4. To exit the clock set mode, press the **CLOCK** button **01** again. The display will return to the regular clock display after 5 seconds.



To view detailed instructional videos regarding these and other features, please go to [www.nissanownersinfo.mobi](http://www.nissanownersinfo.mobi).

## CLOCK SET/ADJUSTMENT

### WITHIN THE NAVIGATION SYSTEM

- To adjust the time and the appearance of the clock on the display:
  1. Press the **SETUP** button **01**.
  2. Select the “System” key.
  3. Select the “Clock” key.



- The following settings can be adjusted:

- **Time Format:** The clock can be set to 12 hours or 24 hours.
- **Use GPS Clock:** When this setting is activated, the clock is set and continually updated via the GPS used by the Navigation System.
- **Set Clock Manually:** When this setting is activated, the clock can be set manually. Touch the “+” or “-” key to adjust the hours and minutes up or down.
- **Daylight Savings Time:** When this setting is activated, daylight savings time is on. Touch the “Daylight Savings Time” key to toggle the setting on or off.
- **Time Zone:** Choose the applicable time zone from the list.



For more information, refer to the “**Instruments and controls (section 2)**” and the “**Heater, air conditioner, audio and phone systems (section 4)**” of your Owner’s Manual.

# FIRST DRIVE FEATURES

## NISSAN INTELLIGENT KEY® SYSTEM (if so equipped)

The NISSAN Intelligent Key® System allows you to lock or unlock the vehicle, open your liftgate and start the engine. It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

- The operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, push either door handle request switch **01**, push the liftgate request switch **02** or press the **L** button **03** on the key fob.
- To unlock the vehicle, perform one of the following procedures:
  - Push any door handle request switch once; the corresponding door will unlock. Push the request switch again within 1 minute; all other doors will unlock, or
  - Press the **L** button **04** on the key fob to unlock the driver's side door. Press the **L** button **04** again; all other doors will unlock.
- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the **PA** button **05** for more than 1 second. Once activated, the panic alarm and headlights will stay on for a period of time.



## INTELLIGENT KEY BATTERY DISCHARGE

- If the battery of the Intelligent Key is discharged, or environmental conditions interfere with the Intelligent Key operation, start the engine according to the following procedure:

1. Move the shift lever to the **P (PARK)** position (Continuously Variable Transmission) or to the **N (NEUTRAL)** position (manual transmission).
2. Firmly apply the foot brake.
3. Touch the ignition switch with the Intelligent Key and a chime will sound.
4. Within 10 seconds after the chime sounds, push the ignition switch while depressing the brake pedal and the engine will start.



For more information, refer to the "**Pre-driving checks and adjustments (section 3)**", the "**Starting and driving (section 5)**" and the "**Maintenance and do-it yourself (section 8)**" of your Owner's Manual.


# FIRST DRIVE FEATURES

## LIFTGATE RELEASE (NISSAN Intelligent Key® models only – if so equipped)

- It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).
- To open the liftgate, first unlock the liftgate using one of the following methods:
  - Press the **?** button **01** on the key fob twice.
  - Push the liftgate request switch **02**.
- Then push the liftgate release switch **03** and pull the liftgate up.



For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

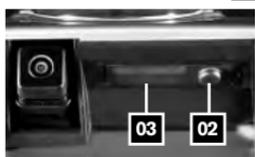


## SEAT ADJUSTMENTS

- To slide the seat forward or backward, pull up on the lever **01** under the front of the seat and slide forward or backward. Release the lever to lock the seat in position.
- To recline the seatback, pull up on the lever **02** and lean back. To bring the seatback forward, pull the lever up and lean your body forward. Release the lever to lock the seatback in position.

### SEAT LIFTER (driver’s seat only)

- To adjust the seat height, pull up or push down on the adjusting lever **03** repeatedly.

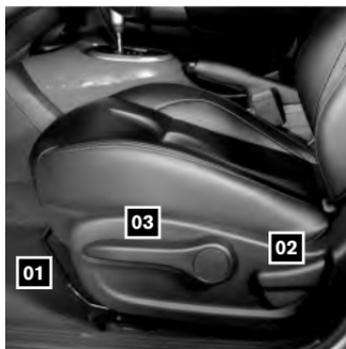

For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.

## HEATED SEATS (if so equipped)


- The seats are warmed by built-in heaters. The switches **01**, located on the center console, can be operated independently of each other.
- Push the **HI** (high) side of the switch for high heat. Push the **LO** (low) side of the switch for low heat.
- The indicator light on the switch will illuminate when the heater is on. The indicator light will remain on as long as the switch is on.
- To turn off the heater, return the switch to the level position. Be certain the indicator light turns off.
- The heater is controlled by a thermostat, automatically turning the heating element on and off.
- When the vehicle's interior is warmed, or before you leave the vehicle, be sure to turn the switch off.



For more information, refer to the “**Instruments and Controls (section 2)**” of your Owner’s Manual.

## OUTSIDE MIRROR CONTROL SWITCH

- The outside mirror control switch is located on the left side of the instrument panel.
- To select the left or right mirror, move the switch **01**.
- Adjust each mirror to the desired position, using the control switch **02**.
- To prevent accidentally moving the mirror, move switch **01** to the center (neutral) position.

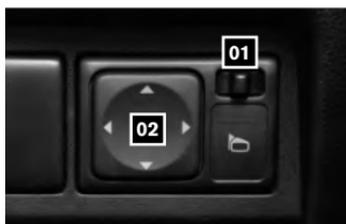

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

## STARTING/STOPPING THE ENGINE (NISSAN Intelligent Key® models only - if so equipped)

CONTINUOUSLY VARIABLE TRANSMISSION  
(if so equipped)

- It is important to make sure the NISSAN Intelligent Key® is with you (that is, in your pocket or purse).
- Depress the brake pedal.
- Move the shift lever to the **P (PARK)** position.
- Push the ignition switch to start the engine.



# FIRST DRIVE FEATURES

## MANUAL TRANSMISSION (if so equipped)

- Depress the brake pedal.
- Move the shift lever to the **N (NEUTRAL)** position.
- Depress the clutch pedal to the floor while pushing the ignition switch to start the engine.

## TURNING THE ENGINE OFF

- For a Continuously Variable Transmission, move the shift lever to the **P (PARK)** position, apply the parking brake and push the ignition switch.
- For a manual transmission, apply the foot brake and place the vehicle in 1<sup>st</sup> gear, then apply the parking brake and push the ignition switch.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

## HEADLIGHT CONTROL SWITCH

### HEADLIGHT CONTROL

- Turn the headlight control switch to the  position **01** to turn on the front parking, side marker, tail, license plate and instrument panel lights. Turn the switch to the  position **02** to turn on the headlights.



### AUTOLIGHT SYSTEM (if so equipped)

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **03** then push the ignition switch to **ON**. To deactivate the autolight system, turn the headlight control switch to the **OFF**,  position **01**, or  position **02**.


### HIGH BEAM SELECT

- Push the headlight control switch forward **04** to select the high beam function. The blue indicator light  illuminates in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light goes off.
- Pull and release the headlight control switch **05** to flash the headlight high beams on and off.



### FOG LIGHT SWITCH (if so equipped)

- The headlights must be on and the low beams  position **02** selected for the fog lights to operate.
- Turn the switch (inside collar) to the  position **06** to turn the fog lights on.
- Turn the switch (inside collar) to the **OFF** position to turn the fog lights off.

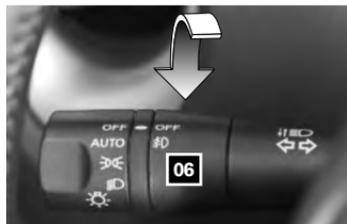



For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

To view detailed instructional videos regarding these and other features, please go to [www.nissanownersinfo.mobi](http://www.nissanownersinfo.mobi).

## WINDSHIELD WIPER AND WASHER SWITCH

- Move the lever to the following positions to operate the windshield wipers:

- 01** Mist (**MIST**) - One sweep operation of the front wipers.
- 02** Intermittent (**INT**) - Wipers operate intermittently. The intermittent speed can be adjusted by rotating the control ring **03** to increase or decrease wiper speed.
- 04** Low (**LO**) - Front wipers operate at a continuous low speed.
- 05** High (**HI**) - Front wipers operate at a continuous high speed.
- 06** Pull the lever toward you to activate the front washer. The front wipers will operate several times.

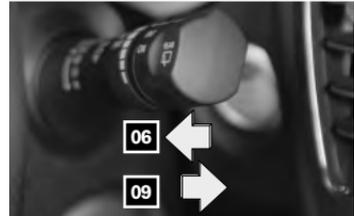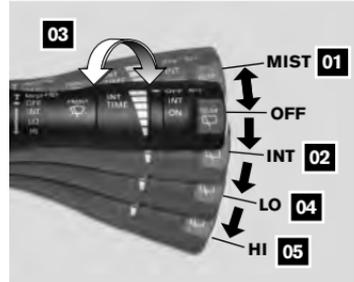

## REAR WINDSHIELD WIPER AND WASHER

- 07** Intermittent (**INT**) - Rear wiper operates intermittently.
- 08** Low (**ON**) - Rear wiper operates at a continuous low speed.
- 09** Push the lever forward to activate the rear washer. The rear wiper will operate several times.



## WIPER BLADE REPLACEMENT PROCEDURE

The windshield wipers must be in the service position in order to replace the wiper blades.

To move the wiper blades to the service position, follow this procedure:


- Turn the ignition switch to the **OFF** position.
- When the ignition switch is in the **ON** position or within 60 seconds of placing the ignition switch to the **OFF** position, push the windshield wiper and washer lever up to the **MIST** position **01** two times in less than 0.5 seconds. The windshield wipers will move to the service position automatically, and the wiper blades can now be replaced.

To move the wiper blades back to the original position:

- Pull the windshield wiper and washer lever up for more than 1 second or push the lever down to operate at any wiper speed.

For more information, refer to the "**Instruments and controls (section 2)**" of your Owner's Manual.

# FIRST DRIVE FEATURES

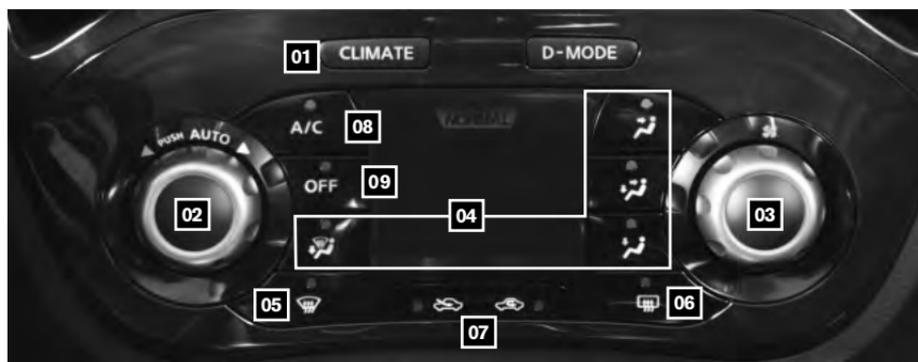

## AUTOMATIC CLIMATE CONTROLS (with Integrated Control System) (if so equipped)

### 01 CLIMATE BUTTON

- Press the **CLIMATE** button to access the Climate Control Mode.
- When in Climate Control Mode, the selected temperature, airflow, and automatic mode or manual mode are indicated on the display.

### 02 AUTO BUTTON/TEMPERATURE CONTROL DIAL

- The auto mode can be used year round. Press the **AUTO** button to turn the system on, and the fan speed, air flow distribution and temperature will be automatically maintained. Turn the temperature control dial left for cooler air or right for warmer air.

### 03 FAN SPEED CONTROL DIAL

- Turn the fan speed control dial  to the left to decrease fan speed or to the right to increase fan speed.

### 04 AIR FLOW CONTROL BUTTONS

- Press the preferred air flow control button to select the following air flow outlets:

-  Air flows from the center and side vents.
-  Air flows from the center, side and foot vents.
-  Air flows mainly from the foot vents.
-  Air flows from the defroster and foot vents.

### 05 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the front window defroster button  to turn the system on. The A/C automatically turns on when the defroster mode is selected. This feature removes humidity from the air.
- Use the temperature control dial **02** to set the desired temperature.
- To set the defroster on high, turn the fan speed control dial **03** to increase the fan speed to the maximum setting.

### 06 REAR WINDOW DEFROSTER SWITCH

- Push the rear window defroster switch  to turn the system on or off.
- The rear window defroster automatically turns off after approximately 15 minutes.

## 07 AIR INTAKE BUTTON

- Press the air intake button to change the air circulation from the air recirculation mode to the outside air circulation mode.
- When the air recirculation indicator light  illuminates, the flowing air is recirculated inside the vehicle. This system is used to avoid outside odors and helps to adjust the inside vehicle temperature more effectively.
- The air recirculation mode cannot be activated when the climate control system is in the front defroster mode  or the front defroster and foot outlet mode .
- When the outside air circulation indicator light  illuminates, the flowing air is drawn from outside the vehicle.

## 08 A/C BUTTON

- Press the **A/C** button to manually turn the A/C on or off.

## 09 OFF BUTTON

- Press the **OFF** button to turn the climate control system off.

For more information, refer to the “**Instruments and controls (section 2)**”, the “**Heater, air conditioner, audio and phone systems (section 4)**” and the “**Starting and driving (section 5)**” of your Owner’s Manual.



## DRIVE MODE (with Integrated Control System) (if so equipped)

### 01 DRIVE MODE SELECT BUTTON

- Press the **D-MODE** select button **01** to switch the display to the Drive mode. While in the Drive mode, setup functions, drive information and ECO information can be displayed and adjusted.
- Your vehicle's Integrated Control System allows vehicle performance to be adjusted by selecting from three drive modes: **NORMAL**, **SPORT** or **ECO**.
- **NORMAL** **02** drive mode is recommended for normal, everyday driving.
- **SPORT** **03** drive mode is recommended for an enhanced performance feel. Fuel economy may be reduced.
- **ECO** **04** drive mode is recommended for maximum fuel economy. Performance may be reduced.

For more information, refer to the “**Instruments and controls (section 2)**”, the “**Heater, air conditioner, audio and phone systems (section 4)**” and the “**Starting and driving (section 5)**” of your Owner’s Manual.

To view detailed instructional videos regarding these and other features, please go to [www.nissanownersinfo.mobi](http://www.nissanownersinfo.mobi).

# FIRST DRIVE FEATURES



## FM/AM/SiriusXM\* SATELLITE RADIO WITH CD PLAYER (if so equipped)

### 01 VOL/ON-OFF CONTROL KNOB

- Press the **VOL/ON-OFF** control knob to turn the system on or off.
- Turn the **VOL/ON-OFF** control knob to the right or left to increase or decrease the volume.

### 02 TUNE/SCROLL/AUDIO KNOB

- To manually tune the radio, turn the **TUNE/SCROLL/AUDIO** knob left or right.

### 03 SEEK/CATEGORY BUTTONS

- To scan through each broadcasting station, press the **SEEK/CATEGORY** buttons.
- To skip from one track to another on a CD, press the **SEEK/CATEGORY** buttons.
- When the **SEEK/CATEGORY** buttons are pressed and held while a CD is playing, the CD will rewind or fast forward. When the button is released, the CD will play at normal speed.

### 04 STATION SELECT BUTTONS

- Twelve stations can be set for the FM band, six for the AM band and eighteen for SiriusXM Satellite Radio.
- To store a station in a preset, you must first select a radio band by pressing the **FM-AM** button **05** or **XM** button **06** then tune to the desired FM, AM or XM Satellite Radio station.
- Next, press and hold the desired station select button (**1-6**) until a beep is heard and the sound is briefly muted. The channel indicator will appear on the display and the sound will resume. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then press the corresponding station select button (**1-6**).

\*SiriusXM Satellite Radio is only available on vehicles equipped with optional SiriusXM Satellite Radio subscription service.

For more information, refer to the "**Heater, air conditioner, audio and phone systems (section 4)**" of your Owner's Manual.

To view detailed instructional videos regarding these and other features,  
please go to [www.nissanownersinfo.mobi](http://www.nissanownersinfo.mobi).

## USB/AUX JACK AND IPOD® INTERFACE (if so equipped)

- The USB/Aux jack **01** is located underneath the climate control.
- When a compatible USB memory device, iPod® or auxiliary device is plugged into the USB/Aux jack, compatible audio files stored on the device can be played through the vehicle's audio system.

For more information, refer to the "**Heater, air conditioner, audio and phone systems (section 4)**" of your Owner's Manual.



## CRUISE CONTROL

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 MPH (40 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **CRUISE ON/OFF** switch **01**. The **CRUISE** indicator light in the instrument panel will illuminate.
- To set cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **02** and release. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **03**. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **02**. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, push the **CANCEL** switch **04**.
- To turn off cruise control, push the **CRUISE ON/OFF** switch **01**. The **CRUISE** indicator light in the instrument panel will turn off.




For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

# SYSTEM GUIDE

## TRIP COMPUTER

With the ignition switch in the **ON** position, trip computer **01** modes can be selected by pressing the trip computer mode switch **02** on the instrument panel. The following modes can be selected in the display:

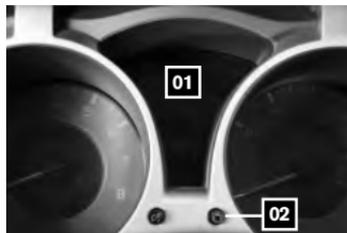

- **Trip A** – measures the distance of one specific trip.
- **Trip B** – measures the distance of a second specific trip.
- **Current Fuel Consumption** – displays the current fuel consumption.
- **Distance to Empty (dte)** – displays the estimated distance to empty (dte) the vehicle can be driven before refueling.
- **Average Fuel Consumption** – displays the average fuel consumption since the last reset.
- **Elapsed Time** – displays the time since the last reset.
- **Torque Vectoring AWD (AWD model)** – displays the current amount of torque distributed to each wheel.

Push the reset switch **02** for approximately 1 second to reset the currently displayed trip odometer to zero.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

## BLUETOOTH® HANDS-FREE PHONE SYSTEM

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.\*

### SYSTEM OPERATING TIPS

- Press the  button to interrupt the voice prompts at any time and speak a command after the tone.
- The “Help” command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing HVAC vents away from the ceiling.
- Speak in a clear and natural voice without pausing between words.
- When speaking Phonebook names, please be aware some phones require the last name to be spoken before the first name. For example, “Michael Smith” may be spoken as “Smith Michael”.



- To cancel a voice recognition session simply wait 5 seconds, say “Cancel” or “Quit”, or press and hold the  button for 5 seconds.
- To increase or decrease the volume of the voice prompts, push the volume control switches + or - on the steering wheel or turn the control dial on the audio system while the audio system is responding.

- If the Voice Recognition system does not recognize your voice commands, train the system using the Voice Adaptation Mode. See your Owner's Manual for detailed information.
- For more detailed information and instructions, refer to your cellular phone's Owner's Manual and visit [www.nissanusa.com/bluetooth](http://www.nissanusa.com/bluetooth).

## CONNECTING PROCEDURE

- The vehicle must be stationary when connecting the phone.
1. Press the  button on the steering wheel. The system announces the available commands.
  2. Say: "Connect phone". The system acknowledges the command and announces the next set of available commands.
  3. Say: "Add phone". The system acknowledges the command and asks you to initiate connecting from the phone handset.
  4. Initiate connecting from the phone:
    - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and compatible phones, please visit [www.nissanusa.com/bluetooth](http://www.nissanusa.com/bluetooth).
    - When prompted for a Passkey code, enter "1234" from the handset. (The Passkey code is assigned by NISSAN and cannot be changed.)
  5. Say a name for the phone when the system asks you to provide one. You can give the phone a name of your choice.

## PHONEBOOK SETUP

- The phonebook stores up to 1,000 names for each phone paired with the system.
  - Depending on your cellular phone, the system may automatically download your cellular phone's entire phonebook to the vehicle's Bluetooth® system.
  - If the phonebook does not download automatically, entries can be individually downloaded.
  - To manually download entries:
    1. Push the  button on the steering wheel.
    2. After the tone, say "Phonebook".
    3. After the next tone, say "Transfer Entry". The system acknowledges the command and asks you to initiate the transfer from the phone handset. The new contact phone number will be transferred from the cellular phone to the vehicle.
  - The transfer procedure varies according to each cellular phone. See your cellular phone's Owner's Manual for details. You can also visit [www.nissanusa.com/bluetooth](http://www.nissanusa.com/bluetooth) for instructions on transferring phone numbers from NISSAN-recommended cellular phones.
4. The system repeats the number and prompts you for the next command. When you have finished entering numbers or transferring an entry, choose "Store".
  5. The system confirms the name, location and number.

# SYSTEM GUIDE

## MAKING A CALL FROM THE PHONEBOOK

1. Press the  button.
2. After waiting for the tone, say "Call".
3. After the next tone, speak a name of a phonebook entry. For example, "Michael Smith".
4. Confirm the correct name is recognized by saying "Dial" after the tone.
5. In some cases, names stored using all UPPERCASE letters may not be recognized by the voice recognition system.

## MAKING A CALL BY PHONE NUMBER

1. Press the  button. A tone will sound.
2. Say: "Call". The system acknowledges the command and announces the next set of available commands.
3. Say: "Phone Number". The system acknowledges the command and announces the next set of available commands.
4. Say the number you wish to call, starting with the area code in single digit format.
5. When you have finished speaking the phone number, the system repeats it back and announces the available commands.
6. Say: "Dial". The system acknowledges the command and makes the call.

## RECEIVING/ENDING A CALL

- When you receive a phone call, a ring tone sounds through the audio system.
- To accept the call, press the  button.
- To reject the call, press the  button.
- To hang up the phone at the end of a call or to disconnect during call placement, press the  button.

For more information, refer to the "**Heater, air conditioner, audio and phone systems (section 4)**" of your Owner's Manual.



## NAVIGATION SYSTEM (if so equipped)

- 01** ☀/☾ - Press to change the display brightness between day and night modes. Press and hold to turn the display off. Press again to turn the display on.
- 02** Touch screen display.
- 03** **MAP** - Press to display the current location map screen.
- 04** **NAV** - Press to access the functions of the Navigation System.
- 05** **TRAF** - Press to view traffic information on the route.
- 06** **SETUP** - Press to access the system settings.
- 07** ↶ **BACK** - Press to return to the previous screen.
- 08** **SCROLL** knob - Turn to scroll through the items in a list. Press to select a menu item.
- 09** SD-card location - An SD-card with map data must be inserted here for map functions to operate.
- 10** Volume control knob - Turn right to increase the volume or left to decrease the volume.

For more information, refer to your Navigation System Owner's Manual.

# MEMO

# MEMO

# MEMO

# MEMO

# MEMO

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. See your Owner's Manual, which contains important safety warnings and information about the operation and maintenance of your vehicle, for complete details. Nissan North America, Inc. reserves the right to make changes, at any time, without prior notice, in prices, colors, materials, equipment, specifications, and models and to discontinue models or equipment. Due to continuous product development and other pre- and post-production factors, actual vehicle, materials and specifications may vary. Some vehicles are shown with optional equipment. See the actual vehicle for complete accuracy. Specifications, options and accessories may differ in Hawaii, U.S. territories and other countries. For additional information on availability, options or accessories, see your NISSAN dealer or contact Nissan North America, Inc.



To view detailed instructional videos,  
go to **[www.nissanownersinfo.mobi/2014/juke](http://www.nissanownersinfo.mobi/2014/juke)**  
or snap this barcode with an appropriate barcode reader.

