


2012 MURANO

QUICK REFERENCE GUIDE



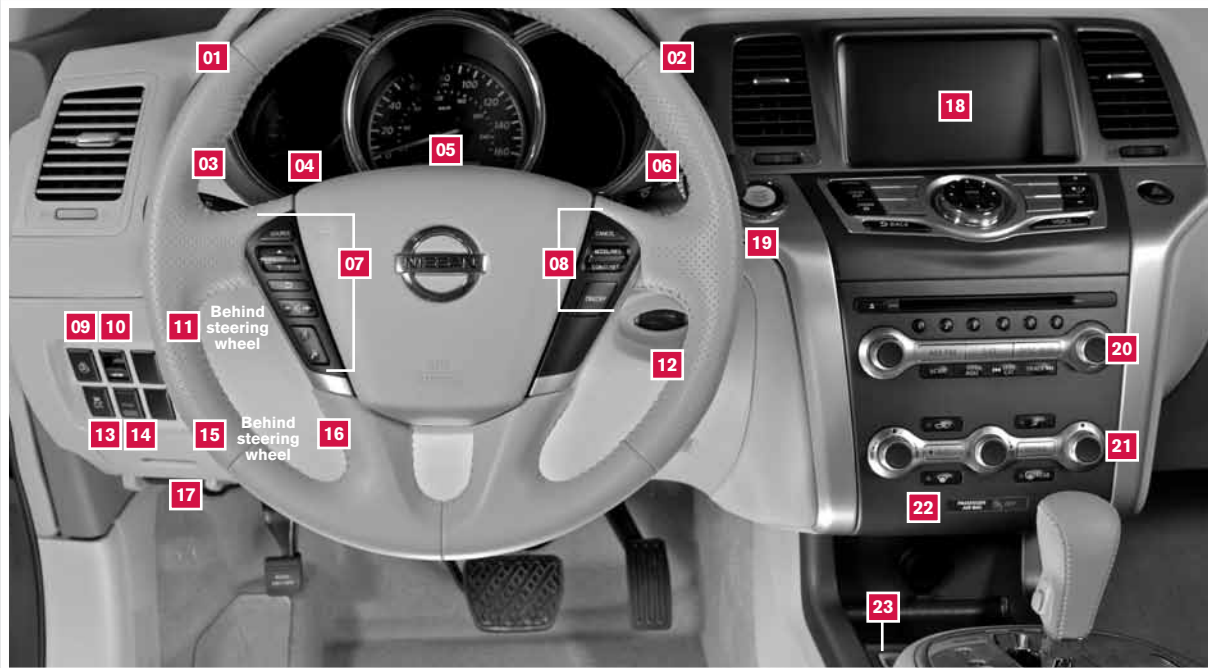

- 01** INSTRUMENT BRIGHTNESS CONTROL*
- 02** TWIN TRIP ODOMETER SWITCHES*
- 03** HEADLIGHT AND TURN SIGNAL CONTROL
- 04** LOW TIRE PRESSURE WARNING LIGHT
- 05** DOT MATRIX LIQUID CRYSTAL DISPLAY*
- 06** WINDSHIELD WIPER / WASHER SWITCH

- 07** STEERING WHEEL SWITCHES FOR AUDIO* / BLUETOOTH* / NAVIGATION
- 08** CRUISE CONTROL
- 09** HEATED STEERING WHEEL SWITCH
- 10** TRUNK LID / LIFTGATE RELEASE SWITCH
- 11** FUEL-FILLER DOOR RELEASE SWITCH
- 12** INTELLIGENT KEY* PORT

- 13** VEHICLE DYNAMIC CONTROL (VDC) OFF SWITCH*
- 14** ALL-WHEEL DRIVE (AWD) LOCK SWITCH*
- 15** REMOTE WALK-IN SWITCH
- 16** TILT / TELESCOPIC STEERING COLUMN*
- 17** HOOD RELEASE*
- 18** CONTROL PANEL DISPLAY*

- 19** PUSH BUTTON IGNITION SWITCH
- 20** AUDIO SYSTEM
- 21** AUTOMATIC CLIMATE CONTROLS
- 22** FRONT PASSENGER AIR BAG STATUS LIGHT*
- 23** SOFT TOP OPENER SWITCH

*See your Owner's Manual for information.

NEW SYSTEM FEATURES

Heated Steering Wheel (if so equipped) 2
 Opening the Soft Top (CrossCabriolet models) 2

ESSENTIAL INFORMATION

Loose Fuel Cap 3
 Tire Pressure Monitoring System (TPMS) 3
 Automatic Power Windows (CrossCabriolet models) 4
 Before Operating the Soft Top (CrossCabriolet models) 4

FIRST DRIVE FEATURES

NISSAN Intelligent Key® System 5
 Power Liftgate Release (Hardtop models - if so equipped) 6
 Trunk Lid Release (CrossCabriolet models) 6
 Soft Top Operation (CrossCabriolet models) 7
 Front Seat Adjustments 7
 Rear Seat Adjustments (Hardtop models) 8
 Rear Seat Entry/Exit (CrossCabriolet models) 9
 Automatic Drive Positioner (if so equipped) 10
 Outside Mirror Control Switch 10
 Starting/Stopping the Engine 11
 Headlight Control Switch 11
 Windshield Wiper/Washer Switch 12
 Automatic Climate Controls (if so equipped) 13
 FM/AM/XM® Satellite Radio with CD/DVD Player (if so equipped) 15
 Cruise Control 16
 Front Armrest/Center Console Storage Box 16
 Fuel-Filler Door 16

SYSTEM GUIDE

Trip Computer 17
 Bluetooth® Hands-free Phone System (if so equipped) 18
 System Operating Tips 18
 Bluetooth® System with Navigation (if so equipped) 19
 Bluetooth® System without Navigation (if so equipped) 20
 Bluetooth® Streaming Audio (with Navigation System - if so equipped) 21
 Navigation System (if so equipped) 22
 HomeLink® Universal Transceiver (if so equipped) 23



- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the **“Safety — Seats, seat belts and supplemental restraint system (section 1)”**, the **“Monitor, heater, air conditioner, audio, phone and voice recognition systems (section 4)”** and the **“Starting and driving (section 5)”** of your Owner’s Manual.



To view detailed instructional videos, go to www.nissanownersinfo.mobi/2012/murano or snap this barcode with an appropriate barcode reader.



Additional information about your vehicle is also available in your Owner’s Manual, Navigation System Owner’s Manual and at www.nissanusa.com.

new system features

HEATED STEERING WHEEL (if so equipped)

- Once activated, your heated steering wheel will automatically turn on and off to maintain a temperature above 68°F (20°C).
- When the surface temperature of the steering wheel is above 68°F (20°C) and the control switch **01** is turned on, the system will not heat the steering wheel. This does not indicate a malfunction.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.




OPENING THE SOFT TOP (CrossCabriolet models)


- The soft top can be opened from outside the vehicle using the door handle request switch **01** as follows:
 - The luggage cover must be pulled out and hung on both hooks.
 - The ignition switch must be in the **OFF** position.
 - Push and hold the door handle request switch **01** until the soft top is fully opened.

NOTE: It is important to make sure the NISSAN Intelligent Key® is with you (that is, in your pocket or purse).

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

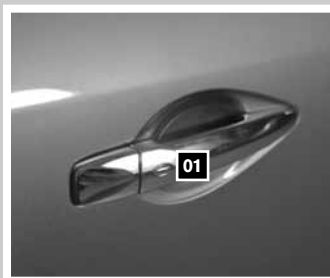

LOOSE FUEL CAP

- A **LOOSE FUEL CAP** warning message will appear in the dot matrix liquid crystal display **01** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will disappear when the vehicle detects the fuel-filler cap is properly tightened and the reset button **02** is pressed.
- If the cap is not properly tightened the Malfunction Indicator Light  may illuminate.

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.



TIRE PRESSURE MONITORING SYSTEM (TPMS)

- A **CHECK TIRE PRESSURE** warning message will appear in the dot matrix liquid crystal display **01** and the low tire pressure warning light **02** will illuminate when one or more tires are low on pressure and air is needed.

- The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mile (1.6km) at moderate speeds.

- After tire pressures are adjusted, drive the vehicle at speeds above 16 MPH (25km/h). The **CHECK TIRE PRESSURE** warning message and low tire pressure warning light will disappear.


- When the low tire pressure warning light flashes for 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked by a NISSAN dealer.

- Tire pressure rises and falls depending on the heat caused by the vehicle’s operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light to illuminate. If the warning light illuminates in low ambient temperature, check the tire pressure in your tires.

- Check the tire pressure (including the spare tire) often and always prior to long distance trips.



- The Tire and Loading Information label contains valuable information. Please refer to section 9, “Technical and consumer information”, in your Owner’s Manual for the location of the Tire and Loading Information label.

For more information, refer to the “**Instruments and controls (section 2)**”, the “**Starting and driving (section 5)**” and the “**Maintenance and do-it-yourself (section 8)**” of your Owner’s Manual.

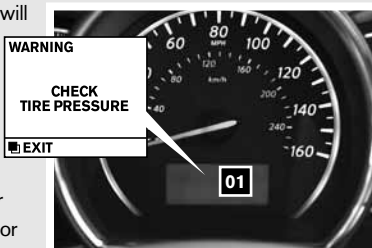

AUTOMATIC POWER WINDOWS (CrossCabriolet models)

- Your power windows have an automatic adjusting function to ensure windows close completely to help seal against wind noise and weather leaks.
- When the front doors are opened, the windows automatically lower slightly to avoid contact between the windows and the side roof panels.
- If your vehicle's battery has been discharged or disconnected, the power window automatic adjusting function will not operate.
- Refer to your Owner's Manual for information on how to initialize your power window system.
- If the power window functions do not operate properly after initializing the system, have your vehicle checked by a NISSAN dealer.

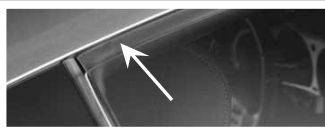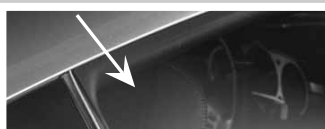

For more information, refer to the **"Instruments and controls (section 2)"** of your Owner's Manual.


BEFORE OPERATING THE SOFT TOP (CrossCabriolet models)

- Do not place anything in the top storage area. Cargo that contacts the top could damage the top and/or the vehicle body. See Caution label **01** in the trunk.
- Do not place anything on the soft top, rear parcel shelf, inner flaps, storage lid or trunk lid. Even small items may interfere with the top operation and could cause damage to the top or the vehicle body.

NOTE: In case of low battery or low temperature, the top may temporarily stop moving during operation.

This functions to protect the top control mechanism. This is not a malfunction.



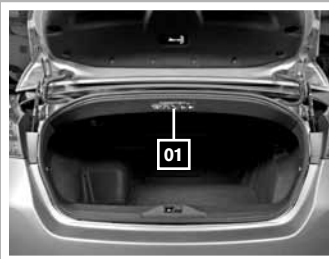

For more information, refer to the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.




NISSAN INTELLIGENT KEY® SYSTEM

The NISSAN Intelligent Key® system allows you to lock or unlock your vehicle, open your liftgate/trunk lid and start the engine.



NOTE: It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

- The operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, push either door handle request switch **01** once or press the  button **02** on the keyfob.
- To unlock the vehicle, perform one of the following procedures:
 - Push either door handle request switch **01** once; the corresponding door will unlock. Push the door handle request switch **01** again within 1 minute; all other doors will unlock, or
 - Press the  button **03** on the keyfob to unlock the driver's side door. Press the  button again; all other doors will unlock.
- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button **04** for more than 1 second. Once activated, the panic alarm and headlights will stay on for 25 seconds.

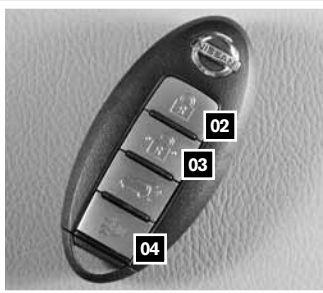

NISSAN INTELLIGENT KEY® BATTERY DISCHARGE

- If the battery in the Intelligent Key is almost discharged, the guide light **05** of the Intelligent Key port blinks and the Intelligent Key battery discharge indicator **06** is displayed in the dot matrix liquid crystal display.
- To start the engine under these circumstances, insert the Intelligent Key into the key port with the buttons facing upward and the key ring end toward you until it latches into place. Then push the ignition switch to start the engine.
- To remove the Intelligent Key from the port, push the ignition switch to turn the engine off and then pull the Intelligent Key out of the port.
- The Intelligent Key port does not charge the Intelligent Key battery. If you see the low battery indicator **06**, replace the battery in the Intelligent Key.

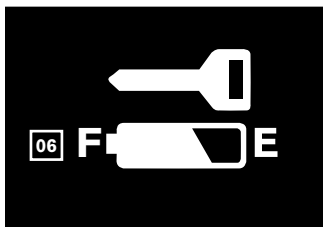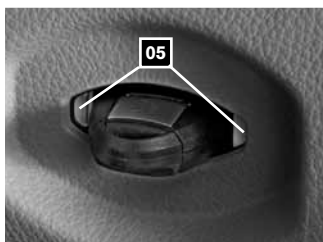


For more information, refer to the “**Pre-driving checks and adjustments (section 3)**”, the “**Starting and driving (section 5)**” and the “**Maintenance and do-it yourself (section 8)**” of your Owner’s Manual.


first drive features

POWER LIFTGATE RELEASE (Hardtop models - if so equipped)

Use one of the following methods to unlatch the liftgate, then pull the liftgate up to open:


- Press the  button **01** on the NISSAN Intelligent Key® for more than 1 second.
- Push the liftgate opener switch **02** while carrying the Intelligent Key with you (that is, in your pocket or purse).
- From inside the vehicle, push the power liftgate switch **03**, located on the instrument panel to the left of the steering wheel.

For more information, refer to the “Pre-driving checks and adjustments (section 3)” of your Owner’s Manual.

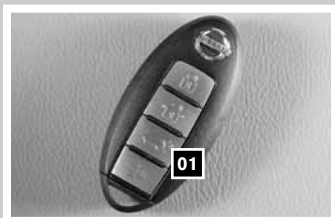


TRUNK LID RELEASE (CrossCabriolet models)

Use one of the following methods to unlatch the trunk lid, then pull the lid up to open the trunk:


- Press the  button **01** on the NISSAN Intelligent Key® for more than 1 second.
- Push the trunk open request switch **02** while carrying the Intelligent Key with you (that is, in your pocket or purse).
- From inside the vehicle, push the trunk lid release switch **03**, located on the instrument panel to the left of the steering wheel.

For more information, refer to the “Pre-driving checks and adjustments (section 3)” of your Owner’s Manual.

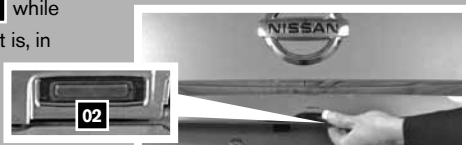

SOFT TOP OPERATION (CrossCabriolet models)

The soft top can be operated only when the trunk is separated by the luggage cover. The luggage cover must be pulled out and hung on both hooks or the top will not operate. Before opening or closing your soft top, refer to the Owner's Manual for detailed warnings and cautions regarding soft top operation.

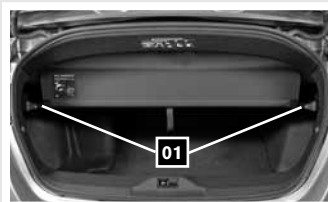

Soft Top Operation

1. Make sure the area around the vehicle is clear of obstructions and that there is more than 10 feet of clearance from the ground and more than 4.9 feet of clearance from the rear of the vehicle.
2. Pull out the luggage cover and hang on both hooks **01**.
3. Apply the parking brake and move the shift lever to the **P (PARK)** position.
4. Depress the brake pedal.
5. Start the engine.
6. Push and hold the soft top operating switch, located on the center console, to **OPEN** **02** or **CLOSE** **03** until the top is fully opened or closed.



For more information, refer to the “**Instruments and controls (section 2)**” and the “**Pre-driving checks and adjustments (section 3)**” of your Owner's Manual.

FRONT SEAT ADJUSTMENTS

MANUAL SEATS (if so equipped)

- To slide the seat forward or backward, pull up on the lever **01** under the front of the seat and slide forward or backward. Release the lever to lock the seat in position.
- To adjust your seatback forward or backward, lift the lever **02** on the side of the seat.
- Release the lever when you have found a comfortable angle and the seat belt fits properly.



SEAT LIFTER (if so equipped)

- To adjust the seat height, pull up or push down on the adjusting lever **03** repeatedly.



LUMBAR SUPPORT (if so equipped)

- Your driver's seat lumbar support **04** is located on the inboard side of the driver's front seat.
- Adjust by moving the lever up or down.




first drive features


POWER SEATS (if so equipped)

- To slide the seat forward or backward, push the control switch  **01** forward or backward.
- To recline the seatback, push the switch  **02** forward or backward.


SEAT LIFTER (if so equipped for driver's seat)

- To adjust the angle of the front seat cushion or height of the seat, push the front or rear end of the switch  **01** up or down.

LUMBAR SUPPORT (if so equipped for driver's seat)

- To adjust the seat lumbar support, push the front or back end of the switch  **03** .


For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner's Manual.

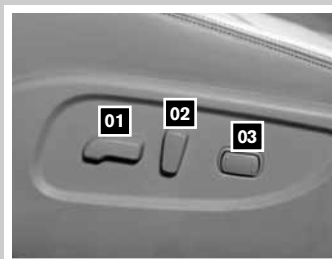

REAR SEAT ADJUSTMENTS (Hardtop models)

FOLDING DOWN THE REAR SEAT

- To fold the seats flat, release the connector tongue of the rear center seat belt from the buckle, then store the connector and seat belt tongues in the retractor base on the ceiling **01** .
- Fold the seatback forward using either the pull strap **02** located on the outside edge of the rear seat or the release lever **03** in the cargo area.
- To raise the seatback manually, lift up each seatback and push it to the upright position until it is latched.
- To raise the seatback automatically (if so equipped), push and hold the power seatback switch located in the cargo area **04** or the corresponding seat switch on the lower side of the instrument panel **05** .
 - A beep sounds once and the seatback begins to move automatically.
 - A beep sounds twice when the seatback is fully returned to the upright seating position.

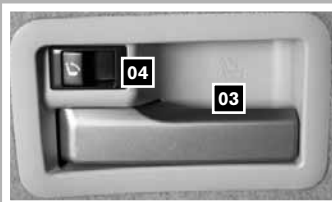


RECLINING THE REAR SEATS

NOTE: Brace the back of the seat with your arm while pulling on the strap. The seatback will release quickly.

- Pull the reclining strap **01** and move the seatback to the desired angle.
- Release the reclining strap after positioning the seat at the desired angle.


For more information, refer to the “**Safety – Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.

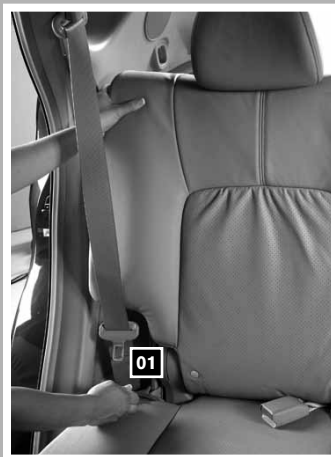

REAR SEAT ENTRY/EXIT (CrossCabriolet models)

DRIVER'S SIDE

- To enter the rear seat, push and hold the front end of the slide switch **01** to slide the driver's seat forward.
- Then push and hold the front end of the reclining switch **02** until the desired angle is obtained.
- To exit the rear seat from the driver's side, pull the strap **03** behind the driver's seat to release the driver's seatback. The driver's seatback will tilt forward so that you can exit the vehicle.

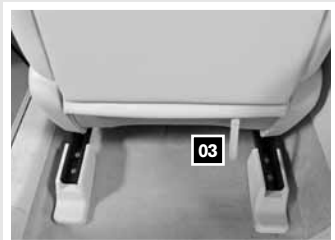

PASSENGER'S SIDE

- To fold down the front passenger's seatback and unlock the seat position, push the front passenger's seatback switch **04**.
- Manually slide the seat forward to the foremost position.
- Enter or exit the back seat.



first drive features

- To slide the front passenger's seat back into position, push the bottom half of the seatback **05** until it locks. Next, adjust the seatback by pulling the seatback lever **06** up. Release the lever to lock the seatback into position.

For more information, refer to the "**Safety – Seats, seat belts and supplemental restraint system (section 1)**" of your Owner's Manual.



AUTOMATIC DRIVE POSITIONER (if so equipped)

- Two positions for the driver's seat, steering column and outside mirrors can be stored in the automatic drive positioner memory.
- Follow these procedures to set the memory positions:
 - Confirm the shift lever is in the **P (PARK)** position.
 - Push the ignition switch to the **ON** position.
 - Adjust the driver's seat, steering column and outside mirrors to the desired positions using the adjusting switches for each feature.
 - Push the **SET** switch and within 5 seconds, push the memory switch (**1** or **2**) for at least 1 second.
 - The indicator light on the memory switch you select will illuminate for approximately 5 seconds.
 - The driver's seat, steering column and outside mirror positions are now set to your preference.
- These memorized positions can also be linked to your NISSAN Intelligent Key®.



For more information, refer to the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.

OUTSIDE MIRROR CONTROL SWITCH

- To select the right or left side mirror, turn the control switch **01** right or left.
- To adjust the mirror angle, move the control switch up, down, right or left.
- To prevent accidentally moving the mirror, turn and set the switch to the middle "neutral" position.



For more information, refer to the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.

STARTING/STOPPING THE ENGINE

- Depress the brake pedal.
- Press the ignition switch **START/STOP** button to start the engine.

NOTE: It is important to make sure the NISSAN Intelligent Key® is with you (that is, in your pocket or purse).

TURNING THE ENGINE OFF

- Move the shift lever to the **P (PARK)** position and apply the parking brake.
- Press the ignition switch **START/STOP** button to turn the engine off.



EMERGENCY ENGINE SHUT OFF

 

To shut off the engine in an emergency situation while driving, perform one of the following procedures:


- Rapidly push the push button ignition switch 3 consecutive times in less than 1.5 seconds, or
- Push and hold the push button ignition switch for more than 2 seconds.

For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.



HEADLIGHT CONTROL SWITCH

HEADLIGHT CONTROL

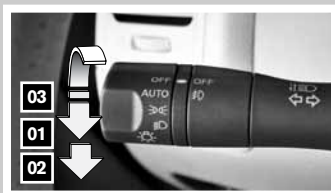
- Turn the headlight control switch to the  position **01** to turn on the front parking, side marker, tail, license plate and instrument panel lights. Turn the switch to the  position **02** to turn on the headlights.




AUTOLIGHT SYSTEM (if so equipped)

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **03** then push the ignition switch to **ON**. To deactivate the autolight system, turn the headlight control switch to the **OFF**,  **01** or  position **02**.

 
HIGH BEAM SELECT


- Push the headlight control switch forward **04** to select the high beam function. The blue indicator light  illuminates in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light goes off.
- Pull and release the headlight control switch **05** to flash the headlight high beams on and off.

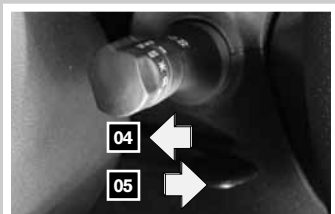


first drive features

FOG LIGHT SWITCH (if so equipped)

NOTE: The headlights must be on and the low beams  selected for the fog lights to operate.

- Turn the switch (inside collar) to the  position **06** to turn the fog lights on.
- Turn the switch (inside collar) to the **OFF** position to turn the fog lights off.


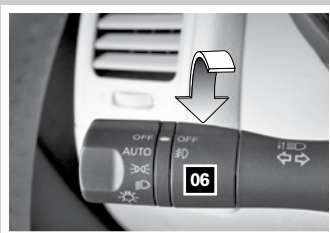


For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

WINDSHIELD WIPER/WASHER SWITCH


- Move the lever to the following positions to operate the windshield wipers:

- 01** Mist (**MIST**) - One sweep operation of the front wipers.
- 02** Auto (**AUTO**) (Hardtop Models – if so equipped) Operates the rain-sensing auto front wiper system. The rain sensor sensitivity level can be adjusted by twisting the time control ring **03**.
- 04** Low (**LO**) - Front wipers operate at a continuous low-speed.
- 05** High (**HI**) - Front wipers operate at a continuous high-speed.
- 06** Pull the lever toward you to activate the front washer. The front wipers will operate several times.

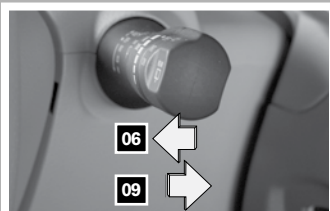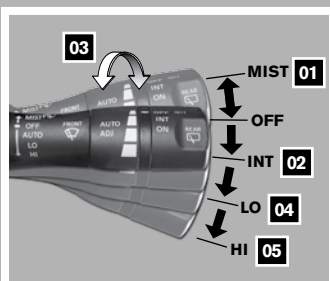

REAR WINDSHIELD WIPER AND WASHER (Hardtop Models)

- 07** Intermittent (**INT**) - Rear wiper operates intermittently.
- 08** Low (**ON**) - Rear wiper operates at a continuous low-speed.
- 09** Push the lever forward to activate the rear washer. The rear wiper will operate several times.

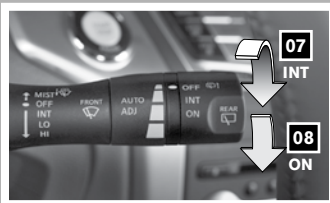

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.



AUTOMATIC CLIMATE CONTROLS (if so equipped)

01 AUTO BUTTON/DRIVER'S SIDE TEMPERATURE CONTROL DIAL

- The auto mode may be used year-round. Press the **AUTO** button to turn the system on and the system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.
- Turn the driver's side temperature control dial to the left for cooler air or right for warmer air.

02 DUAL BUTTON/PASSENGER'S SIDE TEMPERATURE CONTROL DIAL





- Press the **DUAL** button to turn the passenger's side temperature controls on or off. This will allow the passenger's side temperature to be adjusted independently from the driver's side by turning the passenger's side temperature control dial.
- Turn the passenger's side temperature control dial left for cooler air or right for warmer air.

03 ON-OFF BUTTON/FAN SPEED CONTROL KNOB

- Turn the fan speed control knob left to decrease fan speed or right to increase fan speed.
- Press the button to turn the system on or off.



04 MODE BUTTON

- Press the **MODE** button to cycle through the following air flow outlets:

-  Air flows from the center and side vents.
-  Air flows from the center, side and foot vents.
-  Air flows mainly from the foot vents.
-  Air flows from the defroster and foot vents.


05 INTAKE AIR CONTROL BUTTON

AIR RECIRCULATION

- Press the intake air control button  to recirculate interior air inside the vehicle. The indicator light on the button will come on. This system is used to avoid certain outside odors and helps to adjust the inside vehicle temperature more effectively.
- The air recirculation mode cannot be activated when the air conditioner is in the front defrosting mode .

first drive features


OUTSIDE AIR CIRCULATION

- Press the intake air control button  again to draw outside air into the passenger compartment. The indicator light on the button will turn off.


AUTOMATIC INTAKE AIR CONTROL (if so equipped)

- In the auto mode, the intake air will be controlled automatically. To manually control the intake air, press the intake air control button. To return to the automatic control mode, press the intake air control button for about 2 seconds.


06 UPPER VENT BUTTON

- When the upper vent button  is pressed, the air flow against the driver's or passenger's upper body becomes gentle. The indicator light on the button will illuminate.
- In this mode, air from the upper ventilator flows to control the cabin temperature without blowing air directly on the occupants.

07 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the defroster control button  to turn the system on. The A/C automatically turns on when the defroster mode is selected. This feature removes humidity from the air.
- Turn the temperature control dial **01** to set the desired temperature.
- To defrost the front and side windows quickly, set the temperature controls and fan speed controls to their maximum settings.


08 DEFROSTING REAR WINDOW AND OUTSIDE MIRRORS (if so equipped)

- Press the rear window defroster switch  **REAR** to turn the system on or off.
- This function automatically turns off after approximately 15 minutes.

09 A/C BUTTON

- Press the **A/C** button to turn the air conditioner system on or off. This system helps cool and dehumidify the air inside the cabin and defog the windows.

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Monitor, heater, air conditioner, audio, phone and voice recognition systems (section 4)**” of your Owner's Manual.

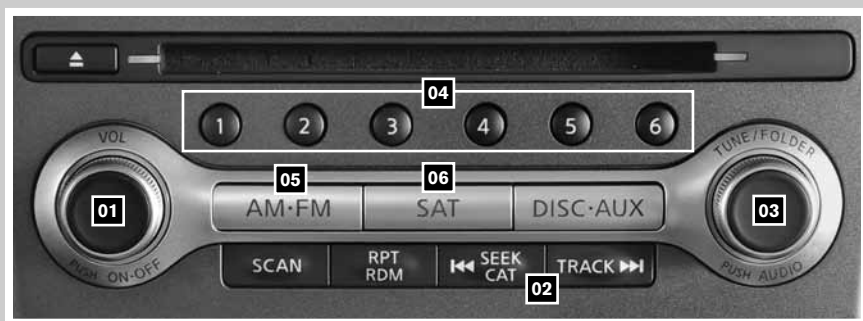

FM/AM/XM[®]* SATELLITE RADIO WITH CD/DVD PLAYER (if so equipped)

01 VOL/ON-OFF CONTROL KNOB

- Press the **VOL/ON-OFF** control knob to turn the system on or off.
- Turn the knob right or left to increase or decrease the volume.

02 SEEK/CAT AND TRACK BUTTONS

- To scan quickly through each broadcasting station, press the **◀◀ SEEK/CAT** button or the **TRACK ▶▶** button to stop at the previous or next broadcast station.
- For XM[®] satellite radio, to switch to the first channel of the previous or next category, press the **◀◀ SEEK/CAT** button or the **TRACK ▶▶** button.
- To change tracks on a CD, press the **◀◀ SEEK/CAT** button or the **TRACK ▶▶** button.
- To fast forward or rewind a track on a CD, press and hold the **◀◀ SEEK/CAT** button or the **TRACK ▶▶** button.

03 TUNE/FOLDER/AUDIO CONTROL KNOB

- To manually tune the radio, turn the **TUNE/FOLDER/AUDIO** knob left or right.

04 STATION PRESET BUTTONS

- Twelve stations can be set for the FM band, six for the AM band and eighteen for XM satellite radio.
- To store a station in a preset, you must first select a radio band by pressing the **AM-FM** button **05** or **SAT** button **06**, then tune to the desired AM, FM or XM satellite station.
- Then press and hold the desired station preset button (**1-6**) until the sound is briefly muted. The channel indicator will then display and the sound will resume. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then press the corresponding station select button (**1-6**).

*XM[®] Satellite Radio is only available on vehicles equipped with optional XM[®] satellite subscription service.


For more information, refer to the **"Monitor, heater, air conditioner, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

first drive features

CRUISE CONTROL

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 mph.
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **ON/OFF** switch **01**. The **CRUISE** indicator light in the instrument panel will illuminate.
- To set cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **02** and release. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **03**. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **02**. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, tap the brake pedal or push the **CANCEL** switch **04**.
- To turn off cruise control, push the **ON/OFF** switch **01**. The **CRUISE** indicator light in the instrument panel will turn off.

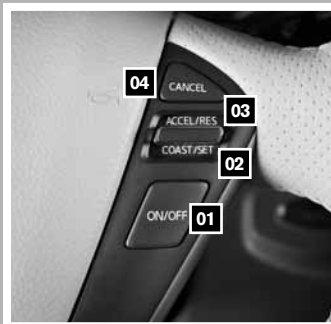

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

FRONT ARMREST/CENTER CONSOLE STORAGE BOX

- To access the top storage bin, pull up on the driver’s side lever **01**.
- To access the bottom storage bin, pull up on the passenger side lever **02**.


For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.




FUEL-FILLER DOOR



- To open the fuel-filler door, push the opener switch **01**, located on the instrument panel to the left of the steering wheel.
- The fuel-filler door is located on the driver’s side of the vehicle.

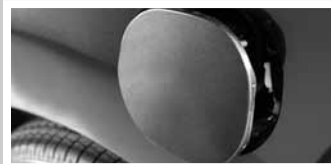
For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.



TRIP COMPUTER

■ When the  button **01** is pressed, the following modes will appear on the dot matrix liquid crystal display **02** :

- **MPG/AVG** – Displays the current and average fuel consumption since the last reset.
- **MPG/MPH** – Displays the average fuel consumption and speed since the last reset.
- **TIME/miles** – Displays the elapsed time and total distance the vehicle has been driven since the last reset.
- **RANGE** – Displays the estimated distance to empty (dte) the vehicle can be driven before refueling.
- **OUTSIDE TEMP** – Displays the exterior air temperature including a low temperature warning feature.
- **SETTING** – Allows you to set reminders for alerts and maintenance intervals or change the language and units used in the system.
 - Press the  button **03** to cycle through the various setting modes.
 - Press the  button **01** to choose the selected menu.
- **WARNING** – If there are any.

 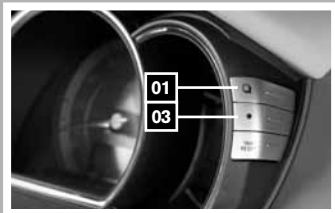

 
 
 
 
 
 




For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

BLUETOOTH® HANDS-FREE PHONE SYSTEM (if so equipped)

- With an overhead microphone and sound transmitted through the audio system speakers, the Bluetooth® Hands-free Phone System utilizes Bluetooth wireless technology and voice recognition to provide hands-free cellular phone communication.
- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.*

SYSTEM OPERATING TIPS

- Close all windows. Surrounding noises may interfere with system operation and performance.
- Press the  or  button on the steering wheel to activate voice recognition.
- Wait for the tone before speaking.
- Begin speaking a command within 5 seconds of the tone.
- Speak in a clear and natural voice without pausing between words.
- Look straight ahead and avoid speaking too loudly or too softly.
- To go back to the previous command, say "Go back".
- To cancel a voice recognition session, say "Exit" or press and hold the  or  button.
- To interrupt the system voice and give a command quickly, press the  or  button.
- When speaking Phonebook names, please be aware some phones require the last name to be spoken before the first name. For example, "Michael Smith" may be spoken as "Smith Michael".
- To increase or decrease the volume of the voice prompts, push the volume control switches  or  on the steering wheel or turn the **VOL/ON-OFF** control knob on the audio system while the system is responding.
- If the Voice Recognition system does not recognize your voice commands, train the system using the Speaker Adaptation Mode. See your Owner's Manual for detailed information.
- Some commands are not available while the vehicle is in motion.
- The "Help" command can be used to hear a list of available commands at any time.
- Please refer to the cellular phone manufacturer's Owner's Manual for detailed information regarding your Bluetooth phone.

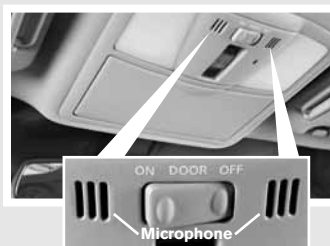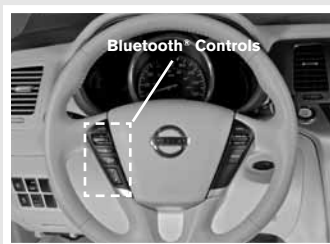


*Some jurisdictions prohibit the use of cellular telephones while driving.

Bluetooth® System with Navigation (if so equipped)

CONNECTING PROCEDURE

NOTE: The vehicle must be stationary when connecting the phone.




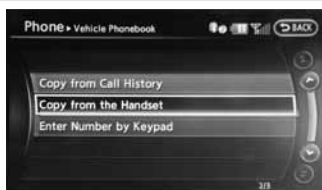
1. Press the **PHONE** button on the instrument panel or the  button on the steering wheel and select the "Connect Phone" key.
2. Initiate connecting from the phone.
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible phones, please visit www.nissanusa.com/bluetooth.
 - When prompted for a PIN code, enter "1234" from the handset. (The PIN code is assigned by NISSAN and cannot be changed.)
3. When the connecting is complete, the screen will return to the Phone menu display.



PHONEBOOK SETUP

- Depending on your cell phone, the system may automatically download your cell phone's entire phonebook to the vehicle's Bluetooth system.
- If the phonebook does not download automatically, the vehicle phonebook may be set for up to 1,000 entries.
- To manually download entries:


1. Press the  button and select the "Vehicle Phonebook" key.
2. Select the "Add New" key at the top of the display. There are different methods to input a phone number. Select one of the following options:
 - "Copy from Call History" to save a number from the Outgoing, Incoming or Missed Calls lists.
 - "Copy from the Handset" to save a number that has been downloaded from your handset to the vehicle.
 - "Enter Number by Keypad" to input the number and name manually.



system guide



MAKING A CALL

To make a call, follow this procedure:

1. Press the **PHONE** button on the instrument panel or the  button on the steering wheel. The "Phone" menu will appear on the control panel display.
2. Select the "Vehicle Phonebook", "Call History", "Handset Phonebook" or "Dial Number" key.
3. Select the desired entry from the list.
4. Select "Call" to start dialing the number.




RECEIVING/ENDING A CALL

- To accept the call, press the **PHONE** button on the instrument panel or the  button on the steering wheel or touch the "Answer" key. To reject the call, touch the "Reject Call" key.
- To hang-up, press the **PHONE** button on the instrument panel or the  button or touch the "Hang-Up" key.



Bluetooth® System without Navigation (if so equipped)

PAIRING PROCEDURE


1. Press the  button on the steering wheel. The system announces the available commands.
2. Say "Connect Phone". The system acknowledges the command and announces the next set of available commands.
3. Say "Add Phone". The system acknowledges the command and asks you to initiate connecting from the phone handset.
4. Initiate pairing from the phone.
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible phones, please visit www.nissanusa.com/bluetooth.
 - When prompted for a PIN code, enter "1234" from the handset. (The PIN code is assigned by NISSAN and cannot be changed.)
5. The system asks for a name for the phone. Say "Yes". The system acknowledges the command and registers the cellular phone.






PHONEBOOK REGISTRATION

- When the cellular phone is connected to the in-vehicle module, the data stored in the cellular phone such as phonebook, outgoing call logs, incoming call logs and missed call logs is automatically transferred and registered to the system.
- The availability of this function depends on each cellular phone. The copying procedure also varies according to each cellular phone. See your cellular phone Owner's Manual for more information.
- Up to 1,000 phone numbers per registered cellular phone can be stored in the phonebook.

MAKING A CALL

1. Push the  button on the steering wheel. A tone will sound.
2. Say "Call". The system acknowledges the command and announces the next set of available commands.
3. Say the registered person's name. The system acknowledges the command and announces the next set of available commands.
4. Say "Yes". The system acknowledges the command and makes the call.

RECEIVING/ENDING A CALL

- To accept the call, press the  button on the steering wheel. To reject the call, press the  button.
- To hang-up, press the  button.

For more information, refer to the "Monitor, heater, air conditioner, audio, phone and voice recognition systems (section 4)" of your Owner's Manual or please visit www.nissanusa.com/bluetooth.

BLUETOOTH® STREAMING AUDIO (with Navigation System - if so equipped)

- If you have a compatible Bluetooth® device with streaming audio (A2DP profile), you can set up the wireless connection between your Bluetooth device and your vehicle's audio system. This connection allows you to listen to audio from the Bluetooth device using your vehicle's speakers.
- A cellular phone should not be used while driving so full attention may be given to vehicle operation.*



CONNECTING PROCEDURE

1. Press the **SETTING** button and select the "Bluetooth" key.
2. Select the "Connect Bluetooth" key.
3. A confirmation screen will be displayed. Select "No".

*Some jurisdictions prohibit the use of cellular telephones while driving.

4. Choose a PIN code to use with the compatible Bluetooth audio device using the number input screen. The PIN code will need to be entered into the Bluetooth audio device after step 5. Select the “OK” key.
5. The standby message screen will appear. For the connecting procedure of your audio device, see your device’s Bluetooth audio instructions.
6. When the connecting is completed, the screen will return to the Bluetooth setup display.

For more information, refer to the “**Monitor, heater, air conditioner, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual or please visit www.nissanusa.com/bluetooth.



NAVIGATION SYSTEM (if so equipped)

- Your Navigation System can calculate a route from the current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle’s position. If you have deviated from the original route, it will recalculate the route from your current location.
- Press the **INFO** button to access important data such as distance to empty and maintenance interval reminders.

For more information, refer to your Navigation System Owner’s Manual.



HOMELINK® UNIVERSAL TRANSCEIVER (if so equipped)

- The HomeLink® system can learn and consolidate the functions of up to three different hand-held transmitters, operating items such as garage doors, property gates, outdoor and indoor lights or alarm systems.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual, the HomeLink® website at www.homelink.com or call 1-800-355-3515.

memo

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. See your Owner's Manual, which contains important safety warnings and information about the operation and maintenance of your vehicle, for complete details. Nissan North America, Inc. reserves the right to make changes, at anytime, without prior notice, in prices, colors, materials, equipment, specifications, and models and to discontinue models or equipment. Due to continuous product development and other pre- and post-production factors, actual vehicle, materials and specifications may vary. Some vehicles are shown with optional equipment. See the actual vehicle for complete accuracy. Specifications, options and accessories may differ in Hawaii, U.S. territories and other countries. For additional information on availability, options or accessories, see your NISSAN dealer or contact Nissan North America, Inc.



To view detailed instructional videos,
go to www.nissanownersinfo.mobi/2012/murano
or snap this barcode with an appropriate barcode reader.

