


2014 MURANO

QUICK REFERENCE GUIDE



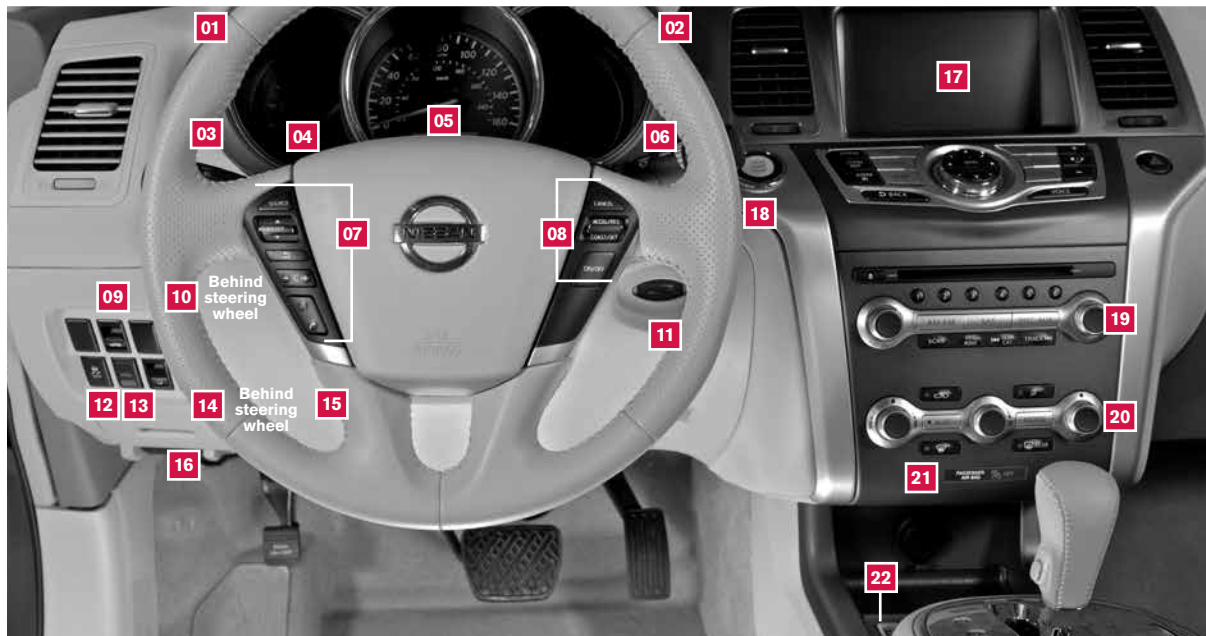

- 01** INSTRUMENT BRIGHTNESS CONTROL SWITCH*
- 02** TWIN TRIP ODOMETER SWITCHES*
- 03** HEADLIGHT AND TURN SIGNAL CONTROL
- 04** LOW TIRE PRESSURE WARNING LIGHT
- 05** VEHICLE INFORMATION DISPLAY
- 06** WINDSHIELD WIPER AND WASHER SWITCH

- 07** STEERING WHEEL SWITCHES FOR AUDIO* / BLUETOOTH* / NAVIGATION
- 08** CRUISE CONTROL
- 09** TRUNK LID / LIFTGATE RELEASE SWITCH
- 10** FUEL-FILLER DOOR RELEASE SWITCH
- 11** INTELLIGENT KEY® PORT

- 12** VEHICLE DYNAMIC CONTROL (VDC) OFF SWITCH*
- 13** ALL-WHEEL DRIVE (AWD) LOCK SWITCH*
- 14** REMOTE WALK-IN SWITCH
- 15** TILT / TELESCOPIC STEERING COLUMN*
- 16** HOOD RELEASE*
- 17** CONTROL PANEL DISPLAY*

- 18** PUSH-BUTTON IGNITION SWITCH
- 19** AUDIO SYSTEM
- 20** AUTOMATIC CLIMATE CONTROLS
- 21** FRONT PASSENGER AIR BAG STATUS LIGHT*
- 22** SOFT TOP OPENER SWITCH

*See your Owner's Manual for information.

NEW SYSTEM FEATURES

Heated Steering Wheel (if so equipped) 2
 Moving Object Detection (MOD) (if so equipped) 2
 Blind Spot Warning (BSW) System (if so equipped) 2
 Lane Departure Warning (LDW) System (if so equipped) 3
 RearView Monitor (if so equipped) 3

ESSENTIAL INFORMATION

Tire Pressure Monitoring System (TPMS) 4
 Loose Fuel Cap 4
 Fuel-filler Door 4
 Towing Your Vehicle 5
 Clock Set/Adjustment 5
 Automatic Power Windows (CrossCabriolet models) 5

FIRST DRIVE FEATURES

NISSAN Intelligent Key® System 6
 Power Liftgate Release (Hardtop models - if so equipped) 7
 Trunk Lid Release (CrossCabriolet models) 7
 Soft Top Operation (CrossCabriolet models) 8
 Front Seat Adjustments 9
 Automatic Drive Positioner (if so equipped) 9
 Rear Seat Adjustments (Hardtop models) 10
 Rear Seat Entry/Exit (CrossCabriolet models) 10
 Outside Mirror Control Switch 11
 Starting/Stopping the Engine 11
 Headlight Control Switch 12
 Windshield Wiper and Washer Switch 13
 Automatic Climate Controls (if so equipped) 14
 FM/AM/SiriusXM® Satellite Radio with CD/DVD Player (if so equipped) . 16
 USB/iPod® Interface (if so equipped) 17
 Cruise Control 17
 Front Armrest/Center Console Storage Box 17

SYSTEM GUIDE

Trip Computer 18
 Bluetooth® Hands-free Phone System (if so equipped) 19
 System Operating Tips 19
 Bluetooth® System with Navigation (if so equipped) 20
 Bluetooth® System without Navigation (if so equipped) 21
 Bluetooth® Streaming Audio (with Navigation System - if so equipped) . . . 22
 Navigation System (if so equipped) 23
 HomeLink® Universal Transceiver (if so equipped) 24



Please see your Owner's Manual for important safety information, and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)", the "Monitor, heater, air conditioner, audio, phone and voice recognition systems (section 4)" and the "Starting and driving (section 5)" of your Owner's Manual.



To view detailed instructional videos, go to www.nissanownersinfo.mobi/2014/murano or snap this barcode with an appropriate barcode reader.



Additional information about your vehicle is also available in your Owner's Manual, Navigation System Owner's Manual and at www.nissanusa.com.

NEW SYSTEM FEATURES

HEATED STEERING WHEEL (if so equipped)

- Once activated, your heated steering wheel will automatically turn on and off to maintain a temperature above 68°F (20°C).
- When the surface temperature of the steering wheel is above 68°F (20°C) and the control switch **01** is turned on, the system will not heat the steering wheel. This does not indicate a malfunction.



For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

MOVING OBJECT DETECTION (MOD) (if so equipped)

- If the **MOD** system detects moving objects while in rearview, a yellow frame **01** will be displayed on the camera image and a chime will sound.
- To temporarily disable the **MOD** function, follow this procedure:
 1. Start with the vehicle in the **P (PARK)** position.
 2. On the vehicle information display, push the **SETTING** button.
 3. Select **DRIVER ASSISTANCE** and push **ENTER**.
 4. Select **MOVING OBJECT DETECTION (MOD)** and press **ENTER**.
- When the following are displayed:
 - Blue **MOD 02** icon; the system is operative in this view.
 - Gray **MOD 02** icon; the system is not operative in this view.
 - No **MOD** icon; the system is off.



For more information, refer to the “**Monitor, heater, air conditioner, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

BLIND SPOT WARNING (BSW) SYSTEM (if so equipped)

- The Blind Spot Warning (BSW) system alerts the driver when another vehicle moves into the vehicle’s blind spot area.
- An indicator light near the driver’s outside mirror will illuminate if the radar sensors detect a vehicle in the detection zone.
- The indicator light will first illuminate in orange and then turn green while the system is on. This indicates that the Blind Spot Warning (BSW) system is operational.



For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

LANE DEPARTURE WARNING (LDW) SYSTEM (if so equipped)

- The **LANE DEPARTURE WARNING (LDW)** system alerts the driver when the vehicle moves close to either the left or the right of a clearly marked traveling lane.
- When the vehicle approaches either the left or right of the clearly marked traveling lane, a chime will sound and the **LDW** light **01** (orange) on the instrument panel will blink.



For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

REARVIEW MONITOR (if so equipped)

- When the shift lever is shifted into the **R (REVERSE)** position, the monitor display shows a rearward view from the vehicle.
- The colored guide lines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line:
 - Red 1.5 ft (0.5 m); Yellow 3 ft (1 m); Green 7 ft (2 m) and 10 ft (3 m).




For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

ESSENTIAL INFORMATION


TIRE PRESSURE MONITORING SYSTEM (TPMS)


- A **CHECK TIRE PRESSURE** warning message will appear in the vehicle information display **01** and the low tire pressure warning light **02** will illuminate when one or more tires are low on pressure and air is needed.
 - The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mile (1.6 km) at moderate speeds.
- After tire pressures are adjusted, drive the vehicle at speeds above 16 MPH (25 km/h). The **CHECK TIRE PRESSURE** warning message and low tire pressure warning light will disappear.
- When the low tire pressure warning light flashes for 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked by a NISSAN dealer.
- Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light to illuminate. If the warning light illuminates, check the tire pressure in your tires.
 - Check the tire pressure (including the spare tire) often and always prior to long distance trips.
- The Tire and Loading Information label contains valuable information. Please refer to section 9, "Technical and consumer information", in your Owner's Manual for the location of the Tire and Loading Information label.

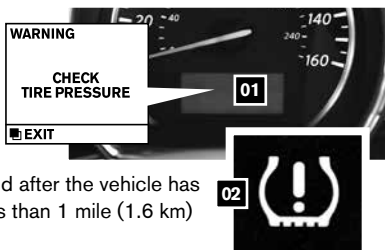

For more information, refer to the "Instruments and controls (section 2)", the "Starting and driving (section 5)" and the "Maintenance and do-it-yourself (section 8)" of your Owner's Manual.

LOOSE FUEL CAP

- A **LOOSE FUEL CAP** warning message will appear in the vehicle information display **01** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will disappear when the vehicle detects the fuel-filler cap is properly tightened and the reset button **02** is pressed.
- If the cap is not properly tightened, the Malfunction Indicator Light  may illuminate.

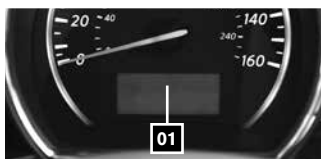

For more information, refer to the "Instruments and controls (section 2)" and the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

FUEL-FILLER DOOR

- To open the fuel-filler door, push the opener switch **01**, located on the instrument panel to the left of the steering wheel.
- The fuel-filler door is located on the driver's side of the vehicle.



For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

To view detailed instructional videos regarding features in this Quick Reference Guide, please go to www.nissanownersinfo.mobi.

TOWING YOUR VEHICLE

ALL-WHEEL DRIVE (AWD) VEHICLE

- An all-wheel drive vehicle must be towed with all wheels off the ground.
- For proper towing and to avoid accidental damage to your vehicle, NISSAN recommends that a service operator tow your vehicle after carefully reading the Owner's Manual precautions.

For more information, refer to the “**In case of emergency (section 6)**” of your Owner's Manual.

CLOCK SET/ADJUSTMENT

- To adjust the time and the appearance of the clock on the display:
 1. Press the **SETTING** button on the control panel.
 2. Touch the **Others** key.
 3. Touch the **Clock** key.

- The following settings can be adjusted:

- **On-screen Clock:** The clock in the upper right corner of the display can be turned ON or OFF.
- **Clock Format (24h):** The clock can be set to 12 hours or 24 hours.
- **Offset (hour):** The time can be adjusted by increasing or decreasing per hour.
- **Offset (min):** The time can be adjusted by increasing or decreasing per minute.
- **Daylight Savings Time:** The application of daylight savings time can be turned ON or OFF.
- **Time Zone:** Adjust the time zone. Choose a time zone from the available list.

- Press the **BACK** button to return to the previous screen.



For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner's Manual.

AUTOMATIC POWER WINDOWS (CrossCabriolet models)

- Your power windows have an automatic adjusting function to ensure windows close completely to help seal against wind noise and weather leaks.
- When the front doors are opened, the windows automatically lower slightly to avoid contact between the windows and the side roof panels.
- If your vehicle's battery has been discharged or disconnected, the power window automatic adjusting function will not operate.
- Refer to your Owner's Manual for information on how to initialize your power window system.
- If the power window functions do not operate properly after initializing the system, have your vehicle checked by a NISSAN dealer.



For more information, refer to the “**Instruments and controls (section 2)**” of your Owner's Manual.

FIRST DRIVE FEATURES

NISSAN INTELLIGENT KEY® SYSTEM



The NISSAN Intelligent Key® system allows you to lock or unlock your vehicle, open your trunk lid and start the engine. It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

- The operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, push either door handle request switch **01** once or press the **L** button **02** on the key fob.
- To unlock the vehicle, perform one of the following procedures:
 - Push either door handle request switch **01** once; the corresponding door will unlock. Push the door handle request switch **01** again within 1 minute; all other doors will unlock, or
 - Press the **L** button **03** on the key fob to unlock the driver's side door. Press the **L** button again; all other doors will unlock.
- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the **PA** button **04** for more than 1 second. Once activated, the panic alarm and headlights will stay on for a period of time.



NISSAN INTELLIGENT KEY® BATTERY DISCHARGE


- If the battery in the Intelligent Key is almost discharged, the guide light **05** of the Intelligent Key port blinks, and the key battery discharge indicator **06** is displayed in the vehicle information display.
- To start the engine under these circumstances, insert the Intelligent Key into the key port with the buttons facing upward and the key ring end toward you until it latches into place. Then push the ignition switch to start the engine.
- To remove the Intelligent Key from the port, push the ignition switch to turn the engine off and then pull the Intelligent Key out of the port.
- The Intelligent Key port does not charge the Intelligent Key battery. If you see the key battery discharge indicator **06**, replace the battery in the Intelligent Key.
- Do not insert the mechanical key or other objects into the key port because they will damage the key port.

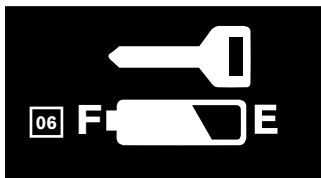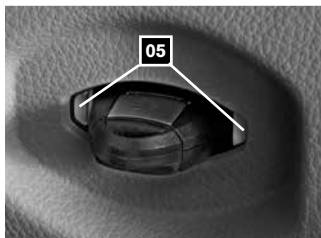


For more information, refer to the “**Pre-driving checks and adjustments (section 3)**”, the “**Starting and driving (section 5)**” and the “**Maintenance and do-it yourself (section 8)**” of your Owner's Manual.

POWER LIFTGATE RELEASE (Hardtop models - if so equipped)

Use one of the following methods to unlatch the liftgate, then pull the liftgate up to open:


- Press the  button **01** on the NISSAN Intelligent Key[®] for more than 1 second.
- Push the liftgate opener switch **02** while carrying the Intelligent Key with you (that is, in your pocket or purse).
- From inside the vehicle, push the power liftgate switch **03**, located on the instrument panel to the left of the steering wheel.

For more information, refer to the “Pre-driving checks and adjustments (section 3)” of your Owner’s Manual.

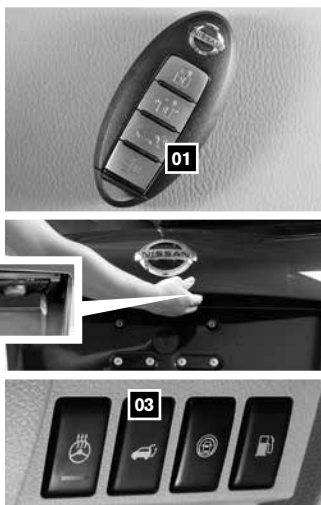


TRUNK LID RELEASE (CrossCabriolet models)

Use one of the following methods to unlatch the trunk lid, then pull the lid up to open the trunk:

- Press the  button **01** on the NISSAN Intelligent Key[®] for more than 1 second.
- Push the trunk open request switch **02** while carrying the Intelligent Key with you (that is, in your pocket or purse).
- From inside the vehicle, push the trunk lid release switch **03**, located on the instrument panel to the left of the steering wheel.

For more information, refer to the “Pre-driving checks and adjustments (section 3)” of your Owner’s Manual.

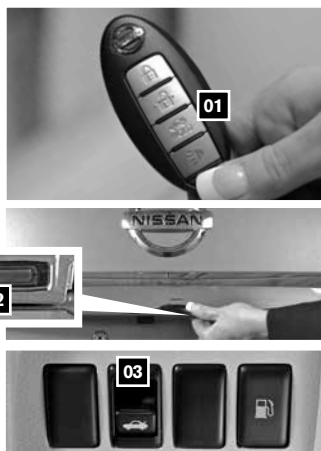

FIRST DRIVE FEATURES

SOFT TOP OPERATION (CrossCabriolet models)

The soft top can be operated only when the trunk is separated by the luggage cover. The luggage cover must be pulled out and hung on both hooks or the top will not operate. Before opening or closing your soft top, refer to the Owner's Manual for detailed warnings and cautions regarding soft top operation.

BEFORE OPERATING THE SOFT TOP

- Do not place anything in the top storage area. Cargo that contacts the top could damage the top and/or the vehicle body. See the Caution label in the trunk.
- Do not place anything on the soft top, rear parcel shelf, inner flaps, storage lid or trunk lid. Even small items may interfere with the top operation and could cause damage to the top or the vehicle body.
- In case of low battery or low temperature, the top may temporarily stop moving during operation. This function is to protect the top control mechanism. This is not a malfunction.

SOFT TOP OPERATION

1. Make sure the area around the vehicle is clear of obstructions and that there is more than 10 feet (3 m) of clearance from the ground and more than 4.9 feet (1.5 m) of clearance from the rear of the vehicle.
2. Pull out the luggage cover and hang on both hooks **01**.
3. Apply the parking brake and move the shift lever to the **P (PARK)** position.
4. Depress the brake pedal.
5. Start the engine.
6. Push and hold the soft top operating switch, located on the center console, to **OPEN 02** or **CLOSE 03** until the top is fully opened or closed.



OPENING THE SOFT TOP USING THE INTELLIGENT KEY

- It is important to make sure the NISSAN Intelligent Key® is on you (that is, in your pocket or purse).
- The soft top can be opened from outside the vehicle using the door handle request switch **04** as follows:
 - The luggage cover must be pulled out and hung on both hooks.
 - The ignition switch must be in the OFF position.
 - Push and hold the door handle request switch **04** until the soft top is fully opened.



For more information, refer to the “**Instruments and controls (section 2)**” and the “**Pre-driving checks and adjustments (section 3)**” of your Owner's Manual.



FRONT SEAT ADJUSTMENTS

MANUAL SEATS (Passenger's side only)


- To slide the seat forward or backward, pull up on the lever **01** under the front of the seat and slide forward or backward. Release the lever to lock the seat in position.
- To adjust your seatback forward or backward, lift the lever **02** on the side of the seat.
- Release the lever when you have found a comfortable angle and the seat belt fits properly.



POWER SEATS (Driver's side only)


- To slide the seat forward or backward, push the control switch  **03** forward or backward.
- To recline the seatback, push the switch  **04** forward or backward.

SEAT LIFTER

- To adjust the angle of the front seat cushion or height of the seat, push the front or rear end of the switch  **03** up or down.



LUMBAR SUPPORT

- To adjust the seat lumbar support, push the front or back end of the switch  **05**.

For more information, refer to the **"Safety — Seats, seat belts and supplemental restraint system (section 1)"** of your Owner's Manual.

AUTOMATIC DRIVE POSITIONER (if so equipped)

- Two positions for the driver's seat and outside mirrors can be stored in the automatic drive positioner memory.
- Follow these procedures to set the memory positions:
 - Confirm the shift lever is in the **P (PARK)** position.
 - Push the ignition switch to the **ON** position.
 - Adjust the driver's seat and outside mirrors to the desired positions using the adjusting switches for each feature.
 - Push the **SET** switch and within 5 seconds push the memory switch (**1** or **2**) for at least 1 second.
 - The indicator light on the memory switch you select will illuminate for approximately 5 seconds.
 - The driver's seat and outside mirror positions are now set to your preference.
- These memorized positions can also be linked to your NISSAN Intelligent Key®.




For more information, refer to the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.

FIRST DRIVE FEATURES

REAR SEAT ADJUSTMENTS (Hardtop models)

FOLDING DOWN THE REAR SEAT

- To fold the seats flat, release the connector tongue of the rear center seat belt from the buckle, then store the connector and seat belt tongues in the retractor base on the ceiling **01**.
- Fold the seatback forward using either the pull strap **02**, located on the outside edge of the rear seat, or the release lever **03** in the cargo area.
- To raise the seatback manually, lift up each seatback and push it to the upright position until it is latched.
- To raise the seatback automatically (if so equipped), push and hold the power seatback switch located in the cargo area **04** or the corresponding seat switch on the lower side of the instrument panel **05**.
 - A beep sounds once and the seatback begins to move automatically.
 - A beep sounds twice when the seatback is fully returned to the upright seating position.

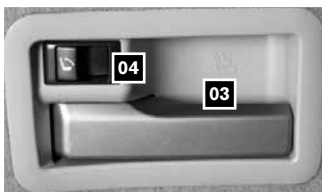

RECLINING THE REAR SEATS

- Brace the back of the seat with your arm while pulling on the strap. The seatback will release quickly.
- Pull the reclining strap **02**, and move the seatback to the desired angle.
- Release the reclining strap after positioning the seat at the desired angle.

For more information, refer to the “**Safety – Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.

REAR SEAT ENTRY/EXIT (CrossCabriolet models)

DRIVER’S SIDE

- Pulling the strap behind the driver’s seat does not slide the driver’s seat forward. You cannot slide the driver’s seat manually.
- To enter the rear seat, push and hold the front end of the slide switch **01** to slide the driver’s seat forward.
- Then push and hold the front end of the reclining switch **02** until the desired angle is obtained.
- To exit the rear seat from the driver’s side, pull the strap **03** behind the driver’s seat to release the driver’s seatback. The driver’s seatback will tilt forward so that you can exit the vehicle.



PASSENGER'S SIDE

- To fold down the front passenger's seatback and unlock the seat position, push the front passenger's seatback switch **04**.
- Manually slide the seat to the forward most position.
- Enter or exit the back seat.
- To slide the front passenger's seat back into position, push the bottom half of the seatback **05** until it locks. Next, adjust the seatback by pulling the seatback lever **06** up. Release the lever to lock the seatback into position.

For more information, refer to the "**Safety – Seats, seat belts and supplemental restraint system (section 1)**" of your Owner's Manual.



OUTSIDE MIRROR CONTROL SWITCH

- To select the right or left side mirror, turn the control switch **01** right or left.
- To adjust the mirror angle, move the control switch up, down, right or left.
- To prevent accidentally moving the mirror, turn and set the switch to the middle (neutral) position.

For more information, refer to the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.



STARTING/STOPPING THE ENGINE

- It is important to make sure the NISSAN Intelligent Key® is with you (that is, in your pocket or purse).
- Depress the brake pedal.
- Press the ignition switch **START/STOP** button to start the engine.

TURNING THE ENGINE OFF

- Move the shift lever to the **P (PARK)** position and apply the parking brake.
- Press the ignition switch **START/STOP** button to turn the engine off.

 

For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.



FIRST DRIVE FEATURES



HEADLIGHT CONTROL SWITCH

HEADLIGHT CONTROL


- Turn the headlight control switch to the  position **01** to turn on the front parking, side marker, tail, license plate and instrument panel lights. Turn the switch to the  position **02** to turn on the headlights.




AUTOLIGHT SYSTEM (if so equipped)



- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **03** then push the ignition switch to **ON**. To deactivate the autolight system, turn the headlight control switch to the **OFF**,  position **01** or  position **02**.


HIGH BEAM SELECT

- Push the headlight control switch forward **04** to select the high beam function. The blue indicator light  illuminates in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light will extinguish.
- Pull and release the headlight control switch **05** to flash the headlight high beams on and off.

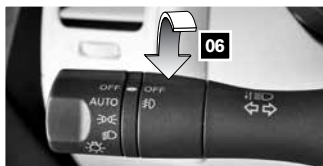

FOG LIGHT SWITCH (if so equipped)

  - The headlights must be on and the low beams  selected for the fog lights to operate.
- Turn the switch (inside collar) to the  position **06** to turn the fog lights on.
- Turn the switch (inside collar) to the **OFF** position to turn the fog lights off.

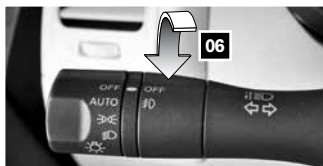

LANE CHANGE SIGNAL


- To signal a lane change, move the lever up or down to the point where the indicator light begins to flash, but the lever does not latch.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

WINDSHIELD WIPER AND WASHER SWITCH

- Move the lever to the following positions to operate the windshield wipers:

- 01** Mist (**MIST**) - One sweep operation of the front wipers.
- 02** Auto (**AUTO**) (Hardtop models – if so equipped) Operates the rain-sensing auto front wiper system. The rain sensor sensitivity level can be adjusted by twisting the time control ring **03** to increase or decrease wiper sensitivity.
- 04** Low (**LO**) - Front wipers operate at a continuous low speed.
- 05** High (**HI**) - Front wipers operate at a continuous high speed.
- 06** Pull the lever toward you to activate the front washer. The front wipers will operate several times.

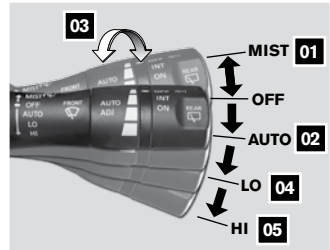

REAR WINDSHIELD WIPER AND WASHER (Hardtop models)

- 07** Intermittent (**INT**) - Rear wiper operates intermittently.
- 08** Low (**ON**) - Rear wiper operates at a continuous low speed.
- 09** Push the lever forward to activate the rear washer. The rear wiper will operate several times.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

FIRST DRIVE FEATURES



AUTOMATIC CLIMATE CONTROLS (if so equipped)

01 AUTO BUTTON/DRIVER'S SIDE TEMPERATURE CONTROL DIAL

- The auto mode may be used year-round. Press the **AUTO** button to turn the system on, and the system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.
- Turn the driver's side temperature control dial to the left for cooler air or right for warmer air.

02 DUAL BUTTON/PASSENGER'S SIDE TEMPERATURE CONTROL DIAL





- Press the **DUAL** button to turn the passenger's side temperature controls on or off. This will allow the passenger's side temperature to be adjusted independently from the driver's side by turning the passenger's side temperature control dial.
- Turn the passenger's side temperature control dial left for cooler air or right for warmer air.

03 ON-OFF BUTTON/FAN SPEED CONTROL KNOB

- Turn the fan speed control knob left to decrease fan speed or right to increase fan speed.
- Press the button to turn the system on or off.



 
04 MODE BUTTON

- Press the **MODE** button to cycle through the following air flow outlets:


-  Air flows from the center and side vents.
-  Air flows from the center, side and foot vents.
-  Air flows mainly from the foot vents.
-  Air flows from the defroster and foot vents.

05 INTAKE AIR CONTROL BUTTON


AIR RECIRCULATION

- Press the  intake air control button to recirculate interior air inside the vehicle. The indicator light on the button will illuminate. This system is used to avoid certain outside odors and to adjust the inside vehicle temperature more effectively.
- The air recirculation mode cannot be activated when the climate control system is in the front defroster mode  or the front defroster and foot vent mode .


OUTSIDE AIR CIRCULATION

- Press the  intake air control button again to draw outside air into the passenger compartment. The indicator light on the button will turn off.


06 UPPER VENT BUTTON

- When the upper vent button  is pressed, the air flow against the driver's or passenger's upper body becomes gentle. The indicator light on the button will illuminate.
- In this mode, air from the upper ventilator flows to control the cabin temperature without blowing air directly on the occupants.

07 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the  defroster control button to turn the system on. The A/C automatically turns on when the defroster mode is selected. This feature removes humidity from the air.
- Turn the temperature control dial **01** to set the desired temperature.
- To defrost the front and side windows quickly, set the temperature controls and fan speed controls to their maximum settings.

08 DEFROSTING REAR WINDOW AND OUTSIDE MIRRORS (if so equipped)


- Press the rear window defroster switch  **REAR** to turn the system on or off.
- This function automatically turns off after approximately 15 minutes.

09 A/C BUTTON

- Press the **A/C** button to turn the air conditioner system on or off. This system helps cool and dehumidify the air inside the cabin and defog the windows.

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Monitor, heater, air conditioner, audio, phone and voice recognition systems (section 4)**” of your Owner's Manual.

FIRST DRIVE FEATURES

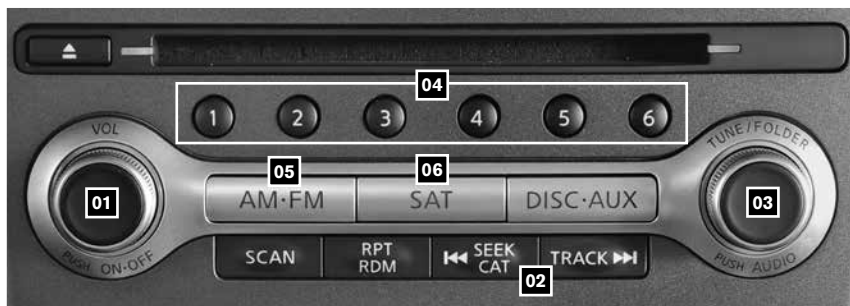

FM/AM/SiriusXM®* SATELLITE RADIO WITH CD/DVD PLAYER (if so equipped)

01 ON-OFF BUTTON/VOL (volume) CONTROL KNOB

- Press the **VOL/ON-OFF** control knob to turn the system on or off.
- Turn the knob right or left to increase or decrease the volume.

02 SEEK/CAT AND TRACK BUTTONS

- To scan quickly through each broadcasting station, press the **SEEK/CAT** button or the **TRACK** button to stop at the previous or next broadcast station.
- For satellite radio, to switch to the first channel of the previous or next category, press the **SEEK/CAT** button or the **TRACK** button.
- To change tracks on a CD, press the **SEEK/CAT** button or the **TRACK** button.
- To rewind or fast forward a track on a CD, press and hold the **SEEK/CAT** button or the **TRACK** button.

03 AUDIO BUTTON/TUNE-FOLDER CONTROL KNOB

- Press the **AUDIO** button to go to the audio settings screen.
- To manually tune the radio, turn the **TUNE/FOLDER** knob left or right.

04 STATION PRESET BUTTONS

- Twelve stations can be set for the FM band, six for the AM band and eighteen for satellite radio.
- To store a station in a preset, you must first select a radio band by pressing the **AM·FM** button **05** or **SAT** button **06**, then tune to the desired AM, FM or XM satellite radio station.
- Then press and hold the desired station preset button (**1-6**) until the sound is briefly muted. The channel indicator will then display and the sound will resume. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then press the corresponding station select button (**1-6**).

*SiriusXM® Satellite Radio is only available on vehicles equipped with an optional satellite radio subscription service.


For more information, refer to the “**Monitor, heater, air conditioner, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

To view detailed instructional videos regarding features in this Quick Reference Guide, please go to www.nissanownersinfo.mobi.

USB/iPOD® INTERFACE (if so equipped)

- The USB jack **01** is located in the center console under the arm rest.
- When a compatible USB memory device or iPod® is plugged into the USB jack, compatible audio and video files stored on the device can be played through the vehicle's audio system and front display.


For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner's Manual.

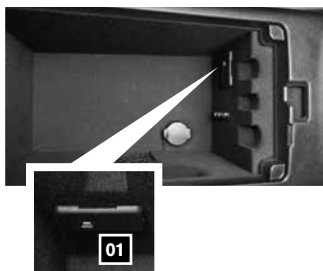

CRUISE CONTROL

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 MPH (40 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **ON/OFF** switch **01**. The **CRUISE** indicator light in the instrument panel will illuminate.
- To set a cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **02** and release. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **03**. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **02**. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, tap the brake pedal or push the **CANCEL** switch **04**.
- To turn off cruise control, push the **ON/OFF** switch **01**. The **CRUISE** indicator light in the instrument panel will extinguish.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner's Manual.

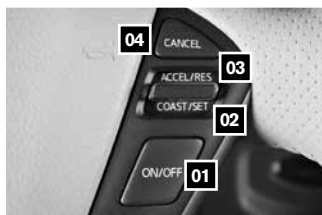

FRONT ARMREST/CENTER CONSOLE STORAGE BOX




- To access the top storage bin, pull up on the driver's side lever **01**.
- To access the bottom storage bin, pull up on the passenger side lever **02**.


For more information, refer to the “**Instruments and controls (section 2)**” of your Owner's Manual.



SYSTEM GUIDE

TRIP COMPUTER

- When the  button **01** is pressed, the following modes will appear on the vehicle information display **02** :
 - **MPG/AVG** – Displays the current and average fuel consumption since the last reset.
 - **MPG/MPH** – Displays the average fuel consumption and speed since the last reset.
 - **TIME/miles** – Displays the elapsed time and total distance the vehicle has been driven since the last reset.
 - **RANGE** – Displays the estimated distance to empty (dte) the vehicle can be driven before refueling.
 - **OUTSIDE TEMP** – Displays the exterior air temperature, including a low temperature warning feature.
 - **SETTING** – Allows you to set reminders for alerts and maintenance intervals or change the language and units used in the system.
 - Press the  button **03** to cycle through the various setting modes.
 - Press the  button **01** to choose the selected menu.
 - **WARNING** – Displays when a warning is present.
- Press and hold the **TRIP RESET** button **04** for approximately 1 second to reset the currently displayed trip odometer to zero.

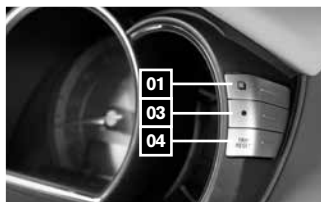



 



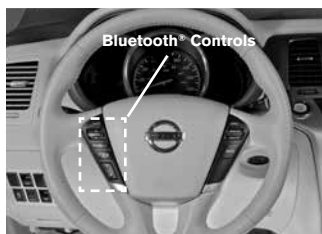
For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

BLUETOOTH® HANDS-FREE PHONE SYSTEM (if so equipped)

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.*

SYSTEM OPERATING TIPS

- Press the  or  button to interrupt the voice prompts at any time and speak a command after the tone.
- To use the system faster, you may speak the second level commands with the main menu command on the main menu. For example, press the  or  button and after the tone, say "Call Redial".
- The "Help" command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing HVAC vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.
- When speaking phonebook names, please be aware some phones require the last name to be spoken before the first name. For example, "Michael Smith" may be spoken as "Smith Michael".
- To cancel a voice recognition session, simply wait 5 seconds, say "Cancel" or "Quit", or press and hold the  or  button for 5 seconds.
- If the Voice Recognition system does not recognize your voice commands, train the system using the Voice Adaptation Mode. See your Owner's Manual for detailed information.
- For more detailed information and instructions, refer to your cellular phone's Owner's Manual and visit www.nissanusa.com/bluetooth.



 
*Some jurisdictions prohibit the use of cellular telephones while driving.

SYSTEM GUIDE

Bluetooth® System with Navigation (if so equipped)


- Bluetooth® Streaming Audio allows you to use a compatible Bluetooth® phone to play audio files on your device. Your compatible cellular phone can be connected to the vehicle's audio system, allowing audio files to play through the vehicle's speakers.

CONNECTING PROCEDURE

- The vehicle must be stationary when connecting the phone.
1. Press the **PHONE** button on the instrument panel or the  button on the steering wheel and select the "Connect Phone" key.
 2. Initiate connecting from the phone.
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible phones, please visit www.nissanusa.com/bluetooth.
 - When prompted for a PIN code, enter "1234" from the handset. (The PIN code is assigned by NISSAN and cannot be changed.)
 3. When the connecting is complete, the screen will return to the "Phone" menu display.



 
PHONEBOOK SETUP

- Depending on your cellular phone, the system may automatically download your cellular phone's entire phonebook to the vehicle's Bluetooth® system.
- If the phonebook does not download automatically, the vehicle phonebook may be set for up to 40 entries.
- To manually download entries:
 1. Press the  button and select the "Quick Dial" key.
 2. Select the "Add New" key at the top of the display. There are different methods to input a phone number. Select one of the following options:
 - "Copy from Call History" to save a number from the Outgoing, Incoming or Missed Calls lists.
 - "Copy from the Phonebook" to save a number that has been downloaded from your handset to the vehicle.
 - "Enter Number by Keypad" to input the number and name manually.






MAKING A CALL


To make a call, follow this procedure:

1. Press the **PHONE** button on the instrument panel or the  button on the steering wheel. The "Phone" menu will appear on the control panel display.
2. Select the "Quick Dial", "Call History", "Phonebook" or "Dial Number" key.
3. Select the desired entry from the list.
4. Select "Call" to start dialing the number.




RECEIVING/ENDING A CALL

- To accept the call, press the **PHONE** button on the instrument panel or the  button on the steering wheel or touch the "Answer" key on the display.
- To reject the call, touch the "Reject Call" key on the display or press the  button on the steering wheel.
- To hang-up, press the **PHONE** button on the instrument panel or the  button on the steering wheel or touch the "Hang up" key on the display.

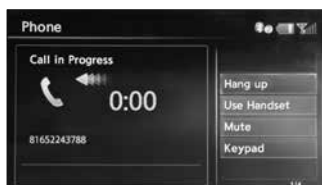

Bluetooth® System without Navigation (if so equipped)

PAIRING PROCEDURE

1. Press the  button on the steering wheel. The system announces the available commands.
2. Say: "Connect Phone". The system acknowledges the command and announces the next set of available commands.
3. Say: "Add Phone". The system acknowledges the command and asks you to initiate connecting from the phone handset.
4. Initiate pairing from the phone.
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible phones, please visit www.nissanusa.com/bluetooth.
 - When prompted for a PIN code, enter "1234" from the handset. (The PIN code is assigned by NISSAN and cannot be changed.)
5. Say a name for the phone when the system asks you to provide one. You can give the phone a name of your choice.

 


SYSTEM GUIDE




PHONEBOOK REGISTRATION

- When the cellular phone is connected to the in-vehicle module, the data stored in the cellular phone, such as phonebook, outgoing call logs, incoming call logs and missed call logs is automatically transferred and registered to the system.
- The availability of this function depends on each cellular phone. The copying procedure also varies according to each cellular phone. See your cellular phone's Owner's Manual for more information.
- Up to 1,000 phone numbers per registered cellular phone can be stored in the phonebook.

MAKING A CALL

1. Push the  button on the steering wheel. A tone will sound.
2. Say: "Call". The system acknowledges the command and announces the next set of available commands.
3. Say the registered person's name. The system acknowledges the command and announces the next set of available commands.
4. Say: "Yes". The system acknowledges the command and makes the call.

RECEIVING/ENDING A CALL

- To accept the call, press the  button on the steering wheel.
- To reject the call, press the  button.
- To hang-up, press the  button.

For more information, refer to the "Monitor, heater, air conditioner, audio, phone and voice recognition systems (section 4)" of your Owner's Manual or please visit www.nissanusa.com/bluetooth.

BLUETOOTH® STREAMING AUDIO (with Navigation System - if so equipped)

- If you have a compatible Bluetooth® device with streaming audio (A2DP profile), you can set up the wireless connection between your Bluetooth® device and your vehicle's audio system. This connection allows you to listen to audio from the Bluetooth® device, using your vehicle's speakers.
- A cellular phone should not be used while driving so full attention may be given to vehicle operation.*




CONNECTING PROCEDURE

1. Press the **SETTING** button and select the "Bluetooth" key.
2. Select the "Connect Bluetooth" key.
3. A confirmation screen will be displayed. Select "No".



*Some jurisdictions prohibit the use of cellular telephones while driving.

- Choose a PIN code to use with the compatible Bluetooth® audio device using the number input screen. The PIN code will need to be entered into the Bluetooth® audio device after step 5. Select the “OK” key.
- The standby message screen will appear. For the connecting procedure of your audio device, see your device’s Bluetooth® audio instructions.
- When the connecting is completed, the screen will return to the Bluetooth® setup display.

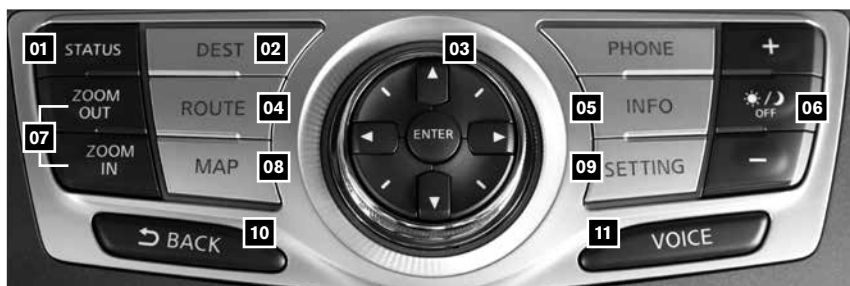For more information, refer to the “**Monitor, heater, air conditioner, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual or please visit www.nissanusa.com/bluetooth.



NAVIGATION SYSTEM (if so equipped)

- STATUS** - Press multiple times to display audio information, the air conditioner status, fuel economy or navigation directions.
- Destination (**DEST**) - Press to enter a destination.
- Multi-function controller - Turn to highlight an item on the screen, and push **ENTER** to select the highlighted item. On the map screen, turn to adjust the map scale. To scroll the map, push the controller in the direction you want to scroll.
- ROUTE** - Press to access the guidance control functions such as guidance cancellation, route priority or waypoint setting on the route.
- Information (**INFO**) - Press to display the vehicle, traffic (if so equipped), weather (if so equipped) or voice recognition information.
-  - Press to switch between the day screen (bright) and the night screen (dark). Press and hold the button to turn the display off. Press again to turn the display on.
- ZOOM IN, ZOOM OUT** - Push to adjust the map scale.
- MAP** - Press to display the map. While following a programed route, press multiple times to change the type of route information.
- SETTING** - Press to access the system settings.
-  **BACK** - Press to return to the previous screen. In a settings screen, this button can also be used to apply the setting. In a character input screen, this button can also delete the characters that have been entered.
- VOICE** - Press to hear the current voice guidance for a programed route.

For more information, refer to your Navigation System Owner’s Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

SYSTEM GUIDE



HOMELINK® UNIVERSAL TRANSCEIVER (if so equipped)

- The HomeLink® Universal Transceiver can learn and consolidate the functions of up to 3 different hand-held transmitters, operating items such as garage doors, property gates, outdoor and indoor lights or alarm systems.
- To program the HomeLink® Universal Transceiver:
 - Position the handheld transceiver 1-3 in (26-76 mm) away from the HomeLink surface, keeping the HomeLink indicator light in view.
 - Press and hold the desired HomeLink button and the handheld transmitter button simultaneously until the HomeLink indicator light flashes slowly and then rapidly.
 - Both buttons may be released when the indicator light flashes rapidly.
- To verify the programming is complete, press and hold the HomeLink button and observe the indicator light:
 - A solid, continuous light indicates the programming is complete and the HomeLink button will activate your device.
 - A blinking light that turns to a solid, continuous light after 2 seconds indicates additional steps are required to complete the programming.
- An additional person may make the remaining steps easier.
To complete the programming process:
 - At the receiver of the device that you are programming to the HomeLink, press and release the “learn” or “smart” button (the name may vary by manufacturer, but it is usually located near where the hanging antenna wire is attached to the unit). You have approximately 30 seconds to initiate the following step.
 - Press and hold the programmed HomeLink button for 2 seconds and release.
- You may have to repeat the previous 2 steps up to 3 times to complete the programming process. HomeLink should now activate your device.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual, the HomeLink website at www.homelink.com or call 1-800-355-3515.

MEMO

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. See your Owner's Manual, which contains important safety warnings and information about the operation and maintenance of your vehicle, for complete details. Nissan North America, Inc. reserves the right to make changes, at any time, without prior notice, in prices, colors, materials, equipment, specifications, and models and to discontinue models or equipment. Due to continuous product development and other pre- and post-production factors, actual vehicle, materials and specifications may vary. Some vehicles are shown with optional equipment. See the actual vehicle for complete accuracy. Specifications, options and accessories may differ in Hawaii, U.S. territories and other countries. For additional information on availability, options or accessories, see your NISSAN dealer or contact Nissan North America, Inc.



To view detailed instructional videos,
go to www.nissanownersinfo.mobi/2014/murano
or snap this barcode with an appropriate barcode reader.

