 


2017 **MURANO**

QUICK REFERENCE GUIDE



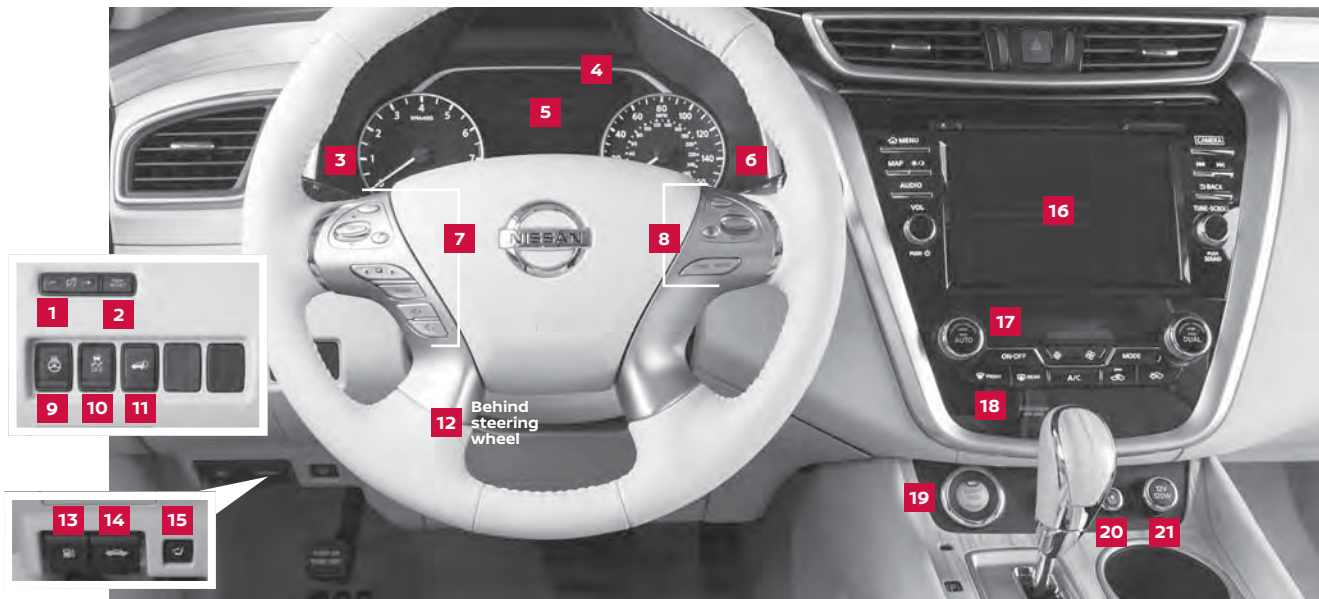

- | | | | |
|--|--|--|--|
| 1 Instrument Brightness Control Switch* | 7 Steering Wheel Switches for Audio*/Bluetooth*/Navigation/ Vehicle Information Display | 11 Liftgate/Liftgate Release Switch* | 17 Heater and Air Conditioner (automatic) |
| 2 Twin Trip Odometer Switch* | 8 Cruise Control/ Intelligent Cruise Control | 12 Tilt/Telescopic Steering Column* | 18 Front Passenger Air Bag Indicator Light* |
| 3 Headlight and Turn Signal Switch | 9 Heated Steering Wheel Switch* | 13 Fuel-filler Door Release Handle | 19 Push-button Ignition Switch |
| 4 Low Tire Pressure Warning Light | 10 Vehicle Dynamic Control (VDC) OFF Switch | 14 Hood Release* | 20 Climate-controlled Seat Switches* |
| 5 Vehicle Information Display | | 15 Power Rear Flip-up Seats Switch | 21 Power Outlet 12V/120W |
| 6 Wiper and Washer Switch | | 16 Control Panel Display*/ Audio System | |

*See your Owner's Manual for information.

TABLE OF CONTENTS

NEW SYSTEM FEATURES

How to Use Your Murano's Touch-screen Display	2
Heated Steering Wheel (if so equipped)	3
Around View® Monitor (AVM) with Moving Object Detection (MOD) (if so equipped) ..	3
Blind Spot Warning (BSW) (if so equipped)	5
Forward Emergency Braking (FEB) (if so equipped)	5
Predictive Forward Collision Warning (PFCW) (if so equipped)	6
Vehicle Dynamic Control (VDC)	6
Hill Start Assist (HSA)	6
SiriusXM Travel Link and SiriusXM Traffic (if so equipped)	7
Siri® Eyes Free (if so equipped)	7

ESSENTIAL INFORMATION

Tire Pressure Monitoring System (TPMS) with Easy-Fill Tire Alert	8
Loose Fuel Cap and Fuel-filler Door	9
Towing Your Vehicle (if so equipped)	9
Clock Set/Adjustment	10

FIRST DRIVE FEATURES

Nissan Intelligent Key® System	11
Power Liftgate Release (if so equipped)	13
Front Seat Adjustments	14
Automatic Drive Positioner (if so equipped)	14
Starting/Stopping the Engine	15
Rear Seat Adjustments	16
Outside Mirror Control Switch	16
Headlight Control Switch	17
Wiper and Washer Switch	18
Heater and Air Conditioner (automatic)	19
FM/AM/SiriusXM® Satellite Radio with CD Player and Navigation	20
USB (Universal Serial Bus) Connection Port/iPod® Interface and AUX Jack	22
Cruise Control (if so equipped)	22
Intelligent Cruise Control (ICC) (if so equipped)	23
Front Armrest/Center Console Storage Box	24

SYSTEM GUIDE

Trip Computer	25
Hands-free Text Messaging Assistant (if so equipped)	26
NissanConnect SM Services Powered by SiriusXM® (if so equipped)	27
Apple Carplay™ (if so equipped)	29
Bluetooth® Hands-free Phone System	30
System Operating Tips	30
Bluetooth® System with Navigation (if so equipped)	31
Bluetooth® System without Navigation (if so equipped)	33
Bluetooth® Streaming Audio	34
HomeLink® Universal Transceiver (if so equipped)	35
Navigation System (if so equipped)	36



Additional information about your vehicle is also available in your Owner's Manual, Navigation System Owner's Manual and at www.NissanUSA.com.



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the **"Safety — Seats, seat belts and supplemental restraint system (section 1)"**, the **"Display screen, heater, air conditioner, audio and phone systems (section 4)"** and the **"Starting and driving (section 5)"** of your Owner's Manual.

NEW SYSTEM FEATURES



HOW TO USE YOUR MURANO'S TOUCH-SCREEN DISPLAY

- 1** Launch Bar - Various functions can be accessed by touching the items on the Launch Bar **1**, which is displayed on most of the main screens. Touching these keys will bring up the corresponding screens.
- 2** Widget - These items can be interchanged, moved or deleted from the MENU pages.
- 3** Touch either arrow to navigate to the next or previous page of the "MENU" screen.
- 4** These dots indicate the page you are currently on, in white, out of the number of pages there are available, in gray.
- 5** Shortcut - Shortcuts, once touched, will bring up the system they correspond to for quick, one-touch convenience for commonly used features.
- Shortcuts and Widgets can be set up through the "Edit Menu" screen which can be accessed by touching the "Settings" key **6** followed by the "Edit Home Menu" key **7**. This will display the "Edit Menu" screen, which allows Shortcuts and Widgets to be moved and rearranged **8**, deleted **9** or created **10**.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to your Navigation System Owner's Manual.



To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

HEATED STEERING WHEEL (if so equipped)

- Once activated, your heated steering wheel will automatically turn on and off to maintain a temperature above 68°F (20°C).
- When the surface temperature of the steering wheel is above 68°F (20°C) and the heated steering wheel switch **1** is turned on, the system will not heat the steering wheel. This does not indicate a malfunction.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

AROUND VIEW® MONITOR (AVM) WITH MOVING OBJECT DETECTION (MOD) (if so equipped)

- With the ignition switch in the ON position, the Around View® Monitor is activated by pressing the **CAMERA** button **1**, located on the control panel, or by moving the shift lever to the **R (REVERSE)** position. The monitor displays various views of the position of the vehicle.
- When the shift lever is in the **P (PARK)**, **N (NEUTRAL)** or **D (DRIVE)** position and the **CAMERA** button **1** is pressed, the following views will display in order:



Start from any Control Panel screen



Press



Front view & bird's-eye view



Front view & front-side view



Press



Press

 


NEW SYSTEM FEATURES



- When the shift lever is in the **R (REVERSE)** position and the **CAMERA** button **1** is pressed, the following views will display in order:

Rear view & bird's-eye view

Rear view & front-side view

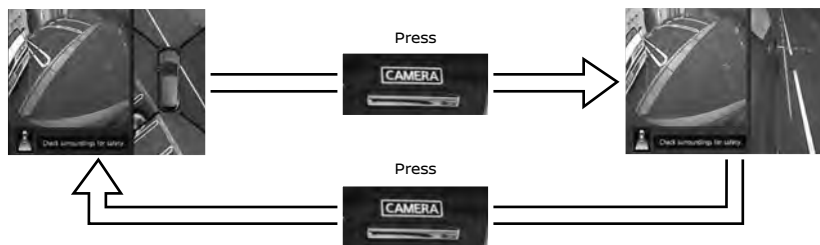

- The colored guide lines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line.
 - Red 1.5 ft (0.5 m); Yellow 3 ft (1 m); Green 7 ft (2 m) and 10 ft (3 m).
- For information regarding how to access additional viewing cycles, please see your Owner's Manual.
- There are some areas where the system will not detect objects.
 - When in the front or the rear view display, an object below the bumper or on the ground may not be detected **2**.
 - When in the bird's-eye view, a tall object near the seams of the camera detecting areas **3** will not appear in the monitor.
 - The distance between objects viewed on the Around View Monitor differs from the actual distance.
- Objects in the bird's-eye view will appear further than the actual distance.

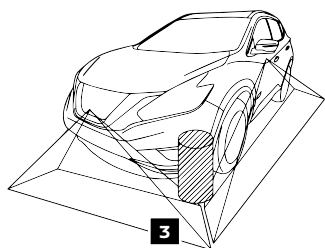  

MOVING OBJECT DETECTION (MOD)

- The MOD system helps inform the driver of moving objects in the Around View Monitor.
- The system will operate when the shift lever is in the **P (PARK)**, **N (NEUTRAL)**, or **R (REVERSE)** position and the vehicle is driven at speeds of approximately 5 mph (8 km/h) or less.
- If the MOD system detects moving objects, a yellow frame will be displayed on the camera image and a chime will sound.

- When the following is displayed:
 - Blue **MOD** icon **4**; the system is active.
 - Gray **MOD** icon; the system is not active.
 - No **MOD** icon; the system is off. The indicator will also be off if all of the warning systems are deactivated using the Settings menu.
- The MOD system will not operate if the liftgate is open.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Display screen, heater, air conditioner, audio and phone systems (section 4)**" of your Owner's Manual.

BLIND SPOT WARNING (BSW) (if so equipped)

- The BSW system helps to alert the driver when another vehicle moves into the vehicle's detection zone.
- An indicator light located near the outside mirrors **1** will illuminate if the radar sensors detect a vehicle in the detection zone.
- The indicator light **2** will illuminate after the ignition switch is ON and the BSW system is enabled. This indicates that the BSW system is operational.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

FORWARD EMERGENCY BRAKING (FEB) (if so equipped)

- The FEB system can assist the driver when there is a risk of a forward collision with a vehicle in the traveling lane.
- The FEB operates at speeds greater than 3 mph (5 km/h).
- If a risk of a forward collision is detected, the FEB system will provide an initial warning to the driver by both a visual and audible alert. If the driver applies the brakes quickly and forcefully after the warning and the FEB system detects that there is still the possibility of a forward collision, the system will automatically increase the braking force. If the driver does not take action, the FEB system issues the second warning and also applies partial braking. If the risk of a collision becomes imminent, the FEB system applies harder braking automatically.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

NEW SYSTEM FEATURES

PREDICTIVE FORWARD COLLISION WARNING (PFCW) (if so equipped)

- The PFCW system can help alert the driver of sudden braking by a second vehicle traveling ahead of the vehicle in the same lane.
- If there is a potential risk, the PFCW will warn the driver with a blinking vehicle ahead detection indicator and an audible warning tone will be heard.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

VEHICLE DYNAMIC CONTROL (VDC)

- Always make sure the VDC is on by ensuring the VDC OFF light, located in the meter gauges, is not on before driving the vehicle.
- The VDC OFF switch **1** should only be used briefly to help free the vehicle if it is stuck in snow or mud.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Starting and driving (section 5)" of your Owner's Manual.

HILL START ASSIST (HSA)

The HSA system allows time for the driver to release the brake pedal and apply the accelerator when the vehicle is parked on a hill. The brakes are applied automatically for 2 seconds after the driver releases the brake pedal.

 
- The HSA system will operate automatically under these conditions:
 - The shift lever is shifted into a forward or a reverse gear.
 - The vehicle is stopped completely on a hill by applying the brake.
- The HSA system will not operate when the shift lever is in the **N (NEUTRAL)** or **P (PARK)** position or when the vehicle is on a flat and level road.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

SiriusXM TRAVEL LINK AND SiriusXM TRAFFIC (if so equipped)

- Your vehicle's Navigation System is equipped with SiriusXM Travel Link and SiriusXM Traffic capabilities.
- Touch the **i** "Info" key to access SiriusXM Travel Link and SiriusXM Traffic.
- SiriusXM Travel Link provides access to real-time weather information and forecasts, nearby fuel prices, movie listings, sports scores and stock quotes.
- SiriusXM Traffic provides information that may help to avoid delays due to traffic incidents. Traffic jams, roadwork, road closures around the current location, etc., are represented graphically on the map by icons depicting the nature of the event. Incidents on the route are automatically displayed as they are approached.

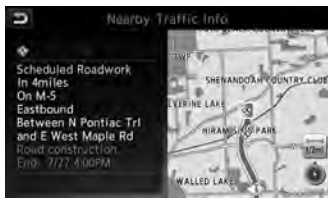

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Information (section 5)"** and the **"Navigation (section 6)"** of your Navigation System Owner's Manual.

SIRI® EYES FREE (if so equipped)

- If you have a compatible iPhone® with Siri®, you can link your iPhone® to the Siri® Eyes Free function in your vehicle's Bluetooth® system.
- If you have a compatible iPhone® connected to the system, press and hold the **i** button **1** on the steering wheel for a few seconds and Siri® will be activated in Eyes Free mode.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Display screen, heater, air conditioner, audio and phone systems (section 4)"** of your Owner's Manual and visit www.NissanUSA.com/bluetooth.



ESSENTIAL INFORMATION

TIRE PRESSURE MONITORING SYSTEM (TPMS) WITH EASY-FILL TIRE ALERT

- A **Tire Pressure Low Add Air** warning message will appear in the vehicle information display **1** and the low tire pressure warning light **2** will illuminate when one or more tires are low in pressure and air is needed.



- The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mi (1.6 km) at moderate speeds.
- After tire pressures are adjusted, drive the vehicle at speeds above 16 mph (25 km/h). The **Tire Pressure Low Add Air** warning message and low tire pressure warning light **2** will extinguish.
- In addition to the **Tire Pressure Low Add Air** warning message, you can view the individual tire's pressure in the vehicle information display as well as the recommended pressure, denoted by blue lettering, for each tire.
- When adding air to an under-inflated tire, the TPMS with Easy-Fill Tire Alert provides visual and audible signals to help you inflate the tire to the recommended COLD tire pressure.

To use the Easy-Fill Tire Alert:

1. Move the shift lever to the **P (PARK)** position and apply the parking brake.
 2. Place the ignition switch in the ON position. Do not start the engine.
 3. Add air to the under-inflated tire, and within a few seconds, the hazard warning lights will start flashing.
 4. When the designated tire pressure is reached, the horn will beep once and the hazard warning flashers will stop flashing.
 5. Repeat this procedure for any additional under-inflated tires.
- When the low tire pressure warning light **2** flashes for 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked. It is recommended you visit a Nissan dealer for this service.
 - Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light **2** to illuminate. If the warning light illuminates, check the tire pressure in your tires.
 - Check the tire pressure (including the spare tire) often and always prior to long distance trips.


- The Tire and Loading Information label contains valuable information. Please refer to the “Technical and consumer information (section 10)” of your Owner’s Manual for the location of the Tire and Loading Information label.

Please see your Owner’s Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “**Instruments and controls (section 2)**”, the “**Starting and driving (section 5)**” and the “**Do-it-yourself (section 8)**” of your Owner’s Manual.

LOOSE FUEL CAP AND FUEL-FILLER DOOR

 
LOOSE FUEL CAP

- A **LOOSE FUEL CAP** warning message will appear in the vehicle information display **1** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- If the cap is not properly tightened, the Malfunction Indicator Light  may illuminate.



FUEL-FILLER DOOR

- To open the fuel-filler door, pull the release handle **1**, located on the instrument panel to the left of the steering wheel.
- The fuel-filler door is located on the driver’s side of the vehicle.

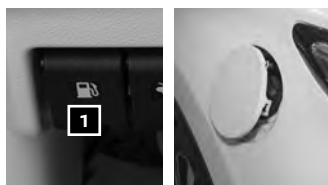

Please see your Owner’s Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

TOWING YOUR VEHICLE (if so equipped)

ALL-WHEEL DRIVE (AWD) VEHICLE

- An all-wheel drive vehicle must be towed with all wheels off the ground.

For proper towing and to avoid accidental damage to your vehicle, NISSAN recommends that a service operator tow your vehicle after carefully reading the Owner’s Manual precautions.

Please see your Owner’s Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “**In case of emergency (section 6)**” and the “**Technical and consumer information (section 10)**” of your Owner’s Manual.

 
ESSENTIAL INFORMATION

CLOCK SET/ADJUSTMENT

SYSTEM WITHOUT NAVIGATION

- To adjust the time and the appearance of the clock on the display:

1. Press the **SETTING** button **1**.
2. Scroll by turning the **TUNE/SCROLL** knob **2**.
3. Select "Clock Adjust".

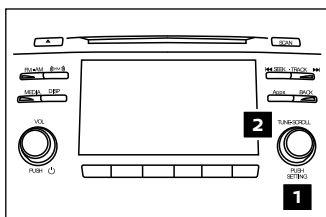

- To adjust the minutes and hours, press the **SETTING** button **1** to select the item and use the **TUNE/SCROLL** knob **2** to adjust the time.

SYSTEM WITH NAVIGATION

- To adjust the time and the appearance of the clock on the display:

1. Press the **MENU** button on the control panel.
2. Touch the **Settings** key on the Launch Bar.
3. Touch the "Clock" key.



- The following settings can be adjusted:

- **On-screen Clock:** The clock in the upper right corner of the display can be turned ON or OFF.
- **Clock Format (24h):** The clock can be set to 12 hours or 24 hours.
- **Offset (hour):** The time can be adjusted by increasing or decreasing per hour.
- **Offset (min):** The time can be adjusted by increasing or decreasing per minute.
- **Daylight Savings Time:** The application of Daylight Savings Time can be turned ON or OFF.
- **Time Zone:** Adjust the time zone. Choose a time zone from the available list.

- Touch the **BACK** key or press the **BACK** button to return to the previous screen.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.


For more information, refer to the "Display screen, heater, air conditioner, audio and phone systems (section 4)" of your Owner's Manual or the "Getting started (section 2)" of your Navigation System Owner's Manual.

 
FIRST DRIVE FEATURES

NISSAN INTELLIGENT KEY® SYSTEM

The Nissan Intelligent Key® system allows you to lock or unlock your vehicle, open your liftgate (if so equipped) and start the engine (if so equipped). It is important to make sure the Intelligent Key (I-Key) is with you (that is, in your pocket or purse).




KEY-LINKED SYSTEM (if so equipped)

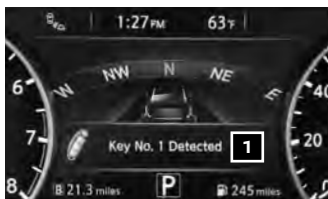- The vehicle information display has added features, allowing the Key-Linked System to remember some of the vehicle information display settings.
- The Key-Linked System states which I-Key is being recognized **1**, and enabling/disabling of the system's function can be easily accessed through notifications on the vehicle information display.
- The Key-Linked System can be turned on or off through the vehicle information display "Settings" screen **2**.
- You can set a maximum of four I-Keys to the Key-Linked System.
- When the system is enabled, the recognized I-Key is displayed at engine start-up (engine ON) as well as within the vehicle information display "Settings" screen **2**.
- When the system is active, the vehicle information display setting items are memorized for each key that has been enabled in the Key-Linked System.
- If two keys are in the vehicle, the Key-Linked System will recognize the key that was used most recently; this usually means the last key to unlock/lock the door from the I-Key.
- If there is a desire to change to another key that is in the vehicle, the user must turn off the engine and initiate communication from the desired key.
 1. Turn the engine to OFF.
 2. Press the  button from the desired I-Key.
 3. Start the engine.
 4. The desired Key Number recognized should appear on the vehicle information display.
- The vehicle information display displays a pop-up notification at engine ON for the recognition of the system with a shortcut function to the setup menu.
- From the shortcut setup menu, users can select to enable or disable the Key-Linked System or select "Later" to keep the factory state.
- When enabled, the Key-Linked System will remember the state of the items memorized automatically from the last ignition cycle.







FIRST DRIVE FEATURES

REMOTE ENGINE START* (if so equipped)

- The remote start operating range is approximately 200 ft (60 m) from the vehicle. The effective operating range may be shorter if there are walls, strong radio wave sources near the operating location or other obstructions between the key and the vehicle.
- For the remote start to function, the vehicle must be in the **P (PARK)** position with the ignition off and all doors must be closed and locked. Please see your Owner's Manual for additional information.
- To start your vehicle remotely:
 1. Press the  button **4** to lock all doors.
 2. Within 5 seconds, press and hold the engine start  button **3** for at least 2 seconds.
- The engine will start, and the parking lights will turn on.
- The automatic climate control system will begin heating or cooling the vehicle depending on the outside (ambient) temperature, cabin (in-car) temperature and the last user mode. During this period, the climate control display and buttons will be inoperable until the ignition switch is turned ON.
- The engine will run for 10 minutes and then turn off.
- Repeat steps 1 and 2 to extend the time for an additional 10-minute period. Remote start can only be activated for a maximum of 20 minutes.
 - After two remote starts, the ignition switch must be cycled before the remote start can be used again.
 - To cancel the remote start, press the remote start  button **3**.
- To start driving, depress the brake pedal and press the ignition switch **START/STOP** button.



LOCKING AND UNLOCKING THE VEHICLE

- The operating range of the I-Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, either push the door handle request switch **5** once or press the  button **4** on the key fob.
- To unlock the vehicle, perform one of the following procedures:
 - Push either door handle request switch **5** once to unlock the corresponding door. Push the door handle request switch **5** again within 1 minute to unlock all doors, or
 - Press the  button **6** on the key fob to unlock the driver's side door. Press the  button **6** again within 1 minute to unlock all doors.
- The I-Key can also be used to activate the panic alarm by pressing and holding the  button **7** for 1 second. Once activated, the panic alarm and headlights will stay on for a period of time.



To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

NISSAN INTELLIGENT KEY® BATTERY DISCHARGE

- If the battery of the I-Key is discharged or environmental conditions interfere with the I-Key operation, **Key Battery Low** **8** will display on the gauge and the engine will need to be started according to the following procedure:



1. Move the shift lever to the **P (PARK)** position.
2. Firmly apply the foot brake.
3. Touch the ignition switch with the I-Key. A chime will sound.
4. Within 10 seconds after the chime sounds, press the ignition switch **START/STOP** button while depressing the brake pedal and the engine will start.


*State laws may apply; review local laws before using.

 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)", the "Pre-driving checks and adjustments (section 3)", the "Starting and driving (section 5)" and the "Do-it-yourself (section 8)" of your Owner's Manual.

POWER LIFTGATE RELEASE (if so equipped)

Use one of the following methods to open the liftgate:

- Press the  button **1** on the Nissan Intelligent Key® for 1 second.
- Push the liftgate opener switch **2** on the exterior of the vehicle while carrying the Intelligent Key with you (that is, in your pocket or purse).
- From inside the vehicle, push the power liftgate switch **3**, located on the instrument panel to the left of the steering wheel.

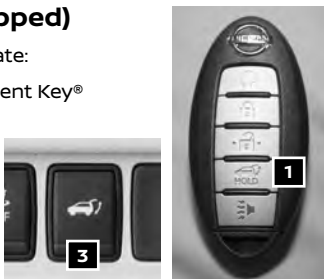


 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.


For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

FIRST DRIVE FEATURES


FRONT SEAT ADJUSTMENTS

POWER SEATS (if so equipped)

 - To slide the seat forward or backward, push the  switch **1** forward or backward.
- To recline the seatback, push the  switch **2** forward or backward.

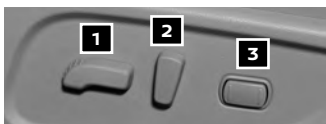

POWER SEAT LIFTER (driver's seat)

- To adjust the angle of the front seat cushion or height of the seat, push the front or rear end of the  switch **1** up or down.



LUMBAR SUPPORT (if so equipped for driver's seat)

- To adjust the seat lumbar support, push the front or back end of the  switch **3**.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)" of your Owner's Manual.

 
AUTOMATIC DRIVE POSITIONER (if so equipped)

- Automatic Drive Positioner provides two methods for storing the driver's seat, steering column (if so equipped) and outside mirror positions. Once enabled, the Key-Linked System automatically retains the driver's last positions for the specific Intelligent Key when the ignition switch is turned from ON to OFF. The Automatic Drive Positioner switch can store two additional positions which are independent from the Key-Linked System.



KEY-LINKED SYSTEM

- Follow the process below to set up Key-Linked System:
 - Unlock the vehicle with the desired Intelligent Key while the ignition switch is in the OFF position.
 - Place the ignition switch in the ON position.
 - In the vehicle information display, navigate to the Settings menu and select "Key-Linked Settings" **1**.
 - In the Key-Linked Settings menu, press the **OK** button on the steering wheel to turn the system ON or OFF **2**.

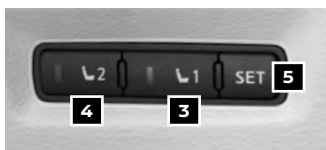

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

- Once the system is on, the driver's seat, the outside mirror and the steering column (if so equipped) positions are linked to the Intelligent Key every time when the ignition is turned from ON to OFF.
- Follow the same procedure if you want to link a 2nd, 3rd or 4th Intelligent Key.

AUTOMATIC DRIVE POSITIONER SWITCHES

- In addition to the Key-Linked System feature, two additional driver preferences can be saved using the memory switches **1 3** and **2 4**.
- Follow this procedure to set the memory positions:
 - Place the ignition switch to the ON or ACC position. The vehicle should be stopped while setting the memory.
 - Adjust the driver's seat, steering column (if so equipped) and outside mirrors to the desired positions using the adjustment switches for each feature.
 - Push the **SET** switch **5**, and within 5 seconds, push the memory switch **1 3** or **2 4**.
 - The indicator light for the selected switch will illuminate for 5 seconds and a chime will sound indicating the memory has been successfully stored.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

STARTING/STOPPING THE ENGINE

- It is important to make sure the Nissan Intelligent Key® is with you (that is, in your pocket or purse).
- Depress the brake pedal.
- Press the ignition switch **START/STOP** button to start the engine.



TURNING THE ENGINE OFF

- Move the shift lever to the **P (PARK)** position.
- Press the ignition switch **START/STOP** button to turn the engine off.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

 
For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

FIRST DRIVE FEATURES

REAR SEAT ADJUSTMENTS

FOLDING DOWN THE REAR SEAT

- To fold the seats flat, release the connector tongue of the rear center seat belt from the buckle then store the connector and seat belt tongues in the retractor base on the ceiling **1**.
- Fold the seatback forward using either the reclining strap **2**, located on the outside edge of the rear seat, or the release lever **3** in the cargo area.
- To raise the seatback manually, lift up each seatback and push it to the upright position until it is latched.
- To raise the seatback automatically (if so equipped), push and hold the power seatback switch **4** located in the cargo area or the corresponding seat switch **5** on the lower side of the instrument panel.
 - A beep sounds once and the seatback begins to move automatically.
 - A beep sounds twice when the seatback is fully returned to the upright seating position.

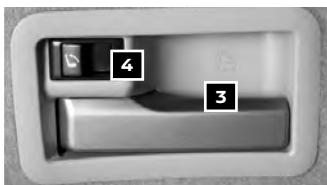

RECLINING THE REAR SEATS

- Brace the back of the seat with your arm while pulling on the strap. The seatback will release quickly.
- Pull the reclining strap **2**, and move the seatback to the desired angle.
- Release the reclining strap **2** after positioning the seat at the desired angle.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Safety – Seats, seat belts and supplemental restraint system (section 1)" of your Owner's Manual.

OUTSIDE MIRROR CONTROL SWITCH

- To select the right or left side mirror, slide the control switch **1** right or left.
- To adjust the mirror angle, move the control switch **2** up, down, right or left.
- To prevent accidentally moving the mirror, slide the switch to the center (neutral) position.



REVERSE TILT-DOWN FEATURE (if so equipped)

The reverse tilt-down feature will turn both outside mirror surfaces downward to provide better rear visibility close to the vehicle.

1. Apply the brake.
2. Place the ignition switch in the ON position.
3. Move the shift lever to the **R (REVERSE)** position.
4. Both outside mirror surfaces will turn downward. (The mirror control switch **1** must be out of the center [neutral] position.)

The outside mirror surfaces will return to their original positions when one of the following conditions has occurred:

- The shift lever is moved to any position other than **R (REVERSE)**.
- The outside mirror control switch is set to the center (neutral) position.
- The ignition switch is placed in the OFF position.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.

HEADLIGHT CONTROL SWITCH

HEADLIGHT CONTROL

- Turn the headlight control switch to the OFF position **1** to turn on the front parking, side marker, tail, license plate and instrument panel lights. Turn the switch to the OFF position **2** to turn on the headlights.



AUTOLIGHT SYSTEM

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **3** then push the ignition switch to ON. To deactivate the autolight system, turn the headlight control switch to the **OFF** position, OFF position **1** or OFF position **2**.

HIGH BEAM SELECT

- With the headlights ON (either by selecting the **AUTO** position **3** or OFF position **2**), push the headlight control switch forward **4** to select the high beam function. The blue indicator light OFF will illuminate in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light will extinguish.
- Pull and release the headlight control switch **5** to flash the headlight high beams on and off.



FOG LIGHT SWITCH (if so equipped)

 
- The headlights must be on and the low beams OFF selected for the fog lights to operate.

FIRST DRIVE FEATURES

- Turn the switch (inside collar) to the **FO** position **6** to turn the fog lights on.
- Turn the switch (inside collar) to the **OFF** position to turn the fog lights off.

LANE CHANGE SIGNAL

- Move the lever up or down until the turn signal begins to flash but the lever does not latch to signal a lane change. Hold the lever until the lane change is completed.
- Move the lever up or down until the turn signal begins to flash but the lever does not latch and release the lever. The turn signal will automatically flash three times.

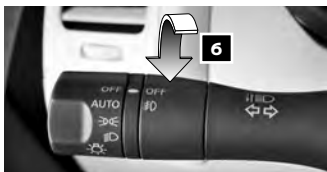


Choose the appropriate method to signal a lane change based on the road and traffic conditions.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

WIPER AND WASHER SWITCH

 - Move the lever to one of the following positions to operate the windshield wipers:
 - 1** Mist (**MIST**) – One sweep operation of the front wipers.
 - 2** Intermittent (**INT**) – Front wipers operate intermittently, and the speed can be adjusted by twisting the time control ring **3** to increase or decrease wiper speed.
 - 4** Low (**LO**) – Front wipers operate at a continuous low-speed.
 - 5** High (**HI**) – Front wipers operate at a continuous high-speed.
 - 6** Pull the lever toward you to activate the front washer. The front wipers will operate several times.

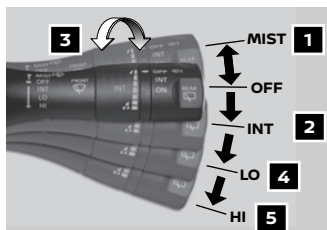

REAR WIPER AND WASHER

- 7** Intermittent (**INT**) – Rear wiper operates intermittently.
- 8** Low (**ON**) – Rear wiper operates at a continuous low-speed.
- 9** Push the lever forward to activate the rear washer. The rear wiper will operate several times.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.



HEATER AND AIR CONDITIONER (automatic)

1 AUTO BUTTON/DRIVER'S SIDE TEMPERATURE CONTROL DIAL

- The automatic mode may be used year-round. Press the **AUTO** button to turn the system on, and the system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.
- Turn the driver's side temperature control dial to the left for cooler air or to the right for warmer air.

2 DUAL BUTTON/PASSENGER'S SIDE TEMPERATURE CONTROL DIAL

- Press the **DUAL** button to turn the passenger's side temperature controls on or off. This will allow the passenger's side temperature to be adjusted independently from the driver's side by turning the passenger's side temperature control dial.
- Turn the passenger's side temperature control dial left for cooler air or right for warmer air.





3 ON-OFF BUTTON

- Press the button to turn the system on or off.




4 FAN SPEED CONTROL BUTTONS

- Press either the  or the  button to decrease or increase fan speed.

5 MODE BUTTON


 

- Press the **MODE** button to cycle through the following air flow outlets:
 -  Air flows from the center and side vents.
 -  Air flows from the center, side and foot vents.
 -  Air flows mainly from the foot vents.
 -  Air flows from the front defroster and foot vents.

6 AIR RECIRCULATION CONTROL BUTTON


- Press the air recirculation control  button **6** to recirculate interior air inside the vehicle. The indicator light on the button will illuminate. This system is used to avoid certain outside odors and to adjust the inside vehicle temperature more effectively.
- The air recirculation mode cannot be activated when the climate control system is in the front defroster mode  **FRONT** or the front defroster and foot vent mode .

FIRST DRIVE FEATURES


7 FRESH AIR INTAKE CONTROL BUTTON

- Press the fresh air intake control  button **7** to draw outside air into the passenger compartment. The indicator light on the  button will illuminate and the indicator light on the  button **6** will extinguish.

8 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the front defroster  **FRONT** button to turn the system on. This feature removes humidity from the air.
- Turn the temperature control dial **1** to set the desired temperature.
- To defrost the front and side windows quickly, set the temperature controls and fan speed controls to their maximum settings.

9 DEFROSTING REAR WINDOW AND OUTSIDE MIRRORS (if so equipped)

 
- Push the rear window defroster  **REAR** switch to turn the system on or off.
- This function automatically turns off after approximately 15 minutes.

10 A/C BUTTON


 
- Press the **A/C** button to turn the air conditioner system on or off. This system helps cool and dehumidify the air inside the cabin and defog the windows.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.


For more information, refer to the "Instruments and controls (section 2)" and the "Display screen, heater, air conditioner, audio and phone systems (section 4)" of your Owner's Manual.

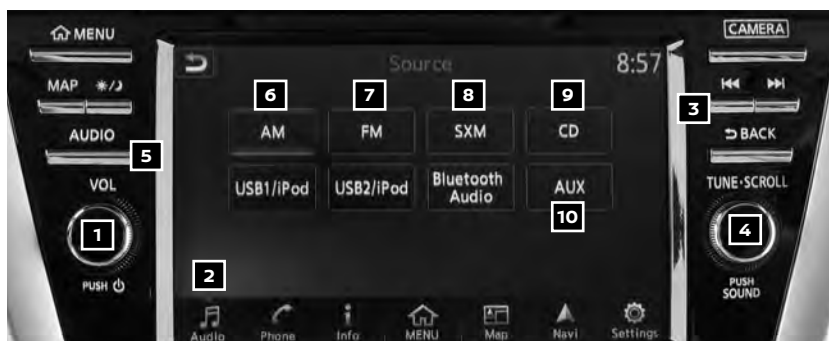

FM/AM/SiriusXM® SATELLITE RADIO WITH CD PLAYER AND NAVIGATION

- Touch the  "Audio" key **2** on the Launch Bar to display the current audio source.
- Touch the  "Audio" key **2** a second time to access the source selection screen.





1 **PUSH** (on-off) **BUTTON/VOL (volume) CONTROL KNOB**

- Press the **PUSH**  (on-off) button to turn the audio system on or off.
- Turn the **VOL** (volume) control knob right or left to increase or decrease the volume.


2 **AUDIO KEY**

- Touch the  "Audio" key on the Launch Bar to bring up the current source's control screen.

3 (seek and cat/track) **BUTTONS**

- To scan quickly through each broadcasting station, press the  button to move to the previous or next broadcast station.
- For satellite radio to switch to the first channel of the previous or next category, press the  button.
- To change tracks on a CD, press the  button.
- To rewind or fast forward a track on a CD, press and hold the  button.

4 **PUSH SOUND BUTTON/TUNE/SCROLL KNOB**

- Press the **PUSH SOUND** button to cycle through the audio settings individually and use the **TUNE/SCROLL** knob to adjust the current setting.
- Touch the  "Settings" key on the Launch Bar and then touch the "Sound" key to view all audio settings.
- To manually tune the radio, turn the **TUNE/SCROLL** knob left or right.

5 **AUDIO (source) BUTTON**

- Pressing this button will give access to the **AM, FM, SXM, CD, USB1/iPod, USB2/iPod, Bluetooth Audio** or **AUX** audio source.
- Twelve memory stations can be set for the FM band, six for the AM band and 18 for satellite radio. These appear at the bottom of the screen when one of these sources is selected.
- To store a station in a preset, you must first select a radio band by touching the "AM" **6**, "FM" **7** or "SXM" key **8** then tune to the desired AM, FM or satellite radio station. Next, touch and hold the desired station preset key (**1-6**) until you hear a beep. The channel indicator will then display, and the sound will resume. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then touch the corresponding station select key (**1-6**).

6 **AM KEY / 7 FM KEY**

- Touch the "AM" **6** or "FM" **7** key. Next, touch the "AM Menu" or "FM Menu" key to view the station list or turn HD mode on or off.
- Tag favorite songs to save to an iPod®.
 - Apple® website: If you are listening to a radio station that supports iTunes Tagging, you can tag a song you hear so you can preview and purchase it later on the iTunes Store. Songs that can be tagged are marked with a tag icon next to the song title or on the "Now Playing" screen.

FIRST DRIVE FEATURES

8 SXM KEY

- Touch the "SXM" key **8**. Next, touch the "SXM Menu" key to bring up the categories, favorites and replay options.

9 CD KEY

- Touch the "CD Menu" key to view the track list.

10 AUX KEY

- A cable with 1/8-in (3.5 mm) stereo mini plugs is required for audio playback.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Audio system (section 3)" of your Navigation System Owner's Manual.

USB (Universal Serial Bus) CONNECTION PORT/iPOD® INTERFACE AND AUX JACK

- The USB ports are located in the media pocket **1** with the AUX jack and at the rear of the center console **2** (if so equipped).

■ USB1/iPod® and USB2/iPod®

- When a device is connected via USB, the system will automatically start playing music from it.
- This system supports Apple® devices and USB memory devices. Only Apple® brand or Apple® certified cables will work. NISSAN cannot guarantee compatibility with aftermarket cables that are not certified by Apple®.
- The system may not be compatible with some versions of Android®.

- Touch the "USB/iPod® Menu" key to view folder list and track listing, playlist, albums, artist and songs.



 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Display screen, heater, air conditioner, audio and phone systems (section 4)" of your Owner's Manual or the "Audio system (section 3)" of your Navigation System Owner's Manual.

CRUISE CONTROL (if so equipped)

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 mph (40 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.

- To activate the cruise control, push the **ON/OFF** switch **1** on the steering wheel. The **CRUISE** indicator light in the instrument panel will illuminate.

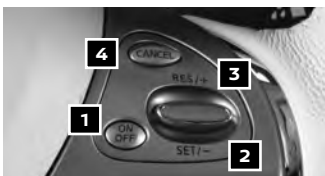

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

- To set a cruising speed, accelerate the vehicle to the desired speed, push the **SET/-** switch **2** on the steering wheel and release. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **RES/+** switch **3** on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **SET/-** switch **2** on the steering wheel. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, tap the brake pedal or push the **CANCEL** switch **4** on the steering wheel.
- To turn off cruise control, push the **ON/OFF** switch **1** on the steering wheel. The **CRUISE** indicator light in the instrument panel will extinguish.

 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

INTELLIGENT CRUISE CONTROL (ICC) (if so equipped)

VEHICLE-TO-VEHICLE DISTANCE CONTROL MODE

- To set Vehicle-To-Vehicle Distance Control mode, press the **CRUISE ON/OFF** button **1** on the steering wheel. The **CRUISE** indicator light **2** will illuminate.
- Accelerate to the desired speed.
- Push down on the **SET/-** switch **3** on the steering wheel and release it. ICC will be set to the desired speed.
- Press the distance button **4** on the steering wheel repeatedly to change the set distance between long, middle and short.
- When a vehicle is not detected ahead of you in the lane, the set distance and set vehicle speed indicator lights will illuminate **5** in set mode.
- When a vehicle is detected ahead of you in the lane, the vehicle ahead detection, set distance and set vehicle speed indicator lights will illuminate **6** in set mode.
- To reset at a faster cruising speed, push and hold the **RES/+** switch **7** on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **SET/-** switch **3** on the steering wheel. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, push the **CANCEL** switch **8** on the steering wheel or tap the brake pedal. The set vehicle speed indicator **5** will extinguish.

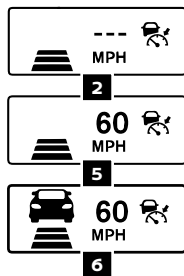

FIRST DRIVE FEATURES

- To turn off ICC, press the **CRUISE ON/OFF** button **1** on the steering wheel. The CRUISE indicator light **2** in the instrument panel will extinguish.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

FRONT ARMREST/CENTER CONSOLE STORAGE BOX

- To access the top storage tray, pull up on the lever **1**.
- Lift or slide the tray **2** to access the bottom storage bin.




Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.


For more information, refer to the "**Instruments and controls (section 2)**" of your Owner's Manual.


SYSTEM GUIDE





TRIP COMPUTER


- When the  arrow buttons **1** on the steering wheel are pressed, the following screens will appear on the vehicle information display **2**:

 **Home** - Displays the current speed, the compass and the additional media that is available.


 **Audio** - Displays the current playing media.


 **Compass (if so equipped)** - Displays the vehicle's current heading.


 **Drive Computer** - Displays Average Fuel Economy, Average Speed, Trip Computer and Time of the Trip. Each can be reset individually.


 **Fuel Economy** - Displays Average Fuel Economy. Press and hold the **OK** button **3** on the steering wheel to reset.

 **Driving Aids (if so equipped)** - Displays the Driving Aids that are equipped on your vehicle. Use the **OK** button **3** on the steering wheel to turn each system on or off.

 **Tire Pressure Monitoring System (TPMS)** - Displays the individual tire's pressure while driving.

 **Warning** - Displays the current warnings.

 **SETTING** - Displays the available settings that can be changed.

- Press the  arrow buttons **1** on the steering wheel to cycle through the various setting modes.
- Press the **OK** button **3** on the steering wheel to choose the selected menu.



 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

SYSTEM GUIDE

HANDS-FREE TEXT MESSAGING ASSISTANT* (if so equipped)

- This system allows for sending and receiving text messages through the vehicle's interface.
- Using predefined or custom messages, send a text to an entry stored in your Bluetooth® Hands-free Phone System.
- Once enabled, the text message, sender and delivery time are shown on the control panel display when the vehicle speed is less than 5 mph (8 km/h).
- Text messages have the option of being read aloud at all vehicle speeds.
- Once the vehicle is in motion, text messages can only be replied to using the Voice Recognition  button on the steering wheel.
- Custom text messages can be created manually when the vehicle is not in motion.
- Custom text messages must be created in advance.
- Many cellular phones may require special permission to enable text messaging. Check the cellular phone's screen during Bluetooth® pairing and accept any permission requests for message access or text messages. For some cellular phones, you may need to enable "Notifications" in the cellular phone's Bluetooth® menu for text messages to appear on the touch-screen display. For more detailed information and instructions, refer to your cellular phone's Owner's Manual.
- Text message integration requires that the cellular phone support Message Access Profile (MAP) for both receiving and sending text messages. Some cellular phones may not support all text messaging features. Please see www.NissanUSA.com/bluetooth for compatibility information as well as your device's Owner's Manual.



*Laws in some jurisdictions may restrict the use of "Text-to-Speech". Some of the applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Hands-free phone (section 4)" of your Navigation System Owner's Manual.

NISSANCONNECTSM SERVICES POWERED BY SiriusXM[®] (if so equipped)

NissanConnectSM Services is a collection of security and convenience services that add innovation to your daily drive.

- To enroll in NissanConnect Services, create an account or log into your Nissan Owner Portal with your Vehicle Identification Number (VIN). Under the NissanConnect Services tab, select the red button next to Manage Subscription. Follow the prompts to enroll in NissanConnect Services. Next, download the NissanConnect Services companion app and log into it using your Nissan Owner Portal ID and password.
- For full details on NissanConnectSM Services or to enroll your vehicle, please visit www.NissanUSA.com/connect or call 855-426-6628.

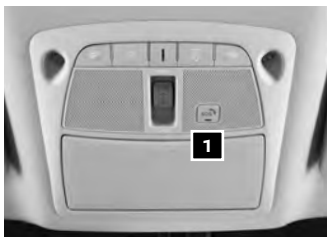


Here is a quick overview of some of the features that may be available for your vehicle. A full description of these and other NissanConnect Services can be found in your Navigation System Owner's Manual.

- Automatic Collision Notification – A service that generates an automatic connection between the vehicle and the Emergency Response Center when the vehicle has been involved in an accident that was severe enough to deploy the air bags.
- Emergency Call – Connects you to a NissanConnect Services Specialist who will assist in the dispatch of emergency services to the vehicle's location. To use this feature, press the **SOS** button **1** on the overhead console. The **SOS** button **1** should only be used in emergency situations.
- Roadside Assistance – Dispatches roadside assistance to the vehicle's location in non-emergency situations. Roadside Assistance can be accessed by touching the headset icon **2** on the map screen, via NissanConnect Services companion app or by calling the Roadside Assistance provider directly.
- Stolen Vehicle Locator – A service that works in coordination with law enforcement agencies to assist in the recovery of a stolen vehicle.
- Remote Engine Start/Stop – Use your smartphone to heat up or cool down your Nissan to the comfortable temperature it was when you left it.
- Remote Door Lock/Unlock – For use when you forget to lock your vehicle or if you need to open it and do not have the keys. To use this feature, log into the NissanConnect Services companion app or website or contact a NissanConnect Services Response Specialist.



SYSTEM GUIDE

- **Assisted Search** – A feature that allows you to verbally request point-of-interest or destination data from a live operator by touching the headset  icon **2** on the map screen.
- **Journey Planner** – You can send a route with a destination and up to five way points directly to the vehicle.
- **Boundary Alert** – A feature that allows you to monitor the movement of your vehicle in and out of specified regions you have set on the Monitoring section of the NissanConnect Services web portal or companion app.
- **Speed Alert** – Sends you alerts when your vehicle speed exceeds a threshold you have set on the NissanConnect Services web portal or companion app.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Other settings (section 5)**" and the "**General system information (section 6)**" of your Navigation System Owner's Manual.





APPLE CARPLAY™ (if so equipped)

 
- The in-vehicle system can be used as a controller for some of the iPhone® functions through Apple CarPlay™.
- If your iPhone® is compatible, Apple CarPlay™ can be used.
 - Select the "MENU" key **1** on the screen.
 - Select "Apple CarPlay" **2** from the menu.
- Before using Apple CarPlay™, confirm the following settings on your iPhone®:
 - Turn on "CarPlay" on your iPhone®.
 - Select "Settings" → "General" → "Restrictions" and turn off "Restrictions" or turn on CarPlay.
 - Turn on "Siri®" on your iPhone®. Select "Settings" → "General" → "Siri®" and turn on Siri®.
- To connect your CarPlay™-capable iPhone® to the system, you must connect the iPhone® cable to the USB port located in the center console.
 - Depending on the setting, the "Startup Information" screen will appear.
 - Touch "Yes" to use Apple CarPlay™.
 - The Apple CarPlay™ top menu screen will appear, and the iPhone® functions displayed on the screen can be operated by the in-vehicle system.
 - To return to the "Apple CarPlay" top menu screen after operation, touch the key **4** on the lower left corner of the "Apple CarPlay" screen.
 - To exit the "Apple CarPlay" screen and display the other screens, press the MENU button or one of the other buttons on the control panel and touch the preferred menus.
 - To return to the "Apple CarPlay" screen, touch the "Info" key **3** on the Launch Bar and then touch the "Apple CarPlay" key **2**.


 
SYSTEM GUIDE

- When connected to Apple CarPlay™, Siri® Eyes Free operation can also be accessed.

- There are two ways to start a Siri® Eyes Free session.

1. Press and hold the  button on the steering wheel.
2. Touch and hold the  key **4** at the lower left corner of the "Apple CarPlay" screen.

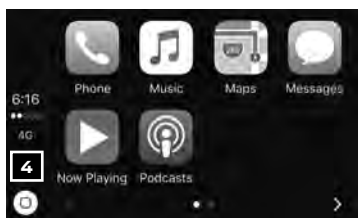

- Press the  button on the steering wheel or touch the  key **4** at the lower left corner of the "Apple CarPlay" screen to end Siri® Eyes Free operation.

- Keep the interior of the vehicle as quiet as possible. Close the windows to eliminate the surrounding noises (traffic noises, vibration sounds, etc.), which may prevent the system from recognizing the voice commands correctly.

- Some Siri® Eyes Free functions may not be available during driving.

- For functions that can be used with Siri® Eyes Free, please refer to the Apple® website.

- Nissan Phone menu and Nissan Voice Recognition cellular phone commands will not be available when Apple CarPlay™ is active.

 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Getting started (section 2)**" and the "**Information (section 5)**" of your Navigation System Owner's Manual.

BLUETOOTH® HANDS-FREE PHONE SYSTEM*

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.

SYSTEM OPERATING TIPS



- Press the  button on the steering wheel to interrupt the voice prompts at any time and speak a command after the tone.


- The "Help" command can be used to hear a list of available commands at any time.

- Reduce background noise as much as possible by closing windows and pointing HVAC vents away from the ceiling.

- Speak naturally without long pauses and without raising your voice.

  - If you experience difficulty with the Voice Recognition System recognizing a contact name, please try saying both the first and last name of the contact as this improves recognition accuracy.

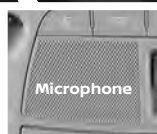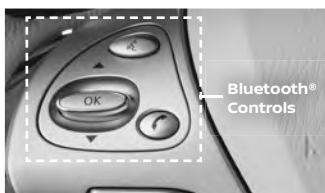

- To cancel a Voice Recognition session, say "Cancel" or "Quit" or press and hold the  button on the steering wheel for 5 seconds.
- For more detailed information and instructions, refer to your cellular phone's Owner's Manual and visit www.NissanUSA.com/bluetooth.

*Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

 
For more information, refer to the "Display screen, heater, air conditioner, audio and phone systems (section 4)" of your Owner's Manual or please visit www.NissanUSA.com/bluetooth.

BLUETOOTH® SYSTEM WITH NAVIGATION* (if so equipped)

- Bluetooth® Streaming Audio allows you to use a compatible Bluetooth® cellular phone to play audio files on your device. Your compatible cellular phone can be connected to the vehicle's audio system, allowing audio files to play through the vehicle's speakers.

CONNECTING PROCEDURE

- The vehicle must be stationary when connecting the cellular phone.




1. Press the  button on the steering wheel and touch the "Connect Phone" key.
2. Initiate connecting from the cellular phone.

- The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible cellular phones, please visit www.NissanUSA.com/bluetooth.

- When prompted, confirm the PIN on the display with the PIN shown on the handset. If your device does not support Secure Simple Pairing and requests you to input a PIN, enter "1234" from the handset.

- Some cellular phones may require you to accept certain permissions in order to enable features on your Bluetooth® system. During the Bluetooth® pairing process, please check your cellular phone's display for a pop-up with the request to grant phonebook access.

   
- Granting phonebook access permission will allow your contacts to be downloaded to the vehicle's Bluetooth® system. A pop-up may display on your cellular phone stating that the Bluetooth® system would like to access your contacts and call history. Please select "Allow" or "Yes" to grant this permission.

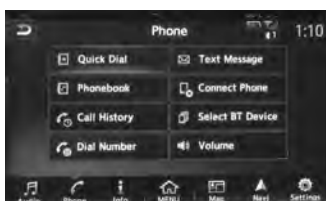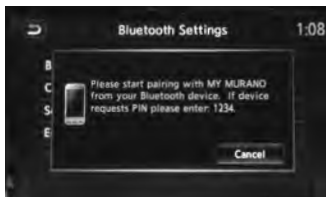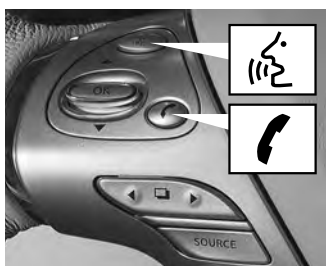

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.



SYSTEM GUIDE


If your cellular phone presents the option to not show the message again, please make sure that this item is checked. Doing so will ensure that any changes to your phonebook will be synced with the Bluetooth® system automatically.

- Some cellular phones may incorrectly state that the connection was unsuccessful. Please verify that the touch-screen displays that the connection is successful, or touch  "Settings" > "Bluetooth" > "Select BT Device" > "Phone" and confirm that your cellular phone is listed.

 
3. When connecting is complete, the screen will return to the Phone menu display.

PHONEBOOK SETUP

- Press the  **MENU** button on the control panel.
- Touch the  "Settings" key on the Launch Bar and touch the "Phonebook" key.
- Depending on your cellular phone, the system may automatically download your cellular phone's entire phonebook to the vehicle's Bluetooth® system. During the Bluetooth® pairing process, please check your cellular phone for any requests to download your phonebook or contacts to the vehicle system. If your cellular phone requests permission to download your contacts, please select "Allow" or "Yes". For additional information, please reference "Connecting Procedure" in this section.
- The Quick Dial phonebook can also be set for up to five entries that can be used with your cellular phone.


1. Press the  button on the steering wheel and touch the "Quick Dial" key.
2. Touch the "Add New" key at the top of the display. There are different methods to input a phone number. Select one of the following options:

- "Copy from Call History" to save a number from the Outgoing, Incoming or Missed Calls lists.
- "Copy from the Phonebook" to save a number that has been downloaded from your handset to the vehicle.
- "Enter Number by Keypad" to input the number and name manually.

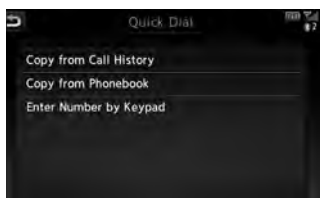

MAKING A CALL




To make a call, follow this procedure:

 
 
1. Press the  button on the steering wheel. The Phone menu will appear on the control panel display.
2. Touch the "Quick Dial", "Call History", "Phonebook" or "Dial Number" key.
3. Touch the desired entry from the list.
4. Touch "Number" to start dialing.



To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

RECEIVING/ENDING A CALL

- To accept the call, press the  button on the steering wheel or touch the "Answer" key on the display.
- To reject the call, press the  button on the steering wheel or touch the "Decline" key on the display.
- To hang up, press the  button on the steering wheel or touch the "Hang up" key on the display.

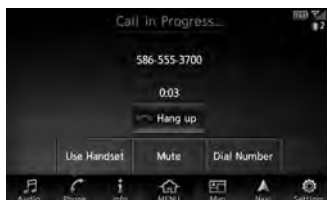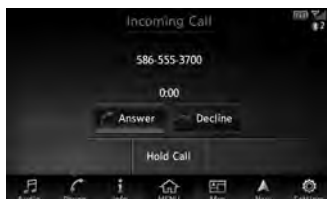

*Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

 
To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

For more information, refer to the "Display screen, heater, air conditioner, audio and phone systems (section 4)" of your Owner's Manual, the "Hands-free phone (section 4)" of your Navigation System Owner's Manual or please visit www.NissanUSA.com/bluetooth.

BLUETOOTH® SYSTEM WITHOUT NAVIGATION* (if so equipped)

PAIRING PROCEDURE

1. Press the **ENTER/SETTING** button.
2. Select the "Bluetooth" key.
3. Select the "Add Phone" key. This same screen can be accessed to remove, replace or select a different Bluetooth® device.
4. The system acknowledges the command and asks you to initiate connecting from the cellular phone handset. The connecting procedure of the cellular phone varies according to each cellular phone model. For additional information, refer to the cellular phone's Owner's Manual for details. You can also visit www.NissanUSA.com/bluetooth for instructions on connecting Nissan-recommended cellular phones.
 - When prompted, confirm the PIN on the display with the PIN shown on the handset. If your device does not support Secure Simple Pairing and requests you to input a PIN, enter "1234" from the handset.

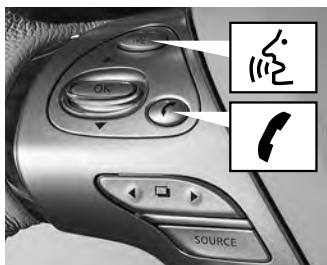


PHONEBOOK REGISTRATION

- When the cellular phone is connected to the in-vehicle module, the data stored in the cellular phone, such as phonebook, outgoing call logs, incoming call logs and missed call logs, is automatically transferred and registered to the system.
- The availability of this function depends on each cellular phone. The copying procedure also varies according to each cellular phone. Refer to the cellular phone's Owner's Manual for more information.




SYSTEM GUIDE

 - Up to 1,000 entries per registered cellular phone can be stored in the phonebook.

MAKING A CALL

 1. Press the  button on the steering wheel. The system will announce the available commands; afterward, a tone will sound.
2. Say: "Call". The system acknowledges the command and announces the next set of available commands.
3. Say the registered person's name. The system acknowledges the command and announces the next set of available commands.
4. Say: "Yes". The system acknowledges the command and makes the call.

RECEIVING/ENDING A CALL

- To accept the call, press the  button on the steering wheel.
- To reject the call, press the  button on the steering wheel.
- To hang up, press the  button on the steering wheel.

*Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

To view detailed instructional videos regarding these and other features, please go to



www.nissanownersinfo.mobi.

For more information, refer to the "Display screen, heater, air conditioner, audio and phone systems (section 4)" of your Owner's Manual.

BLUETOOTH® STREAMING AUDIO*

- If you have a compatible Bluetooth® device with streaming audio (A2DP profile), you can set up the wireless connection between your Bluetooth® device and your vehicle's audio system. This connection allows you to listen to audio from the Bluetooth® device using your vehicle's speakers.
- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.*

CONNECTING PROCEDURE WITH NAVIGATION SYSTEM (if so equipped)

1. Touch the  "Audio" key and select the "Bluetooth Audio" key.
2. A prompt to connect your device will display.
 - If the device needs to be connected:
 - a. Touch the  "Settings" key.
 - b. Touch the "Bluetooth" key.
 - c. Touch the "Connect Device" key **1**.
 - Touch the "BT Menu" key to view track listing, artist, songs or albums.
 - Touch the "BT Settings" key to change which device is playing audio.

 


To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

CONNECTING PROCEDURE WITHOUT NAVIGATION SYSTEM (if so equipped)

To connect your Bluetooth® audio device to the vehicle, follow the procedure below:

1. Press the **SETTING** button.
2. Select "Bluetooth".
3. Select "Add Phone". This same screen can be accessed to remove, replace or select a different Bluetooth® device.
4. The system acknowledges the command and asks you to initiate connecting from the cellular phone handset. The connecting procedure of the cellular phone varies according to each cellular phone model. For additional information, refer to the cellular phone's Owner's Manual for details. You can also visit www.NissanUSA.com/bluetooth for instructions on connecting Nissan-recommended cellular phones.

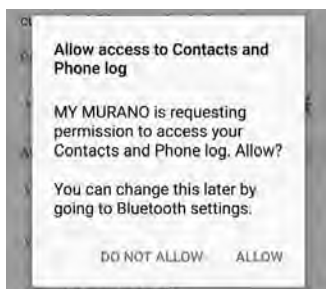

- To switch to the Bluetooth® audio mode, press the **MEDIA** button repeatedly until the Bluetooth® audio mode is displayed on the screen. If attempting to stream audio from your device over Bluetooth®, please ensure that your device's music application is open and audio is ready to be played.

The controls for the Bluetooth® audio are displayed on the screen. Use the preset **3** button for play and the preset **4** button for pause.

*Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Display screen, heater, air conditioner, audio and phone systems (section 4)" of your Owner's Manual or the "Audio system (section 3)" of your Navigation System Owner's Manual or please visit www.NissanUSA.com/bluetooth.



HOMELINK® UNIVERSAL TRANSCEIVER (if so equipped)

- The HomeLink® Universal Transceiver can learn and consolidate the functions of up to three different hand-held transmitters, operating items such as garage doors, property gates, outdoor and indoor lights or alarm systems.
- To program the HomeLink® Universal Transceiver:
 - Position the handheld transceiver 1-3 in (26-76 mm) away from the HomeLink surface, keeping the HomeLink indicator light in view.

SYSTEM GUIDE

- Press and hold the desired HomeLink button and the handheld transmitter button simultaneously until the HomeLink indicator light flashes slowly and then rapidly.
- Both buttons may be released when the indicator light flashes rapidly.
- To verify the programming is complete, press and hold the HomeLink button and observe the indicator light:
 - A solid, continuous light indicates the programming is complete and the HomeLink button will activate your device.
 - A blinking light that turns to a solid, continuous light after 2 seconds indicates additional steps are required to complete the programming.
- An additional person may make the remaining steps easier. To complete the programming process:
 - At the receiver of the device that you are programming to the HomeLink button, press and release the learn or smart button (the name may vary by manufacturer, but it is usually located near where the hanging antenna wire is attached to the unit). You have approximately 30 seconds to initiate the following step.
 - Press and hold the programmed HomeLink button for 2 seconds and release.
- You may have to repeat the previous two steps up to three times to complete the programming process. HomeLink should now activate your device.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual, the HomeLink website at www.homelink.com or call 1-800-355-3515.









NAVIGATION SYSTEM (if so equipped)

- Your Navigation System can calculate a route from your current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.


 
To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.
- To help promote safe driving, some functions cannot be operated or have limited operation when the vehicle speed is above 5 mph (8 km/h). The on-screen text and keys for these restricted functions will be grayed-out or muted and cannot be selected while driving. These functions will become available again when the vehicle speed is reduced to 5 mph (8 km/h). Voice commands may be available for some of the restricted functions. For more information, refer to the "Display screen, heater, air conditioner, audio and phone systems (section 4)" of your Owner's Manual and the "Information (section 5)" of your Navigation System Owner's Manual.

- 1**  **MENU** - Touch to access all items in the menu, including Navigation items.
- 2** Touch-screen
- 3** **MAP Menu** - Touch to access different options related to either a selected location by touch or one that you have navigated to. Some options include "Save Location", "Nearby POIs" or "Map Icons".
- 4**  **Navi** (Navigation) - Touch to access the Navigation function.
- 5**  **Info** (Information) - Touch to display the vehicle, traffic (if so equipped) and weather (if so equipped) information.
- 6** **ZOOM OUT**, **7** **ZOOM IN** - Touch to adjust the map scale. When parked, you can pinch out or in to zoom on the screen.
- 8**  **Map** - Touch to display the map.
- 9**  **Settings** - Touch to display the system settings.
- 10**  **Compass** - Map view can be changed by touching the compass when on the main map screen.

SETTING DESTINATION

You can set a destination with your Navigation System using the touch-screen display or Voice Recognition.

- Touch-screen Display
 - Touch the  "Navi" key on the Launch Bar.
- Voice Recognition
 - Press the  button on the steering wheel, and after the tone, say "Navigation". From here, the system will give you the options available for setting a destination.
- The fastest route is set as the default; to change this to a minimized freeway or shortest distance route, go to "Settings" > "Navigation" > "Route Settings".

 
SYSTEM GUIDE

SETTING A DESTINATION USING POINTS OF INTEREST (POI)

■ Touch-screen Display

- Touch the ▲ “Navi” key on the Launch Bar.
- Touch the “Points of Interest” key and then select one of the displayed options for choosing your destination.

■ Voice Recognition

- Press the  button on the steering wheel, and after the tone, say “Navigation” then say “Points of Interest”. From here, the system will give you the options available for setting a POI.

Please see your Owner’s Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to your Navigation System Owner’s Manual.

MEMO

MEMO



Helpful Resources

Below is a list of helpful resources that can be used to learn more about the vehicle's systems and feature operations.

- Vehicle Owner's Manual
- Navigation System Owner's Manual (if so equipped)
- Printed Quick Reference Guide (this document)
- www.NissanUSA.com/bluetooth
- www.NissanUSA.com/connect
- www.youtube.com/user/NissanUSA
- Nissan Consumer Affairs: 1-800-647-7261
- Electronic Quick Reference Guide
(Use Quick Response (QR) code or URL below.)
- Nissan Quick Guide (available in the iPhone App Store or Android Google Play Store for download to your smartphone)



To view detailed instructional videos, go to www.nissanownersinfo.mobi/2017/murano or snap this barcode with an appropriate barcode reader.



This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain with this Quick Reference Guide all revision updates sent to you by NISSAN to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the NISSAN website at <https://owners.nissanusa.com/nowners/navigation/manualsguide>. If you have questions concerning any information in your Owner's Manual, contact NISSAN Consumer Affairs. See the NISSAN CUSTOMER CARE PROGRAM page in the Owner's Manual for contact information.

