 


2019 **PATHFINDER**

QUICK REFERENCE GUIDE



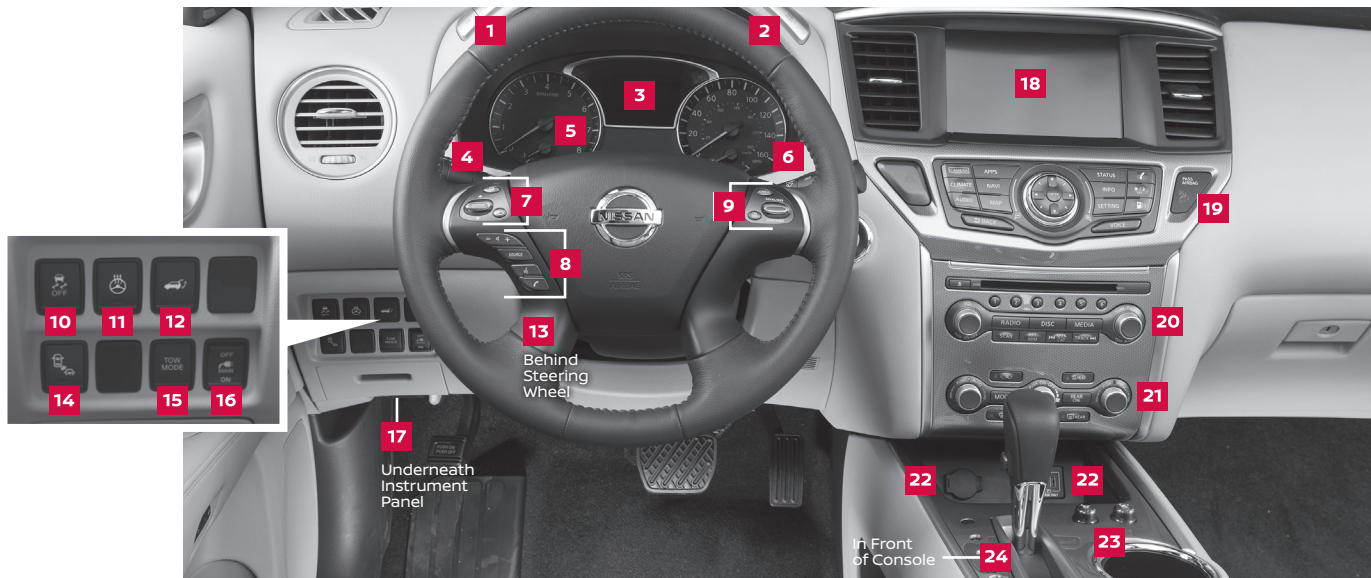

- | | | | |
|---|--|---|--|
| 1 Instrument Brightness Control* | 8 Steering Wheel Switches for Audio*/Bluetooth®/Navigation* | 14 Warning Systems Switch | 20 Audio System |
| 2 Twin Trip Odometer Reset Switch* | 9 Cruise Control | 15 Tow Mode Switch | 21 Heater and Air Conditioner (automatic) |
| 3 Vehicle Information Display | 10 Vehicle Dynamic Control (VDC) OFF Switch* | 16 Power Inverter Switch | 22 Power Outlets/USB Ports |
| 4 Headlight and Turn Signal Switch | 11 Heated Steering Wheel Switch* | 17 Hood Release* | 23 Climate Control/Heated Seat Switches* |
| 5 Low Tire Pressure Warning Light | 12 Liftgate Instrument Panel Switch* | 18 Control Panel Display Screen* | 24 4WD Shift Switch* |
| 6 Wiper and Washer Switch | 13 Tilt/Telescopic Steering Column* | 19 Front Passenger Air Bag Status Light* | |
| 7 Display Switches | | | |

*See your Owner's Manual for information.

TABLE OF CONTENTS

NEW SYSTEM FEATURES

Intelligent Around View® Monitor (if so equipped)	2
SiriusXM® Traffic (if so equipped) and SiriusXM® Travel Link (if so equipped)	3
NissanConnect® Services Powered by SiriusXM® (if so equipped)	4
Blind Spot Warning (BSW) with Rear Cross Traffic Alert (RCTA) (if so equipped)	5
Rear Door Alert	6
Automatic Emergency Braking (AEB) (if so equipped)	7
Rear Sonar System (RSS)	7

ESSENTIAL INFORMATION

Tire Pressure Monitoring System (TPMS) with Easy-Fill Tire Alert (if so equipped)	8
Loose Fuel Cap and Fuel-filler Door	9
Towing Your Vehicle	9
Clock Set/Adjustment	10

FIRST DRIVE FEATURES

Nissan Intelligent Key® System (if so equipped)	11
4WD Shift Switch (if so equipped)	12
Starting/Stopping the Engine	13
Power Liftgate (if so equipped)	13
Motion-Activated Liftgate (if so equipped)	14
Front Power Seat Adjustments (if so equipped)	14
2 ND Row Seats	15
3 RD Row Seats	15
Automatic Drive Positioner (if so equipped)	16
Outside Mirror Control Switch	16
Headlight Control Switch	17
Wiper and Washer Switch	18
USB (Universal Serial Bus) Connection Port/iPod® Interface	18
Heater and Air Conditioner (automatic)	19
Rear Climate Controls	21
FM/AM/SiriusXM® Satellite/HD® Radio with CD/DVD Player (if so equipped)	22
Cruise Control (if so equipped)	23
Intelligent Cruise Control (ICC) (if so equipped)	24
Power Outlets	25

SYSTEM GUIDE

Vehicle Information Display	26
Bluetooth® Hands-free Phone System	27
• System Operating Tips	27
Bluetooth® System without Navigation (if so equipped)	28
Bluetooth® System with Navigation (if so equipped)	30
Bluetooth® Streaming Audio	32
Hands-free Text Messaging Assistant	33
Navigation System (if so equipped)	34
Nissan Mobile Entertainment System (MES) (if so equipped)	35
HomeLink® Universal Transceiver (if so equipped)	36



Additional information about your vehicle is also available in your Owner's Manual, NissanConnect® Owner's Manual and at www.NissanUSA.com.



Please see your Owner's Manual for important safety information and system operation limitations.

 
 
- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)", the "Monitor, climate, audio, phone and voice recognition systems (section 4)" and the "Starting and driving (section 5)" of your Owner's Manual.

NEW SYSTEM FEATURES

INTELLIGENT AROUND VIEW® MONITOR (if so equipped)

- With the ignition switch in the ON position, activate the Intelligent Around View® Monitor by pressing the **CAMERA** button **1**, located on the control panel, or move the shift lever to the **R (REVERSE)** position. The control panel displays various views of the position of the vehicle.
- When the shift lever is in the **P (PARK)** or **D (DRIVE)** position and the **CAMERA** button **1** is pressed, the front view and bird's-eye view screen is displayed.
- When the **CAMERA** button **1** is pressed again, the front view and front-side view screen is displayed.
- When the shift lever is in the **R (REVERSE)** position, the rear view and bird's-eye view screen will be displayed.
- When the **CAMERA** button **1** is pressed, the rear view and front-side view screen will be displayed.
- The colored guide lines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line.
 - Red 1.5 ft (0.5 m)
 - Yellow 3 ft (1 m)
 - Green 7 ft (2 m)
 - Green 10 ft (3m) (if so equipped)
- There are some areas where the system will not show objects.
 - When in the front or the rear view display, an object below the bumper or on the ground may not be viewed **2**.
 - When in the bird's-eye view, a tall object near the seam of the camera viewing areas **3** will not appear in the monitor.
- The distance between objects viewed on the Intelligent Around View Monitor differs from the actual distance.
- Objects in the bird's-eye view will appear farther than the actual distance.

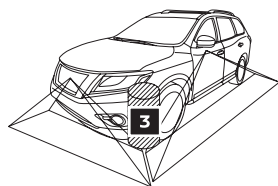

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

MOVING OBJECT DETECTION (MOD)

- The MOD system helps inform the driver of moving objects around the vehicle.
- The system will operate when the shift lever is in the **D (DRIVE)**, **N (NEUTRAL)**, **R (REVERSE)** or **P (PARK)** position and the vehicle is driven at speeds of approximately 5 mph (8 km/h) or less.
- If the MOD system detects moving objects, a yellow frame will be displayed on the camera image.
- When the following is displayed:
 - Blue **MOD** icon **4**; the system is active.
 - Gray **MOD** icon; the system is not active.
 - No **MOD** icon; the system is off. The indicator will also be off if all of the warning systems are deactivated using the “Settings” menu.
- The MOD system will not operate if the trunk is open.

 


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems** (section 4)” of your Owner's Manual.

SiriusXM® TRAFFIC (if so equipped) AND SiriusXM® TRAVEL LINK (if so equipped)

- Your vehicle's Navigation System is equipped with SiriusXM® Travel Link and SiriusXM® Traffic capabilities.
- Press the **INFO** button to access SiriusXM Travel Link and SiriusXM Traffic.
- SiriusXM Travel Link provides access to real-time weather information and forecasts, nearby fuel prices, movie listings, sports scores and stock quotes.
- SiriusXM Traffic provides information that may help to avoid delays due to traffic incidents. Traffic jams, roadwork, road closures around the current location, etc., are represented graphically on the map by icons depicting the nature of the event. Incidents on the route are automatically displayed as they are approached.

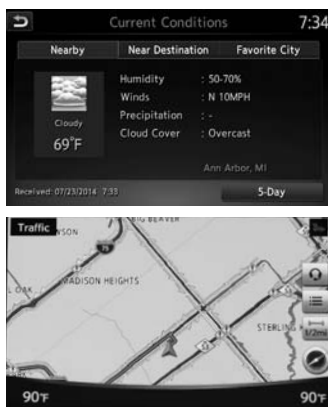

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “**Information** (section 5)” of your NissanConnect® Owner's Manual.

NEW SYSTEM FEATURES


NISSANCONNECT® SERVICES POWERED by SiriusXM® (if so equipped)

 
 
NissanConnect® Services is a collection of security and convenience services that add innovation to your daily drive.

- To enroll in NissanConnect Services, create an account or log into your Nissan Owner Portal with your Vehicle Identification Number (VIN). Under the NissanConnect Services tab, select the red button next to Manage Subscription. Follow the prompts to enroll in NissanConnect Services. Next, download the NissanConnect Services companion app and log into it using your Nissan Owner Portal ID and password.

For full details on NissanConnect Services or to enroll your vehicle, please visit www.NissanUSA.com/connect or call **855-426-6628**.

Here is a quick overview of some of the features that may be available for your vehicle. A full description of these and other NissanConnect Services can be found in your NissanConnect Owner's Manual.

- Automatic Collision Notification, a service that generates an automatic connection between the vehicle and the Emergency Response Center when the vehicle has been involved in an accident that was severe enough to deploy the air bags.
- Emergency Call, which connects you to a NissanConnect Services Specialist who will assist in the dispatch of emergency services to the vehicle's location. To use this feature, press the **SOS** button **1** on the overhead console. The **SOS** button **1** should only be used in emergency situations.
- Roadside Assistance, which dispatches roadside assistance to the vehicle's location in non-emergency situations. Roadside Assistance can be accessed by touching the  headset icon **2** on the map screen, via NissanConnect Services Companion app or by calling the Roadside Assistance provider directly.
- Stolen Vehicle Locator, a service that works in coordination with law enforcement agencies to assist in the recovery of a stolen vehicle.
- Remote Door Lock/Unlock, for use when you forget to lock your vehicle or if you need to open it and do not have the keys. To use this feature, log into the NissanConnect Services companion app or website or contact a NissanConnect Services Response Specialist.
- Remote Engine Start, Start your engine remotely using the NissanConnect Services companion app or website.
- Alarm Notification, This system will notify you when the factory-installed vehicle alarm system has been activated.

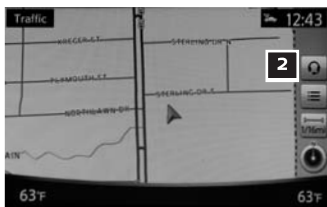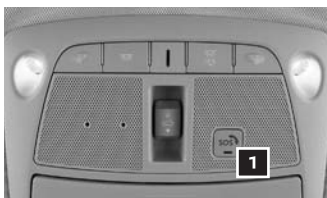

- **Maintenance Alert**, Receive notification via a selected method of a vehicle system malfunction that triggers instrument panel warning lights.
- **Connected Search**, Select "Connected Search" from the "Destination" menu on the vehicle's Navigation System to conduct a Point of Interest (POI) search within a certain distance of the vehicle's location.
- **Valet Alert**, Use Valet Alert to set up a radius around your vehicle. Activate alerts via the NissanConnect Services companion app or website.
- **Curfew Alert**, Specify curfew limits via the NissanConnect Services companion app or website and will be notified via a selected method if curfew is violated.
- **Journey Planner**, with which you can send a route with a destination and up to five way points directly to the vehicle.
- **Boundary Alert**, a feature that allows you to monitor the movement of your vehicle in and out of specified regions you have set on the Monitoring section of the NissanConnect Services web portal or companion app.
- **Speed Alert**, which sends you alerts when your vehicle speed exceeds a threshold you have set on the web portal or companion app.

To access these features in your vehicle:

- Press the **SETTING** button **3** on the control panel, then
- Touch the "NissanConnect Services" key **4**.

 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Information (section 5)**" of your NissanConnect® Owner's Manual.



BLIND SPOT WARNING (BSW) WITH REAR CROSS TRAFFIC ALERT (RCTA) (if so equipped)

- The BSW system helps to alert the driver when another vehicle moves into the vehicle's detection zone.
- An indicator light **1** located near the outside mirrors will illuminate if the radar sensors detect a vehicle in the detection zone.
- Push the warning systems switch **2** to temporarily turn the system off. When the system is off, the indicator light **3** on the switch and the indicator light **4** in the vehicle information display will extinguish.
- The indicator light **3** on the switch will also be off if all of the warning systems are deactivated using the "Settings" menu in the vehicle information display.

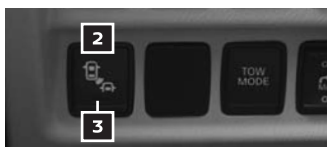

NEW SYSTEM FEATURES

- The indicator lights **3** and **4** will illuminate after the ignition switch is ON and the BSW system is enabled. This indicates that the BSW system is operational.
- The RCTA system helps to alert the driver of an approaching vehicle when the driver is backing out of a parking space. The system operates when the shift lever is in the **R (REVERSE)** position and the vehicle speed is less than approximately 5 mph (8 km/h).
- The radar sensors detect an approaching vehicle from up to 66 ft (20 m). The sensors are located on both sides near the rear bumper. The system gives visual and audible warnings if an approaching vehicle is detected.
- The RCTA system can be turned on or off through the Driving Aids menu in the vehicle information display.






Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

 
 
For more information, refer to the "Instruments and controls (section 2)" and the "Starting and driving (section 5)" of your Owner's Manual.


REAR DOOR ALERT

The Rear Door Alert functions under certain conditions to indicate there may be an object or passenger in the rear seat(s). The system is activated when a rear door is opened and closed within 10 minutes of the vehicle being driven.

REAR DOOR ALERT (ACTIVE)

- When the system is active, the horn will sound three times twice and a **Check Back Seat For All Articles** warning **1** will appear on the display.
- To activate Rear Door Alert, in your vehicle information display:
 - Press the  button on the steering wheel until the "Settings" menu screen appears.
 - Using the  switch, select "Vehicle Settings", "Rear Door Alert" and press the **ENTER** button.
 - Choose from the following options: "Off", "Alert & Horn" or "Alert Only", and then press the **ENTER** button.
- To Dismiss Rear Door Alert:
 - To dismiss the warning, use the  **ENTER** switch on the steering wheel to select "Dismiss Message" **2**. If no selection is made, this message will disappear after a period of time.

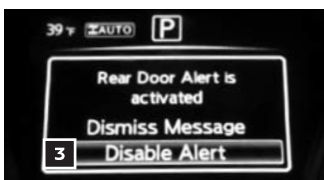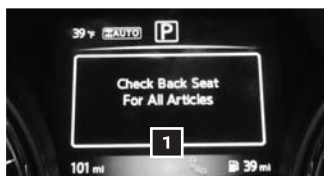

- To temporarily disable Rear Door Alert for the remainder of the current trip, use the  switch on the steering wheel to select “Disable Alert” **3** and press the **ENTER** button.

Please see your Owner’s Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “**Safety—Seats, seat belts and supplemental restraint system (section 1)**” and the “**Instruments and controls (section 2)**” of your Owner’s Manual.

AUTOMATIC EMERGENCY BRAKING (AEB) (if so equipped)



- The AEB can assist the driver when there is a risk of a forward collision with a vehicle ahead in the traveling lane.
- The AEB operates at speeds greater than 3 mph (5 km/h).
- If there is a risk of a forward collision, an audible tone will sound and the vehicle ahead detection indicator **1**, located within the meter display, will illuminate. If the driver applies the brakes after the warning and the AEB detects that there is still the possibility of a forward collision, the system will automatically increase the braking force. If the driver does not take action, the AEB emergency warning indicator **2**, located within the meter display, will appear, followed by an audible warning and partial braking will be applied.



Please see your Owner’s Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

REAR SONAR SYSTEM (RSS)

- With the shift lever in the **R (REVERSE)** position, this system will sound a tone to alert you of obstacles up to 5.9 ft (1.8 m) from the bumper with a decreased coverage area at the outer corners of the bumper.
- The rate of the tone increases as the vehicle gets closer to the obstacle. A continuous tone sounds when an obstacle is less than 10 in (25 cm) from the bumper.
- To turn the RSS off, turn the ignition switch to the ON position or through the vehicle information display:
 - With the ignition system in the ON position, push the  button, until you get to the “Settings” screen.
 - Using the  **ENTER** buttons, select “Driver Assistance” and “Parking Aids” and then “Sensor” **1**. Press the **ENTER** button on the steering wheel to turn RSS OFF.



 
Please see your Owner’s Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “**Starting and driving (section 5)**” and “**Instruments and Controls (section 2)**” of your Owner’s Manual.

ESSENTIAL INFORMATION

TIRE PRESSURE MONITORING SYSTEM (TPMS) WITH EASY-FILL TIRE ALERT (if so equipped)

- A **Tire Pressure Low – Add Air** warning message will appear in the vehicle information display **1** and the low tire pressure warning light **2** will illuminate when one or more tires are low in pressure and air is needed.

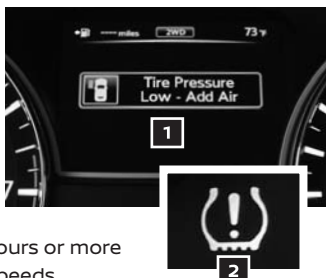

- The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mi (1.6 km) at moderate speeds.

- When adding air to an under-inflated tire, the TPMS with Easy-Fill Tire Alert provides visual and audible signals to help you inflate the tire to the recommended **COLD** tire pressure.

To use the Easy-Fill Tire Alert:



1. Move the shift lever to the **P (PARK)** position and apply the parking brake.
 2. Place the ignition switch in the ON position. Do not start the engine.
 3. Add air to the under-inflated tire, and within a few seconds, the hazard warning lights will start flashing.
 4. When the designated tire pressure is reached, the horn will beep once and the hazard warning lights will stop flashing.
 5. Repeat this procedure for any additional under-inflated tires.
- After tire pressures are adjusted, drive the vehicle at speeds above 16 mph (25 km/h). The **Tire Pressure Low – Add Air** warning message and low tire pressure warning light **2** will extinguish.
 - When the low tire pressure warning light **2** flashes for approximately 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked. Nissan recommends that you visit a Nissan dealer for this service.
 - Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light **2** to illuminate. If the warning light illuminates, check the tire pressure in your tires.
 - Check the tire pressure (including the spare tire) often and always prior to long distance trips.
 - The Tire and Loading Information label contains valuable information. Please refer to the "Technical and consumer information (section 10)" of your Owner's Manual for the location of the Tire and Loading Information label.

 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)", the "Starting and driving (section 5)" and the "Do-it-yourself (section 8)" of your Owner's Manual.

LOOSE FUEL CAP AND FUEL-FILLER DOOR

LOOSE FUEL CAP

- A **LOOSE FUEL CAP** warning message will appear in the vehicle information display **1** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will extinguish when the vehicle detects the fuel-filler cap is properly tightened and the  button **2** on the steering wheel is pressed for about 1 second.
- If the cap is not properly tightened, the Malfunction Indicator Light  may illuminate.

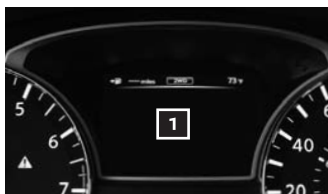

FUEL-FILLER DOOR

The fuel-filler door is located on the driver's side of the vehicle.

- The fuel-filler door automatically locks or unlocks (if so equipped) when the driver's door is locked or unlocked.
- To open the fuel-filler door, push the right side of the fuel-filler door.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

TOWING YOUR VEHICLE

- 4WD model vehicle (if so equipped)
 - A 4WD vehicle must be towed with all wheels off the ground even if it is placed in 2WD mode.
- For proper towing and to prevent accidental damage to your vehicle, NISSAN recommends that a service operator tow your vehicle after carefully reading the Owner's Manual precautions.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "In case of emergency (section 6)" of your Owner's Manual.

ESSENTIAL INFORMATION

CLOCK SET/ADJUSTMENT

- To adjust the time and the appearance of the clock on the display:

1. Press the **SETTING** button on the control panel.
2. Select the "Clock" key.

- The following settings can be adjusted:

- **On-screen Clock:** The clock in the upper right corner of the display can be turned ON or OFF based on the indicator light.
- **Daylight Savings Time:** The application of Daylight Savings Time can be turned ON or OFF.
- **Clock Format (24h):** The clock can be set to 12 hours or 24 hours.
- **Time Zone:** Adjust the time zone. Choose a time zone from the available list.
- **Offset (hour):** The time can be adjusted by increasing or decreasing per hour.
- **Offset (min):** The time can be adjusted by increasing or decreasing per minute.

- Press the **BACK** button to return to the previous screen.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



For more information, refer to the "**Getting Started (section 2)**" of your NissanConnect® Owner's Manual.

FIRST DRIVE FEATURES

NISSAN INTELLIGENT KEY® SYSTEM (if so equipped)




The Nissan Intelligent Key® system allows you to lock or unlock your vehicle, open your liftgate and remotely start the engine. It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

REMOTE ENGINE START* (if so equipped)

- The remote engine start operating range is approximately 200 ft (60 m) from the vehicle. The effective operating range may be shorter if there are walls or other obstructions between the key and the vehicle.
- For the remote engine start to function, the vehicle must be in the **P (PARK)** position with the ignition off and all doors must be closed and locked. Please see your Owner's Manual for additional information.
- To start your vehicle remotely:
 1. Press the  button **1**.
 2. Within 5 seconds, press and hold the engine start  button **2** for at least 2 seconds.
- The engine will start, and the parking lights will turn on.
- Automatic climate control will begin heating or cooling the vehicle depending on the outside air temperature.
- The engine will run for 10 minutes and then turn off.
- Repeat steps 1 and 2 to extend the time for an additional 10-minute period.
 - After two remote engine starts, the ignition switch must be cycled before the remote start can be used again.
- To start driving, depress the brake pedal and press the ignition switch.



LOCKING AND UNLOCKING THE VEHICLE

- The lock and unlock operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, push either door handle request switch **3** once or press the  button **1** on the Intelligent Key.
- To unlock the vehicle, perform one of the following procedures:
 - Push either door handle request switch **3** once; the corresponding door will unlock. Push the door handle request switch **3** again within 30 seconds; all other doors will unlock, or
 - Press the  button **4** on the Intelligent Key to unlock the driver's side door. Press the  button **4** again; all other doors will unlock.




FIRST DRIVE FEATURES

LIFTGATE RELEASE (if so equipped)

- To open the liftgate, press the  button **5** for longer than 1 second.
- To close the liftgate, press the  button **5** again for longer than 1 second.

PANIC ALARM

- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button **6** for more than 1 second. Once activated, the panic alarm and headlights will stay on for a period of time.

INTELLIGENT KEY BATTERY DISCHARGE

- If the battery of the Intelligent Key is discharged or environmental conditions interfere with the Intelligent Key operation, start the engine according to the following procedure:

1. Move the shift lever to the **P (PARK)** position.
2. Firmly apply the foot brake.
3. Push the ignition switch with the Intelligent Key, and a chime will sound.
4. Within 10 seconds after the chime sounds, press the ignition switch while depressing the brake pedal and the engine will start.



*State laws may apply; review local laws before using.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)", the "Starting and driving (section 5)" and the "Do-it-yourself (section 8)" of your Owner's Manual.

4WD SHIFT SWITCH (if so equipped)

The 4WD Lock Mode is intended only for low-speeds such as during take off.

2WD MODE

- Intended for normal driving conditions, typically dry, paved roads.

4WD AUTO

- Intuitive 4WD sends torque to rear wheels as needed.
- Selecting AUTO will cause the indicator light on the dash to illuminate.



LOCK MODE

- 4WD Lock Mode is recommended when maximum torque is needed at the rear wheels. Using 4WD Lock mode makes it easy to take off when the vehicle is stuck. Maximum 4WD torque is sent to the rear wheels at any pedal position during take off.
- LOCK mode automatically shuts off when the ignition is shut off.

- When LOCK mode is selected, both of the indicator lights will be illuminated on the dash board.
- When driven at a high-speed, LOCK mode automatically shifts to AUTO mode, and the indicator light will shut off.

If the 4WD switch is used while making a turn, accelerating, or decelerating, you may feel a jolt. This also happens when turning the ignition switch while in AUTO or LOCK mode. This is not a malfunction.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

STARTING/STOPPING THE ENGINE

It is important to make sure the Nissan Intelligent Key® is with you (that is, in your pocket or purse).

- Depress the brake pedal.
- Press the ignition switch to start the engine.

TURNING THE ENGINE OFF

- Move the shift lever to the **P (PARK)** position and apply the parking brake.
- Press the ignition switch to turn the engine off.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

POWER LIFTGATE (if so equipped)

- When the liftgate is closed and locked, the liftgate will open automatically by:
 - Pushing the power liftgate switch **1** on the instrument panel.
 - Pushing the liftgate opener switch **2**; the liftgate must be unlocked, or you must have the Intelligent Key with you (that is, in your pocket or purse).
 - Pressing the **HOLD** button **3** on the Nissan Intelligent Key® for more than 1 second.



LIFTGATE POSITION SETTING (if so equipped)

- The liftgate can be set to open to a specific height by performing the following procedure:
 1. Open the liftgate using the request switch or the Intelligent Key.
 2. Pull the liftgate down to the desired position and hold the liftgate (the liftgate will have some resistance when being manually adjusted).

FIRST DRIVE FEATURES

3. While holding the liftgate in position, push and hold the power liftgate switch **4** located on the liftgate for approximately 5 seconds or until three beeps are heard.

- The liftgate will open to the selected position. To change the position of the liftgate, repeat steps 1 through 3 for setting the position of the liftgate.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.

MOTION-ACTIVATED LIFTGATE (if so equipped)

To operate the liftgate hands-free:

- Ensure you have the Intelligent Key within 31.5 in (80 cm) of the liftgate.
- Use a quick kicking motion under the center of rear bumper **1**. After 2 seconds, the vehicle will beep three times and the liftgate will open.
- Do not swing foot side to side or pause during kicking motion.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.

FRONT POWER SEAT ADJUSTMENTS (if so equipped)

- To slide the seat forward or backward, push the switch **1** forward or backward.
- To recline the seatback, push the switch **2** forward or backward.



SEAT LIFTER (driver's seat)

- To raise or lower the front portion or height of the seat, push the front or back end of the switch **1** up or down.

POWER LUMBAR SUPPORT (if so equipped for driver's seat)

 
- To adjust the seat lumbar support, push the front or back end of the switch **3**.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Safety — Seats, seat belts and supplemental restraint system (section 1)"** of your Owner's Manual.

2ND ROW SEATS

- To slide the seat forward or backward, pull the center of the bar **1** up and hold it while you slide the seat forward or backward to the desired position. Release the bar **1** to lock the seat in position.
- To recline the seatback, pull up on the recline lever **2** and lean back. To bring the seatback forward, pull the lever **2** up and lean your body forward. Release the lever **2** to lock the seatback in position.

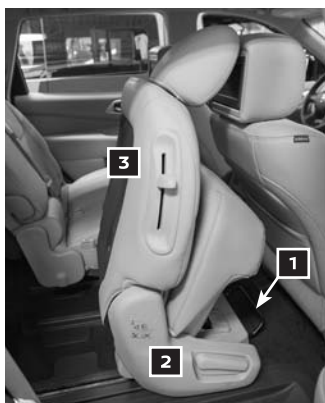

CHILD SEAT ACCESS MODE

- This feature is not available on the driver's side of the 2nd row seat.
- If a child safety seat is installed on the passenger's side of the 2nd row seat, the 3rd row can be accessed without removing the child safety seat.
- To access the 3rd row from outside the vehicle, lift up on the seatback release lever **3** and move the seat toward the front of the vehicle.

MULTI-MODE

- To enter the 3rd row from outside the vehicle, lift up fully on the seatback release lever **3**. This will release the back of the seat and fold up the seat cushion.
- For access to the rear seat, slide the entire seat forward by pushing on the upper seatback area.
- To return the seat to a locked position, push the upper seatback rearward until the seatback and track are locked. Push the seat cushion down. Locking the seatback will also lock the track.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Safety—Seats, seat belts and supplemental restraint system (section 1)" of your Owner's Manual.

3RD ROW SEATS

- To recline the seatback, pull up on the latch **1** located on the outside corner of each seatback. Lean back until the desired angle is obtained.
- To bring the seatback forward again, pull up on the latch **1** and move your body forward. The seatback will move forward.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Safety—Seats, seat belts and supplemental restraint system (section 1)" of your Owner's Manual.

FIRST DRIVE FEATURES

AUTOMATIC DRIVE POSITIONER (if so equipped)

Two positions for the driver's seat, steering column (if so equipped) and outside mirrors can be stored in the automatic drive positioner memory.

■ Follow this procedure to set the memory positions:

1. Place the ignition switch in the ON or ACC position. (The vehicle should be stopped while setting the memory.)
2. Adjust the driver's seat, steering column (if so equipped) and outside mirrors to the desired positions using the adjusting switches for each feature.
3. Push the **SET** switch **1**, and within 5 seconds, push the memory switch (1 or 2).
4. The indicator light for the selected memory switch will illuminate for approximately 5 seconds and a chime will sound when the memory is stored.
5. The driver's seat, steering column (if so equipped) and outside mirror positions are now set to your preferences.
6. These memorized positions can also be linked to your Nissan Intelligent Key®. To link a memorized position to your Nissan Intelligent Key, press the unlock button on the key fob after completing the previous step.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

OUTSIDE MIRROR CONTROL SWITCH

- To select the right or left side mirror, move the control switch **1** right or left.
- Adjust each mirror to the desired position using the switch **2**.



REVERSE TILT-DOWN FEATURE (if so equipped)

- The reverse tilt-down feature will turn both outside mirror surfaces downward to provide better rear visibility close to the vehicle.
 1. Apply the brake.
 2. Place the ignition switch in the ON position.
 3. Move the shift lever to the **R (REVERSE)** position.
 4. The outside mirror surfaces will move downward. (The mirror control switch **1** must be out of the center [neutral] position.)
- The outside mirror surfaces will return to their original positions when one of the following conditions has occurred:
 1. The shift lever is moved to any position other than **R (REVERSE)**.
 2. The outside mirror control switch **1** is set to the center (neutral) position.
 3. The ignition switch is placed in the OFF position.


 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.



HEADLIGHT CONTROL SWITCH

 
HEADLIGHT CONTROL

- Turn the headlight control switch to the  position **1** to turn on the front parking, tail, license plate and instrument panel lights. Turn the switch to the  position **2** to turn on the headlights.





AUTOLIGHT SYSTEM (if so equipped)



- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **3** then push the ignition switch to ON. To deactivate the autolight system, turn the headlight control switch to the **OFF** position,  position **1** or  position **2**.



HIGH BEAM SELECT

- With the headlights ON (either in the **AUTO** **3** or  position **2**), push the headlight control switch forward **4** to select the high beam function. The blue indicator light  will illuminate in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light will extinguish.
- Pull and release the headlight control switch **5** to flash the headlight high beams on and off.

 FOG LIGHT SWITCH (if so equipped)

- The headlights must be on and the low beams  selected for the fog lights to operate.
- Turn the switch (inside collar) to the  position **6** to turn the fog lights on.
- Turn the switch (inside collar) to the **OFF** position to turn the fog lights off.

LANE CHANGE SIGNAL

- Move the lever up or down until the turn signal begins to flash but the lever does not latch to signal a lane change. Hold the lever until the lane change is completed.
- Move the lever up or down until the turn signal begins to flash but the lever does not latch and release the lever. The turn signal will automatically flash three times.

Choose the appropriate method to signal a lane change based on the road and traffic conditions.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

 
For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

FIRST DRIVE FEATURES

WIPER AND WASHER SWITCH

- Move the lever to one of the following positions to operate the windshield wipers:

- 1** Mist (**MIST**) – One sweep operation of the front wipers.
- 2** Intermittent (**INT**) – Operates the speed-sensing front wipers intermittently. The intermittent speed can be adjusted by twisting the time control ring **3** to increase or decrease wiper speed.
- 4** Low (**LO**) – Front wipers operate at a continuous low-speed.
- 5** High (**HI**) – Front wipers operate at a continuous high-speed.
- 6** Pull the lever toward you to activate the front washer. The front wipers will operate several times.

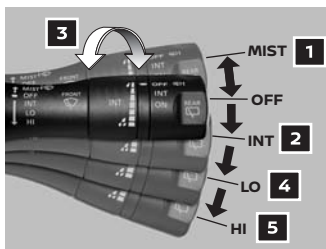

REAR WIPER AND WASHER

- 7** Intermittent (**INT**) – Rear wiper operates intermittently.
- 8** Low (**ON**) – Rear wiper operates at a continuous low-speed.
- 9** Push the lever forward to activate the rear washer. The rear wiper will operate several times.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

USB (Universal Serial Bus) CONNECTION PORT/iPod® INTERFACE

- The USB connection ports **1** are located in the center console under the armrest.
- When a compatible USB memory device or iPod® is plugged into the USB port:
 - A confirmation message appears. Select "Yes" if you prefer to use the device with Voice Recognition in which song titles and artist names are registered in the system.
 - Compatible audio files stored on the device can be played through the vehicle's audio system and front display.
- If two USB devices are plugged in at the same time, the device that was plugged in first can play music in the vehicle while the second device will only charge. To play music on the second device, unplug both and plug the second device in first.



 
- This vehicle is equipped with **AUDIO IN** and **VIDEO IN** inputs **2**. This will allow you to play audio and video through your vehicle from an external source.

CHARGE ONLY PORTS

- The USB/iPod® charging ports are located beneath the climate controls **3** and on the 2nd row back of the center console **4**. These ports will charge compatible devices.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual and "Audio System (section 3)" of your NissanConnect® Owner's Manual.

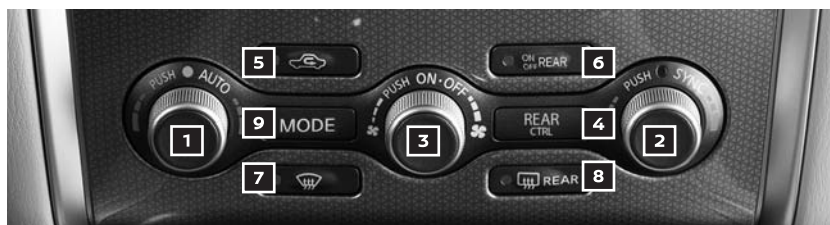

HEATER AND AIR CONDITIONER (automatic)

1 AUTO BUTTON/DRIVER'S SIDE TEMPERATURE CONTROL DIAL

- The auto mode may be used year-round. Press the **AUTO** button to turn the system on, and the system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.
- Turn the driver's side temperature control dial to the left for cooler air or to the right for warmer air.

2 SYNC BUTTON/PASSENGER'S SIDE TEMPERATURE CONTROL DIAL

- Press the **SYNC** button to turn the passenger's side temperature controls on or off. Press the SYNC button to synchronize the driver's, front passenger's and rear climate settings. To turn SYNC off and individually set passengers side temperature, turn the passenger's side temperature control dial.
- Turn the passenger's side temperature control dial left for cooler air or right for warmer air.
- Pressing **SYNC** will also synchronize all temperatures within the vehicle.

FIRST DRIVE FEATURES



3 ON-OFF BUTTON/FAN SPEED CONTROL DIAL

- Turn the fan speed control dial left to decrease fan speed or right to increase fan speed.
- Press the **ON-OFF** button to turn the system on or off.

4 REAR CTRL

- To control the rear automatic air conditioning system using the front air conditioner control panel, press the **REAR CTRL** button. The front display will switch to the Rear Climate Screen.

 
5 AIR RECIRCULATION BUTTON

- Press the air recirculation button  to recirculate interior air inside the vehicle. The indicator light on the button will illuminate. This system is used to avoid certain outside odors and to help adjust the inside vehicle temperature more efficiently.
- The air recirculation mode cannot be activated when the climate control system is in the front defroster mode .




6 REAR AIR CONDITIONER

- To control the rear automatic air conditioning system with the front air conditioner control panel:
 - Turn on the front climate control system by pressing the **ON-OFF** button **3**.
 - Press the **REAR ON-OFF** button.
- When the rear automatic air conditioning system is on, the indicator light on the **REAR ON-OFF** button will illuminate.
- To display the "Rear Air-conditioning" screen:
 - Press the **REAR CTRL** button or;
 - Press the **CLIMATE** button.
 - Touch the "Rear Climate" key.
 - Use the on-screen keys to adjust temperature, system on/off, fan speed and automatic functions.
- To turn off the rear automatic air conditioning system from the front controls, press the **REAR ON-OFF** button.
- The rear passenger controls and system are unavailable until the **REAR ON-OFF** button is illuminated.

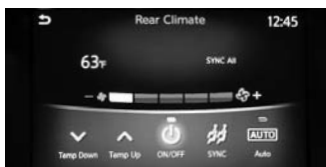


7 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS





- Press the front defroster button  to turn the system on. The A/C automatically turns on when the front defroster mode is selected. This feature removes humidity from the air.
- Turn the temperature control dial **1** to set the desired temperature.

- To defrost the front and side windows, set the temperature control **1** and fan speed control **3** to their maximum settings.

8 REAR WINDOW AND OUTSIDE MIRROR (if so equipped) DEFROSTER SWITCH

- Push the rear window defroster switch  REAR to defrost the rear window and outside mirror.
- This function automatically turns off after approximately 15 minutes.



9 MODE BUTTON

- Press the **MODE** button to cycle through the following air flow outlets:
 -  Air flows from the center and side vents.
 -  Air flows from the center, side and foot vents.
 -  Air flows mainly from the foot vents.
 -  Air flows from the front defroster and foot vents.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

REAR CLIMATE CONTROLS

- To activate the rear automatic air conditioner system:
 1. Turn on the front climate control system by pressing the **ON-OFF** button **1**.
 2. Press the **REAR ON-OFF** button **2** on the front control panel.
 - The indicator light will illuminate.
- To control the rear automatic air conditioner system:
 1. Press the **CLIMATE** button **3** on the control panel.
 2. Then touch the "Rear Climate" key.
 - The temperature, fan speed, , "SYNC" and "AUTO" are now visible on the control panel display.
- Press the **REAR ON-OFF** button **2** or the  ON-OFF key on the "Rear Climate" screen to turn off the rear automatic air conditioner system.
- **4 OFF** button - Turns off the rear climate control system and the **REAR ON-OFF** button **2** indicator light.
- **5** Fan speed control buttons - Press + or - to increase or decrease fan speed.



FIRST DRIVE FEATURES

- **6** Temperature increase and decrease buttons – Press to adjust the rear temperature up ▲ or down ▼.
- **7** **AUTO** button – The system automatically works to keep air flow and fan speed at a constant temperature.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.



FM/AM/SiriusXM® SATELLITE/HD® RADIO WITH CD/DVD PLAYER (if so equipped)

1 ON-OFF BUTTON/VOL (volume) CONTROL KNOB

- Press the **ON-OFF** button to turn the system on or off.
- Turn the **VOL** (volume) control knob right or left to increase or decrease the volume.

2 SEEK-CAT AND TRACK BUTTONS

- To scan quickly and stop at the previous or next broadcast station, press the ◀◀ **SEEK-CAT** button or the **TRACK** ▶▶ button.
- For satellite radio to switch to the previous or next category, press the ◀◀ **SEEK-CAT** button or the **TRACK** ▶▶ button.
- To change tracks on a CD, press the ◀◀ **SEEK-CAT** button or the **TRACK** ▶▶ button.
- To rewind or fast forward a track on a CD, press and hold the ◀◀ **SEEK-CAT** button or the **TRACK** ▶▶ button.

3 AUDIO BUTTON/TUNE/FOLDER KNOB

- Press the **AUDIO** button to access and cycle through the audio settings.
- To manually tune the radio, turn the **TUNE/FOLDER** knob left or right.

4 STATION SELECT BUTTONS

- To store a station in a preset, you must first select a radio band by pressing the **RADIO** button **5** to cycle to the desired AM, FM or satellite radio band.

- Next press and hold the desired station preset button (1-6) until the preset number is updated on the display and the sound is briefly muted. The channel indicator will then display, and the sound will resume. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then press the corresponding station select button (1-6).

6 DISC BUTTON

- Press the **DISC** button to access the CD or DVD controls.




7 MEDIA

- Press the **MEDIA** button repeatedly to cycle between USB, iPod, AUX, BTA and REAR DISPLAY.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Audio System (section 3)" of your NissanConnect® Owner's Manual.

CRUISE CONTROL (if so equipped)

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 mph (40 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **ON-OFF** switch **1** on the steering wheel. The  indicator light (white) will be displayed in the vehicle information display.
- To set a cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **2** on the steering wheel and release. The  indicator (green) in the vehicle information display will illuminate. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **3** on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **2** on the steering wheel. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, push the **CANCEL** switch **4** on the steering wheel.
- To turn off cruise control, push the **ON-OFF** switch **1** on the steering wheel. The  indicator in the vehicle information display will extinguish.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

FIRST DRIVE FEATURES

INTELLIGENT CRUISE CONTROL (ICC) (if so equipped)

VEHICLE-TO-VEHICLE DISTANCE CONTROL MODE

- To set Vehicle-To-Vehicle Distance Control mode, push the **CRUISE ON/OFF** switch **1** on the steering wheel for less than 1.5 seconds. The CRUISE ON/OFF switch indicator light **2** will illuminate.
- Accelerate to the desired speed.
- Push down on the **COAST/SET** switch **3** on the steering wheel and release it. Intelligent Cruise Control will be set to the desired speed.
- Press the distance button **4** on the steering wheel repeatedly to change the set distance between long, middle and short.
- When a vehicle is not detected ahead of you in the lane, the set distance and set vehicle speed indicator lights will illuminate **5** in set mode.
- When a vehicle is detected ahead of you in the lane, the vehicle ahead detection, set distance and set vehicle speed indicator lights will illuminate **6** in set mode.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **7** on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **3** on the steering wheel. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, push the **CANCEL** switch **8** on the steering wheel or tap the brake pedal. The set vehicle speed indicator **5** will extinguish.
- To turn off Intelligent Cruise Control, press the **CRUISE ON/OFF** button **1** on the steering wheel. The CRUISE ON/OFF switch indicator light **2** in the instrument panel will extinguish.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

POWER OUTLETS

12V OUTLETS

 
- The power outlets are for powering electrical accessories such as cellular phones. They are rated at 12V, 120W, (10A) maximum.
- To use a power outlet, open the cap.
- The power outlets on the instrument panel **1** and inside the center console (if so equipped) **2** are powered only when the ignition switch is in the ACC or ON position.
- The power outlet in the cargo area (if so equipped) **3** is powered all the time.

120V OUTLET (if so equipped)

- The 120V outlet **4** is located on the back of the center console.
- To use the outlets for devices that require 120V power, place the ignition switch in the ON position and push the power inverter switch **5**.
- The switch will illuminate when enabled.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

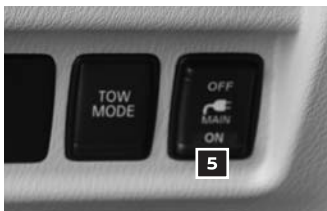

SYSTEM GUIDE



VEHICLE INFORMATION DISPLAY




The vehicle information display **1** displays items such as:

- Vehicle settings
- Trip computer information
- Drive system warnings and settings (if so equipped)
- Blind Spot Warning (BSW) information (if so equipped)
- Rear Cross Traffic Alert (RCTA) (if so equipped)
- Cruise control system information (if so equipped)
- Intelligent Cruise Control (ICC) system information (if so equipped)
- NISSAN Intelligent Key® operation information
- Indicators and warnings
- Tire Pressure information





USING THE VEHICLE INFORMATION DISPLAY

The vehicle information display modes can be changed using the  button **2** and the **ENTER** or  button **3** on the steering wheel.

- Press the  button **2** on the steering wheel to enter the vehicle information display menu items.
- Press the  button **3** on the steering wheel to navigate through the items in the vehicle information display.
- Press the **ENTER** button **3** on the steering wheel to change or select an item in the vehicle information display.
- Press the  button **4** on the steering wheel to go back to the previous menu.



RESETTING THE TRIP COMPUTER

1. Press the  button **2** on the steering wheel until you reach the trip computer mode **5**.
2. Press the  button **2** on the steering wheel again for more than 1.5 seconds to reset average fuel consumption, average speed, distance to empty and journey time.



SETTINGS

The setting mode allows you to change the information displayed in the vehicle information display:

- | | | |
|--------------------------------------|--------------------|------------------|
| ■ Driver assistance (if so equipped) | ■ Maintenance | ■ Language |
| ■ Main menu selection | ■ Alarms | ■ Unit |
| ■ Body color | ■ Vehicle settings | ■ Welcome effect |
| | ■ Factory Reset | |

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.







For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

 
To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

BLUETOOTH® HANDS-FREE PHONE SYSTEM*

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.
- For information regarding connecting your cellular phone, refer to the appropriate "Bluetooth® System" section within this guide.

SYSTEM OPERATING TIPS

- Press the  or  button on the steering wheel to interrupt the voice prompts at any time and speak a command after the tone.
- For vehicles not equipped with Navigation:
 - To use the system faster, you may speak the second level commands with the main menu command on the main menu. For example, press the  or  button on the steering wheel, and after the tone, say "Call Redial".
- For vehicles equipped with Navigation:
 - Refer to the NissanConnect® Owner's Manual for more information.
- The "Help" command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing HVAC vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.
- When speaking phonebook names, please be aware some cellular phones require the last name to be spoken before the first name. For example, "Michael Smith" may be spoken as "Smith Michael".
- To cancel a Voice Recognition session, say "Exit" or press and hold the  or  button on the steering wheel.
- Voice commands can be used to operate various Bluetooth® system features using the Nissan Voice Recognition system. See your NissanConnect® Owner's Manual for detailed information.
- For more detailed information and instructions, refer to your cellular phone's Owner's Manual and visit **www.NissanUSA.com/bluetooth**.

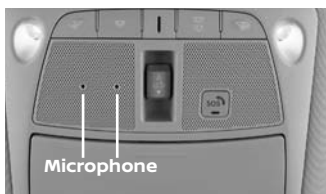

*Some jurisdictions prohibit the use of cellular telephones while driving.


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Bluetooth® Hands-free Phone (section 4)" and "Troubleshooting guide (section 8)" of your NissanConnect® Owner's Manual or please visit **www.NissanUSA.com/bluetooth**.

SYSTEM GUIDE


BLUETOOTH® SYSTEM WITHOUT NAVIGATION* (if so equipped)

CONNECTING PROCEDURE

- The vehicle must be stationary when connecting the cellular phone.
 1. Press the  button on the steering wheel. The system announces the available commands.
 2. Say: "Connect Phone." The system acknowledges the command and announces the next set of available commands.
 3. Say: "Add Phone". The system acknowledges the command and asks you to initiate connecting from the cellular phone handset.
 4. Initiate connecting from the cellular phone:
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible cellular phones, please visit www.NissanUSA.com/bluetooth.
 - If prompted for a PIN, enter "1234" from the handset. (The PIN is assigned by NISSAN and cannot be changed.)
 5. Say the name for the cellular phone when the system asks you to provide one. You can give the cellular phone a name of your choice.




PHONEBOOK


- The phonebook stores up to 1,000 entries for each cellular phone paired with the system.
- Depending on your cellular phone, the system may automatically download your cellular phone's entire phonebook to the vehicle's Bluetooth® system.
- If the phonebook does not download automatically, 40 entries can be individually downloaded.
- To manually download entries:
 1. Press the  button on the steering wheel.
 2. After the tone, say "Phonebook".
 3. After the next tone, say "Transfer Entry". The system acknowledges the command and asks you to initiate the transfer from the cellular phone handset. The new contact phone number will be transferred from the cellular phone to the vehicle.
 - The transfer procedure varies according to each cellular phone. See your cellular phone's Owner's Manual for details. You can also visit www.NissanUSA.com/bluetooth for instructions on transferring phone numbers from NISSAN-recommended cellular phones.

4. The system repeats the number and prompts you for the next command. When you have finished entering numbers or transferring an entry, choose "Store".
5. The system confirms the name, location and number.




MAKING A CALL FROM THE PHONEBOOK

- In some cases, names stored in all UPPERCASE letters may not be recognized by the Voice Recognition system.
 1. Press the  button on the steering wheel.
 2. After waiting for the tone, say "Call."
 3. After the next tone, speak the name of a phonebook entry. For example, "Michael Smith."
 4. Confirm that the correct name is recognized by saying "Dial" after the tone.

MAKING A CALL BY PHONE NUMBER

1. Press the  button on the steering wheel. A tone will sound.
2. Say: "Call." The system acknowledges the command and announces the next set of available commands.
3. Say: "Phone Number." The system acknowledges the command and announces the next set of available commands.
4. Say the number you wish to call starting with the area code in single digit format.
5. When you have finished speaking the phone number, the system repeats it back and announces the available commands.
6. Say: "Dial." The system acknowledges the command and makes the call.

RECEIVING/ENDING A CALL

- When you receive a cellular phone call, a ring tone sounds through the audio system.
- To accept the call, press the  button on the steering wheel.
- To reject the call, press the  button on the steering wheel.
- To hang up the cellular phone at the end of a call or to disconnect during call placement, press the  button on the steering wheel.

*Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

 
For more information, refer to the "Audio system (section 3)" of your NissanConnect® Owner's Manual or please visit www.NissanUSA.com/bluetooth.

SYSTEM GUIDE

BLUETOOTH® SYSTEM WITH NAVIGATION* (if so equipped)

CONNECTING PROCEDURE

- The vehicle must be stationary when connecting the cellular phone.
- 1. Press the **SETTING** button on the control panel and touch the "Bluetooth" key on the display.
- 2. Touch the "Connect Device" key.
- 3. Touch the "Add New (X/5) Free" key.
- 4. The "Connect Device" screen will display.
- 5. Initiate connecting from the cellular phone.
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible cellular phones, please visit www.NissanUSA.com/bluetooth.
 - If prompted for a PIN, enter "1234" from the handset. (The PIN is assigned by NISSAN and cannot be changed.)
 - For cellular phones that support SSP (Simple Secure Pairing), confirm that the PIN on the vehicle display under "Security Code" matches the PIN displayed on the cellular phone.
- 6. When connecting is complete, the screen will return to the "Phone" screen.

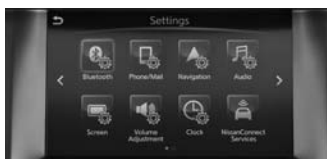



PHONEBOOK

 
- Depending on your cellular phone, the system may automatically download your cellular phone's entire phonebook to the vehicle's Bluetooth® system.
- If the phonebook does not download automatically, the vehicle phonebook may be set for up to 2,000 entries.
- To manually download entries:
 1. Press the **SETTING** button.
 2. Touch "Phone/Mail".
 3. Touch "Phone Settings".
 4. Touch "Phonebook/Favorites Settings".
 5. Touch "Configure Phonebook Settings".
 6. Touch "Manual Phonebook Transfer".
 - This will start downloading up to 2,000 entries from the cellular phone.





MAKING A CALL

To make a call, follow this procedure:

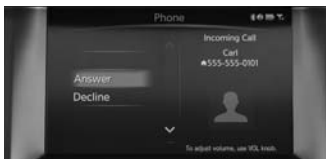1. Press the  button on the steering wheel. The Phone menu will appear on the control panel display.
2. Touch the "Favorites", "Call History", "Phonebook" or "Dial Number" key.
3. Select the desired entry from the list.
4. Dialing begins when the entry is selected or when the  key is selected.



RECEIVING/ENDING A CALL

 
- To accept the call, press the  button on the steering wheel or touch the "Answer" key.
- To decline the call, touch the "Decline" key.
- To hang up, press the  button on the steering wheel or touch the "Hang up" key.

*Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

For more information, refer to the "Hands-free phone (section 4)" of your NissanConnect® Owner's Manual or please visit www.NissanUSA.com/bluetooth.

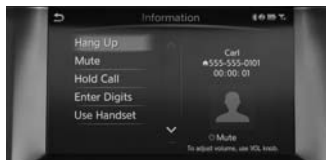

SYSTEM GUIDE

BLUETOOTH® STREAMING AUDIO*

- If you have a compatible Bluetooth® device with streaming audio (A2DP and AVRCP profiles), you can set up the wireless connection between your Bluetooth® device and your vehicle's audio system. This connection allows you to listen to audio from the Bluetooth® device using your vehicle's speakers.
- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.*
- To use your connected Bluetooth® device to stream audio, it will need to be connected as an audio device. The following procedure will initially connect a Bluetooth® device as an audio player and allow you to switch between devices.
 1. Press the **SETTING** button on the control panel and touch the "Bluetooth" key on the display.
 2. Touch the "Connect Device" key.
 3. Touch the "Add New (X/5) Free" key.
 4. The "Connect Device" screen will display.
 5. Initiate connecting from the device.
- Once your Bluetooth® device has been connected as an audio device:
 - Press the **AUDIO** button on the control panel.
 - Select the "Source" key.
 - Select the "Bluetooth Audio" key.
- Bluetooth® connectivity issues can usually be resolved with a reboot of your cellular phone if you do not regularly turn off your cellular phone. Otherwise, try updating your cellular phone with the latest software.




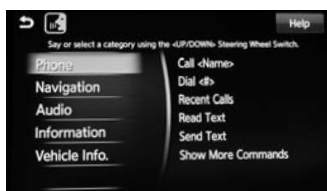 
*Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Audio system (section 3)**" of your NissanConnect® Owner's Manual or please visit www.NissanUSA.com/bluetooth.

HANDS-FREE TEXT MESSAGING ASSISTANT*

- This text messaging feature allows for sending and receiving text messages through the vehicle's interface.
- Using predefined or custom messages, send a text to an entry stored in your Bluetooth® Hands-free Phone System.
- Once enabled, the text message, sender and delivery time are shown on the control panel display when the vehicle speed is less than 5 mph (8 km/h).
- Text messages have the option of being read aloud.
- Once the vehicle is in motion, text messages can only be replied to using the Voice Recognition  button on the steering wheel.
- Text messages can be created manually when the vehicle is not in motion.
- Custom text messages must be created in advance.
- Many cellular phones may require special permission to enable text messaging. Check the cellular phone's screen during Bluetooth® pairing. For some cellular phones, you may need to enable "Notifications" in the cellular phone's Bluetooth® menu for text messages to appear on the touch-screen display. For more detailed information and instructions, refer to your cellular phone's Owner's Manual.
- Text message integration requires that the cellular phone support Message Access Profile (MAP) for both receiving and sending text messages. Some cellular phones may not support all text messaging features. Please see www.NissanUSA.com/bluetooth for compatibility information as well as your device's Owner's Manual.



*Laws in some jurisdictions may restrict the use of "Text-to-Speech". Some of the applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.


For more information, refer to the "Hands-free phone (section 4)" of your NissanConnect® Owner's Manual.

SYSTEM GUIDE



NAVIGATION SYSTEM (if so equipped)

- Your Navigation System can calculate a route from your current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.
- To help promote safe driving, some functions cannot be operated or have limited operation when the vehicle speed is above 5 mph (8 km/h). The on-screen text and keys for these restricted functions will be grayed-out or muted and cannot be selected while driving. These functions will become available again when the vehicle speed is reduced to 5 mph (8 km/h). Voice commands may be available for some of the restricted functions. For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.


- 1** Touch-screen display.
- 2** Multi-function controller – Turn to highlight an item on the screen and press **ENTER** to select the highlighted item. On the map screen, turn to adjust the map scale. To scroll the map, push the controller in the direction you want to scroll.
- 3** **STATUS** – Press multiple times to display audio information, air conditioner status, fuel economy or navigation directions.
- 4** **NAVI** – Press to access the guidance control functions such as guidance cancellation, route priority, or waypoint setting on the route.
- 5** **INFO** (Information) – Press to display vehicle status, traffic (if so equipped), weather (if so equipped) or Voice Recognition information.
- 6**  – Press to switch between the day screen (bright) and the night screen (dark). Press and hold the button to turn the display off. Press again to turn the display on.

 
- 7 MAP** – Press to display the map. While following a programmed route, press multiple times to change the type of route information.
- 8 SETTING** – Press to access the system settings.
- 9 ↶ BACK** – Press to return to the previous screen. In a settings screen, this button can also be used to apply the setting. In a character input screen, this button can also delete the characters that have been entered.
- 10 VOICE** – Press to hear the current voice guidance for a programmed route.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “**Getting Started (section 2)**”, “**Navigation (section 6)**” and “**Troubleshooting guide (section 8)**” of your NissanConnect® Owner's Manual.

NISSAN MOBILE ENTERTAINMENT SYSTEM (MES) (if so equipped)

- With this Dual Head Restraint DVD system, you can play video files via a DVD or CD, providing images and sound both from the front and rear display screens.
- You can also connect auxiliary devices, such as video games, camcorders or portable video players, to the USB and HDMI ports located on the back of the center console. **1**
- Rear Auxiliary Mode allows rear seat passengers to independently display different sources on each screen.
- Use the remote controller **2**, provided with the system, to operate the rear display screens.
- The rear displays can be activated or deactivated individually by the remote controller **2**.
 - To activate or deactivate the rear displays, select the preferred side (**L** or **R**) and press the  (power) button on the remote controller **2**.
- The rear displays can be activated or deactivated individually from the front seats using the front display.
 - To activate or deactivate the rear displays, press the **AUDIO** button then touch the “Rear Display” key **3**. Then select either the “L Display Power” or “R Display Power” key to turn the left or right screen ON or OFF.

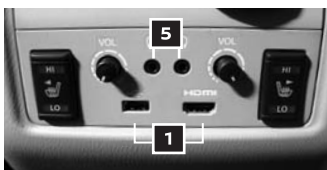

SYSTEM GUIDE

- Use the headphones **4**, also provided with the system, to listen to audio wirelessly and independently. You may also connect your own wired-headphones to the headphone jacks **5** located on the back of the center console. The jacks support stereo (3-pole) 3.5 mm headphones. Smartphone (4-pole) 3.5 mm headphones may run the risk of not being fully supported.
- For optimum performance, select the appropriate headphone channel **6** that corresponds to the headrest display being viewed directly in front of you.
- To watch or control videos on the front display, make sure the vehicle is in the **P (PARK)** position and the parking brake is applied.
- To reduce driver distraction, the wireless headphones will not operate while located in the front seats and movies will not be shown on the front display while the vehicle is in any drive position.
- To access standard DVD controls on the front display while playing a DVD on the rear display, press the **MEDIA** button on the audio control panel while the vehicle is in the **P (PARK)** position and the parking brake is applied.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Audio system (section 3)**" of your NissanConnect® Owner's Manual.



HOMELINK® UNIVERSAL TRANSCEIVER (if so equipped)

- The HomeLink® Universal Transceiver system can learn and consolidate the functions of up to three different hand-held transmitters, operating items such as garage doors, property gates, outdoor and indoor lights or alarm systems.
- To program the HomeLink® Universal Transceiver:
 - Position the handheld transceiver 1-3 in (26-76 mm) away from the HomeLink surface, keeping the HomeLink indicator light in view.
 - Press and hold the desired HomeLink button and the handheld transmitter button simultaneously until the HomeLink indicator light flashes slowly and then rapidly.
 - Both buttons may be released when the indicator light flashes rapidly.

- To verify the programming is complete, press and hold the HomeLink button and observe the indicator light:
 - A solid, continuous light indicates the programming is complete and the HomeLink button will activate your device.
 - A blinking light that turns to a solid, continuous light after 2 seconds indicates additional steps are required to complete the programming.
- An additional person may make the remaining steps easier. To complete the programming process:
 - At the receiver of the device that you are programming to the HomeLink button, press and release the learn or smart button (the name may vary by manufacturer, but it is usually located near where the hanging antenna wire is attached to the unit). You have approximately 30 seconds to initiate the following step.
 - Press and hold the programmed HomeLink button for 2 seconds and release.
- You may have to repeat the previous two steps up to three times to complete the programming process. HomeLink should now activate your device.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" of your Owner's Manual, the HomeLink website at www.homelink.com or call 1-800-355-3515.

MEMO

MEMO

MEMO

MEMO



Helpful Resources

Below is a list of helpful resources that can be used to learn more about the vehicle's systems and feature operations.

- Vehicle Owner's Manual
- NissanConnect® Owner's Manual (if so equipped)
- Printed Quick Reference Guide (this document)
- www.NissanUSA.com/bluetooth
- www.NissanUSA.com/connect
- www.youtube.com/user/NissanUSA
- Nissan Consumer Affairs: 1-800-647-7261
- Electronic Quick Reference Guide (Use Quick Response (QR) code or URL below.)
- Nissan Quick Guide (available in the App Store® or Google Play™ store for download to your smartphone)



To view detailed instructional videos,
go to www.nissanownersinfo.mobi/2019/pathfinder
or snap this barcode with an appropriate barcode reader.



This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain with this Quick Reference Guide all revision updates sent to you by NISSAN to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the NISSAN website at <https://owners.nissanusa.com/owners/navigation/manualsGuide>. If you have questions concerning any information in your Owner's Manual, contact Nissan Consumer Affairs. See the NISSAN CUSTOMER CARE PROGRAM page in the Owner's Manual for contact information.

