


2012 QUEST

QUICK REFERENCE GUIDE



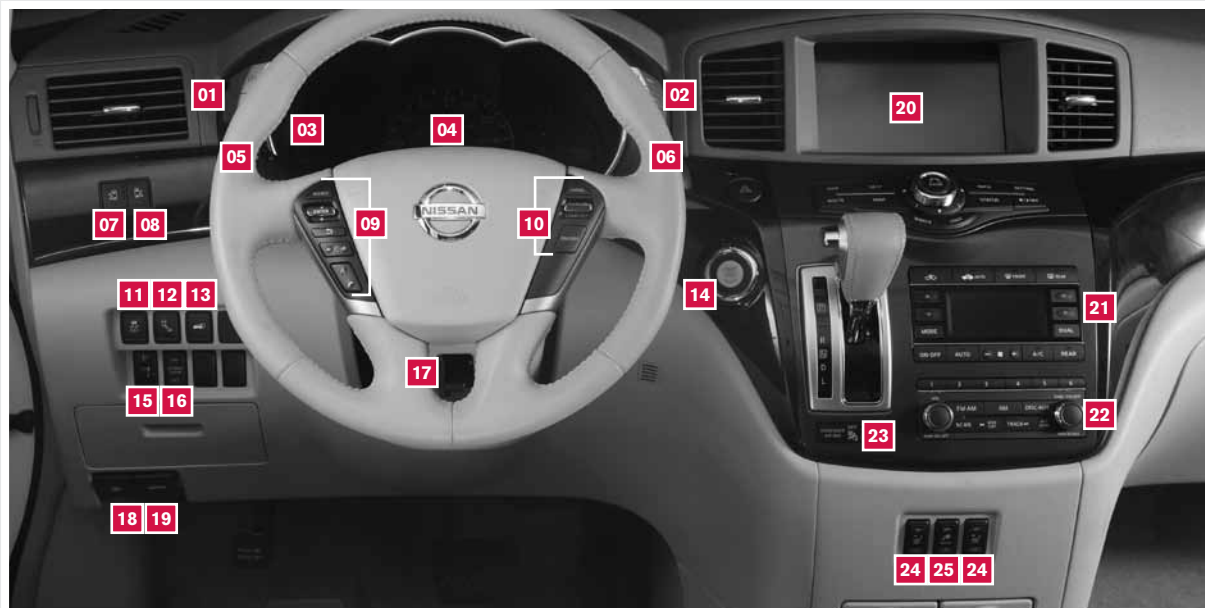

- | | | | |
|--|--|--|---|
| 01 INSTRUMENT BRIGHTNESS CONTROL* | 08 PASSENGER'S SIDE SLIDING DOOR SWITCH | 14 PUSH BUTTON IGNITION SWITCH | 20 CONTROL PANEL DISPLAY |
| 02 TRIP COMPUTER / RESET SWITCHES | 09 STEERING WHEEL SWITCHES FOR AUDIO* / BLUETOOTH* / NAVIGATION | 15 HEADLIGHT AIMING CONTROL* | 21 AUTOMATIC CLIMATE CONTROLS |
| 03 LOW TIRE PRESSURE WARNING LIGHT | 10 CRUISE CONTROL | 16 POWER DOOR MAIN SWITCH | 22 AUDIO SYSTEM |
| 04 DOT MATRIX LIQUID CRYSTAL DISPLAY* | 11 VEHICLE DYNAMIC CONTROL (VDC) OFF SWITCH* | 17 TILT AND TELESCOPIC STEERING COLUMN* | 23 FRONT PASSENGER AIR BAG STATUS LIGHT* |
| 05 HEADLIGHT AND TURN SIGNAL CONTROL | 12 BLIND SPOT WARNING (BSW) SWITCH | 18 FUEL-FILLER DOOR RELEASE | 24 HEATED SEAT SWITCHES* |
| 06 WINDSHIELD WIPER / WASHER SWITCH | 13 POWER LIFTGATE SWITCH | 19 HOOD RELEASE* | 25 POWER OUTLET MAIN SWITCH* |
| 07 DRIVER'S SIDE SLIDING DOOR SWITCH | | | |

*See your Owner's Manual for information.

NEW SYSTEM FEATURES

Blind Spot Warning (BSW) System (if so equipped)	2
Advanced Climate Control System (if so equipped)	2

ESSENTIAL INFORMATION

Loose Fuel Cap	3
Tire Pressure Monitoring System (TPMS)	3

FIRST DRIVE FEATURES

NISSAN Intelligent Key® System	4
Power Sliding Door Release (if so equipped)	5
Power Liftgate Release (if so equipped)	6
Front Power Seat Adjustments (if so equipped)	6
2 nd Row Seat Adjustments	7
Enter/Exit the 3 rd Row Seats	7
3 rd Row Seat Adjustments	7
Folding the 2 nd Row Seats	8
Outside Mirror Control Switch	8
Starting/Stopping the Engine	9
Headlight Control Switch	9
Windshield Wiper/Washer Switch	10
Automatic Climate Controls (if so equipped)	11
FM/AM/XM® Satellite Radio with CD/DVD Player (if so equipped)	13
Cruise Control	14
Fuel-Filler Door	14

SYSTEM GUIDE

Trip Computer	15
Bluetooth® Hands-free Phone System	15
System Operating Tips	15
Bluetooth® System with Navigation (if so equipped)	16
Bluetooth® System without Navigation (if so equipped)	18
Navigation System (if so equipped)	19
NISSAN Mobile Entertainment System (MES) (if so equipped)	19
HomeLink® Universal Transceiver (if so equipped)	20



- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**”, the “**Monitor, heater, air conditioner, audio, phone and voice recognition systems (section 4)**” and the “**Starting and driving (section 5)**” of your Owner’s Manual.



To view detailed instructional videos, go to
www.nissanownersinfo.mobi/2012/quest
 or snap this barcode with an
 appropriate barcode reader.




Additional information about your vehicle is also available in
 your Owner’s Manual, Navigation System Owner’s Manual
 and at www.nissanusa.com.

new system features

BLIND SPOT WARNING (BSW) SYSTEM (if so equipped)

- The control switch **01** is located on the left side of the instrument panel.
- The system automatically turns on when the engine is started and the BSW ON indicator light on the switch illuminates.
- The indicator light **02**, located in the outside mirror, will activate when the BSW system detects a vehicle in the detection zone.
- If a turn signal is activated in the direction of a detected vehicle, a chime sounds twice and the BSW indicator light will flash.
- To cancel the system, push the control switch and the BSW ON indicator light will turn off.

For more information, refer to the **"Starting and driving (section 5)"** of your Owner's Manual.

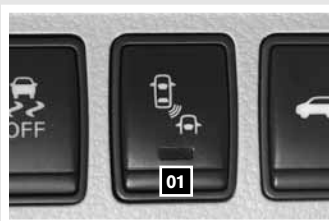


ADVANCED CLIMATE CONTROL SYSTEM (if so equipped)

- The advanced climate control system keeps the air inside the vehicle clean, using ion control and automatic air intake control with exhaust gas detecting sensor.
- When ion control is activated, this unit generates highly concentrated Plasmacluster® ions into the air blown from the vents, reducing the odor absorbed inside the vehicle.
- When the automatic air intake control is activated, the exhaust gas detection sensor can detect odors such as pulp or chemicals, and exhaust gas such as gasoline or diesel. When such odors or gases are detected, the system automatically changes from the outside air circulation mode to the recirculation mode.

For more information, refer to the **"Monitor, heater, air conditioner, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.

LOOSE FUEL CAP

- A **LOOSE FUEL CAP** warning message will appear in the dot matrix liquid crystal display **01** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will disappear when the vehicle detects the fuel-filler cap is properly tightened and the reset button **02** is pressed.
- If the cap is not properly tightened, the Malfunction Indicator Light  may illuminate.

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.




TIRE PRESSURE MONITORING SYSTEM (TPMS)

- A **CHECK TIRE PRESSURE** warning message will appear in the dot matrix liquid crystal display **01** and the low tire pressure warning light **02** will illuminate when one or more tires are low on pressure and air is needed.

- The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mile (1.6km) at moderate speeds.

- After tire pressures are adjusted, drive the vehicle at speeds above 16 MPH (25km/h). The **CHECK TIRE PRESSURE** warning message and low tire pressure warning light will disappear.

- When the low tire pressure warning light flashes for 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked by a NISSAN dealer.
- Tire pressure rises and falls depending on the heat caused by the vehicle’s operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light to illuminate. If the warning light illuminates in low ambient temperature, check the tire pressure in your tires.
- Check the tire pressure (including the spare tire) often and always prior to long distance trips.
- The Tire and Loading Information label contains valuable information. Please refer to section 9, “Technical and consumer information”, in your Owner’s Manual for the location of the Tire and Loading Information label.

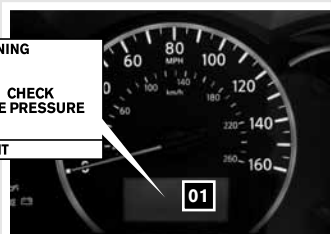






For more information, refer to the “**Instruments and controls (section 2)**”, the “**Starting and driving (section 5)**” and the “**Maintenance and do-it-yourself (section 8)**” of your Owner’s Manual.



first drive features

NISSAN INTELLIGENT KEY® SYSTEM

The NISSAN Intelligent Key® System allows you to lock or unlock your vehicle, open your liftgate and start the engine.

NOTE: It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

- The operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, push either door handle request switch **01** or the liftgate request switch **02** or press the  button **03** on the keyfob.
- To unlock the vehicle, perform one of the following procedures:
 - Push either door handle request switch **01** or the liftgate request switch **02**; the corresponding door will unlock. Push the request switch again within 1 minute; all other doors will unlock, or
 - Press the  button **04** on the keyfob to unlock the driver's side door. Press the  button again within 1 minute; all other doors will unlock.
- To open the power liftgate (if so equipped) press the  button **05** for more than 1 second.
- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button **06** for more than 1 second. Once activated, the panic alarm and headlights will stay on for 25 seconds.

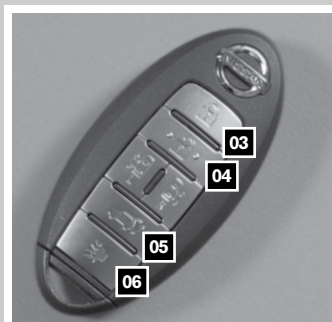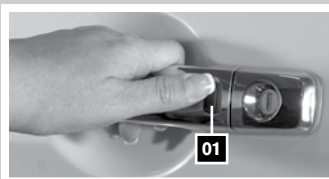

INTELLIGENT KEY BATTERY DISCHARGE

- If the battery of the Intelligent Key is discharged, or environmental conditions interfere with the Intelligent Key operation, start the engine according to the following procedure:
 1. Move the shift lever to the **P (PARK)** position.
 2. Firmly apply the foot brake.
 3. Touch the ignition switch with the Intelligent Key and a chime will sound.
 4. Within 10 seconds after the chime sounds, push the ignition switch while depressing the brake pedal and the engine will start.






For more information, refer to the “**Pre-driving checks and adjustments (section 3)**”, the “**Starting and driving (section 5)**” and the “**Maintenance and do-it yourself (section 8)**” of your Owner's Manual.

POWER SLIDING DOOR RELEASE (if so equipped)

Once unlocked, use one of the following methods to open the auto sliding doors:

- Press the driver's side **01** or the passenger's side **02** button on the NISSAN Intelligent Key® for approximately 1 second.
- From the driver's seat, push the driver's side **03** or passenger's side **04** sliding door switch located on the driver's side instrument panel.
- From the second row seats, push the sliding door switch **05** for approximately 1 second. The switch is located on either of the second row door pillars.
- Pull the sliding door handle (inside or outside) until you hear the chime.


For more information, refer to the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.

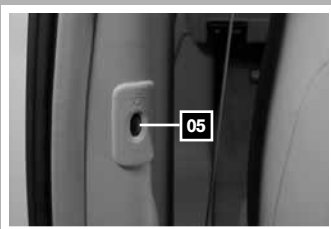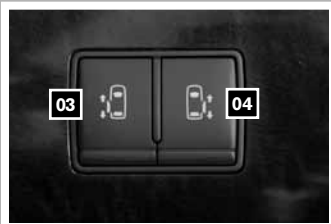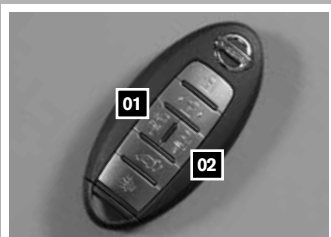

first drive features

POWER LIFTGATE RELEASE (if so equipped)

Use one of the following methods to open the liftgate:

- Press the  button **01** on the NISSAN Intelligent Key® for more than 1 second.



- Once unlocked, push the liftgate opener switch **02** while carrying the Intelligent Key with you.



- From inside the vehicle, push the power liftgate switch **03** located on the instrument panel to the left of the steering wheel.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.




FRONT POWER SEAT ADJUSTMENTS (if so equipped)

- To slide the seat forward or backward, push the control switch **01** forward or backward.
- To adjust the angle of the seatback, push the switch **02** forward or backward.

SEAT LIFTER (if so equipped for driver’s seat)

- To adjust the angle and height of the seat cushion, push the front or rear end of the switch **01** up or down.

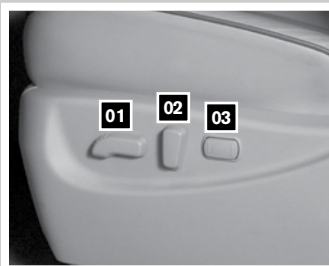

LUMBAR SUPPORT (if so equipped for driver’s seat)

- To adjust the seat lumbar area, push the front or back portion of the switch **03**.

For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.

2ND ROW SEAT ADJUSTMENTS

- To slide the seat forward or backward, pull the lever **01** up and hold it while you slide the seat forward or backward to the desired position.
- Release the lever to lock the seat in position.
- To adjust the angle of the seatback, pull the lever **02** up and lean back. To bring the seatback forward, pull the lever up and lean your body forward.
- Release the lever to lock the seatback in position.

For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.



ENTER/EXIT THE 3RD ROW SEATS

- The 2nd row seats can tilt and slide forward for easy entry/exit to/from the 3rd row seats.
- To enter or exit the 3rd row seat, pull the lever **01** or **02** up to tilt down the seatback and slide the seat forward.
- Return and lock the 2nd row seats by sliding the seats to the rearmost position and tilting up the seatback after use.


For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.



3RD ROW SEAT ADJUSTMENTS

- To adjust the angle of the seatback, pull the strap on the seatback **01** and lean back. Release the strap at the desired angle.

For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.

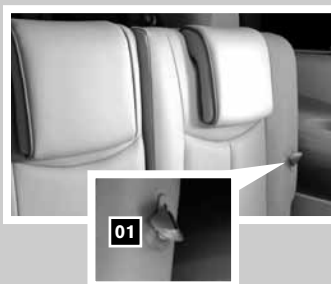

first drive features

FOLDING THE 2ND ROW SEATS

- Secure the seat belts on the seat belt hooks **01** on the side wall.
- To fold down the seatbacks, pull the lever **02** on the 2nd row seat.
- To return the seatbacks, lift up each seatback and push it to the upright position until it is latched.



For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.



OUTSIDE MIRROR CONTROL SWITCH

- To select the right or left side mirror, turn the control switch **01** right or left.
- To adjust the mirror angle, move the control switch **01** up, down, right or left.
- To prevent accidentally moving the mirror, turn and set the switch to the middle “neutral” position.



REVERSE TILT-DOWN FEATURE (if so equipped)

- When backing up the vehicle, the right or left outside mirror can be selected to automatically turn downward to provide better rear visibility.
 1. Push the ignition switch to the **ON** position.
 2. Move the shift lever to the **R (REVERSE)** position.
 3. Choose the right or left outside mirror by operating the outside mirror control switch **01**.
 4. The outside mirror surfaces move downward.
- When one of the following conditions has occurred, the outside mirror surfaces will return to their original positions.
 - The shift lever is moved to any position other than **R (REVERSE)**.
 - The outside mirror control switch is set to the center “neutral” position.
 - The ignition switch is pushed to the **OFF** position.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

STARTING/STOPPING THE ENGINE

- Depress the brake pedal.
- Press the ignition switch **START/STOP** button to start the engine.

NOTE: It is important to make sure the NISSAN Intelligent Key® is with you (that is, in your pocket or purse).

TURNING THE ENGINE OFF

- Move the shift lever to the **P (PARK)** position and apply the parking brake.
- Press the ignition switch **START/STOP** button to turn the engine off.

EMERGENCY ENGINE SHUT OFF

To shut off the engine in an emergency situation while driving, perform one of the following procedures:

- Rapidly push the push button ignition switch 3 consecutive times, or
- Push and hold the push button ignition switch for more than 2 seconds.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.



HEADLIGHT CONTROL SWITCH

HEADLIGHT CONTROL

- Turn the headlight control switch to the **01** position to turn on the front parking, side marker, tail, license plate and instrument panel lights. Turn the switch to the **02** position to turn on the headlights.




AUTOLIGHT SYSTEM (if so equipped)

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **03** then push the ignition switch to **ON**. To deactivate the autolight system, turn the headlight control switch to the **OFF**, **01** or **02** position **02**.


HIGH BEAM SELECT


- Push the headlight control switch forward **04** to select the high beam function. The blue indicator light **05** illuminates in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light goes off.
- Pull and release the headlight control switch **05** to flash the headlight high beams on and off.

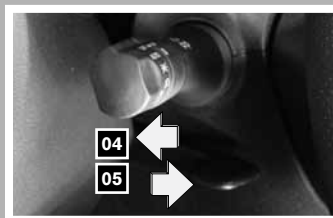

first drive features

FOG LIGHT SWITCH (if so equipped)

NOTE: The headlights must be on and the low beams  selected for the fog lights to operate.

- Turn the switch (inside collar) to the  position **06** to turn the fog lights on.
- Turn the switch (inside collar) to the **OFF** position to turn the fog lights off.




For more information, refer to the **"Instruments and controls (section 2)"** of your Owner's Manual.

WINDSHIELD WIPER/WASHER SWITCH



- Move the lever to the following positions to operate the windshield wipers:

- 01** Mist (**MIST**) - One sweep operation of the front wipers.
- 02** Intermittent (**INT**) - Front wipers operate intermittently. The intermittent speed can be adjusted by twisting the time control ring **03**.
- 04** Low (**LO**) - Front wipers operate at a continuous low-speed.
- 05** High (**HI**) - Front wipers operate at a continuous high-speed.
- 06** Pull the lever toward you to activate the front washer. The front wipers will operate several times.

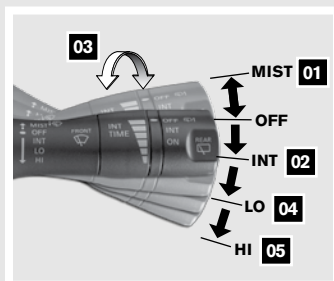

REAR WINDSHIELD WIPER AND WASHER

- 07** Intermittent (**INT**) - Rear wiper operates intermittently.
- 08** Low (**ON**) - Rear wiper operates at a continuous low-speed.
- 09** Push the lever forward to activate the rear washer. The rear wiper will operate several times.

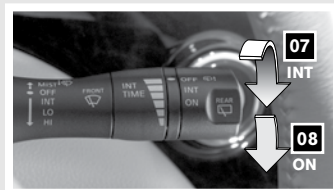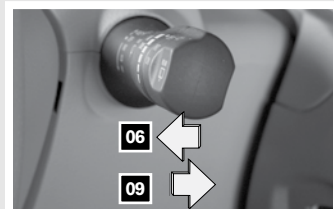

For more information, refer to the **"Instruments and controls (section 2)"** of your Owner's Manual.




AUTOMATIC CLIMATE CONTROLS (if so equipped)

01 AUTO BUTTON

- The auto mode may be used year-round. Press the **AUTO** button to turn the system on and the system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.

02 FAN SPEED CONTROL BUTTON





- Press the fan speed control button  to manually adjust the fan speed down – or up + .

03 DRIVER'S SIDE TEMPERATURE CONTROL BUTTONS

- Press the driver's side temperature control buttons up ▲ for warmer air or down ▼ for cooler air.

04 MODE BUTTON

- Press the **MODE** button to cycle through the following air flow outlets:

-  Air flows from the center and side vents.
-  Air flows from the center, side and foot vents.
-  Air flows mainly from the foot vents.
-  Air flows from the defroster and foot vents.

05 PASSENGER'S SIDE TEMPERATURE CONTROL BUTTONS



- Press the passenger's side temperature control buttons up ▲ for warmer air or down ▼ for cooler air.

06 DUAL BUTTON



- Press the **DUAL** button to turn the passenger's side temperature controls on or off. This will allow the passenger's side temperature to be adjusted independently from the driver's side by pressing the passenger's side temperature control buttons.

first drive features


07 AIR RECIRCULATION BUTTON

- Press the air recirculation  button to recirculate interior air inside the vehicle. The indicator light on the button will illuminate. This system is used to avoid certain outside odors and helps to adjust the inside vehicle temperature more effectively.
- The air recirculation mode cannot be activated when the air conditioner is in the front defrosting mode  **FRONT**.


08 AUTO-RECIRCULATION BUTTON

- Press the auto-recirculation button  **AUTO** to switch to the automatic air intake control mode. The indicator light on the button will illuminate.
- In this mode, the sensor detects certain odors and gasses to automatically switch between the air recirculation mode and the outside air circulation mode.
- The auto-air recirculation mode cannot be activated when the air flow control mode is in the front defrosting mode  **FRONT**.

09 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the front defroster control button  **FRONT** to turn the system on. The A/C automatically turns on when the defroster mode is selected. This feature removes humidity from the air.
- Press the temperature control buttons ▲ or ▼ to set the desired temperature.
- To defrost the front and side windows quickly, set the temperature controls and fan speed controls to their maximum settings.

10 DEFROSTING REAR WINDOW AND OUTSIDE MIRRORS

- Push the rear window defroster switch  **REAR** to turn the system on or off.
- This function automatically turns off after approximately 15 minutes.

11 A/C BUTTON

- Press the **A/C** button to turn the air conditioner system on or off. This system helps cool and dehumidify the air inside the cabin and defog the windows.

12 REAR CONTROL BUTTON

- To control the rear automatic air conditioning system with the front air conditioner control panel, press the **REAR** button.
- When the rear automatic air conditioning system is on, the indicator light on the **REAR** button will illuminate and the front display will switch to the rear air conditioner screen.
- To adjust the front air conditioning system, press the **REAR** button again or wait 10 seconds.
- The rear control buttons will not function when **REAR** is shown on the front display.



13 ON-OFF BUTTON

- Press the **ON-OFF** button to turn the climate control system on or off.

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Monitor, heater, air conditioner, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.



FM/AM/XM[®]* SATELLITE RADIO WITH CD/DVD PLAYER (if so equipped)

01 VOLUME ON-OFF CONTROL KNOB

- Press the **VOL ON-OFF** knob to turn the system on or off.
- Turn the **VOL ON-OFF** knob right or left to increase or decrease the volume.

02 TUNE/FOLDER/AUDIO CONTROL KNOB

- To manually tune the radio, turn the **TUNE/FOLDER/AUDIO** knob left or right.

03 SEEK/CAT AND TRACK BUTTONS

- To scan quickly and stop at the previous or next broadcast station, press the **◀◀ SEEK/CAT** button or the **TRACK ▶▶** button.
- For XM[®] satellite radio, press the **◀◀ SEEK/CAT** button or the **TRACK ▶▶** button to switch to the first channel of the previous or next category.
- To change tracks on a CD, press the **◀◀ SEEK/CAT** button or the **TRACK ▶▶** button.
- To fast forward or rewind a track on a CD, press and hold the **◀◀ SEEK/CAT** button or the **TRACK ▶▶** button.

04 STATION SELECT BUTTONS

- Twelve stations can be set for the FM band, six for the AM band and eighteen for XM satellite radio.
- To store a station in a preset you must first select a radio band by pressing the **FM-AM** **05** or **XM** button **06**, then tune to the desired AM, FM or XM satellite station.
- Then press and hold the desired station select button (**1-6**) until the sound is briefly muted. The channel indicator will then display and the sound will resume. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then press the corresponding station select button (**1-6**).


*XM[®] Satellite Radio is only available on vehicles equipped with optional XM[®] satellite subscription service.

For more information, refer to the “**Monitor, heater, air conditioner, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

first drive features

CRUISE CONTROL

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 mph.
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **ON/OFF** switch **01**. The **CRUISE** indicator light in the instrument panel will illuminate.
- To set cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **02** and release. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **03**. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **02**. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, tap the brake pedal or push the **CANCEL** switch **04**.
- To turn off cruise control, push the **ON/OFF** switch **01**. The **CRUISE** indicator light in the instrument panel will turn off.

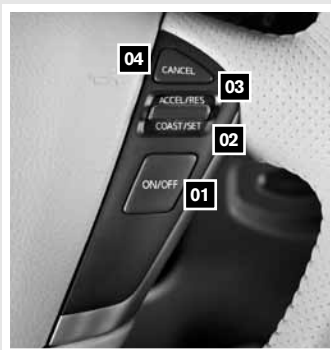

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

FUEL-FILLER DOOR




- To open the fuel-filler door, pull the release **01** located on the lower instrument panel to the left of the steering wheel.
- The fuel-filler door is located on the driver’s side of the vehicle.




For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.



TRIP COMPUTER

- When the  button **01** is pressed, the following modes will appear on the dot matrix liquid crystal display **02** :
- **MPG/AVG** – Displays the current and average fuel consumption.
- **MPG/MPH** – Displays the average fuel consumption and speed since the last reset.
- **TIME/miles** – Displays the elapsed time and total distance the vehicle has been driven since the last reset.
- **RANGE** – Displays the estimated distance to empty (dte) the vehicle can be driven before refueling.
- **OUTSIDE TEMP** – Displays the exterior air temperature including a low temperature warning feature.
- **SETTING** – Allows you to set reminders for alerts and maintenance intervals or change the language and units used in the system.
 - Press the  button **03** to cycle through the various setting modes.
 - Press the  button **01** to choose the selected menu.
- **WARNING** – If there are any.

 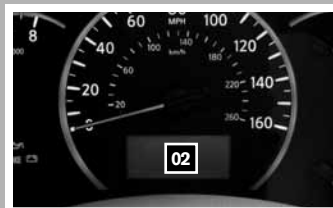



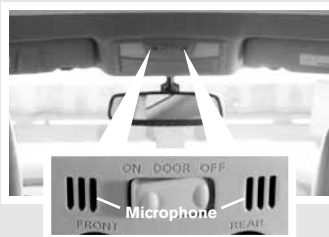
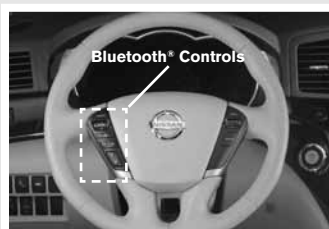
For more information, refer to the “Pre-driving checks and adjustments (section 3)” of your Owner's Manual.

BLUETOOTH® HANDS-FREE PHONE SYSTEM (if so equipped)

 
 
 
 
- With an overhead microphone and sound transmitted through the audio system speakers, the Bluetooth® Hands-free Phone System utilizes Bluetooth wireless technology and voice recognition to provide hands-free cellular phone communication.
- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.*

SYSTEM OPERATING TIPS

- Close all windows. Surrounding noises may interfere with system operation and performance.
- Press the  or  button on the steering wheel to activate voice recognition.
- Wait for the tone before speaking.
- Begin speaking a command within 5 seconds of the tone.




*Some jurisdictions prohibit the use of cellular telephones while driving.

- Speak in a clear and natural voice without pausing between words.
- Look straight ahead and avoid speaking too loudly or too softly.
- To go back to the previous command, say "Go back".
- To cancel a voice recognition session, say "Exit" or press and hold the  or  button.
- To interrupt the system voice and give a command quickly, press the  or  button.
- When speaking Phonebook names, please be aware some phones require the last name to be spoken before the first name. For example, "Michael Smith" may be spoken as "Smith Michael".
- To increase or decrease the volume of the voice prompts, push the volume control switches **-** or **+** on the steering wheel or turn the **VOL/ON-OFF** control knob on the audio system while the system is responding.
- If the Voice Recognition system does not recognize your voice commands, train the system using the Speaker Adaptation Mode. See your Owner's Manual for detailed information.
- Some commands are not available while the vehicle is in motion.
- The "Help" command can be used to hear a list of available commands at any time.
- Please refer to the cellular phone manufacturer's Owner's Manual for detailed information regarding your Bluetooth phone.

Bluetooth® System with Navigation (if so equipped)


CONNECTING PROCEDURE


NOTE: The vehicle must be stationary when connecting the phone.

1. Press the  button on the steering wheel and select the "Connect Phone" key.
2. Initiate connecting from the phone.
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible phones, please visit www.nissanusa.com/bluetooth.
 - When prompted for a PIN code, enter "1234" from the handset. (The PIN code is assigned by NISSAN and cannot be changed.)
3. When the connecting is complete, the screen will return to the Phone menu display.




PHONEBOOK SETUP


- Depending on your cell phone, the system may automatically download your cell phone's entire phonebook to the vehicle's Bluetooth system.
- If the phonebook does not download automatically, the vehicle phonebook may be set for up to 1,000 entries.
- To manually download entries:
 1. Press the  button and select the "Vehicle Phonebook" key.
 2. Select the "Add New" key at the top of the display. There are different methods to input a phone number. Select one of the following options:
 - "Copy from Call History" to save a number from the Outgoing, Incoming or Missed Calls lists.
 - "Copy from the Handset" to save a number that has been downloaded from your handset to the vehicle.
 - "Enter Number by Keypad" to input the number and name manually.

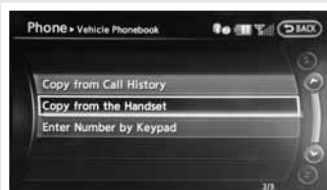



MAKING A CALL

 To make a call, follow this procedure:

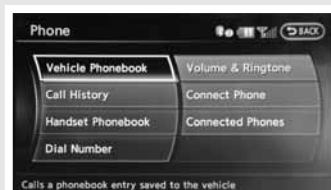1. Press the  button on the steering wheel. The "Phone" menu will appear on the control panel display.
2. Select the "Vehicle Phonebook", "Call History", "Handset Phonebook" or "Dial Number" key.
3. Select the desired entry from the list.
4. Select "Call" to start dialing the number.




RECEIVING/ENDING A CALL

- To accept the call, press the  button on the steering wheel or touch the "Answer" key. To reject the call, touch the "Reject Call" key.
- To hang-up, press the  button or touch the "Hang-Up" key.



Bluetooth® System without Navigation (if so equipped)

PAIRING PROCEDURE


1. Press the  button on the steering wheel. The system announces the available commands.
2. Say "Connect Phone". The system acknowledges the command and announces the next set of available commands.
3. Say "Add Phone". The system acknowledges the command and asks you to initiate connecting from the phone handset.
4. Initiate pairing from the phone.
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible phones, please visit **www.nissanusa.com/bluetooth**.
 - When prompted for a PIN code, enter "1234" from the handset. (The PIN code is assigned by NISSAN and cannot be changed.)
5. The system asks for a name for the phone. Say "Yes". The system acknowledges the command and registers the cellular phone.



 


PHONEBOOK REGISTRATION

- When the cellular phone is connected to the in-vehicle module, the data stored in the cellular phone such as phonebook, outgoing call logs, incoming call logs and missed call logs is automatically transferred and registered to the system.
- The availability of this function depends on each cellular phone. The copying procedure also varies according to each cellular phone. See your cellular phone Owner's Manual for more information.
- Up to 1,000 phone numbers per registered cellular phone can be stored in the phonebook.

MAKING A CALL

1. Press the  button on the steering wheel. A tone will sound.
2. Say "Call". The system acknowledges the command and announces the next set of available commands.
3. Say the registered person's name. The system acknowledges the command and announces the next set of available commands.
4. Say "Yes". The system acknowledges the command and makes the call.

RECEIVING/ENDING A CALL

- To accept the call, press the  button on the steering wheel. To reject the call, press the  button.
- To hang-up, press the  button.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual or please visit www.nissanusa.com/bluetooth.



NAVIGATION SYSTEM (if so equipped)

- Your Navigation System can calculate a route from the current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.
- Press the **INFO** button to access important data such as distance to empty, your tire rotation schedule and other maintenance interval reminders.

For more information, refer to the Navigation System Owner's Manual.

NISSAN Mobile Entertainment System (MES) (if so equipped)

- With this Entertainment System, you can play video files via a DVD or compatible USB device, providing images and sound operated through both the front and rear display screens.
- You can also connect auxiliary devices such as video games, camcorders or portable video players to the auxiliary jacks. (Your device will be controlled through its own control panel).
- Use the remote controller, provided with the system, to operate the rear display screen.
- Use the headphones, also provided with the system, to listen to audio wirelessly and independently.
- To view movies on the front display, stop the vehicle in a safe location, move the shift lever to the **P (PARK)** position and apply the parking brake.
- To reduce driver distraction, movies will not be shown on the front display while the vehicle is in any drive position.



For more information, refer to the “**Monitor, heater, air conditioner, audio, phone and voice recognition systems (section 4)**” of your Owner's Manual.



HOMELINK® UNIVERSAL TRANSCEIVER (if so equipped)

- The HomeLink® system can learn and consolidate the functions of up to three different hand-held transmitters, operating items such as garage doors, property gates, outdoor and indoor lights or alarm systems.

For more information, refer to the **"Instruments and controls (section 2)"** of your Owner's Manual, the HomeLink® website at www.homelink.com or call 1-800-355-3515.

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. See your Owner's Manual, which contains important safety warnings and information about the operation and maintenance of your vehicle, for complete details. Nissan North America, Inc. reserves the right to make changes, at anytime, without prior notice, in prices, colors, materials, equipment, specifications, and models and to discontinue models or equipment. Due to continuous product development and other pre- and post-production factors, actual vehicle, materials and specifications may vary. Some vehicles are shown with optional equipment. See the actual vehicle for complete accuracy. Specifications, options and accessories may differ in Hawaii, U.S. territories and other countries. For additional information on availability, options or accessories, see your NISSAN dealer or contact Nissan North America, Inc.



To view detailed instructional videos,
go to **www.nissanownersinfo.mobi/2012/quest**
or snap this barcode with an appropriate barcode reader.

