

2019 **ROGUE**

QUICK REFERENCE GUIDE





- | | | | |
|---|---|---|---|
| 1 Vehicle Information Display | 7 Steering Wheel Switches for Audio Control / Navigation / Vehicle Information Display | 12 Fuel-filler Door Release Switch | 18 Hood Release* |
| 2 Low Tire Pressure Warning Light | 8 Cruise Control/Bluetooth®/ProPILOT Assist Switches | 13 Heated Steering Wheel Switch* | 19 Audio and Navigation System |
| 3 Headlight and Turn Signal Switch | 9 Vehicle Dynamic Control (VDC) OFF Switch* | 14 AWD Lock Switch | 20 Heater and Air Conditioner (automatic) |
| 4 Instrument Brightness Control* | 10 Steering Assist Switch | 15 SPORT Mode Switch | 21 Front Passenger Air Bag Status Light* |
| 5 Twin Trip Odometer Reset Switch | 11 Power Liftgate Switch | 16 ECO Mode Switch | 22 USB Connection Port/AUX Jack / Power Outlet |
| 6 Wiper and Washer Switch | | 17 Steering Wheel Tilt and Telescopic Adjustment | |

*See your Owner's Manual for information.

TABLE OF CONTENTS

NEW SYSTEM FEATURES

NissanConnect® Services Powered by SiriusXM® (if so equipped).....	2
SiriusXM® Travel Link and SiriusXM® Traffic (if so equipped).....	4
Intelligent Around View Monitor (if so equipped).....	4
Blind Spot Warning (BSW).....	6
Hill Start Assist.....	7
Drive Mode.....	7
Automatic Emergency Braking (AEB) (if so equipped).....	8
Automatic Emergency Braking (AEB) with Pedestrian Detection System (if so equipped).....	8
Rear Automatic Braking (RAB) (if so equipped).....	9
Wi-Fi.....	9
Lane Departure Warning (LDW) and Intelligent Lane Intervention (I-LI) (if so equipped).....	10
Apple Carplay®.....	11
Android Auto™.....	12
ProPILOT Assist (if so equipped).....	13
Automatic Drive Positioner (if so equipped).....	17

ESSENTIAL INFORMATION

Tire Pressure Monitoring System (TPMS) with Easy-Fill Tire Alert.....	18
Loose Fuel Cap and Fuel-filler Door.....	19
Divide-N-Hide® Floor (if so equipped).....	19
Outside Temperature Display.....	20
Towing Your Vehicle.....	20
Clock Set/Adjustment.....	20

FIRST DRIVE FEATURES

Nissan Intelligent Key® System (if so equipped).....	22
2 nd Row Seats.....	23
Power Liftgate (if so equipped).....	24
Motion-Activated Liftgate (if so equipped).....	24
Outside Mirror Control Switch.....	25
Front Power Seat Adjustments (if so equipped).....	25
All-Wheel Drive (AWD) Lock Switch (if so equipped).....	26
Starting/Stopping the Engine.....	26



Additional information about your vehicle is also available in your Owner's Manual, NissanConnect® Owner's Manual and at www.NissanUSA.com.



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)", the "Monitor, climate, audio, phone and voice recognition systems (section 4)" and the "Starting and driving (section 5)" of your Owner's Manual.

TABLE OF CONTENTS

Headlight Control Switch	27
Wiper and Washer Switch	28
Heater and Air Conditioner (automatic) (if so equipped)	29
FM/AM/SiriusXM® Satellite Radio with CD Player	30
Cruise Control (if so equipped)	31
Intelligent Cruise Control (ICC) (if so equipped) (for vehicles without ProPILOT Assist)	32
Tilt and Telescopic Steering Wheel Adjustments	32
Power Panoramic Moonroof (if so equipped)	33
USB (Universal Serial Bus) Connection Port/AUX Jack and iPod® Interface	33
Center Console Storage Box	33

SYSTEM GUIDE

Vehicle Information Display	34
Bluetooth® Hands-free Phone System	35
• System Operating Tips	35
Hands-free Text Messaging Assistant (if so equipped)	37
Navigation System (if so equipped)	38
HomeLink® Universal Transceiver (if so equipped)	39



Additional information about your vehicle is also available in your Owner's Manual, NissanConnect® Owner's Manual and at www.NissanUSA.com.



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)", the "Monitor, climate, audio, phone and voice recognition systems (section 4)" and the "Starting and driving (section 5)" of your Owner's Manual.

NEW SYSTEM FEATURES

NISSANCONNECT® SERVICES POWERED by SiriusXM® (if so equipped)


NissanConnect® Services is a collection of security and convenience services that add innovation to your daily drive.

- To enroll in NissanConnect Services, create an account or log into your Nissan Owner Portal with your Vehicle Identification Number or VIN. Under the NissanConnect Services tab, select the red button next to Manage Subscription. Follow the prompts to enroll in NissanConnect Services. Next, download the NissanConnect Services companion app and log into it using your Nissan Owner Portal ID and password.

For full details on NissanConnect Services or to enroll your vehicle, please visit www.NissanUSA.com/connect or call **855-426-6628**.

Here is a quick overview of some of the features that may be available for your vehicle. A full description of these and other NissanConnect Services can be found in your NissanConnect Owner's Manual.

- Automatic Collision Notification, a service that generates an automatic connection between the vehicle and the Emergency Response Center when the vehicle has been involved in an accident that was severe enough to deploy the air bags.
- Emergency Call, which connects you to a NissanConnect Services Specialist who will assist in the dispatch of emergency services to the vehicle's location. To use this feature, press the **SOS** button **1** on the overhead console. The **SOS** button **1** should only be used in emergency situations.
- Roadside Assistance, which dispatches roadside assistance to the vehicle's location in non-emergency situations. Roadside Assistance can be accessed by touching the headset icon **2** on the map screen or by calling the Roadside Assistance provider directly.
- Stolen Vehicle Locator, a service that works in coordination with law enforcement agencies to assist in the recovery of a stolen vehicle.
- Remote Door Lock/Unlock, for use when you forget to lock your vehicle or if you need to open it and do not have the keys. To use this feature, log into the NissanConnect Services companion app or website or contact a NissanConnect Services Response Specialist.

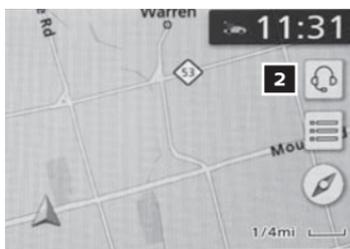


NEW SYSTEM FEATURES

- Remote Engine Start, start your engine remotely using the NissanConnect Services companion app or website.
- Journey Planner, a feature that allows you to send a route with a destination and up to five way points directly to the vehicle.
- Boundary Alert, a feature that allows you to monitor the movement of your vehicle in and out of specified regions you have set on the Monitoring section of the NissanConnect Services web portal or companion app.
- Speed Alert, which sends you alerts when your vehicle speed exceeds a threshold you have set on the web portal or companion app.
- Alarm Notification, this system will notify you when the factory-installed vehicle alarm system has been activated.
- Maintenance Alert, review notifications via a selected method of a vehicle system malfunction that triggers instrument panel warning lights.
- Connected Search, select "Connected Search" from the Destination menu on the vehicle's Navigation System to conduct a Point of Interest (POI) search within a certain distance of the vehicle's location.
- Valet Alert, use Valet Alert to set up a radius around your vehicle. Activate alerts via the NissanConnect Services companion app or website.
- Curfew Alert, specify curfew limits via the NissanConnect Services companion app or website and will be notified via a selected method if curfew is violated.

To access these features in your vehicle:

- Press the  MENU button **3** on the control panel.
- Touch the  Info key.
- Touch the "NissanConnect Services" key **4**.

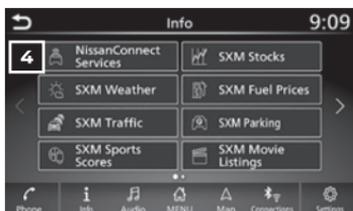

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Information (section 5)**" of your NissanConnect® Owner's Manual.

SiriusXM® TRAVEL LINK AND SiriusXM® TRAFFIC (if so equipped)

- Your vehicle's Navigation System is equipped with SiriusXM® Travel Link and SiriusXM® Traffic capabilities.
- SiriusXM Travel Link provides access to real-time weather information and forecasts, nearby fuel prices, movie listings, sports scores and stock quotes.
- SiriusXM Traffic provides information that may help to avoid delays due to traffic incidents. Traffic jams, roadwork, road closures around the current location, etc., are represented graphically on the map by icons depicting the nature of the event. Incidents on the route are automatically displayed as they are approached.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.


For more information, refer to the "**Navigation (section 6)**" and the "**Information (section 5)**" of your NissanConnect® Owner's Manual.

INTELLIGENT AROUND VIEW MONITOR (if so equipped)

- With the ignition switch in the ON position, the Intelligent Around View Monitor is activated by pressing the **CAMERA** button **1**, located on the control panel, or by moving the shift lever to the **R (Reverse)** position. The monitor displays various views of the position of the vehicle.
- When the shift lever is in the **P (Park)**, **N (Neutral)** or **D (Drive)** position and the **CAMERA** button **1** is pressed, the following views will display in order:



Start from any Control Panel screen

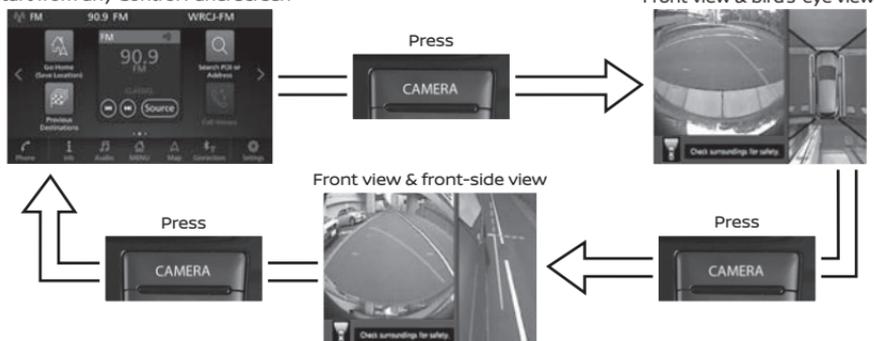


To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

NEW SYSTEM FEATURES

- When the shift lever is in the **R (Reverse)** position and the **CAMERA** button **1** is pressed, the following views will display in order:



Rear view & bird's-eye view

Rear view & front-side view

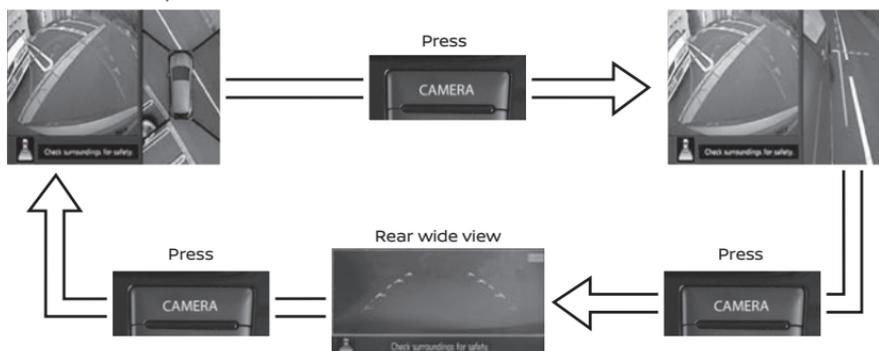

- The colored guide lines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line.

 - Red 1.5 ft (0.5 m)
- Yellow 3 ft (1 m)
- Green 7 ft (2 m)
- Green 10 ft (3 m) (if so equipped)

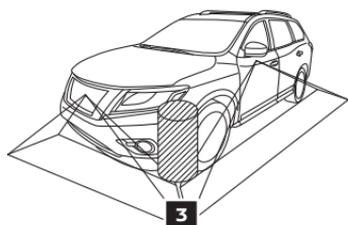

- For information regarding how to access additional viewing cycles, please see your Owner's Manual.

- There are some areas where the system will not detect objects.

- When in the front or the rear view display, an object below the bumper or on the ground may not be detected **2**.
- When in the bird's-eye view, a tall object near the seams of the camera detecting areas **3** will not appear in the monitor.
- The distance between objects viewed on the Intelligent Around View Monitor differs from the actual distance.

- Always check your surroundings and turn to look behind you before moving the vehicle.

- Objects in the bird's-eye view will appear farther than the actual distance.

MOVING OBJECT DETECTION (MOD)

- The MOD system helps inform the driver of moving objects around the vehicle.
- The system will operate when the shift lever is in the **P (Park)**, **R (Reverse)**, **N (Neutral)** or **D (Drive)** position and the vehicle is driven at speeds of approximately 6 mph (10 km/h) or less.

- If the MOD system detects moving objects, a yellow frame will be displayed on the camera image and a chime will sound.

- When the following is displayed:

- Blue **MOD** icon **4**; the system is active.
- Gray **MOD** icon; the system is not active.
- No **MOD** icon; the system is off. The indicator will also be off if all of the warning systems are deactivated using the Settings menu.



- The MOD system will not operate if the liftgate is open.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

BLIND SPOT WARNING (BSW)

- The BSW system helps alert the driver of other vehicles in adjacent lanes when changing lanes.
- An indicator light **1** located near the outside mirrors will illuminate if the radar sensors detect a vehicle in the detection zone and the  BSW Indicator will illuminate (yellow) in the vehicle information display.
- Press the  buttons **2** until "Settings" displays in the vehicle information display. Use the  buttons **2** to select "Driver Assistance." Then press the **OK** button **3**.
- Select "Driving Aids" and press the **OK** button **3**.
- Select "Blind Spot" and press the **OK** button **3**.
 - To turn on the warning system, use the **OK** button **3** to check the box for "Warning (BSW)" **4**.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" and the "**Starting and driving (section 5)**" of your Owner's Manual.

NEW SYSTEM FEATURES

HILL START ASSIST

Hill Start Assist allows time for the driver to release the brake pedal and apply the accelerator when the vehicle is parked on a hill. The brakes are applied automatically for 2 seconds after the driver releases the brake pedal.

- Hill Start Assist will operate automatically under these conditions:
 - The shift lever is shifted into a forward or a reverse gear.
 - The vehicle is stopped completely on a hill by applying the brake.
- Hill Start Assist will not operate when the shift lever is in the **N (Neutral)** or **P (Park)** position or on a flat and level road.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

DRIVE MODE

NORMAL

- Normal drive mode is recommended for normal, everyday driving and is the default mode of your vehicle.

ECO

- ECO mode is recommended to help maximize fuel economy. Performance may be reduced.
 - Push the **ECO** mode switch **1** on the instrument panel to activate.
 - The ECO mode indicator will illuminate on the video information display.



SPORT

- SPORT drive mode is recommended for an enhanced performance feel. Fuel economy may be reduced.
 - Push the **SPORT** mode switch **2** on the instrument panel to activate.
 - The **SPORT** mode indicator will illuminate on the video information display.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

AUTOMATIC EMERGENCY BRAKING (AEB) (if so equipped)

- The AEB system can assist the driver when there is a risk of a forward collision with a vehicle ahead in the traveling lane.
- The AEB system will function when your vehicle is driven at speeds above approximately 3 mph (5 km/h).
- If there is a risk of a forward collision with a vehicle, the first visual warning (yellow) **1** will illuminate in the vehicle information display and an audible alert will sound. If the driver applies brakes quickly and forcefully, the system automatically applies partial braking.
- If the driver does not take action, the AEB system will provide a second set of audible and visual warning (flashing) (red) **1** to the driver and then automatically apply harder braking.
- If the risk of collision becomes imminent, the AEB system applies harder braking automatically.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

AUTOMATIC EMERGENCY BRAKING (AEB) WITH PEDESTRIAN DETECTION SYSTEM (if so equipped)

- The AEB with Pedestrian Detection system can assist the driver when there is a risk of a forward collision with a vehicle or pedestrian ahead in the traveling lane.
- The AEB with Pedestrian Detection system will function when your vehicle is driven at speeds above approximately 3 mph (5 km/h). For the pedestrian detection function, the AEB with Pedestrian Detection system operates at speeds between 6-37 mph (10-60 km/h).
- If a risk of a forward collision is detected, the AEB with Pedestrian Detection system will provide a warning to the driver by flashing the warning (yellow) **1** in the vehicle information display and providing an audible alert.
- If the driver applies the brakes quickly and forcefully after the warning, and the AEB with Pedestrian Detection system detects that there is still the possibility of a forward collision, the system will automatically increase the braking force.
- If the driver does not take action, the AEB with Pedestrian Detection system issues the second visual (flashing) (red) **1** and audible warning. If the driver releases the accelerator pedal, then the system applies partial braking.
- If the risk of collision becomes imminent, the AEB with Pedestrian Detection system applies harder braking automatically.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

NEW SYSTEM FEATURES

REAR AUTOMATIC BRAKING (RAB) (if so equipped)

- The RAB system can assist the driver when the vehicle is backing up and approaching objects directly behind the vehicle.
- The RAB system will function when the shift lever is in the **R (REVERSE)** position and the vehicle speed is less than approximately 9 mph (15 km/h).
- If a risk of a collision with an obstacle is detected when your vehicle is backing up, the RAB system warning light **1** will flash in the meter.
- A red frame will appear in the center display **2** (for vehicles equipped with the Around View Monitor system). The system will chime three times and the brakes will be applied automatically. The driver must depress the brake pedal to maintain brake pressure.



TURNING THE RAB SYSTEM ON/OFF

1. Press the ◀▶ buttons until "Settings" displays in the vehicle information display. Use the ⬆ buttons to select "Driver Assistance". Then press the **OK** button.
2. Select "Driving Aids" and press the **OK** button.
3. Select "Emergency Brake" and press the **OK** button.
4. To set the RAB system to on or off, use the **OK** button to check the box for "Rear".



When the RAB system is turned off, the RAB system warning light **1** illuminates.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

WI-FI

A Wi-Fi connection can be made to communicate by using an available Wi-Fi network near the vehicle or tethering function of smartphone, etc. Wi-Fi connection is useful when updating maps or for online search. There must be a secure Wi-Fi network for the vehicle to connect.

TO CONNECT TO A WI-FI NETWORK:

- To use the Wi-Fi connection for the first time, the following connecting procedures are required.
 1. Touch Settings on the Launch Bar.
 2. Touch the "Connections" key.
 3. Touch the "Wi-Fi" key **1**.



To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

4. Touch the name of the device you wish to connect.
5. Enter a code and touch the "OK" key. The device will be connected.

- The connected Wi-Fi device will be added to the list on the connection screen. If a listed device is in a status capable of making Wi-Fi connection, touching the device name on the list will start the connection.

TO CHANGE THE WI-FI SETTINGS:

1. Touch the  Settings key on the Launch Bar.
2. Touch the "Connections" key.
3. Touch the "Wi-Fi" key.
4. Touch the  key **2**.
5. Touch a preferred item.



TO DELETE A WI-FI DEVICE:

1. Touch the  Settings key on the Launch Bar.
2. Touch the "Connections" key.
3. Touch the "Wi-Fi" key.
4. Touch the  key by the name of the device you wish to delete.
5. Touch the "Delete" key and then touch the "Yes" key when a message appears.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started (section 2)" of your NissanConnect® Owner's Manual.

LANE DEPARTURE WARNING (LDW) AND INTELLIGENT LANE INTERVENTION (I-LI) (if so equipped)

- The LDW system can help alert the driver when the vehicle is traveling too close to either the left or the right side of a traveling lane.
- The system will operate when the vehicle is driven at speeds of approximately 37 mph (60 km/h) and above and only when the lane markings are clearly visible on the road.
- When the vehicle approaches either the left or the right side of the traveling lane, the LDW system will chime and the orange LDW indicator **1** on the instrument panel will blink to alert the driver.
- The I-LI system can assist the driver in returning the vehicle to the center of the traveling lane by applying individual brake pressure to the left or right wheels for a short period of time.
- The LDW and I-LI system can be turned on and off through the vehicle information display. The I-LI can be temporarily turned off by pushing the dynamic driver assistance switch (for vehicles without ProPILOT Assist) **2** on the instrument panel or the ProPILOT Assist switch (for vehicles with ProPILOT Assist) **3** on the steering wheel.



NEW SYSTEM FEATURES

- When the system is off, the indicator light on the switch **4** is off.


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Starting and driving (section 5)" of your Owner's Manual.



APPLE CARPLAY®

- The in-vehicle system can be used as a controller for some of the iPhone® functions through Apple CarPlay®.
- If your iPhone is compatible, Apple CarPlay can be used.
- To connect your compatible iPhone to the system, you must connect the iPhone cable to the USB connection port located beneath the climate controls.
 - Depending on the setting, the startup information screen will appear.
 - Touch "OK" then "Yes" to use Apple CarPlay.
 - After the iPhone is connected to the system, Apple CarPlay top menu screen will appear, and the iPhone functions displayed on the screen can be operated by the in-vehicle system.
- When connected to Apple CarPlay, Siri® operation can also be accessed.
- There are three ways to start a Siri session.
 1. Press and hold the  button on the steering wheel.
 2. Touch and hold the  key **1** at the lower left corner of the Apple CarPlay screen.
 3. Say "Hey Siri" (requires appropriate permissions enabled via phone.)
- Press the  button on the steering wheel or touch the  key **1** on the lower left corner of the Apple CarPlay screen to end Siri.
- Keep the interior of the vehicle as quiet as possible. Close the windows to eliminate the surrounding noises (traffic noises, vibration sounds, etc.), which may prevent the system from recognizing the voice commands correctly.
- Some Siri functions may not be available during driving.
- For functions that can be used with Siri, please refer to the Apple® website.
 - To return to the Apple CarPlay top menu screen after operation, touch the  key **1** on the lower left corner of the Apple CarPlay screen.
 - To exit the Apple CarPlay screen and display the Nissan audio or home screens, press the  MENU button or touch the "Nissan" key **2** on the Apple CarPlay Menu.

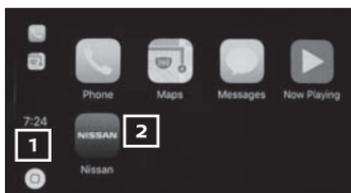

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

- To return to the Apple CarPlay screen:
 - Select the "CarPlay" key **3** on the lower left corner of the screen;
 - Select the **i** Info key **4** on the launch bar and touch the "Apps" key, then select the "Apple CarPlay" key.
- Nissan Phone menu and Nissan Voice Recognition cellular phone commands will not be available when Apple CarPlay is active.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started (section 2)" and the "Information (section 5)" of your NissanConnect® Owner's Manual.

ANDROID AUTO™


- Android Auto™ connects with your compatible Android® phone to control your apps, phone and navigation directly from your vehicle display.

INITIAL SETUP

- Download the Android Auto app from the Google Play™ store to your compatible Android phone.
- Launch the app from your Android phone and follow the directions for setting up the application. Several permissions will need to be given to the app for Android Auto to fully function on your in-vehicle system.

USING ANDROID AUTO

- To connect your Android phone to the system, you must connect a USB cable to the USB connection port located beneath the climate controls.
 - Depending on the setting, the startup information screen will appear on the center display.
 - Touch "OK" then "Yes" to use Android Auto.
 - After the cellular phone is connected, the Android Auto top menu screen will appear and can be operated by the in-vehicle system.
- When connected to Android Auto, voice operation can be accessed. There are three ways to start voice operation:
 1. Press and hold the  button on the steering wheel until a beep is heard.
 2. Touch the  key **1** on the upper right corner of the Android Auto screen.
 3. Say "OK Google" (requires appropriate permissions enabled via phone).
- To return to the Android Auto top menu screen after operation, touch the  key **2** on Launch Bar.

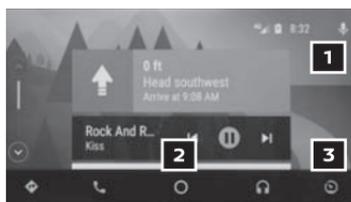

NEW SYSTEM FEATURES

- To exit the Android Auto screen, press the **MENU** button or touch the **key 3** and select the "Return To Nissan" key on the Android Auto Menu.
- To return to the Android Auto screen from the main menu:
 - Touch the **key 4** on the Launch Bar, or
 - Touch the **Info key 5** on the Launch Bar, touch the "Apps" key and then select the "Android Auto" key.
- Nissan Phone menu and Nissan Voice Recognition cellular phone commands will not be available when Android Auto is active.
- If you have difficulties with connection or performance, try a different USB cable.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Getting started (section 2)**" and the "**Information (section 5)**" of your NissanConnect® Owner's Manual.



PROPILOT ASSIST (if so equipped)

ProPILOT Assist is a combination of Intelligent Cruise Control (ICC) and Steering Assist. The ProPILOT Assist system is intended to enhance the operation of the vehicle when following a vehicle traveling in the same lane and direction. The ProPILOT Assist system is a "hands-on" driver assistance system and is intended for use on expressways/highways.

The driver must be prepared to steer and brake the vehicle at all times.

SETTING THE PROPILOT ASSIST SYSTEM


1. To set ProPILOT Assist, push the ProPILOT Assist switch **1** on the steering wheel. The ProPILOT Assist system display will appear on the vehicle information display.
2. Push the **SET-** switch **2** when at the desired speed.
3. Push the distance switch **3** to select the following distance.



To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

PROPILOT ASSIST SYSTEM DISPLAY AND INDICATORS

- 4** Set vehicle speed indicator
 - Displays the speed set by the driver.
- 5** Steering Assist indicator
 - Shows whether Steering Assist is active or not (green-active, gray-standby).
- 6** Lane marker indicator
 - Appears green on display when lane lines are detected and Steering Assist is active.
- 7** ProPILOT Assist status indicator
 - Displays whether ProPILOT Assist is engaged or not.
- 8** Vehicle ahead detection indicator
 - Appears on the display when a vehicle is detected ahead.
- 9** Set distance indicator
 - Displays the selected distance set by driver.
- 10** ProPILOT Assist Tips
 - Displays tips for using ProPILOT Assist when the system is active.

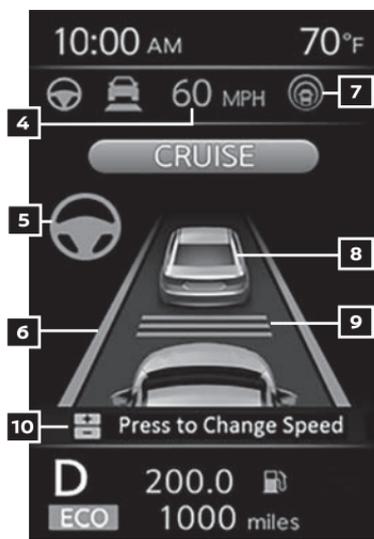

CANCELING THE PROPILOT ASSIST SYSTEM

- To cancel ProPILOT Assist, do one of the following:
 - Push the **CANCEL** switch **13** on the steering wheel.
 - Tap the brake pedal.
 - Push the ProPILOT Assist switch **1**.



PROPILOT ICC

- The set speed range is between approximately 20 and 90 mph (32 and 144 km/h).
- To accelerate or decelerate your vehicle to the desired speed, push the **RES+** switch **14** or **SET-** switch **2** and release it.
- When a vehicle is detected in the lane ahead, the ICC system controls the vehicle speed to maintain the distance from the vehicle ahead set by the driver.
- For more information, refer to the ICC section in this book.

VEHICLE AHEAD DECELERATES AND/OR STOPS


- When the vehicle ahead decelerates, your vehicle decelerates to maintain the distance from the vehicle ahead set by the driver.
- Once the vehicle ahead stops, the ICC system will stop your vehicle and apply the brakes to keep the vehicle stopped.

NEW SYSTEM FEATURES

- When the vehicle ahead accelerates, push and release the **RES+** switch **14** or depress the accelerator pedal. The ICC system starts to follow the vehicle ahead.
- If your vehicle comes closer to the vehicle ahead due to rapid deceleration of that vehicle or if another vehicle cuts in, the system warns the driver with a chime and ICC system display. The driver must control the vehicle to prevent a collision.

STEERING ASSIST

- The Steering Assist system assists the driving operation to help keep the vehicle within the traveling lane.
 - Lane markers must be clear and consistent on both sides of the vehicle.
 - This feature will operate when vehicle speed is above 37 mph (60 km/h).
 - Below 37 mph (60 km/h), ProPILOT Assist must detect a vehicle ahead in order for steering assistance to activate.
- Steering Assist is cancelled or temporarily goes into standby mode under the following conditions:
 - The turn signals are activated.
 - Both hands are not detected on the steering wheel. Simply apply more pressure or a tighter grip on the steering wheel.
 - The wipers are in LO or HI speed position.
 - Steering Assist will not activate if the system does not detect lane markers.

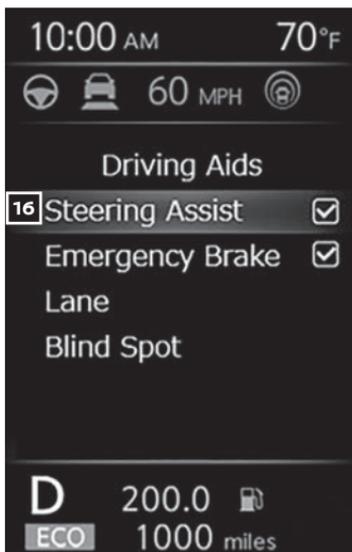

To cancel Steering Assist on Instrument Panel and vehicle information display:

- Push the Steering Assist switch **11** on the instrument panel to switch off.
- In the meter menu, do the following to cancel Steering Assist:
 - Press the **▲** or **▶** buttons **15** located on the steering wheel to select "Settings" and press the **OK** button **12**. Then select "Driver Assistance" and then "Driving Aids".
 - Use the **▲** or **▶** buttons **15** to select "Steering Assist" **16**. Press the **OK** button **12** to complete the action.
- Steering Assist may not operate as expected under all conditions. Always be prepared to steer if needed. For example, lighting conditions, weather, lane splits (such as exit ramps) and confusing lane markers may cause the system to not operate as expected. For more information see Owner's Manual.

- ICC may not operate as expected under all conditions. Always be prepared to brake if needed. For example, vehicles cutting into your lane or approaching stopped traffic may not be detected. For more information see Owner's Manual.
- If the driver lightly touches (instead of firmly gripping) the steering wheel, the steering torque sensor may not detect the driver's hand(s) on the wheel and a sequence of warnings may occur. When the driver holds and operates the steering wheel again, the warnings turn off.

ELECTRONIC PARKING BRAKE (if so equipped)

- To apply the parking brake, pull the electronic parking brake switch **17**, located below the center console. The electronic parking brake indicator light **18** will illuminate.
- To release the parking brake, and with the ignition switch in the ON position, depress the brake pedal and push the parking brake switch **17** down. The electronic parking brake indicator light (orange) **18** will turn off.



AUTOMATIC BRAKE HOLD (if so equipped)

- Automatic brake hold function maintains the braking force without the driver having to depress the brake pedal when the vehicle is stopped at a traffic light or intersection.
- With the ignition switch in the ON position, push the automatic brake hold switch **19** to activate the automatic brake hold function. The indicator light will illuminate green.

To use the automatic brake hold function, the following conditions need to be met:

- The driver's seat belt is fastened.
- The electronic parking brake is released.
- The shift lever is not in the **P (Park)** position.
- The vehicle is not parked on a steep hill.
- To cancel the automatic brake hold function push the automatic brake hold switch **19**. To deactivate while the brake force has been maintained, depress the brake pedal and push the automatic brake hold switch **19**.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**", "**Starting and driving (section 5)**" and the "**Technical and consumer information (section 10)**" of your Owner's Manual.

NEW SYSTEM FEATURES

AUTOMATIC DRIVE POSITIONER (if so equipped)

- Two positions for the driver's seat can be stored in the automatic drive positioner memory.
- Follow this procedure to set the memory positions:
 - Place the ignition in the ON or OFF position and confirm the shift lever is in the **P (PARK)** position.
 - Adjust the driver's seat and outside mirrors to the desired position using each adjusting switch.
 - Push the **SET** switch, and within 5 seconds, push the memory switch (**1** or **2**) for at least 1 second.
 - The indicator light on the memory switch you select will illuminate for approximately 5 seconds and a beep will sound.
 - The driver's seat and outside mirrors are now set to your preferences.
- These memorized positions can also be linked to your Nissan Intelligent Key®.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.

ESSENTIAL INFORMATION

TIRE PRESSURE MONITORING SYSTEM (TPMS) WITH EASY-FILL TIRE ALERT

- A **Tire Pressure Low - Add Air** warning message will appear in the vehicle information display **1** and the low tire pressure warning light **2** will illuminate when one or more tires are low in pressure and air is needed.
 - The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mi (1.6 km) at moderate speeds.
- When adding air to an under-inflated tire, the TPMS with Easy-Fill Tire Alert provides visual and audible signals outside the vehicle to help you inflate the tire to the recommended COLD tire pressure.
- To use the Easy-Fill Tire Alert system:
 1. Move the shift lever to the **P (Park)** position and apply the parking brake.
 2. Place the ignition switch in the ON position. Do not start the engine.
 3. Add air to the under-inflated tire, and within a few seconds, the hazard warning lights will start flashing.
 4. When the designated tire pressure is reached, the horn will beep once and the hazard warning flashers will stop flashing.
 5. Repeat this procedure for any additional under-inflated tires.
- After the tire pressures are adjusted, drive the vehicle at speeds above 16 mph (25 km/h). The **Tire Pressure Low - Add Air** warning message and low tire pressure warning light **2** will extinguish.
- In addition to the **Tire Pressure Low - Add Air** warning message, you can view the individual tire's pressure in the vehicle information display as well as the recommended pressure, denoted by blue lettering, for each tire.
- When the low tire pressure warning light **2** flashes for 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked. Nissan recommends that you visit a Nissan dealer for this service.
- Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light **2** to illuminate. If the warning light illuminates, check the tire pressure in your tires.
 - Check the tire pressure (including the spare tire) often and always prior to long distance trips.
- The Tire and Loading Information label contains valuable information. Please refer to the "Technical and consumer information (section 10)" of your Owner's Manual for the location of the Tire and Loading Information label.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)", the "Starting and driving (section 5)" and the "Do-it-yourself (section 8)" of your Owner's Manual.

ESSENTIAL INFORMATION

LOOSE FUEL CAP AND FUEL-FILLER DOOR

LOOSE FUEL CAP

- A **Loose Fuel Cap** warning message will appear in the vehicle information display **1** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will extinguish when the vehicle detects the fuel-filler cap is properly tightened and the **OK** button, located on the steering wheel, is pressed.
- If the cap is not properly tightened, the Malfunction Indicator Light  may illuminate.



FUEL-FILLER DOOR

- The fuel-filler door **2** is located on the passenger's side of the vehicle.
- To open the fuel-filler door, push the fuel-filler door release switch **3**, located on the lower switch bank to the left of the steering wheel.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" and the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.

DIVIDE-N-HIDE® FLOOR (if so equipped)

- Do not place more than 30 lbs (13.6 kg) on the adjustable floor when it is in the upper position **1**. Do not place more than 165 lbs (75 kg) on the adjustable floor when it is in the middle position.
- There are multiple positions for the adjustable floor. The upper position **1** allows for additional storage below the adjustable floor.

To move the adjustable floor from the lower position **2** to the upper position **1**:

1. Use the handle to lift the adjustable floor.
2. Move the adjustable floor to the upper guide track and make sure it is securely in place.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" of your Owner's Manual.

OUTSIDE TEMPERATURE DISPLAY

- When the ignition switch is in the ON position, the outside air temperature **1** will appear in the vehicle information display.
- If the outside air temperature is below 24°F (-4°C), the outside temperature display will have snowflake **2** blinking for 20 seconds then remain illuminated with the ignition switch in the ON position.
- If the outside air temperature is between 26°F and 37°F (-3°C and +3°C), the outside temperature display will have a snowflake **2** blink continuously with the ignition switch in the ON position.
- If the outside air temperature is 39°F (+4°C) the outside temperature display will have a snowflake **2** that will blink and then extinguish.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

TOWING YOUR VEHICLE

ALL-WHEEL DRIVE (AWD) VEHICLE (if so equipped)


- An all-wheel drive vehicle must be towed with all wheels off the ground.
- For proper towing and to avoid accidental damage to your vehicle, Nissan recommends that a service operator tow your vehicle after carefully reading the Owner's Manual precautions.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "In case of emergency (section 6)" and the "Technical and consumer information (section 10)" of your Owner's Manual.


CLOCK SET/ADJUSTMENT

- To adjust the time and the appearance of the clock on the display:
 1. Touch  Settings **1** on the Launch Bar.
 2. Touch the "Clock" key.
- The following settings can be adjusted:
 - **On-Screen Clock:** Sets the clock display on/off. When this item is on, the clock display appears.
 - **Clock Mode:** From here, the clock mode options are:
 - **Auto:** Adjust clock time automatically using GPS.
 - **Time Zone:** Adjust clock time reflecting selected Time Zone **2**.
 - **Manual:** Reflects "Set Clock Manually" settings.

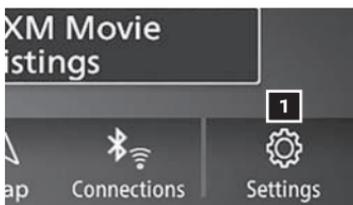

ESSENTIAL INFORMATION

- **Clock Format:** The clock can be set to 12 hours or 24 hours.
 - **Date Format:** The display format of the day, month, and year display can be selected.
 - **Offset (Hour):** Adjusts the offset value (hour). "Clock Mode" must be set to "Auto" or "Time Zone" for this option.
 - **Offset (min.):** Adjusts the offset value (minutes). "Clock Mode" must be set to "Auto" or "Time Zone" for this option to be available.
 - **Daylight Savings Time:** Turns on/off the daylight saving time setting.
 - **Time Zone:** Select an appropriate time zone from the list. "Clock Mode" must be set to "Time Zone" for this option.
 - **Set Clock Manually:** Adjust the clock manually. Touch "+" or "-" to adjust the hours, minutes, day, month and year up or down. "Clock Mode" must be set to "Manual" for this option.
- Press the  button **3** to return to the previous screen.

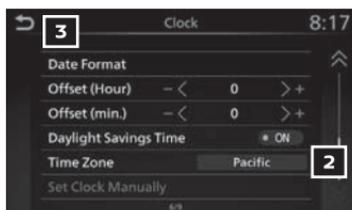

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Getting started (section 2)**" of your NissanConnect® Owner's Manual.

FIRST DRIVE FEATURES

NISSAN INTELLIGENT KEY® SYSTEM (if so equipped)

The Nissan Intelligent Key® System allows you to lock or unlock the vehicle and open your liftgate. It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).



REMOTE ENGINE START WITH INTELLIGENT CLIMATE CONTROL* (if so equipped)



- The remote start operating range is approximately 197 ft (60 m) from the vehicle. The effective operating range may be shorter if there are walls or other obstructions between the key and the vehicle.
- For the remote start to function, the vehicle must be in the **P (Park)** position with the ignition off and all doors must be closed and locked. Please see your Owner's Manual for additional information.
- To start your vehicle remotely:
 1. Press the  button **1** to lock all doors.
 2. Within 5 seconds, press and hold the engine start  button **2** for at least 2 seconds.
- The engine will start, and the parking lights will turn on.
- The automatic climate control system will begin heating or cooling the vehicle depending on the outside (ambient) temperature, cabin (in-car) temperature and the last user mode. During this period, the climate control display and buttons will be inoperable until the ignition switch is turned ON.
- The engine will run for 10 minutes and then turn off.
- Repeat steps 1 and 2 to extend the time for an additional 10-minute period.
 - After two remote starts, the ignition switch must be cycled before the remote start can be used again.
 - To cancel the remote engine start, press the  button **2**.
- To start driving, depress the brake pedal and push the ignition switch.



LOCKING AND UNLOCKING THE VEHICLE

- The operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, push either door handle request switch **3**, push the liftgate request switch **4** or press the  button **1** on the key fob.
- To unlock the vehicle, perform one of the following procedures:
 - Push either door handle request switch **3** once and the corresponding door will unlock. Push the request switch **3** again within 5 seconds; all other doors will unlock, or

FIRST DRIVE FEATURES

- Press the **1** button **5** on the key fob to unlock the driver's side door. Press the **1** button **5** again; all other doors will unlock.
- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the **2** button **7** for more than 1 second. Once activated, the panic alarm and headlights will stay on for a period of time.

LIFTGATE RELEASE

- To open the liftgate, press the  button **6** for longer than 1 second.
- To close the liftgate, press the  button **6** again for longer than 1 second.

INTELLIGENT KEY BATTERY DISCHARGE

- If the battery of the Intelligent Key is discharged or environmental conditions interfere with the Intelligent Key operation, start the engine according to the following procedure:
 1. Move the shift lever to the **P (Park)** position.
 2. Firmly apply the foot brake.
 3. Push the ignition switch with the Intelligent Key, and a chime will sound.
 4. Within 10 seconds after the chime sounds, push the ignition switch from ON to OFF while depressing the brake pedal and the engine will start.


* State laws may apply; review local laws before using.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Pre-driving checks and adjustments (section 3)**" and "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

2ND ROW SEATS

- To recline the seatback:
 - Lift the seatback release lever **1** to fold the seatback forward.
 - Pull the bar **2** and hold it while sliding the seat forward or backward to the desired position. Release the bar **2** to lock the seat in place.
- Pull the release strap **3** to fold down the armrest and access the cup holders.

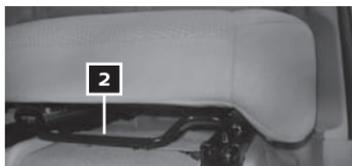

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Safety – Seats, seat belts and supplemental restraint system (section 1)**" of your Owner's Manual.

POWER LIFTGATE (if so equipped)

- When the liftgate is closed and locked, the liftgate will open automatically by:
 - Pushing and holding the power liftgate switch **1** on the instrument panel.
 - Pushing the liftgate opener switch **2**. The liftgate must be unlocked, or you must have the Intelligent Key with you (that is, in your pocket or purse).
 - Pressing the  button **3** on the Nissan Intelligent Key® for more than 1 second.

LIFTGATE POSITION SETTING

- The liftgate can be set to open to a specific height by performing the following procedure:
 1. Open the liftgate using the request switch or the Intelligent Key.
 2. Pull the liftgate down and move it to the desired height position (the liftgate will have some resistance when being manually adjusted).
 3. Push and hold the power liftgate switch **4** located on the liftgate for approximately 3 seconds or until two beeps are heard.
- The liftgate will open to the selected position setting. To change the position of the liftgate, repeat steps 1 through 3 for setting the position of the liftgate.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.



MOTION-ACTIVATED LIFTGATE (if so equipped)

To operate the liftgate hands-free:

- Ensure you have the Nissan intelligent key® within 31.5 in (80 cm) of the liftgate.
- Use a quick kicking motion under the center of rear bumper **1**. After 2 seconds, the vehicle will beep two times and the liftgate will open.
- Do not swing foot side to side or pause during kicking motion.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.


For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.



FIRST DRIVE FEATURES

OUTSIDE MIRROR CONTROL SWITCH

- Move the small switch **1** to select the right or left side mirror.
- Adjust each mirror to the desired position using the large switch **2**.
- To prevent accidentally moving the mirror, move the small switch **1** to the center (neutral) position.

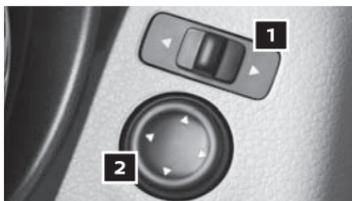

REVERSE TILT-DOWN FEATURE (if so equipped)

- The reverse tilt-down feature will turn both outside mirror surfaces downward to provide better rear visibility close to the vehicle.
 1. Apply the brake.
 2. Place the ignition switch in the ON position.
 3. Move the shift lever to the **R (REVERSE)** position.
 4. The outside mirror surfaces will move downward. (The mirror control switch **1** must be out of the center [neutral] position.)
- The outside mirror surfaces will return to their original positions when one of the following conditions has occurred:
 1. The shift lever is moved to any position other than **R (REVERSE)**.
 2. The outside mirror control switch **1** is set to the center (neutral) position.
 3. The ignition switch is placed in the OFF position.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

FRONT POWER SEAT ADJUSTMENTS (if so equipped)

- To slide the seat forward or backward, push the switch **1** forward or backward.
- To recline the seatback, push the switch **2** forward or backward.



SEAT LIFTER (if so equipped for driver's seat only)

- To raise or lower the front portion or height of the seat, push the back end of the switch **1** up or down.

LUMBAR SUPPORT (if so equipped for driver's seat only)

- To adjust the seat lumbar support, push the front or back end of the switch **3**.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)" of your Owner's Manual.

ALL-WHEEL DRIVE (AWD) LOCK SWITCH (if so equipped)

- This vehicle uses an intuitive AWD system.
- The AWD LOCK mode is intended only for low-speed such as during take off.

LOCK MODE

- AWD LOCK mode is recommended when maximum torque is needed at the rear wheels. Using AWD LOCK mode makes it easy to take off when the vehicle is stuck. Maximum AWD torque is sent to the rear wheels at any pedal position during take off.
- Push the **AWD LOCK** switch **1** to activate.
- The AWD LOCK indicator light illuminates on the instrument panel.



After take off, AWD LOCK mode returns to AUTO mode automatically depending on vehicle speed.

AUTO MODE

- Intuitive AWD sends torque to the rear wheels as needed.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Starting and driving (section 5)" of your Owner's Manual.

STARTING/STOPPING THE ENGINE

TURNING THE ENGINE ON

- It is important to make sure the Nissan Intelligent Key® (if so equipped) is with you (that is, in your pocket or purse).
- Depress the brake pedal.
- Push the ignition switch to the ON position.



TURNING THE ENGINE OFF

- Move the shift lever to the **P (Park)** position, apply the parking brake and push the ignition switch to the OFF position.

AUTO ACCESSORY

- With the vehicle in the **P (Park)** position, the Intelligent Key (if so equipped) with you (that is, in your pocket or purse) and the ignition switch placed from ON to OFF, the radio can still be used for a period of time or until the driver's door is opened.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

FIRST DRIVE FEATURES

HEADLIGHT CONTROL SWITCH

HEADLIGHT CONTROL

- Turn the headlight control switch to the  position **1** to turn on the front parking, side marker, tail, license plate and instrument panel lights. Turn the switch to the  position **2** to turn on the headlights.



AUTOLIGHT SYSTEM

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **3** then push the ignition switch ON. To deactivate the autolight system, turn the headlight control switch to the OFF position  position **1** or  position **2**.

HIGH BEAM SELECT

- With the headlights ON (either in the **AUTO** or  position), push the headlight control switch forward **4** to select the high beam function. The blue indicator light  will illuminate in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light will extinguish.
- Pull and release the headlight control switch **5** to flash the headlight high beams on and off.



FOG LIGHT SWITCH (if so equipped)

- The headlights must be on and the low beams selected for the fog lights to operate.
- Turn the switch (inside collar) to the  position **6** to turn the fog lights on.
- Turn the switch (inside collar) to the OFF position to turn the fog lights off.



HIGH BEAM ASSIST

- To activate the High Beam Assist system, turn the headlight switch to the **AUTO** position **3** and push the lever forward **4**. The High Beam Assist indicator light in the meter will illuminate while the headlights are turned on.
- When the vehicle speed lowers to less than approximately 16 mph (25 km/h), the headlight uses the low beam.
- To turn off the High Beam Assist system, turn the headlight switch to the  position **6** or select the low beam position by placing the lever in the neutral position.

LANE CHANGE SIGNAL

- Move the lever up or down until the turn signal begins to flash but the lever does not latch to signal a lane change. Hold the lever until the lane change is completed.
- Move the lever up or down until the turn signal begins to flash but the lever does not latch and release the lever. The turn signal will automatically flash three times.

Choose the appropriate method to signal a lane change based on the road and traffic conditions.


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

WIPER AND WASHER SWITCH

- Move the lever to one of the following positions to operate the windshield wipers:

- 1** Mist  – One sweep operation of the front wipers.
- 2** Intermittent  – Front wipers operate intermittently, and the speed can be adjusted by twisting the time control ring **3** to increase or decrease wiper speed.
- 4** Low  – Front wipers operate at a continuous low-speed.
- 5** High  – Front wipers operate at a continuous high-speed.
- 6** Front Washer  – Pull the lever toward you to activate the front washer. The front wipers will operate several times.

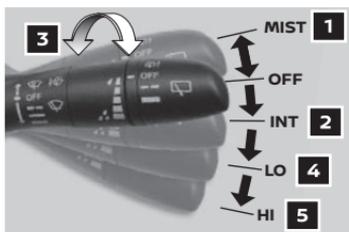

REAR WIPER AND WASHER

- 7** Intermittent  – Rear wiper operates intermittently.
- 8** Low  – Rear wiper operates at a continuous low-speed.
- 9** Rear Washer  – Push the lever forward to activate the rear washer. The rear wiper will operate several times.

DRIP WIPER

- Once the wiper spray cycle is finished, there will be a short delay. Then the wipers will sweep one more time to clear off any remaining drips from the windshield.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Do-it-yourself (section 8)" of your Owner's Manual.

FIRST DRIVE FEATURES



HEATER AND AIR CONDITIONER (automatic) (if so equipped)

1 DEFROSTING FRONT AND SIDE WINDOWS

- Press the front defroster  button **1**. If it is difficult to defrost the windows, press the **A/C** button **6**. This feature removes humidity from the air.
- Turn the temperature control dial **3** left or right to set the desired temperature.
- To set the front defroster on high, press the fan speed  button **5** all the way up and turn the driver's side temperature control dial **3** all the way to the right.

2 DEFROSTING REAR WINDOW AND OUTSIDE MIRRORS (if so equipped)

- Push the rear window defroster  switch **2**. Push the switch again to manually turn the rear defroster off. This function automatically turns off after approximately 15 minutes.

3 ON-OFF BUTTON/DRIVER'S SIDE TEMPERATURE CONTROL DIAL

- Press the **ON/OFF** button to turn the climate controls on or off. Turn the temperature control dial to the left for cooler air or right for warmer air.

4 MODE BUTTON

- Press the **MODE** button to cycle through the following air flow outlets:
 -  Air flows from the center and side vents.
 -  Air flows from the center, side and foot vents.
 -  Air flows mainly from the foot vents and partly defroster.
 -  Air flows from the front defroster and foot vents.

5 FAN SPEED CONTROL BUTTONS

- Press the fan speed control button  for low fan speeds or  for high fan speeds.

6 A/C ON-OFF BUTTON

- Press the **A/C** button to turn the air conditioner system on or off. This system helps cool and dehumidify the air inside the cabin and defog the windows.

7 DUAL BUTTON/PASSENGER'S SIDE TEMPERATURE CONTROL DIAL

- Press the **DUAL** button to turn the passenger's side temperature controls on or off. This will allow the passenger's side temperature to be adjusted independently from the driver's side by turning the passenger's side temperature control dial.
- Turn the passenger's side temperature control dial left for cooler air or right for warmer air.

8 AIR RECIRCULATION BUTTON

- The air recirculation button is used to avoid outside odors.
- Press the air recirculation button  once to turn on and press again to turn off.
- The air recirculation mode cannot be activated when the climate control system is in the front defroster mode  or the front defroster and foot vent mode .

9 AUTO BUTTON

- Press the **AUTO** button to turn the system on, and the system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.

10 FRESH AIR INTAKE BUTTON

- Press the fresh air intake  button to draw outside air into the passenger compartment. The fresh air intake indicator light on the button will illuminate.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.



FM/AM/SiriusXM® SATELLITE RADIO WITH CD PLAYER

1 POWER BUTTON/VOLUME CONTROL DIAL

- Press the **POWER** button to turn the system on or off.
- Turn the **VOLUME** control dial to the right or left to increase or decrease the volume.

2 OK/TUNE-SCROLL DIAL

- Press the **OK** button to go to the audio settings screen.
- To manually tune the radio, turn the **TUNE-SCROLL** dial left or right.

3 SEEK BUTTONS

- To tune and stop at the previous or next broadcast station, press the seek buttons  or .
- For satellite radio to switch to the first channel of the previous or next category, press the seek buttons  or .

FIRST DRIVE FEATURES

- To change tracks on a CD, press the seek buttons ◀◀ or ▶▶.
- To rewind or fast forward a track on a CD, press and hold the seek buttons ◀◀ or ▶▶.

4 STATION SELECT KEYS


- Twelve stations can be set for the FM band, six for the AM band and 18 for satellite radio.
- To store a station in a preset, you must first select a radio band by touching the **AM** key **5**, **FM** key **6** or **SiriusXM** key **7** then tune to the desired FM, AM or satellite radio station. Audio source icon layout in the launch bar is customizable, and your vehicle display may vary.
- Next touch and hold the desired station select key **(1-12)**. The channel indicator will appear on the display and the programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then touch the corresponding station select key **(1-12)**.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Getting started (section 2)**" and the "**Audio system (section 3)**" of your NissanConnect® Owner's Manual.

CRUISE CONTROL (if so equipped)

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 mph (40 km/h). The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the cruise control switch **1** on the steering wheel. The indicator will appear in the vehicle information display screen.
- To set a cruising speed, accelerate the vehicle to the desired speed, push the **SET-** switch **2** on the steering wheel and release. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **RES+** switch **3** on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **SET-** switch **2** on the steering wheel. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, tap the brake pedal or push the **CANCEL** switch **4** on the steering wheel.
- To turn off cruise control, push the **CANCEL** switch **4** on the steering wheel, tap the brake pedal or push the cruise control switch on the steering wheel. The  indicator light in the instrument panel will extinguish.

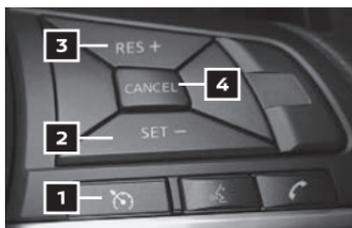


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

INTELLIGENT CRUISE CONTROL (ICC) (if so equipped) (for vehicles without ProPILOT Assist)

VEHICLE-TO-VEHICLE DISTANCE CONTROL MODE

 - To set Vehicle-To-Vehicle Distance Control mode, push the ICC switch **1** on the steering wheel. The CRUISE indicator light **2** will illuminate.
- Accelerate to the desired speed.
- Push down on the **SET-** switch **3** on the steering wheel and release it. ICC will be set to the desired speed.
- Press the  distance switch **4** on the steering wheel repeatedly to change the set distance between long, middle and short.
- When a vehicle is not detected ahead of you in the lane, the set distance and set vehicle speed indicator lights will illuminate **5** in set mode.
- When a vehicle is detected ahead of you in the lane, the vehicle ahead detection, set distance and set vehicle speed indicator lights will illuminate **6** in set mode.
- To reset at a faster cruising speed, push and hold the **RES+** switch **7** on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **SET-** switch **3** on the steering wheel. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, push the **CANCEL** switch **8** on the steering wheel or tap the brake pedal. The set vehicle speed indicator **5** will extinguish.
- To turn off ICC, press the ICC SWITCH switch **1** on the steering wheel. The CRUISE indicator light **2** in the instrument panel will extinguish.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

TILT AND TELESCOPIC STEERING WHEEL ADJUSTMENTS

Release the lock lever by pulling it down.

- Adjust the steering wheel forward or backward by moving it to the desired position.
- Adjust the steering wheel up or down to the desired position.

Lock the steering wheel in place by pushing the lock lever up firmly.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

FIRST DRIVE FEATURES

POWER PANORAMIC MOONROOF (if so equipped)

- To fully open or close the moonroof, push the switch to the **OPEN** position **1** or the **CLOSE** position **2** and release it. The roof will automatically open or close. To stop the moonroof, push the switch once more while it is opening or closing.
- To tilt the moonroof open, press the **TILT** switch **3**. To close the moonroof, push the switch to the **CLOSE** position **2**.



AUTO-REVERSE

When the auto-reverse function is activated, the moonroof will automatically open or tilt up when the control unit detects something caught in the moonroof when the moonroof is closing or tilting down.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

USB (Universal Serial Bus) CONNECTION PORT/AUX JACK AND IPOD® INTERFACE

- The USB Connection Port/AUX jack **1** is located beneath the climate controls.
- When a compatible USB memory device, iPod® or auxiliary device is plugged into the USB Connection Port/AUX jack, compatible audio files stored on the device can be played through the vehicle's audio system.



CHARGE ONLY PORT

- There is a USB/iPod® charging port **2** located in the center console. This port will charge compatible devices.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started (section 2)" of your NissanConnect® Owner's Manual.

CENTER CONSOLE STORAGE BOX

- To access the storage bin, pull up on the lever **1**.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.



SYSTEM GUIDE

VEHICLE INFORMATION DISPLAY

The vehicle information display **1** displays items such as:

- Vehicle settings
- Drive computer information
- Drive system warnings and settings
- Audio Information
- Fuel Economy
- Driving Aids
- Nissan Intelligent Key® operation information
- Chassis control
- Cruise control system information
- Indicators and warnings
- Tire pressure information
- Compass or Navigation (if so equipped)




USING THE VEHICLE INFORMATION DISPLAY

The vehicle information display can be changed using the **OK** button **2** and the **↕** or **◀▶** buttons **3** located on the steering wheel.

- Press the **OK** button **2** on the steering wheel to change or select an item.
- Press the **↶** button **4** on the steering wheel to go back to the previous menu.

RESETTING THE DRIVE COMPUTER

1. Press the **◀▶** buttons **3** on the steering wheel until you reach the desired drive computer mode (either Trip, Fuel Economy or Average Speed).
 - Press the **↕** buttons **3** on the steering wheel to switch between drive computer 1 or 2.
2. Press the **OK** button **2**.
3. Select one of the following items:
 - "Cancel" - returns to the previous screen without resetting.
 - Individual Value (varies according to the currently displayed drive computer mode):
 - "Distance"- resets the distance and time of the selected drive computer.
 - "Fuel Economy"- resets the average fuel economy of the selected drive computer.
 - "Average Speed"- resets the average speed of the selected drive computer.
 - "All" - resets all linked values for the selected drive computer. This includes distance and time, average fuel economy and average speed information for the selected drive computer.

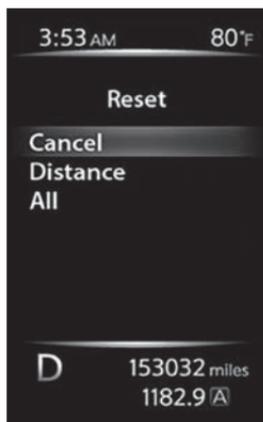

SYSTEM GUIDE

- Drive computer 2 will automatically reset each time the ignition is placed in the OFF position.

ODOMETER/TWIN TRIP A & B

1. Push the **TRIP RESET** switch **5** until the desired trip odometer (either TRIP A or TRIP B) is displayed.
2. When TRIP A or B is displayed, pushing the **TRIP RESET** switch **5** for more than 1 second will reset the currently displayed trip odometer to zero.



SETTINGS

The setting mode allows you to change the information displayed in the vehicle information display:

- Driver Assistance
- Clock
- Meter Settings
- Vehicle Settings
- Maintenance
- Alarm
- Tire Pressures
- Unit
- Language
- Factory Reset

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

BLUETOOTH® HANDS-FREE PHONE SYSTEM*

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.
- For Information regarding connecting your cellular phone, refer to the connecting procedure within this guide.

SYSTEM OPERATING TIPS

- Press the  button on the steering wheel to interrupt the voice prompts at any time and speak a command after the tone.
- To use the system faster, you may speak the second level commands with the main menu command on the main menu. For example, press the  button on the steering wheel, and after the tone, say "Call Michael Smith".
- The "Help" command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing the heater and air conditioner vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.



- To cancel a Nissan Voice Recognition session, press and hold the  or  button on the steering wheel, or **BACK** on the control panel.
- To decrease or increase the volume of the voice prompts, push the volume control switches **—** or **+** on the steering wheel or turn the **VOLUME** control knob on the audio system while the system is responding.
- Voice commands can be used to operate various Bluetooth® system features using the Nissan Voice Recognition System. See your NissanConnect® Owner's Manual for detailed information.
- For more detailed information and instructions, refer to your cellular phone's Owner's Manual and visit www.NissanUSA.com/bluetooth.

CONNECTING PROCEDURE

1. Touch the  Settings key **1** on the Launch Bar.
2. Touch the "Connections" key **2**.
3. Touch the "Bluetooth" key **3** and touch "Add New". A message is displayed.
4. Touch "Yes" to connect a cellular phone. Touch "No" to connect an audio device and operate as guided by the system. (Operations may differ depending on the device).



VEHICLE PHONEBOOK

To access the vehicle phonebook:

1. Press the  button on the control panel.
2. Touch the "Phonebook" key **4**.
3. Choose the desired entry from the displayed list.

MAKING A CALL


1. Press the  button on the Launch Bar. The "Phone" screen **5** will appear on the display.
2. Select one of the following options to make a call:
 - "Quick Dial": Select a telephone number registered as a Quick Dial.
 - "Phonebook": Select the name from an entry stored in the vehicle phonebook.
 - "Call History": Select a telephone number from recent incoming, outgoing or missed calls.
 - "Dial Number": Enter the phone number manually using the keypad displayed on the screen.



SYSTEM GUIDE

RECEIVING/ENDING A CALL

- To accept the incoming call, either:
 - Press the  button on the steering wheel, or
 - Touch the  Answer key on the screen.
- To end or reject an incoming call, either:
 - Press and hold the  button on the steering wheel, or
 - Touch the  Decline key on the screen.

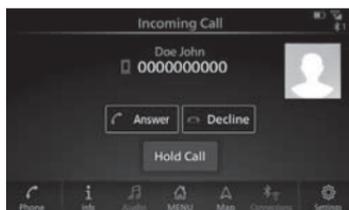


* Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual, the "**Hands-free phone (section 4)**" of your NissanConnect® Owner's Manual or please visit www.NissanUSA.com/bluetooth.

HANDS-FREE TEXT MESSAGING ASSISTANT* (if so equipped)

- This system allows for sending and receiving text messages through the vehicle's interface.
- Using predefined or custom messages, send a text to an entry stored in your Bluetooth® Hands-free Phone System.
- Once enabled, the text message, sender and delivery time are shown on the control panel display when the vehicle speed is less than 5 mph (8 km/h).
- Text messages have the option of being read aloud at all vehicle speeds.
- Many cellular phones may require special permission to enable text messaging. Check the cellular phone's screen during Bluetooth® pairing. For some cellular phones, you may need to enable "Notifications" in the cellular phone's Bluetooth® menu for text messages to appear on the touch-screen display. For more detailed information and instructions, refer to your cellular phone's Owner's Manual.
- Text message integration requires that the cellular phone support Message Access Profile (MAP) for both receiving and sending text messages. Some cellular phones may not support all text messaging features. Please see www.NissanUSA.com/bluetooth for compatibility information as well as your device's Owner's Manual.

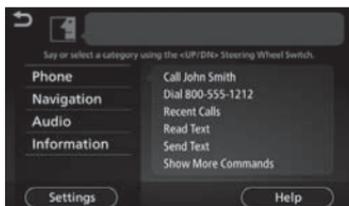

* Laws in some jurisdictions may restrict the use of "Text-to-Speech". Some of the applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Hands-free Phone (section 4)**" of your NissanConnect® Owner's Manual.



NAVIGATION SYSTEM (if so equipped)

- Your Navigation System can calculate a route from your current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route. Features such as Premium Traffic can give detailed traffic information.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.
- To help promote safe driving, some functions cannot be operated or have limited operation when the vehicle speed is above 5 mph (8 km/h). The on-screen text and keys for these restricted functions will be grayed-out or muted and cannot be selected while driving. These functions will become available again when the vehicle speed is reduced to 5 mph (8 km/h). Voice commands may be available for some of the restricted functions. For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

- 1** **MAP** button - Press to display the map.
- 2** button - Press to change the display brightness between day and night modes. While the mode is being displayed, the brightness can be adjusted using the **TUNE/SCROLL** knob. Press and hold to turn the display off. Press again to turn the display on.
- 3** **VOLUME** control knob - Turn right to increase the volume or left to decrease the volume.
- 4** key - Touch to zoom the map out.
- 5** key - Touch to zoom the map in.
- 6** **TUNE/SCROLL** knob - Turn to scroll through the items in a list. Press to select a menu item.
- 7** **BACK** button - Press to return to the previous screen.
- 8** Touch-screen display

SYSTEM GUIDE

DOOR TO DOOR NAVIGATION

The destination can be set using the Door to Door Navigation app and transferred to the vehicle. The route guidance will continue via the Door to Door Navigation app after getting out of the vehicle.

1. Activate the Door to Door Navigation app on your smartphone.
2. Connect the smartphone to the vehicle via Bluetooth®
3. Select a destination using the Door to Door Navigation app on your smartphone.
 - Transfer the destination from the smartphone to the vehicle.
4. A confirmation screen will be displayed. Touch "Go Here" and the position of the transferred location is displayed in the preview on the touch screen display.
 - Touch "Store" to register the destination in the address book.
 - Touch "Ignore" to cancel the transfer of the destination.
5. Touch "Start" to start route guidance.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to your NissanConnect® Owner's Manual.



HOMELINK® UNIVERSAL TRANSCEIVER (if so equipped)

- The HomeLink® Universal Transceiver can learn and consolidate the functions of up to three different hand-held transmitters, operating items such as garage doors, property gates, outdoor and indoor lights or alarm systems.
- To program the HomeLink Universal Transceiver:
 - Position the handheld transceiver 1-3 in (26-76 mm) away from the HomeLink surface, keeping the HomeLink indicator light in view.
 - Press and hold the desired HomeLink button and the handheld transmitter button simultaneously until the HomeLink indicator light flashes slowly and then rapidly.
 - Both buttons may be released when the indicator light flashes rapidly.

- To verify the programming is complete, press and hold the HomeLink button and observe the indicator light:
 - A solid, continuous light indicates the programming is complete and the HomeLink button will activate your device.
 - A blinking light that turns to a solid, continuous light after 2 seconds indicates additional steps are required to complete the programming.
- An additional person may make the remaining steps easier. To complete the programming process:
 - At the receiver of the device that you are programming to the HomeLink button, press and release the learn or smart button (the name may vary by manufacturer, but it is usually located near where the hanging antenna wire is attached to the unit). You have approximately 30 seconds to initiate the following step.
 - Press and hold the programmed HomeLink button for 2 seconds and release.
- You may have to repeat the previous two steps up to three times to complete the programming process. HomeLink should now activate your device.

COMPASS (if so equipped)

- Press the  button **1** for about 1 second when the ignition switch is placed in the ON position to toggle the compass display **2** on or off.
- The display will indicate the direction the vehicle is heading:
 - **N**: North
 - **E**: East
 - **S**: South
 - **W**: West
- If the display reads "C", or for additional information refer to the "Instruments and controls (section 2)" of the Owner's manual.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual, the HomeLink website at www.homelink.com or call 1-800-355-3515.

MEMO

MEMO



Helpful Resources

Below is a list of helpful resources that can be used to learn more about the vehicle's systems and feature operations.

- Vehicle Owner's Manual
- NissanConnect® Owner's Manual
- Printed Quick Reference Guide (this document)
- www.NissanUSA.com/bluetooth
- www.NissanUSA.com/connect
- www.youtube.com/user/NissanUSA
- Nissan Consumer Affairs: 1-800-647-7261
- Electronic Quick Reference Guide (Use Quick Response (QR) code or URL below.)
- Nissan Quick Guide (available in the App Store® or Google Play™ store for download to your smartphone)



To view detailed instructional videos, go to www.nissanownersinfo.mobi/2019/rogue or snap this barcode with an appropriate barcode reader.



This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain with this Quick Reference Guide all revision updates sent to you by NISSAN to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the NISSAN website at <https://owners.nissanusa.com/owners/navigation/manualsGuide>. If you have questions concerning any information in your Owner's Manual, contact NISSAN Consumer Affairs. See the NISSAN CUSTOMER CARE PROGRAM page in the Owner's Manual for contact information.

