 


2017 **SENTRA**

QUICK REFERENCE GUIDE



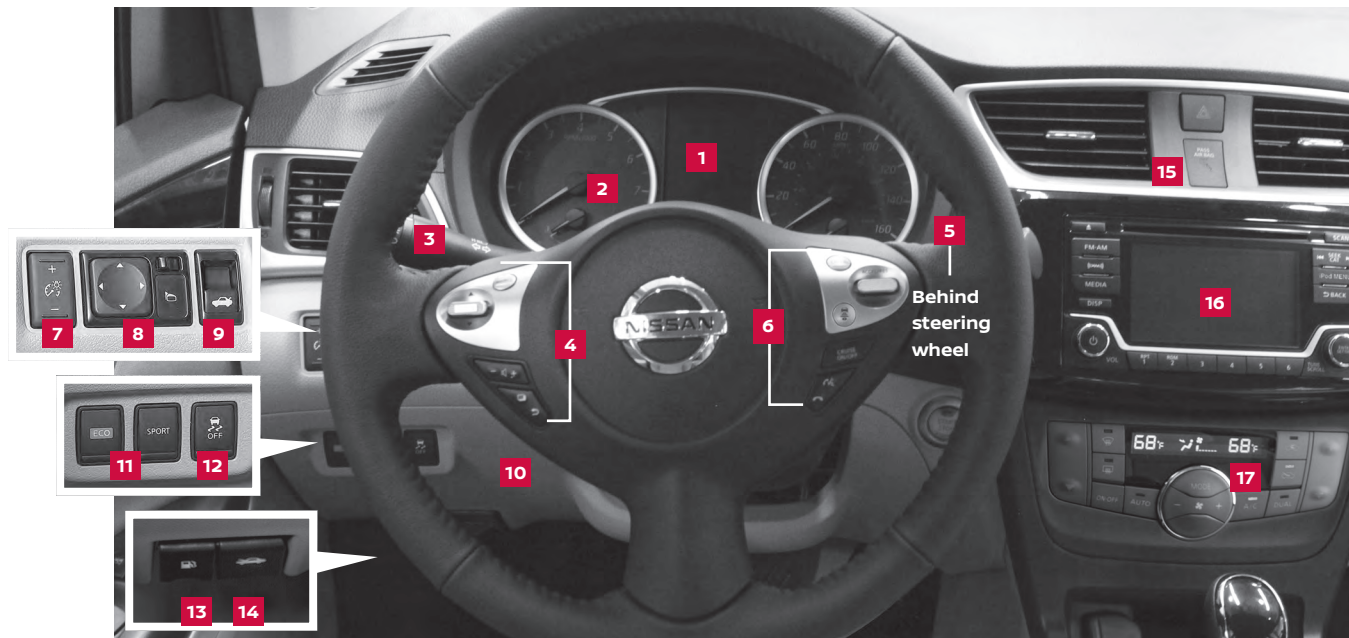

- 1** Vehicle Information Display
- 2** Low Tire Pressure Warning Light
- 3** Headlight and Turn Signal Switch
- 4** Wheel Switches for Audio\* and Vehicle Information Display\*

- 5** Wiper and Washer Switch
- 6** Cruise Control\* and Bluetooth®
- 7** Instrument Brightness Control\*
- 8** Power Mirror Switch
- 9** Trunk Lid Release Switch

- 10** Tilt/Telescopic Steering Column\*
- 11** Drive Modes (**ECO** and **SPORT**)\*
- 12** Vehicle Dynamic Control (VDC)\* OFF Switch
- 13** Fuel-filler Door Release

- 14** Hood Release\*
- 15** Front Passenger Air Bag Status Light\*
- 16** Audio and Navigation System
- 17** Heater and Air Conditioner (automatic)

\*See your Owner's Manual for information.

# TABLE OF CONTENTS

## NEW SYSTEM FEATURES

Drive Modes	2
NissanConnect <sup>SM</sup> Services Powered by SiriusXM <sup>®</sup> (if so equipped)	2
RearView Monitor (if so equipped)	4
Blind Spot Warning (BSW) with Rear Cross Traffic Alert (RCTA) (if so equipped)	4
Forward Emergency Braking (FEB) (if so equipped)	5
Siri <sup>®</sup> Eyes Free (if so equipped)	5
SiriusXM Travel Link and SiriusXM Traffic (if so equipped)	5

## ESSENTIAL INFORMATION

Tire Pressure Monitoring System (TPMS) with Easy-Fill Tire Alert (if so equipped)	7
Loose Fuel Cap	8
Fuel-filler Door	8
Clock Set/Adjustment	8

## FIRST DRIVE FEATURES

Nissan Intelligent Key <sup>®</sup> System (if so equipped)	11
Trunk Lid Release Switch	11
Front Power Seat Adjustments (if so equipped for driver's seat)	12
Outside Mirror Control Switch	12
Starting/Stopping the Engine	13
Headlight Control Switch	13
Wiper and Washer Switch	14
Heater and Air Conditioner (automatic) (if so equipped)	15
FM/AM/SiriusXM <sup>®</sup> Satellite Radio (if so equipped) with CD Player	17
USB (Universal Serial Bus) Connection Port/Aux Jack and iPod <sup>®</sup> Interface	18
Cruise Control (if so equipped)	18
Intelligent Cruise Control (ICC) (if so equipped)	19

## SYSTEM GUIDE

Vehicle Information Display (if so equipped)	21
Hands-free Text Messaging Assistant (if so equipped)	22
NissanConnect <sup>SM</sup> Mobile Apps (if so equipped)	22
Bluetooth <sup>®</sup> Hands-free Phone System	24
• System Operating Tips	24
Bluetooth <sup>®</sup> System without Navigation (if so equipped)	25
Bluetooth <sup>®</sup> System with Navigation (if so equipped)	26
Navigation System (if so equipped)	28
HomeLink <sup>®</sup> Universal Transceiver (if so equipped)	29



Additional information about your vehicle is also available in your Owner's Manual, Navigation System Owner's Manual and at [www.NissanUSA.com](http://www.NissanUSA.com).



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)", the "Monitor, climate, audio, phone and voice recognition systems (section 4)" and the "Starting and driving (section 5)" of your Owner's Manual.

# NEW SYSTEM FEATURES

## DRIVE MODES

### NORMAL

- Normal drive mode is recommended for normal, everyday driving and is the default mode of your vehicle.

### ECO

- ECO drive mode is recommended to help maximize fuel economy. Performance may be reduced.
  - Press the **ECO** button **1** on the instrument panel to activate.
  - The ECO drive indicator light will illuminate on the instrument panel.



### SPORT

- SPORT drive mode is recommended for an enhanced performance feel. Fuel economy may be reduced.
  - Press the **SPORT** button **2** on the instrument panel to activate.
  - The SPORT drive indicator light will illuminate on the instrument panel.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

---

## NISSANCONNECT<sup>SM</sup> SERVICES POWERED by SiriusXM<sup>®</sup> (if so equipped)

NissanConnect Services is a collection of security and convenience services that add innovation to your daily drive.

- To enroll in NissanConnect Services, create an account or log into your Nissan Owner Portal with your Vehicle Identification Number (VIN). Under the NissanConnect Services tab, select the red button next to Manage Subscription. Follow the prompts to enroll in NissanConnect Services. Next, download the NissanConnect Services companion app and log into it using your Nissan Owner Portal ID and password.

For full details on NissanConnect Services or to enroll your vehicle, please visit [www.NissanUSA.com/connect](http://www.NissanUSA.com/connect) or call 855-426-6628.

 
Here is a quick overview of some of the features that may be available for your vehicle. A full description of these and other NissanConnect Services can be found in your Navigation System Owner's Manual.

- Automatic Collision Notification, a service that generates an automatic connection between the vehicle and the Emergency Response Center when the vehicle has been involved in an accident that was severe enough to deploy the air bags.

To view detailed instructional videos regarding these and other features, please go to [www.nissanownersinfo.mobi](http://www.nissanownersinfo.mobi).


- **Emergency Call**, which connects you to a NissanConnect Services Specialist who will assist in the dispatch of emergency services to the vehicle's location. To use this feature, press the **SOS** button **1** on the overhead console. The **SOS** button **1** should only be used in emergency situations.

- **Roadside Assistance**, which dispatches roadside assistance to the vehicle's location in non-emergency situations. Roadside Assistance can be accessed by touching the headset icon **2** on the map screen, via the NissanConnect Services companion app or by calling the Roadside Assistance provider directly.

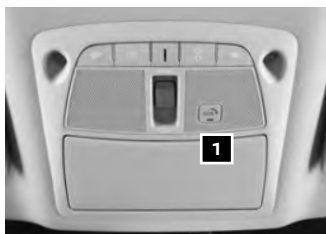

- **Stolen Vehicle Locator**, a service that works in coordination with law enforcement agencies to assist in the recovery of a stolen vehicle.

 
- **Remote Door Lock/Unlock**, for use when you forget to lock your vehicle or if you need to open it and do not have the keys. To use this feature, log into the NissanConnect Services companion app or website or contact a NissanConnect Services Response Specialist.

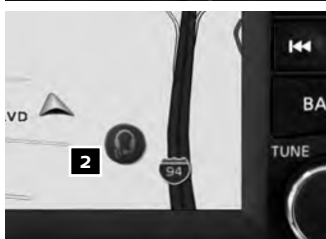

- **Assisted Search**, a feature that allows you to verbally request point-of-interest or destination data from a live operator by touching the headset icon **2** on the map screen.

- **Journey Planner**, with which you can send a route with a destination and up to five way points directly to the vehicle.

 
- **Boundary Alert**, a feature that allows you to monitor the movement of your vehicle in and out of specified regions you have set on the Monitoring section of the NissanConnect Services web portal or companion app.

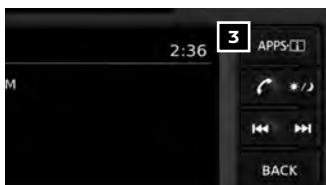

- **Speed Alert**, which sends you alerts when your vehicle speed exceeds a threshold you have set on the web portal or companion app.

To access these features in your vehicle:

 - Press the **APPS** button **3** on the control panel.
- Touch the "NissanConnect Services" key **4**.

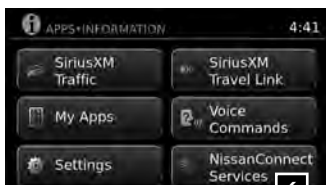

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Information (section 5)**" of your Navigation System Owner's Manual.

# NEW SYSTEM FEATURES

## REARVIEW MONITOR (if so equipped)

- When the shift lever is shifted into the **R (REVERSE)** position, the monitor display shows a rearward view from the vehicle.
- The colored guide lines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line.
  - Red 1.5 ft (0.5 m); Yellow 3 ft (1 m); Green 7 ft (2 m) and 10 ft (3 m).



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

## BLIND SPOT WARNING (BSW) WITH REAR CROSS TRAFFIC ALERT (RCTA) (if so equipped)

- The BSW system helps to alert the driver when another vehicle moves into the vehicle's blind spot area.
- An indicator light located near the outside mirrors **1** will illuminate if the radar sensors detect a vehicle in the detection zone.
- The indicator light **2** will illuminate after the ignition switch is ON and the BSW system is enabled. This indicates that the BSW system is operational.
- The indicator light **2** will extinguish if all of the warning systems are deactivated using the Settings menu.
- The RCTA system helps to alert the driver of an approaching vehicle when the driver is backing out of a parking space. The system operates when the shift lever is in the **R (REVERSE)** position and the vehicle speed is less than approximately 5 mph (8 km/h).
- The radar sensors detect an approaching vehicle from up to 66 ft (20 m). The sensors are located on both sides near the rear bumper. The system gives visual and audible warnings if an approaching vehicle is detected.
- The RCTA system can be turned on or off through the Driver Assistance menu in the vehicle information display.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" and the "**Starting and driving (section 5)**" of your Owner's Manual.

## FORWARD EMERGENCY BRAKING (FEB) (if so equipped)

- The FEB system can assist the driver when there is a risk of a forward collision with a vehicle ahead in the traveling lane.
- The FEB operates at speeds greater than 3 mph (5 km/h).
- If there is a risk of a forward collision, an audible tone will sound and the vehicle ahead detection indicator light **1** will illuminate. If the driver applies the brakes after the warning and the FEB system detects that there is still the possibility of a forward collision, the system will automatically increase the braking force. If the driver does not take action, the FEB system will issue a second visual warning **2**, an audible warning and also apply partial braking.




Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

---

## SIRI® EYES FREE (if so equipped)

- If you have a compatible iPhone® with Siri®, you can link your iPhone® to the Siri® Eyes Free function in your vehicle's Bluetooth® system.
- If you have a compatible iPhone® connected to the system, press and hold the  button **1** on the steering wheel for a few seconds and Siri® will be activated in Eyes Free mode.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual and visit [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth).

---

## SiriusXM TRAVEL LINK AND SiriusXM TRAFFIC (if so equipped)

- Your vehicle's Navigation System is equipped with SiriusXM Travel Link and SiriusXM Traffic capabilities.
- SiriusXM Travel Link provides access to real-time weather information and forecasts, nearby fuel prices, movie listings, sports scores and stock quotes.



# NEW SYSTEM FEATURES

- SiriusXM Traffic provides information that may help to avoid delays due to traffic incidents. Traffic jams, roadwork, road closures around the current location, etc., are represented graphically on the map by icons depicting the nature of the event. Incidents on the route are automatically displayed as they are approached.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

 
For more information, refer to the **"Navigation (section 4)"** and the **"General system information (section 6)"** of your Navigation System Owner's Manual.



# ESSENTIAL INFORMATION

## TIRE PRESSURE MONITORING SYSTEM (TPMS) WITH EASY-FILL TIRE ALERT (if so equipped)

- A **CHECK TIRE PRES** (if so equipped) warning message will appear in the trip computer **1** and the low tire pressure warning light **2** will illuminate when one or more tires are low in pressure and air is needed.
  - The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mi (1.6 km) at moderate speeds.
- After tire pressures are adjusted, drive the vehicle at speeds above 16 mph (25 km/h). The **CHECK TIRE PRES** (if so equipped) warning message and low tire pressure warning light **2** will extinguish.
- When adding air to an under-inflated tire, the TPMS with Easy-Fill Tire Alert provides visual and audible signals to help you inflate the tire to the recommended COLD tire pressure.
- To use the Easy-Fill Tire Alert system (if so equipped):
  1. Move the shift lever to the **P (PARK)** position and apply the parking brake.
  2. Place the ignition switch in the ON position. Do not start the engine.
  3. Add air to the under-inflated tire, and within a few seconds, the hazard warning lights will start flashing.
  4. When the designated tire pressure is reached, the horn will beep once and the hazard warning lights will stop flashing.
  5. Repeat this procedure for any additional under-inflated tires.
- When the low tire pressure warning light **2** flashes for approximately 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked. It is recommended you visit a Nissan dealer for this service.
- Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light **2** to illuminate. If the warning light illuminates, check the tire pressure in your tires.
  - Check the tire pressures (including the spare tire) often and always prior to long distance trips.
- The Tire and Loading Information label contains valuable information. Please refer to the "Technical and consumer information (section 10)" of your Owner's Manual for the location of the Tire and Loading Information label.

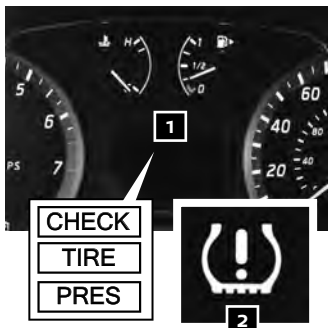
 



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)", the "Starting and driving (section 5)" and the "Do-it-yourself (section 8)" of your Owner's Manual.

# ESSENTIAL INFORMATION
 
## LOOSE FUEL CAP

- A **LOOSE FUEL CAP** warning message will display in the vehicle information display **1** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will extinguish when the vehicle detects the fuel-filler cap is properly tightened and the  button **2** on the steering wheel is pressed.
- If the cap is not properly tightened, the Malfunction Indicator Light  may also illuminate.

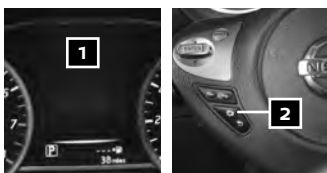

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

## FUEL-FILLER DOOR

- The fuel-filler door release **1** is located to the left of the steering wheel below the instrument panel.
- To open the fuel-filler door, pull the fuel-filler door release **1**.
- The fuel-filler door is located on the passenger's side at the rear of the vehicle.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

## CLOCK SET/ADJUSTMENT

### WITHOUT NAVIGATION - FM/AM RADIO

- To adjust the time and the appearance of the clock on the display:
  1. Press the **SETUP** button **1**.
  2. Turn the **TUNE/MENU** knob **2** to select "CLOCK" and press the **ENTER** button **3**.
  3. Turn the **TUNE/MENU** knob **2** to select "Set Time" and press the **ENTER** button **3**.



- The following settings can be adjusted:
  - By turning the **TUNE/MENU** knob **2**, the hours can be adjusted. Pressing the **ENTER** button **3** will allow the minutes to be adjusted by the **TUNE/MENU** knob **2**.
  - Press the **ENTER** button **3** to finish.
- The display will return to the regular display after 10 seconds.

#### WITHOUT NAVIGATION – FM/AM/SiriusXM® SATELLITE RADIO

- To adjust the time and the appearance of the clock on the display:

1. Press the **ENTER/SETTING** button **4**.
2. Turn the **TUNE/SCROLL** knob **5** to select "CLOCK" and press the **ENTER/SETTING** button **4**.
3. Turn the **TUNE/SCROLL** knob **5** to select "Set Time" and press the **ENTER/SETTING** button **4**.



- The following settings can be adjusted:
  - By turning the **TUNE/SCROLL** knob **5**, the hours can be adjusted. Pressing the **ENTER/SETTING** button **4** will allow the minutes to be adjusted by the **TUNE/SCROLL** knob **5**.
  - Press the **ENTER/SETTING** button **4** again to set the changes.
  - Press the **BACK** button **6** to finish.

#### WITH NAVIGATION

- To adjust the time and the appearance of the clock on the display:

1. Press the **APPS** button **7**.
2. Touch the "Settings" key.
3. Touch the "System" key.
4. Touch the "Clock" key.

- The following settings can be adjusted:

- **Time Format:** The clock can be set to 12 hours or 24 hours.
- **Date Format:** The date can be changed to one of five different formats.



 
- **Clock Mode:** From here, the clock mode options are:

- **Manual:** Allows for the option "Set Clock Manually". Touch this to begin setting the clock manually using the "+" or "-" to adjust the hours, minutes, day and month up or down.

# ESSENTIAL INFORMATION

- **Time Zone:** Touch the “Time Zone” key **8** to choose from the applicable time zone list and/or touch the “Daylight Savings Time” key to switch between ON and OFF.
- **Auto:** Automatically sets the clock to the vehicle’s current location.

- Press the **BACK** button **9** to return to the previous screen.

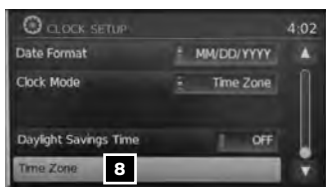






Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

# FIRST DRIVE FEATURES

## NISSAN INTELLIGENT KEY® SYSTEM (if so equipped)

The Nissan Intelligent Key® system allows you to lock or unlock the vehicle, open the trunk and start the engine. It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

- To lock the vehicle, push either door handle request switch **1** once or press the  button **2** on the key fob.
- To unlock the vehicle, perform one of the following procedures:
  - Push either door handle request switch **1** once; the corresponding door will unlock. Push the door handle request switch **1** again within 60 seconds; all other doors will unlock, or
  - Press the  button **3** on the key fob to unlock the driver's side door. Press the  button **3** again; all other doors will unlock.
- To release the trunk lid, press the  button **4** for more than 1 second. Lift the trunk lid to access the trunk.
- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button **5** for more than 0.5 seconds. Once activated, the panic alarm and headlights will stay on for a period of time.




Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

## TRUNK LID RELEASE SWITCH

Use one of the following methods to unlatch the trunk lid then raise the lid to open the trunk:

- Push the trunk opener request switch **1**, located under the trunk handle in the center, for more than 1 second. The doors must be unlocked or the Nissan Intelligent Key® must be with you (that is, in your pocket or purse).
- Press the  button **2** on the key fob for more than 1 second.



# FIRST DRIVE FEATURES

- Push the trunk lid release switch **3** down.  
The trunk lid release switch **3** is located to the left of the steering wheel.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

---

## FRONT POWER SEAT ADJUSTMENTS (if so equipped for driver's seat)

- To slide the seat forward or backward, push the switch **1** forward or backward.
- To adjust the angle of the seatback, push the switch **2** forward or backward.

### SEAT LIFTER

- Push the rear end of the switch **1** up or down to adjust the height of the seat cushion.



### POWER LUMBAR SUPPORT

- To adjust the lumbar area, push the front or back end of the switch **3**.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)" of your Owner's Manual.

---

## OUTSIDE MIRROR CONTROL SWITCH

- Move the switch **1** right or left to select the right or left side mirror.
- Adjust each mirror to the desired position using the switch **2**.
- Move the switch **1** to the center (neutral) position to prevent accidentally moving the mirror.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

## STARTING/STOPPING THE ENGINE

CONTINUOUSLY VARIABLE TRANSMISSION  
(Nissan Intelligent Key® models only -  
if so equipped)

- It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).
- Depress the brake pedal.
  - If the brake pedal is not depressed, pushing the ignition switch once enters the ACC mode.
  - If the ignition switch is pushed a second time, the vehicle will enter the ON mode.
- Move the shift lever to the **P (PARK)** position.
- Press the ignition switch **START/STOP** button to start the engine.



MANUAL TRANSMISSION (if so equipped)

- Depress the brake pedal.
- Depress the clutch pedal to the floor.
- Move the shift lever to the **N (NEUTRAL)** position.
- Turn the key to the **START** position.

TURNING THE ENGINE OFF

- For a manual transmission, apply the brake pedal, depress the clutch pedal, place the vehicle in **1 (FIRST)** gear, apply the parking brake and turn the ignition off.
- For a Continuously Variable Transmission (CVT models) (if so equipped), apply the brake pedal, move the shift lever to the **P (PARK)** position, apply the parking brake and press the ignition switch **START/STOP** button.

 

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

---

## HEADLIGHT CONTROL SWITCH

HEADLIGHT CONTROL

- Turn the headlight control switch to the  position **1** to turn on the front parking, tail, license plate and instrument panel lights. Turn the switch to the  position **2** to turn on the headlights.



AUTOLIGHT SYSTEM

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.

# FIRST DRIVE FEATURES

- To activate the autolight system, turn the headlight control switch to the **AUTO** position **3** then place the ignition switch in the ON position. To deactivate the autolight system, turn the headlight control switch to the **OFF** position, **1** or **2** position **1** or **2**.

## HIGH BEAM SELECT

- With the headlights ON (either in the **AUTO** position **3** or **2** position **2**), push the headlight control switch forward **4** to select the high beam function. The blue indicator light **5** will illuminate in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light will extinguish.
- Pull and release the headlight control switch **5** to flash the headlight high beams on and off.



## FOG LIGHT SWITCH (if so equipped)

- The headlights must be in the **AUTO** position **3** or the low beams **2** selected for the fog lights to operate.
- Turn the switch (inside collar) to the **ON** position **6** to turn the fog lights on.
- Turn the switch (inside collar) to the **OFF** position to turn the fog lights off.



## LANE CHANGE SIGNAL

- Move the lever up or down until the turn signal begins to flash but the lever does not latch to signal a lane change. Hold the lever until the lane change is completed.
- Move the lever up or down until the turn signal begins to flash but the lever does not latch and release the lever. The turn signal will automatically flash three times.

 
Choose the appropriate method to signal a lane change based on road and traffic conditions.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

## WIPER AND WASHER SWITCH

- Move the lever to one of the following positions to operate the windshield wipers:
  - 1** Mist (**MIST**) - One sweep operation of the wipers.
  - 2** Intermittent (**INT**) - Wipers operate intermittently. The intermittent operation speed can be adjusted by twisting the time control ring **3** to increase or decrease wiper speed.
  - 4** Low (**LO**) - Wipers operate at a continuous low-speed.

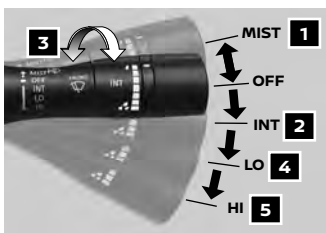

To view detailed instructional videos regarding these and other features, please go to [www.nissanownersinfo.mobi](http://www.nissanownersinfo.mobi).



- 5** High (**HI**) – Wipers operate at a continuous high-speed.
- 6** Pull the lever toward you to activate the washer. The wipers will operate several times.



#### WIPER BLADE REPLACEMENT PROCEDURE

The windshield wipers must be in the service position in order to replace the wiper blades.

To move the wiper blades to the service position, follow this procedure:

- When the ignition switch is in the ON position or within 60 seconds of placing the ignition switch in the OFF position, lift the windshield wiper and washer lever up to the **MIST** position **1** two times in less than 0.5 seconds. The windshield wipers will move to the service position automatically, and the wiper blades can now be replaced.



To move the wiper blades back to the original position:

- Lift the windshield wiper and washer lever up for more than 1 second or lower the lever down to operate at any wiper speed.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" and the "**Do-it-yourself (section 8)**" of your Owner's Manual.



## HEATER AND AIR CONDITIONER (automatic) (if so equipped)

### **1** AUTO BUTTON

- This mode may be used year-round. Press the **AUTO** button to turn the system on. The system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed. The A/C automatically turns on when the **AUTO** button is selected.

# FIRST DRIVE FEATURES

## 2 DUAL BUTTON

- Press the **DUAL** button to turn the passenger's side temperature controls on or off.
- When the indicator light is on, the climate control system provides individual temperature controls for the driver's and passenger's side.
- When the indicator light is off, the climate control system turns off the individual temperature controls for the passenger's side.

## 3 DRIVER'S SIDE TEMPERATURE CONTROL BUTTONS

- These buttons are used to control the driver's side temperature by pressing up for warmer air or down for cooler air.


## 4 PASSENGER'S SIDE TEMPERATURE CONTROL BUTTONS

- These buttons are used to control the passenger's side temperature by pressing up for warmer air or down for cooler air.

## 5 FAN SPEED CONTROL BUTTONS

- Press **—** to decrease the fan speed and press **+** to increase the fan speed.

## 6 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the front defroster button  to turn the system on. The A/C automatically turns on when the front defroster mode is selected. This feature removes humidity from the air. To optimally defog the side windows, direct the side vents to the side windows.
- Press the temperature control buttons **3** or **4** to set the desired temperature.
- To quickly defrost ice that has formed on the outside of the windows, press the **+** fan speed button **5** until you have reached the maximum speed and set the temperature controls **3** or **4** to the highest temperature setting.


## 7 MODE BUTTON

- Press the **MODE** button to cycle through the following air flow outlets:


 Air flows from the center and side vents.

 Air flows from the center, side and foot vents.




 Air flows mainly from the foot vents.

 Air flows from the front defroster and foot vents.


## 8 REAR WINDOW AND OUTSIDE MIRROR (if so equipped) DEFROSTER SWITCH

- Push the rear window defroster and outside mirror (if so equipped) switch  to turn the system on or off.
- This function automatically turns off after a period of time.

## 9 AIR RECIRCULATION BUTTON

- Press the air recirculation button  to recirculate interior air inside the vehicle. The indicator light on the button will illuminate. This system is used to avoid certain outside odors and to help adjust the inside vehicle temperature more effectively.
- The air recirculation mode cannot be activated when the climate control system is in the front defroster mode  or the front defroster and foot vent mode .

## 10 FRESH AIR INTAKE BUTTON

- Press the fresh air intake button  to draw outside air into the passenger compartment. The indicator light on the button will illuminate.

## 11 A/C BUTTON

- Press the **A/C** button to turn the air conditioner system on or off.

## 12 ON-OFF BUTTON

- Press the **ON-OFF** button to turn the system on or off.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.



## FM/AM/SiriusXM® SATELLITE RADIO (if so equipped) WITH CD PLAYER

 
 




### 1 ON-OFF BUTTON/VOL (volume) CONTROL KNOB

- Press the **ON-OFF** button to turn the system on or off.
- Turn the **VOL** (volume) control knob to the right or left to increase or decrease the volume.

### 2 AUDIO BUTTON/TUNE KNOB

- To manually tune the radio, turn the **TUNE** knob left or right.
- Press the **AUDIO** button to go to the audio settings screen.

### 3 SEEK/CATEGORY BUTTONS

- To tune and stop at the previous or next broadcasting station, press the seek buttons  or .
- For satellite radio to switch to the first channel of the previous or next category, press the seek buttons  or .
- To change tracks on a CD, press the seek buttons  or .

# FIRST DRIVE FEATURES

- When the seek buttons **◀◀** or **▶▶** are pressed and held while a CD is playing, the CD will rewind or fast forward. When the button is released, the CD will play at normal speed.

## 4 STATION MEMORY KEYS

- Twelve stations can be set for the FM band, six for the AM band and 18 for satellite radio.
- To store a station in a preset, first select a radio band by pressing the **FM-AM** button **5** or **SXM** button **6** then tune to the desired FM, AM or satellite radio station.
- Now select and hold the desired station memory key (**1-6**) until the preset number is updated on the display and a beep is heard. Programing is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then select the corresponding station memory key (**1-6**).

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

---

## USB (Universal Serial Bus) CONNECTION PORT/ AUX JACK AND iPod® INTERFACE

- The USB port/Aux jack **1** is located inside the center console.
- When a compatible USB memory device, iPod® or auxiliary device is plugged into the USB port/Aux jack, compatible audio files stored on the device can be played through the vehicle's audio system.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

---

## CRUISE CONTROL (if so equipped)

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 mph (40 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **CRUISE ON-OFF** switch **1** on the steering wheel. The **CRUISE** indicator light in the instrument panel will illuminate.



To view detailed instructional videos regarding these and other features, please go to [www.nissanownersinfo.mobi](http://www.nissanownersinfo.mobi).


- To set a cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **2** on the steering wheel and release. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **3** on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **2** on the steering wheel. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, push the **CANCEL** switch **4** on the steering wheel.
- To turn off the cruise control, push the **CRUISE ON-OFF** switch **1** on the steering wheel. The **CRUISE** indicator light in the instrument panel will extinguish.

 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

## INTELLIGENT CRUISE CONTROL (ICC) (if so equipped)

### VEHICLE-TO-VEHICLE DISTANCE CONTROL MODE

- To set Vehicle-To-Vehicle Distance Control mode, press the **CRUISE ON/OFF** button **1** on the steering wheel. The **CRUISE** indicator light **2** will illuminate.
- Accelerate to the desired speed.
- Push down on the **COAST/SET** switch **3** on the steering wheel and release it. ICC will be set to the desired speed.
- Press the distance  button **4** on the steering wheel repeatedly to change the set distance between long, middle and short.
- When a vehicle is not detected ahead of you in the lane, the set distance and set vehicle speed indicator lights will illuminate **5** in set mode.
- When a vehicle is detected ahead of you in the lane, the vehicle ahead detection, set distance and set vehicle speed indicator lights will illuminate **6** in set mode.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **7** on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **3** on the steering wheel. Release the switch when the vehicle slows to the desired speed.

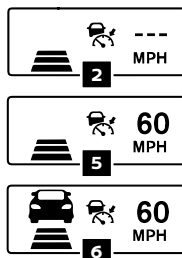

# FIRST DRIVE FEATURES

- To cancel the preset speed, push the **CANCEL** switch **8** on the steering wheel or tap the brake pedal. The set vehicle speed indicator **5** will extinguish.
- To turn off ICC, press the **CRUISE ON/OFF** button **1** on the steering wheel. The **CRUISE** indicator light **2** in the instrument panel will extinguish.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

# SYSTEM GUIDE

## VEHICLE INFORMATION DISPLAY (if so equipped)

The vehicle information display **1** displays items such as:

- Vehicle settings
- Trip computer information
- Drive system warnings and settings (if so equipped)
- Audio information
- Nissan Intelligent Key® operation information (if so equipped)
- Navigation turn-by-turn (if so equipped)
- Cruise control system information
- Indicators and warnings
- Tire pressure information



### USING THE VEHICLE INFORMATION DISPLAY

The vehicle information display can be changed using the **2** button **2** and the **3** buttons **3** on the steering wheel.

- Press the **2** button **2** on the steering wheel to change the display mode.
- Press the **3** buttons **3** on the steering wheel up or down to navigate through the vehicle information display menu.
- Press the **ENTER** button **4** on the steering wheel to change or select an item.
- Press the **5** button **5** on the steering wheel to go back to the previous menu.

### RESETTING THE TRIP COMPUTER

1. Press the **2** button **2** on the steering wheel until you reach the trip computer mode.
2. Press the **2** button **2** on the steering wheel for more than 1.5 seconds to reset fuel consumption, average speed, distance to empty and journey time.
3. Pressing the **2** button **2** on the steering wheel for more than 1 second resets the currently displayed trip odometer to zero.

### SETTINGS

The setting mode allows you to change the information displayed in the vehicle information display:

- Driver Assistance (if so equipped)
- Alarm
- Clock
- Unit
- Meter Settings
- Language
- Vehicle Settings
- Factory Reset
- Maintenance

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

# SYSTEM GUIDE

## HANDS-FREE TEXT MESSAGING ASSISTANT\* (if so equipped)

- This system allows for sending and receiving text messages through the vehicle's interface.
- Using predefined or custom messages, send a text to an entry stored in your Bluetooth® Hands-free Phone System.
- Once enabled, the text message, sender and delivery time are shown on the control panel display when the vehicle speed is less than 5 mph (8 km/h).
- Text messages have the option of being read aloud at all vehicle speeds.
- Many cellular phones may require special permission to enable text messaging. Check the cellular phone's screen during Bluetooth® pairing. For some cellular phones, you need to enable "Notifications" in the cellular phone's Bluetooth® menu for text messages to appear on the touch-screen display. For more information and instructions, refer to your cellular phone's Owner's Manual.
- Text message integration requires that the cellular phone support Message Access Profile (MAP) for both receiving and sending text messages. Some cellular phones may not support all text messaging features. Please see [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth) for compatibility information as well as your device's Owner's Manual.



\*Laws in some jurisdictions may restrict the use of "Text-to-Speech". Some of the applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

---

## NISSANCONNECT<sup>SM</sup> MOBILE APPS (if so equipped)

- Your vehicle may be equipped with NissanConnect<sup>SM</sup> Mobile Apps, allowing you to control various compatible smartphone apps through the vehicle's display screen. A basic package is included for a period of time from the original in-service date of the vehicle.
- To enroll in NissanConnect<sup>SM</sup> Mobile Apps:
  1. Create a Nissan Owner Portal account at [owners.NissanUSA.com](http://owners.NissanUSA.com).
    - Make sure to include your vehicle's VIN when creating your account.
  2. Under the NissanConnect Mobile Apps tab, select the red button next to Manage Subscription to enroll.
  3. Next, download the NissanConnect<sup>SM</sup> Mobile Apps companion app from Google Play or the Apple App Store. Log into the companion app using your Nissan Owner Portal ID and password.
  4. Launch the app, select "United States" and accept the Terms and Conditions.
  5. Select "Sign In", then sign in with the email username and password you created when registering on the Nissan Owner Portal website.

To view detailed instructional videos regarding these and other features, please go to [www.nissanownersinfo.mobi](http://www.nissanownersinfo.mobi).



- Pair your cellular phone to the vehicle.
  - For Android® devices, the smartphone must be connected through the Bluetooth® Hands-free Phone system.
  - For iPhone® on vehicles WITH Navigation, the device must be connected to the vehicle's USB port using your cellular phone's USB cable.
  - For iPhone® on vehicles WITHOUT Navigation, connect the device using the Bluetooth® Hands-free Phone system.
- You can select which apps you want activated in the vehicle from the NissanConnect<sup>SM</sup> Mobile Apps companion app by selecting "Manage My Apps". Some apps shown in the companion app may not appear in your vehicle depending on availability for your model.
- Some apps require you to have the app downloaded and installed on your cellular phone, while others require you to enter your username and password to log in. Not all apps shown on the NissanConnect app site are available on all models.
- To help identify specific apps available for your vehicle or to contact a specialist via chat, please visit [www.NissanUSA.com/connect/support](http://www.NissanUSA.com/connect/support).
- Your available apps will only appear on the screen when your smartphone is connected to both the vehicle and the Internet. For additional information on connecting your device, see your Owner's Manual or visit [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth).
- The NissanConnect<sup>SM</sup> app must be running on your device and the **Connected** icon **1** must be green before using your apps. If the **Disconnected** icon **2** is displayed, press the **APPS** **i** button **3** multiple times to ensure the connection is established.
- To access your apps with the vehicle controls, start your vehicle and then press the **APPS** **i** button **3** on the control panel. The system may take a few seconds to boot up before the **APPS** **i** button **3** is enabled. This is normal.
- If available, your apps can be accessed once the vehicle and cellular phone are connected through the NissanConnect<sup>SM</sup> Mobile Apps companion app.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

 

 




For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

# SYSTEM GUIDE

## BLUETOOTH® HANDS-FREE PHONE SYSTEM\*

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.

### SYSTEM OPERATING TIPS

- Press the  or  button on the steering wheel to interrupt the voice prompts at any time and speak a command after the tone.
- To use the system faster, you may speak the second level commands with the main menu command on the main menu. For example, press the  or  button on the steering wheel, and after the tone, say "Call Redial".
- The "Help" command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing HVAC vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.
- If you experience difficulty with the Voice Recognition system recognizing a contact name, please try saying both the first and last name of the contact as this improves recognition accuracy.
- To cancel a Voice Recognition session, say "Exit" or press and hold the  button on the steering wheel.
- To decrease or increase the volume of the voice prompts, push the volume control switches  or  on the steering wheel or turn the **VOL** (volume) control knob on the audio system while the system is responding.
- Voice commands can be used to operate various Bluetooth® system features using the Nissan Voice Recognition system. See your Owner's Manual for detailed information.
- For more detailed information and instructions, refer to your cellular phone's Owner's Manual and visit [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth).

\*Some jurisdictions prohibit the use of cellular telephones while driving.


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual or please visit [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth).



## BLUETOOTH® SYSTEM WITHOUT NAVIGATION\* (if so equipped)

 
### CONNECTING PROCEDURE

- The vehicle must be stationary when connecting the cellular phone.
- 1. Press the  button on the steering wheel. The system announces the available commands.
- 2. Say: "Add Phone". The system acknowledges the command and asks you to initiate connecting from the cellular phone handset.
- 3. Initiate connecting from the cellular phone.
  - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible cellular phones, please visit [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth).
  - When prompted, confirm that the PIN on the display matches the PIN shown on your device. If you are requested to manually input a PIN, please enter "1234" from your handset.


### VEHICLE PHONEBOOK

- The phonebook stores up to 1,000 entries for each cellular phone paired with the system.
- Depending on your cellular phone, the system may automatically download your cellular phone's entire phonebook to the vehicle's Bluetooth® system.

### MAKING A CALL FROM THE PHONEBOOK



 
1. Press the  button on the steering wheel.
2. After waiting for the tone, say "Call".
3. After the next tone, speak the name of a phonebook entry. For example, "Michael Smith".
4. Confirm that the correct name is recognized by saying "Dial" after the tone.

### MAKING A CALL BY PHONE NUMBER

1. Press the  button on the steering wheel. A tone will sound.
2. Say: "Call". The system acknowledges the command and announces the next set of available commands.
3. Say: "Phone Number". The system acknowledges the command and announces the next set of available commands.
4. Say the number you wish to call starting with the area code in single digit format.
5. When you have finished speaking the phone number, the system repeats it back and announces the available commands.
6. Say: "Dial". The system acknowledges the command and makes the call.

# SYSTEM GUIDE
 
## RECEIVING/ENDING A CALL

- When you receive a cellular phone call, a ring tone sounds through the audio system.
- To accept the call, press the  button on the steering wheel.
- To reject the call, press the  button on the steering wheel.
- To hang up the cellular phone at the end of a call or to disconnect while making a call, press the  button on the steering wheel.

\*Some jurisdictions prohibit the use of cellular telephones while driving.





Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual or please visit [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth).

## BLUETOOTH® SYSTEM WITH NAVIGATION\* (if so equipped)

 - Send predefined or custom text messages through your vehicle's Bluetooth® system.
- Receive texts through your vehicle's Bluetooth® system that can be read to you.
- Bluetooth® Streaming Audio allows you to use a compatible Bluetooth® device to play audio files. Your compatible Bluetooth® device can be connected to the vehicle's audio system, allowing audio files to play through the vehicle's speakers.

## CONNECTING PROCEDURE

  1. Press the **APPS**  button on the control panel.
2. Touch the "Settings" key .
3. Touch the "Phone & Bluetooth" key .
4. Touch the "Connect New Device" key .

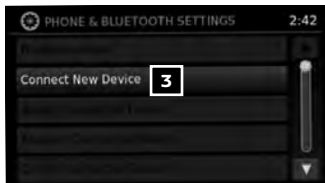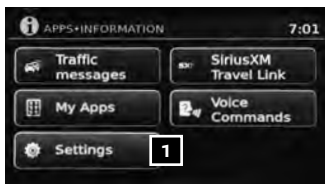



- Initiate the connecting process from the handset. The system will display the message:

"Is PIN XXXXXX displayed on your Bluetooth device?"

If the PIN is displayed on your Bluetooth® device, select "Yes" to complete the connecting process.




## VEHICLE PHONEBOOK

To access the vehicle phonebook:







- Press the  button on the control panel.
- Select the "Phonebook" key .
- Choose the desired entry from the displayed list.

 


## MAKING A CALL

- Press the  button on the control panel. The "PHONE" screen  will appear on the display.
- Select one of the following options to make a call:
  - "Phonebook": Select the name from an entry stored in the vehicle phonebook.
  - "Call Lists": Select the name from the incoming, outgoing or missed call history.
  - "Redial": Dial the last outgoing call from the vehicle.
  - : Input the phone number manually using the keypad displayed on the screen.

## RECEIVING/ENDING A CALL

- To accept the incoming call, either:
  - Press the  button on the steering wheel, or
  - Select the  icon on the screen.
- To reject the incoming call, either:
  - Press the  button on the steering wheel, or
  - Select the  icon on the screen.
- To end a cellular phone call, either:
  - Press the  button on the steering wheel, or
  - Select the  icon on the screen.

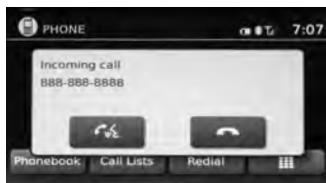

\* Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.





For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual, the "Hands-free phone (section 4)" of your Navigation System Owner's Manual or please visit [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth).

# SYSTEM GUIDE


 
## NAVIGATION SYSTEM (if so equipped)

- Your Navigation System can calculate a route from your current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.
- To help promote safe driving, some functions cannot be operated or have limited operation when the vehicle speed is above 5 mph (8 km/h). The on-screen text and keys for these restricted functions will be grayed-out or muted and cannot be selected while driving. These functions will become available again when the vehicle speed is reduced to 5 mph (8 km/h). Voice commands may be available for some of the restricted functions. For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.


- 1 NAV button** - Press to access the functions of the Navigation System.
- 2 MAP button** - Press to display the current location map screen.
- 3 VOL (volume) control knob** - Turn right to increase the volume or left to decrease the volume.
- 4  key** - Select to zoom the map in.
- 5  key** - Select to zoom the map out.
- 6 APPS  button** - Press to access SiriusXM Traffic, MyApps, Settings, SiriusXM Travel Link and Voice Commands.
- 7  button** - Press to change the display brightness between day and night modes. While the mode is being displayed, the brightness can be adjusted using the **TUNE** knob. Press and hold to turn the display off. Press again to turn the display on.
- 8 BACK button** - Press to return to the previous screen.
- 9 TUNE knob** - Turn to navigate the items in a list. Press to select a menu item.

**10** Touch-screen display

**11** SD-card location – An SD-card with map data must be inserted here for map functions to operate.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

 For more information, refer to your Navigation System Owner's Manual.

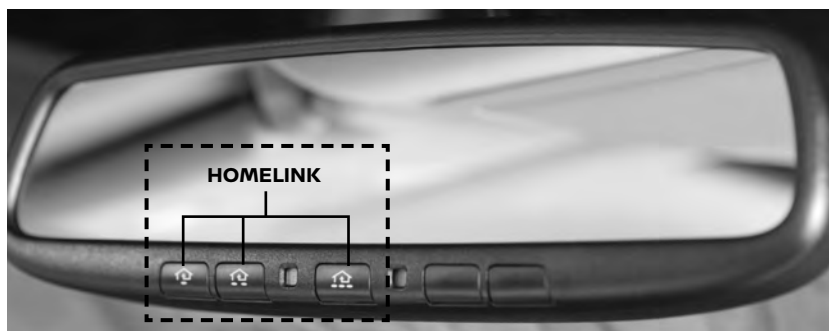

## **HOMELINK® UNIVERSAL TRANSCIVER (if so equipped)**

- The HomeLink® Universal Transceiver can learn and consolidate the functions of up to three different hand-held transmitters, operating items such as garage doors, property gates, outdoor and indoor lights or alarm systems.
- To program the HomeLink® Universal Transceiver:
  - Position the handheld transceiver 1-3 in (26-76 mm) away from the HomeLink surface, keeping the HomeLink indicator light in view.
  - Press and hold the desired HomeLink button and the handheld transmitter button simultaneously until the HomeLink indicator light flashes slowly and then rapidly.
  - Both buttons may be released when the indicator light flashes rapidly.
- To verify the programing is complete, press and hold the HomeLink button and observe the indicator light:
  - A solid, continuous light indicates the programing is complete and the HomeLink button will activate your device.
  - A blinking light that turns to a solid, continuous light after 2 seconds indicates additional steps are required to complete the programing.

# SYSTEM GUIDE

- An additional person may make the remaining steps easier. To complete the programming process:
  - At the receiver of the device that you are programming to the HomeLink system, press and release the learn or smart button (the name may vary by manufacturer, but it is usually located near where the hanging antenna wire is attached to the unit). You have approximately 30 seconds to initiate the following step.
  - Press and hold the programmed HomeLink button for 2 seconds and release.
- You may have to repeat the previous two steps up to three times to complete the programming process. HomeLink should now activate your device.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" of your Owner's Manual, the HomeLink website at [www.homelink.com](http://www.homelink.com) or call 1-800-355-3515.



# MEMO

# MEMO

# MEMO



## Helpful Resources

Below is a list of helpful resources that can be used to learn more about the vehicle's systems and feature operations.

- Vehicle Owner's Manual
- Navigation Owner's Manual (if so equipped)
- Printed Quick Reference Guide (this document)
- [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth)
- [www.NissanUSA.com/connect](http://www.NissanUSA.com/connect)
- [www.youtube.com/user/NissanUSA](http://www.youtube.com/user/NissanUSA)
- Nissan Consumer Affairs: 1-800-647-7261
- Electronic Quick Reference Guide  
(Use Quick Response (QR) code or URL below.)
- Nissan Quick Guide (available in the iPhone App Store or Android Google Play Store for download to your smartphone)



To view detailed instructional videos,  
go to [www.nissanownersinfo.mobi/2017/sentra](http://www.nissanownersinfo.mobi/2017/sentra)  
or snap this barcode with an appropriate barcode reader.



This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain with this Quick Reference Guide all revision updates sent to you by NISSAN to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the NISSAN website at <https://owners.nissanusa.com/owners/navigation/manualsGuide>. If you have questions concerning any information in your Owner's Manual, contact NISSAN Consumer Affairs. See the NISSAN CUSTOMER CARE PROGRAM page in the Owner's Manual for contact information.

Nissan, the Nissan Brand Symbol, Z and Nissan model names are Nissan trademarks.

© 2017 Nissan North America, Inc.

QR17EA 0B17U3

Printing: July 2017 (15)

