 


2014 **TITAN**

QUICK REFERENCE GUIDE



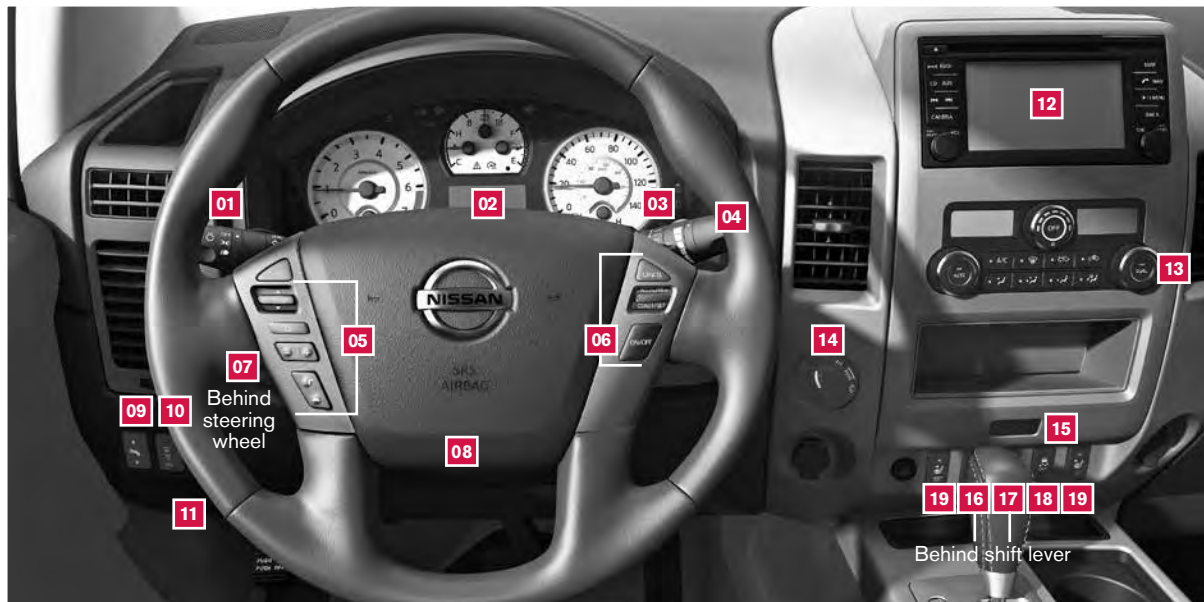

01 HEADLIGHT AND TURN SIGNAL CONTROL

02 VEHICLE INFORMATION DISPLAY

03 LOW TIRE PRESSURE WARNING LIGHT

04 WINDSHIELD WIPER / WASHER SWITCH

05 STEERING WHEEL SWITCHES FOR AUDIO CONTROL* / BLUETOOTH®

06 CRUISE CONTROL

07 CARGO LAMP SWITCH*

08 STEERING WHEEL TILT ADJUSTMENT*

09 PEDAL POSITION ADJUSTMENT SWITCH*

10 REAR SONAR SYSTEM OFF SWITCH*

11 HOOD RELEASE*

12 CONTROL PANEL DISPLAY*

13 AUTOMATIC CLIMATE CONTROLS

14 4-WHEEL DRIVE (4WD) SHIFT SWITCH*

15 FRONT PASSENGER AIR BAG STATUS LIGHT*

16 E-LOCK SWITCH*

17 TOW MODE SWITCH*

18 VEHICLE DYNAMIC CONTROL (VDC) OFF SWITCH*

19 HEATED SEAT SWITCHES*

Behind steering wheel

Behind shift lever

*See your Owner's Manual for information.

NEW SYSTEM FEATURES

USB/iPod® Interface (if so equipped) 2

ESSENTIAL INFORMATION

Tire Pressure Monitoring System (TPMS) 3
 Loose Fuel Cap 3
 Fuel-filler Door 4
 Wide Open Door (King Cab models only) 4
 Clock Set/Adjustment 4

FIRST DRIVE FEATURES

Remote Keyless Entry System (if so equipped) 5
 Opening the Tailgate 5
 Power Seat Adjustments (if so equipped) 5
 Automatic Drive Positioner (if so equipped) 6
 Outside Mirror Control Switch (if so equipped) 6
 Starting/Stopping the Engine 6
 Headlight Control Switch 7
 Windshield Wiper and Washer Switch 8
 Automatic Climate Controls (if so equipped) 8
 FM/AM/SiriusXM® Satellite Radio with CD Player (if so equipped) 10
 Cruise Control (if so equipped) 11
 Power Outlets (if so equipped) 11

SYSTEM GUIDE

Vehicle Information Display (if so equipped) 13
 Bluetooth® Hands-free Phone System (if so equipped) 13
 System Operating Tips 13
 Bluetooth® System without Navigation (if so equipped) 14
 Bluetooth® System with Navigation (if so equipped) 15
 Navigation System (if so equipped) 17
 Dual Head Restraint DVD System (if so equipped) 18
 HomeLink® Universal Transceiver (if so equipped) 19



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride properly secured in child restraints or seat belts according to their age and weight.
- Never install a rear-facing child restraint in the front seat of this vehicle.
- Do not drink and drive.

For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**”, “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” and the “**Starting and driving (section 5)**” of your Owner's Manual.



To view detailed instructional videos, go to www.nissanownersinfo.mobi/2014/titan or snap this barcode with an appropriate barcode reader.



Additional information about your vehicle is also available in your Owner's Manual, Navigation System Owner's Manual and at www.nissanusa.com.

NEW SYSTEM FEATURES

USB/iPod® INTERFACE (if so equipped)

- The USB input jack **01** is located in the center console under the arm rest.
- When a compatible USB memory device or iPod® is plugged into the USB jack, compatible audio files stored on the device can be played through the vehicle's audio system and front display.

For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.



ESSENTIAL INFORMATION

TIRE PRESSURE MONITORING SYSTEM (TPMS)

- A **CHECK TIRE PRESSURE** warning message will appear in the vehicle information display **01** and the low tire pressure warning light **02** will illuminate when one or more tires are low on pressure and air is needed.

- The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mile (1.6 km) at moderate speeds.

- After tire pressures are adjusted, drive the vehicle at speeds above 16 MPH (25 km/h). The **CHECK TIRE PRESSURE** warning message and the low tire pressure warning light will extinguish.

- When the low tire pressure warning light flashes for 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked by a NISSAN dealer.

- Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light to illuminate. If the warning light illuminates, check the tire pressure in your tires.

 
- Check the tire pressure (including the spare tire) often and always prior to long distance trips.

- The Tire and Loading Information label contains valuable information. Please refer to "Technical and consumer information (section 9)" in your Owner's Manual for the location of the Tire and Loading Information label.

For more information, refer to the "Instruments and controls (section 2)", the "Starting and driving (section 5)" and the "Maintenance and do-it-yourself (section 8)" of your Owner's Manual.

WARNING

CHECK
TIRE PRESSURE

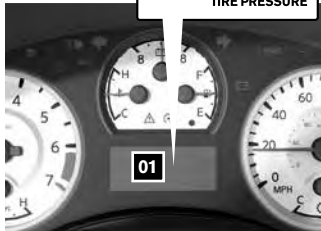


LOOSE FUEL CAP

 
- A **LOOSE FUEL CAP** warning message will display in the vehicle information display/odometer **01** when the fuel-filler cap is not tightened correctly.

- To tighten, turn the cap clockwise until a single click is heard.

- The warning message will disappear when the vehicle detects the fuel-filler cap is properly tightened and the reset button **02** is pressed for about 1 second.

- If the cap is not properly tightened, the Malfunction Indicator Light  may also illuminate.

For more information, refer to the "Instruments and controls (section 2)" and the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

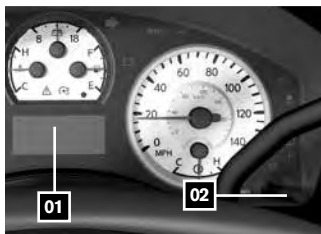

ESSENTIAL INFORMATION

FUEL-FILLER DOOR

- The fuel-filler door is located on the driver's side of the vehicle.
- To open the fuel-filler door, pull the lid open.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner's Manual.



WIDE OPEN DOOR (King Cab models only)

- Do not open the driver's side Wide Open Door to the full open position while the fuel-filler door is open; only open it as far as the first detent.
- Opening the door to the full open position may damage the fuel-filler door and Wide Open Door.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner's Manual.

CLOCK SET/ADJUSTMENT

- To adjust the time and the appearance of the clock on the display:

1. Press the **MENU** button **01**.
2. Touch the “Settings” key.
3. Touch the “System” key.
4. Touch the “Clock Settings” key.

- The following settings can be adjusted:

- **Time Format:** The clock can be set to 12 hours or 24 hours.
- **Date Format:** The date can be changed to one of 5 different formats.
- **Clock Mode:** From here, the clock mode options are:

- **Manual:** Allows for the option “Set Clock Manually”. Touch this to begin setting the clock manually using the “+” or “-” to adjust the hours and minutes up or down.

- **Time Zone:** Touch the “Time Zone” key **02** to choose from the applicable time zone list, and/or touch “Daylight Savings Time” to switch between on and off.

- **Auto:** Automatically sets the clock to the vehicles current location.

- Press the **BACK** button **03** to return to the previous screen.






For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner's Manual.

FIRST DRIVE FEATURES

REMOTE KEYLESS ENTRY SYSTEM (if so equipped)


The Remote Keyless Entry System allows you to lock or unlock your vehicle and turn on the interior lights.

- To lock the vehicle, press the  button on your key fob.
- To unlock the driver's door, press the  button on your key fob.
- Press the  button again within 5 seconds and all doors will unlock.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner's Manual.





OPENING THE TAILGATE

- Pull the tailgate handle  upward and lower the tailgate. Support cables hold the tailgate open.


For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner's Manual.



POWER SEAT ADJUSTMENTS (if so equipped)


- To slide the seat forward or backward, push the control switch  forward or backward.
- To adjust the angle of the seatback, push the switch  forward or backward.

SEAT LIFTER (if so equipped for driver's seat)

- To adjust the angle and height of the seat cushion, push the front or rear end of the switch  up or down.



MANUAL LUMBAR SUPPORT (if so equipped for driver's seat)

- To adjust the lumbar area, move the lever  up or down.

For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner's Manual.

FIRST DRIVE FEATURES

AUTOMATIC DRIVE POSITIONER (if so equipped)

- Two positions for the driver's seat, accelerator and brake pedals and outside mirrors can be stored in the automatic drive positioner memory.
- Follow these procedures to set the memory positions:
 - Confirm the shift lever is in the **P (PARK)** position.
 - Place the ignition switch in the **ON** position.
 - Adjust the driver's seat, accelerator and brake pedals and outside mirrors to the desired positions using the adjusting switches for each feature.
 - Push the **SET** switch and within 5 seconds, push the memory switch (**1** or **2**) for at least 1 second.
 - The indicator light on the memory switch you select will illuminate for approximately 5 seconds.
 - The driver's seat, accelerator and brake pedals and outside mirror positions are now set to your preference.
- These memorized positions can also be linked to your NISSAN Intelligent Key®.



For more information, refer to the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.

OUTSIDE MIRROR CONTROL SWITCH (if so equipped)

- The outside mirror control switch is located on the driver's side door panel.
- To select the left or right mirror, move the switch **01**.
- Adjust each mirror to the desired position using the switch **02**.
- To prevent accidentally moving the mirror, move this switch **01** to the center (neutral) position.



POWER FOLDING OUTSIDE MIRRORS (if so equipped)

- To open or close the mirrors, push the switch **03**.

For more information, refer to the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.

STARTING/STOPPING THE ENGINE

- Depress the brake pedal.
- Move the shift lever to the **P (PARK)** position.
- Turn the ignition switch to the **START** position.



 
 
TURNING THE ENGINE OFF

 
- Move the shift lever to the **P (PARK)** position, apply the parking brake and turn the ignition switch to the **LOCK** position.

For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

 
 
HEADLIGHT CONTROL SWITCH

HEADLIGHT CONTROL

 
- Turn the headlight control switch to the  position **01** to turn on the front parking, tail, license plate and instrument panel lights. Turn the switch to the  position **02** to turn on the headlights.

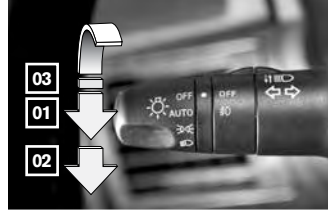

AUTOLIGHT SYSTEM (if so equipped)


 
- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **03** then turn the ignition switch to **ON**. To deactivate the autolight system, turn the headlight control switch to the **OFF**,  position **01** or  position **02**.

 
HIGH BEAM SELECT

- Push the headlight control switch forward **04** to select the high beam function. The blue indicator light  illuminates in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light will extinguish.
- Pull and release the headlight control switch **05** to flash the headlight high beams on and off.



FOG LIGHT SWITCH (if so equipped)

- The headlights must be on and the low beams  selected for the fog lights to operate.
- Turn the switch (inside collar) to the  position **06** to turn the fog lights on.
- Turn the switch (inside collar) to the **OFF** position to turn the fog lights off.

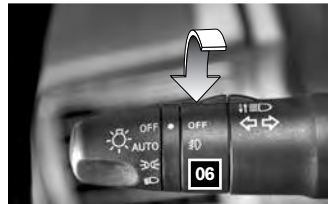


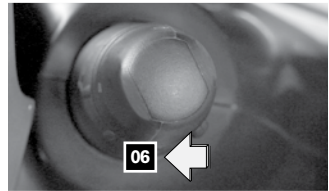 
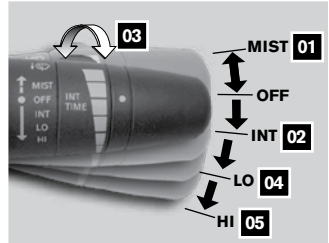 
For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

FIRST DRIVE FEATURES

 
WINDSHIELD WIPER AND WASHER SWITCH

- Move the lever to the following positions to operate the windshield wipers:

- 01** Mist (**MIST**) - One sweep operation of the wipers.
- 02** Intermittent (**INT**) - Wipers operate intermittently. The intermittent speed can be adjusted by twisting the time control ring **03** to increase or decrease wiper speed.
- 04** Low (**LO**) - Wipers operate at a continuous low-speed.
- 05** High (**HI**) - Wipers operate at a continuous high-speed.
- 06** Washer  - Pull the lever toward you to activate the washer. The wipers will operate several times.



For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

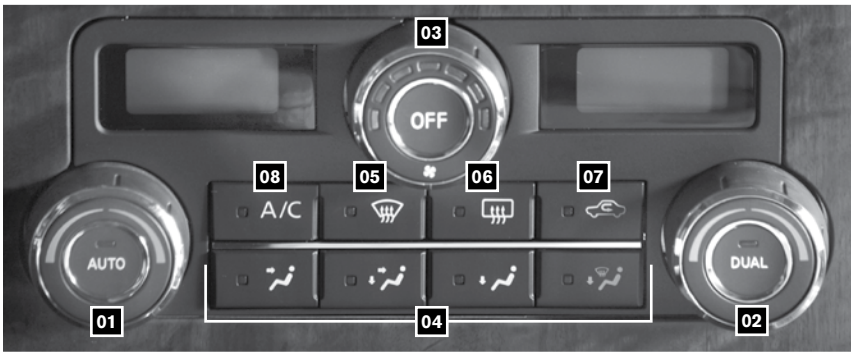

AUTOMATIC CLIMATE CONTROLS (if so equipped)

01 AUTO BUTTON/DRIVER’S SIDE TEMPERATURE CONTROL DIAL

- The auto mode may be used year-round. Press the **AUTO** button to turn the system on and the system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.
- Turn the driver’s side temperature control dial left for cooler air or right for warmer air.

02 DUAL BUTTON/PASSENGER’S SIDE TEMPERATURE CONTROL DIAL


 



- Press the passenger’s side **DUAL** control button to turn the passenger’s side temperature controls on or off. This will allow the passenger’s side temperature to be adjusted independently from the driver’s side.
- Turn the passenger’s side temperature control dial left for cooler air or right for warmer air.

03 FAN SPEED CONTROL DIAL/OFF BUTTON


- Turn the dial to the left to decrease fan speed or to the right to increase fan speed.
- Push the button to turn the system off.

04 AIR FLOW CONTROL BUTTONS

 
- Press the air flow control buttons to manually control air flow:

-  Air flows from the center and side vents.
-  Air flows from the center, side, and foot vents.
-  Air flows mainly from the foot vents.
-  Air flows from the defroster and foot vents.
-  Air flows from the defroster outlets.





05 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the front window defroster button  to turn the system on. The A/C automatically turns on when the defroster mode is selected. This feature removes humidity from the air.
- Set the temperature control dial **01** and the fan speed control dial **03** to their maximum settings.

06 REAR WINDOW AND OUTSIDE MIRROR (if so equipped) DEFROSTER SWITCH

- Push the rear window defroster switch  to turn the system on or off.
- The rear window defroster automatically turns off after approximately 15 minutes.

07 AIR RECIRCULATION BUTTON

- Press the air recirculation button  to recirculate air inside the vehicle. The indicator light on the button will illuminate. This system is used to avoid certain outside odors and helps to adjust the inside vehicle temperature more effectively.
- Press the air recirculation button  again to turn air recirculation off. This allows outside air to be drawn into the passenger compartment to prevent fogging in defrost, floor or defrost/floor modes.
- The air recirculation mode cannot be activated when the climate control system is in the front defroster mode  or the front defroster and foot vent mode .

08 A/C BUTTON

- Press the **A/C** button to manually turn the A/C on or off.

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

FIRST DRIVE FEATURES



FM/AM/SiriusXM[®]** SATELLITE RADIO WITH CD PLAYER (if so equipped)

01 VOL (volume) CONTROL KNOB/ON-OFF BUTTON

- To increase or decrease the volume, turn the **VOL** control knob right or left.
- To turn the system on or off, press the **ON-OFF** button.

02 TUNE KNOB/AUDIO CONTROL BUTTON

- To manually tune the radio, turn the **TUNE** knob left or right.
- Press the **AUDIO** button to go to the audio settings screen.

03 SEEK BUTTONS

- To tune and stop at the next or previous broadcast station, press the seek buttons **◀▶** or **▶▶**.
- For satellite radio, to switch to the first channel of the previous or next category, press the seek buttons **◀▶** or **▶▶**.
- To change tracks on a CD, press the seek buttons **◀▶** or **▶▶**.
- To fast forward or rewind a track on a CD, press and hold the seek buttons **◀▶** or **▶▶**.

04 STATION MEMORY KEYS

- Twelve stations can be set for the FM band, six for the AM band and eighteen for satellite radio.
- To store a station in a preset, you must first select a radio band by pressing the **FM-AM** button **05** or **(S)** button **06**, then tune to the desired AM, FM or XM satellite radio station.
- Now select and hold the desired station memory key (**1-6**) until a chime is heard and the preset number is updated on the display. Programing is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then select the corresponding station memory key (**1-6**).

*SiriusXM[®] Satellite Radio is only available on vehicles equipped with an optional satellite radio subscription service.

For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.

CRUISE CONTROL (if so equipped)

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 mph.
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **ON/OFF** switch **01**. The **CRUISE** indicator light in the vehicle information display will illuminate.
- To set cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **02** and release. The **SET** indicator light in the vehicle information display will illuminate. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **03**. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **02**. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, tap the brake pedal or push the **CANCEL** switch **04**.
- To turn off cruise control, push the **ON/OFF** switch **01**. Both the **CRUISE** indicator light and **SET** indicator light in the vehicle information display will turn off.

 


For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

POWER OUTLETS (if so equipped)

12V OUTLETS

- The 12 volt power outlets are for powering electrical accessories such as cellular telephones.
- The power outlets located on the driver’s side of the instrument panel **01** and in the center console arm rest **02** (if so equipped) are powered directly by the vehicle’s battery.

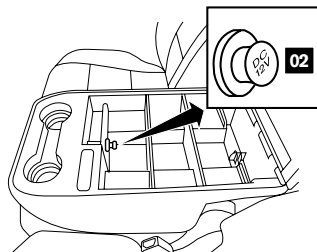

FIRST DRIVE FEATURES

- The power outlets located on the passenger's side of the instrument panel **03**, and in the 2nd row **04** (if so equipped) are powered only when the ignition switch is placed in the **ACC** or **ON** position.

- To use a power outlet, open the cap.

120V OUTLET (if so equipped)

- The 120 volt power outlets are for powering electrical devices up to 120 volts.
- The power outlets located in the truck box **05** and the center console **06** are powered directly by the vehicle's battery.
- For devices that require power of 120W or over, the vehicle must be placed in the **P (PARK)** position.
- For powering devices that exceed 120V, first activate the power inverter switch **07**.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.



SYSTEM GUIDE

VEHICLE INFORMATION DISPLAY (if so equipped)

- When the **INFO** button **01** is pressed, the following modes will appear in the vehicle information display **02**:
 - **MPG** – Displays the instant fuel economy.
 - **RANGE** – Displays the estimated distance the vehicle can be driven before refueling.
 - **WARNING** – Displays when a warning is present.
- Turn the **INFO** button to highlight the desired menu within the selected mode.
- Press the **INFO** button to enter the highlighted menu.




For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

 
 


BLUETOOTH® HANDS-FREE PHONE SYSTEM (if so equipped)

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation*.


 
SYSTEM OPERATING TIPS

- Press the  button to interrupt the voice prompts at any time and speak a command after the tone.
- To use the system faster, you may speak the second level commands with the main menu command on the main menu. For example, press the  button and after the tone say “Call Redial”.
- The “Help” command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing HVAC vents away from ceiling.
- Speak naturally without long pauses and without raising your voice.
- When speaking Phonebook names, please be aware some phones require the last name to be spoken before the first name. For example, “Michael Smith” may be spoken as “Smith Michael”.
- To cancel a voice recognition session, say “Cancel” or “Quit”, or press and hold the  button.

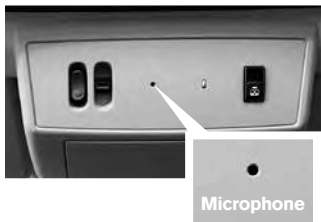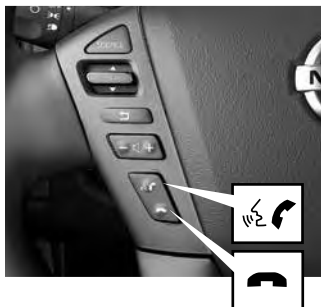


*Some jurisdictions prohibit the use of cellular telephones while driving.

SYSTEM GUIDE


- To increase or decrease the volume of the voice prompts, push the volume control switches  or  on the steering wheel or turn the volume control dial on the audio system while the system is responding.
- If the Voice Recognition system does not recognize your voice commands, train the system using the Speaker Adaptation Mode. See your Owner's Manual for detailed information.
- For more detailed information and instructions, refer to your cellular phone Owner's Manual and visit www.nissanusa.com/bluetooth.

BLUETOOTH® SYSTEM WITHOUT NAVIGATION* (if so equipped)

CONNECTING PROCEDURE

- The vehicle must be stationary when connecting the phone.
 1. Press the  button on the steering wheel. The system announces the available commands.
 2. Say: "Connect phone". The system acknowledges the command and announces the next set of available commands.
 3. Say: "Add phone". The system acknowledges the command and asks you to initiate connecting from the phone handset.
 4. Initiate connecting from the phone:
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and compatible phones, please visit www.nissanusa.com/bluetooth.
 - When prompted for a Passkey code, enter "1234" from the handset. (The Passkey code is assigned by NISSAN and cannot be changed.)
 5. Say a name for the phone when the system asks you to provide one. You can give the phone a name of your choice.


PHONEBOOK SETUP

- Depending on your cell phone, the system may automatically download your cell phone's entire phonebook to the vehicle's Bluetooth system.
- If the phonebook does not download automatically, 40 entries can be individually downloaded.
- To manually download entries:
 1. Push the  button on the steering wheel.
 2. After the tone, say "Phonebook".
 3. After the next tone, say "Transfer Entry". The system acknowledges the command and asks you to initiate the transfer from the phone handset. The new contact phone number will be transferred from the cellular phone to the vehicle.

 
*Some jurisdictions prohibit the use of cellular telephones while driving.

- The transfer procedure varies according to each cellular phone. See your cellular phone's owner's manual for details. You can also visit www.nissanusa.com/bluetooth for instructions on transferring phone numbers from NISSAN recommended cellular phones.
- 4. The system repeats the number and prompts you for the next command. When you have finished entering numbers or transferring an entry, choose "Store".
- 5. The system confirms the name, location and number.




MAKING A CALL FROM THE PHONEBOOK

- Names stored in all UPPERCASE letters may not be recognized correctly by the voice recognition system.
- 1. Press the  button.
- 2. After waiting for the tone, say "Call".
- 3. After the next tone, speak a name of a phonebook entry. For example "Michael Smith".
- 4. Confirm the correct name is recognized by saying "Dial" after the tone.

MAKING A CALL BY PHONE NUMBER

- 1. Press the  button. A tone will sound.
- 2. Say: "Call". The system acknowledges the command and announces the next set of available commands.
- 3. Say: "Phone Number". The system acknowledges the command and announces the next set of available commands.
- 4. Say the number you wish to call starting with the area code in single digit format.
- 5. When you have finished speaking the phone number, the system repeats it back and announces the available commands.
- 6. Say: "Dial". The system acknowledges the command and makes the call.

RECEIVING/ENDING A CALL

- When you receive a phone call, a ring tone sounds through the audio system.
- To accept the call, press the  button.
- To reject the call, press the  button.
- To hang-up the phone at the end of a call or to disconnect during call placement, press the  button.

BLUETOOTH® SYSTEM WITH NAVIGATION* (if so equipped)

- Send and receive predefined or custom text messages** through your vehicle's Bluetooth system.
- Bluetooth Streaming Audio allows you to use a compatible Bluetooth phone to play audio files on your device. Your compatible cellular phone can be connected to the vehicle's audio system allowing audio files to play through the vehicle's speakers.

*Some jurisdictions prohibit the use of cellular telephones while driving.

**Laws in some jurisdictions may restrict the use of "Text-to-Speech." Some applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features..

SYSTEM GUIDE

CONNECTING PROCEDURE

1. Press the **MENU** button on the control panel.
2. Select the "Settings" key **01**.
3. Select the "Phone & Bluetooth" key **02**.
4. Select the "Connect New Device" key **03**.
5. Initiate the connecting process from the handset. The system will display the message: "Is PIN XXXXXX displayed on your Bluetooth device?". If the PIN is displayed on your Bluetooth device, select "Yes" to complete the connecting process.



 
 
VEHICLE PHONEBOOK

To access the vehicle phonebook:

 

 

1. Press the **PHONE** button on the control panel.
2. Select the "Phonebook" key **04**.
3. Choose the desired entry from the displayed list.

MAKING A CALL

1. Press the **PHONE** button on the control panel. The "Phone" screen **05** will appear on the display.
2. Select one of the following options to make a call:
 - "Phonebook": Select the name from an entry stored in the vehicle phonebook.
 - "Call Lists": Select the name from the incoming, outgoing or missed call history.
 - "Redial": Dial the last outgoing call from the vehicle.
 - **PHONE**: Input the phone number manually using the keypad displayed on the screen.

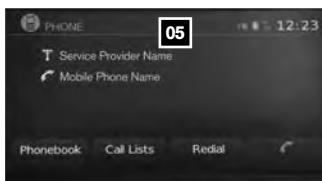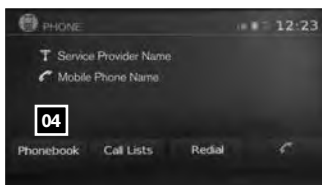

RECEIVING A CALL

- To accept the incoming call, either:
 - Press the  button on the steering wheel, or
 - Select the green  icon on the screen.
- To reject the incoming call, either:
 - Press the  button on the steering wheel, or
 - Select the red  icon on the screen.



For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual or visit www.nissanusa.com/bluetooth.






NAVIGATION SYSTEM (if so equipped)

- Your Navigation System can calculate a route from the current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle’s position. If you have deviated from the original route, it will recalculate the route from your current location.
- NissanConnect™ Apps integrates popular smartphone apps and services into your vehicle. NissanConnect™ Apps requires a subscription. Please visit www.nissanusa.com/connect for more information.
- Your Navigation System, along with POIs powered by Google™* (if so equipped), allows you to enter a destination using Google search results.
- Using Google™ Send-to-Car* (if so equipped) you can send a destination from Google Maps to your vehicle’s Navigation System.

- 01** **VOL** control knob – Rotate clockwise to increase the volume or counterclockwise to decrease the volume.

*An account must first be registered from the Info Services settings screen and a compatible Bluetooth® Hands-free phone and subscription service is required. Please visit www.nissanusa.com/bluetooth for compatible phone information.

 
SYSTEM GUIDE

- 02** **Voice** key – Select to repeat the voice guidance while a route is active. Select and hold to switch the voice guidance on and off.
- 03** **Options** key – Select to access features such as “Show Destination Information”, “Store Current Position”, “Show Position/GPS Information” and “Map Setup”.
- 04**  – Zoom in key – Select to zoom the map in.
- 05**  – Zoom out key – Select to zoom the map out.
- 06** **MAP** button – Press to display the current location map screen.
- 07** **NAV** button – Press to access the functions of the Navigation System.
- 08**  – Press to change the display brightness between day and night modes. While the mode is being displayed, the brightness can be adjusted using the **TUNE/AUDIO** knob. Press and hold to turn the display off. Press again to turn the display on.
- 09** **MENU** button – Press to access the system settings key.
- 10** **BACK** button – Press to return to the previous screen.
- 11** **TUNE** knob / **AUDIO** button – Turn to scroll through the items in a list. Press to select a menu item.

For more information, refer to your Navigation System Owner's Manual.

DUAL HEAD RESTRAINT DVD SYSTEM (if so equipped)

- With this Dual Head Restraint DVD System you can play video files via a DVD or CD, providing images and sound both from the front and rear display screens.
- You can also connect auxiliary devices such as video games, camcorders or portable video players to the auxiliary jacks **01** located on the back of the center console. (Your device will be controlled through its own control panel.)
- Rear Auxiliary Mode allows rear seat passengers to independently display different sources on each screen.
- Use the remote controller **02** provided with the system to operate the rear display screens.
- Use the headphones **03**, also provided with the system, to listen to audio wirelessly and independently. You may also connect your own wired-headphones to the headphone jacks **04** located on the back of the center console.

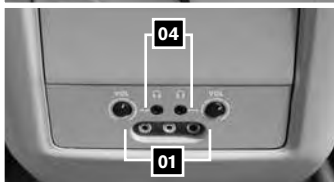

- For optimum performance, select the appropriate headphone channel **05** that corresponds to the headrest display being viewed directly in front of you.



- To watch or control videos on the front display make sure the vehicle is in the **P (PARK)** position and the parking brake is applied.
- To reduce driver distraction, the wireless headphones will not operate while located in the front seats and movies will not be shown on the front display while the vehicle is in any drive position.
- To access standard DVD controls on the front display while playing a DVD on the rear display, press the **DISC-AUX** button on the audio control panel while the vehicle is in the **P (PARK)** position and the parking brake is applied.

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.



HOMELINK® UNIVERSAL TRANSCEIVER (if so equipped)

- The HomeLink® Universal Transceiver can learn and consolidate the functions of up to 3 different hand-held transmitters, operating items such as garage doors, property gates, outdoor and indoor lights or alarm systems.
- To program the HomeLink® Universal Transceiver:
 - Position the handheld transceiver 1-3 in (26-76 mm) away from the HomeLink surface, keeping the HomeLink indicator light in view.
 - Press and hold the desired HomeLink button and the handheld transmitter button simultaneously until the HomeLink indicator light flashes slowly and then rapidly.
 - Both buttons may be released when the indicator light flashes rapidly.
- To verify the programing is complete, press and hold the HomeLink button and observe the indicator light:
 - A solid continuous light indicates the programing is complete and the HomeLink button will activate your device.
 - A blinking light that turns to a solid continuous light after 2 seconds indicates additional steps are required to complete the programing.

SYSTEM GUIDE

- An additional person may make the remaining steps easier. To complete the programming process:
 - At the receiver of the device that you are programming to the HomeLink system, press and release the learn or smart button (the name may vary by manufacturer, but it is usually located near where the hanging antenna wire is attached to the unit). You have approximately 30 seconds to initiate the following step.
 - Press and hold the programmed HomeLink button for 2 seconds and release.
- You may have to repeat the previous 2 steps up to 3 times to complete the programming process. HomeLink should now activate your device.

For more information, refer to the **"Instruments and controls (section 2)"** of your Owner's Manual, the HomeLink® website at www.homelink.com or call 1-800-355-3515.

MEMO

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. See your Owner's Manual, which contains important safety warnings and information about the operation and maintenance of your vehicle, for complete details. NISSAN North America, Inc. reserves the right to make changes, at any time, without prior notice, in prices, colors, materials, equipment, specifications, and models and to discontinue models or equipment. Due to continuous product development and other pre- and post-production factors, actual vehicle, materials and specifications may vary. Some vehicles are shown with optional equipment. See the actual vehicle for complete accuracy. Specifications, options and accessories may differ in Hawaii, U.S. territories and other countries. For additional information on availability, options or accessories, see your NISSAN dealer or contact NISSAN North America, Inc.



To view detailed instructional videos,
go to **www.nissanownersinfo.mobi/2014/titan**
or snap this barcode with an appropriate barcode reader.

