 


2016
TITAN
TITAN XD

QUICK REFERENCE GUIDE



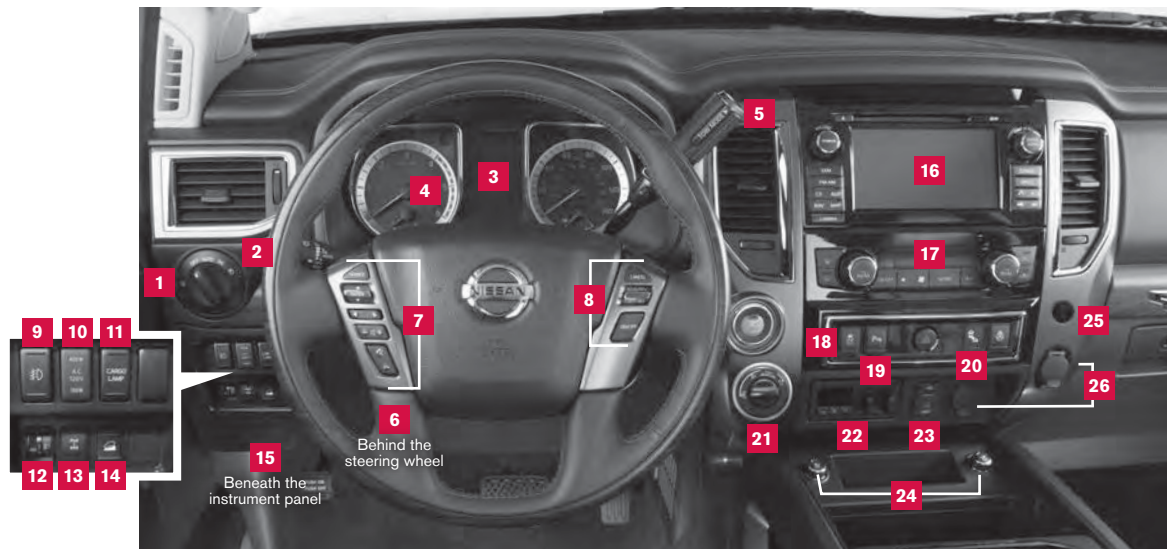

- | | | | |
|--|--|--|---|
| 1 Headlight Control Switch | 7 Steering Wheel Switches For Audio* / Bluetooth® / Siri® Eyes Free / Vehicle Information Display | 13 Electronic Locking Rear Differential (E-Lock) System Switch* | 19 Parking Sensor System Off Switch* |
| 2 Turn Signal / Wiper and Washer Switch | 8 Cruise Control | 14 Hill Descent Control | 20 Warning Systems Switch |
| 3 Vehicle Information Display | 9 Fog Light Switch | 15 Hood Release | 21 4WD Switch* |
| 4 Low Tire Pressure Warning Light / DEF Warning Light | 10 Power Inverter Switch | 16 Audio and Navigation System | 22 Trailer Brake Controller Unit |
| 5 Tow Mode Switch* | 11 Cargo Lamp Switch* | 17 Heater and Air Conditioner (automatic) | 23 USB Port / Aux Jack |
| 6 Steering Wheel Tilt Adjustment* | 12 Headlight Aiming Control* | 18 Vehicle Dynamic Control (VDC) OFF Switch* | 24 Heated and Cooled Seat Switches* |
| | | | 25 Front Passenger Air Bag Status Light* |
| | | | 26 12V Power Outlets |

*See your Owner's Manual for information.

TABLE OF CONTENTS

NEW SYSTEM FEATURES

NissanConnect SM Services (if so equipped)	2
Around View [®] Monitor (AVM) with Moving Object Detection (MOD) (if so equipped)	4
Hill Start Assist (HSA) and Hill Descent Control (HDC) (if so equipped)	5
Blind Spot Warning (BSW) with Rear Cross Traffic Alert (RCTA) (if so equipped)	6
Towing	7
Diesel Exhaust Fluid (DEF) (diesel models only)	8
Diesel Particulate Filter (DPF) (diesel models only)	8
Siri [®] Eyes Free (if so equipped)	9
SiriusXM Travel Link and SiriusXM Traffic (if so equipped)	9

ESSENTIAL INFORMATION

Tire Pressure Monitoring System (TPMS) with Easy Fill Tire Alert.	10
Loose Fuel Cap (gas engine models only)	11
Fuel-filler Door and Diesel Exhaust Fluid (DEF) Cap	11
Wide Open Door (King Cab models only)	11
Clock Set/Adjustment	12

FIRST DRIVE FEATURES

Nissan Intelligent Key [®] System	13
Opening the Tailgate	14
Power Seat Adjustments (if so equipped)	15
Rear Seats (if so equipped)	15
Outside Mirror Control Switch (if so equipped)	16
Automatic Drive Positioner (if so equipped)	17
Headlight Control Switch	17
Wiper and Washer Switch	18
Starting/Stopping the Engine	19
Heater and Air Conditioner (automatic) (if so equipped)	19
USB (Universal Serial Bus) Connection Port/Aux Jack and iPod [®] Interface (if so equipped)	21
FM/AM/SiriusXM [®] Satellite Radio with CD Player (if so equipped)	21
Cruise Control	22
Power Outlets	23

SYSTEM GUIDE

Vehicle Information Display	24
Hands-free Text Messaging Assistant (if so equipped)	25
NissanConnect SM Mobile Apps (if so equipped)	26
Bluetooth [®] Hands-free Phone System (if so equipped)	27
▪ System Operating Tips	27
Bluetooth [®] System without Navigation (if so equipped)	28
Bluetooth [®] System with Navigation (if so equipped)	29
NISSAN Mobile Entertainment System (MES) (if so equipped)	31
Navigation System (if so equipped)	33
HomeLink [®] Universal Transceiver (if so equipped)	34



Additional information about your vehicle is also available in your Owner's Manual, Navigation System Owner's Manual and at www.NissanUSA.com.



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)", the "Monitor, climate, audio, phone and voice recognition systems (section 4)" and the "Starting and driving (section 5)" of your Owner's Manual.

NEW SYSTEM FEATURES

NISSANCONNECTSM SERVICES¹ (if so equipped)

- NissanConnectSM Services combines personalized convenience and personal security features, adding innovation to your daily drive. Your vehicle will connect to the NissanConnect Services Data Center and NissanConnect Services Response Center using the TCU (Telematics Control Unit) installed in your vehicle. For more details on NissanConnect Services or to enroll your vehicle, please visit www.NissanUSA.com/connect or call 855-426-6628.


Available services include:

- Automatic Collision Notification – In the event of an air bag deployment, vehicle information is sent to the emergency response center. The Emergency Response Agent attempts to contact the vehicle's occupant and sends appropriate emergency services.



- Emergency Call – This service provides emergency assistance by connecting the subscriber to a NissanConnect Services Specialist.
 - In case of an emergency, press the in-vehicle telematics **SOS** button **1**.
 - A Response Specialist will provide assistance based on the situation described by the vehicle's occupant.

- Roadside Assistance – Roadside Assistance can be accessed by:

1. In-vehicle menu (headset button  on the map screen)
2. NissanConnect Services companion app
3. Calling the Roadside Assistance Provider directly



- This service allows subscribers to receive assistance for a non-emergency incident, such as towing, or a third party response.
- In-vehicle Messaging – Enables NISSAN to send service reminders, marketing, renewal and other messages to subscribers directly into the vehicle.
- Vehicle Health Report – Get a monthly overview of your vehicle's overall health delivered to your email.
- Dealer Service Scheduling – Provides the subscriber with information and a mechanism to allow him or her to contact a Nissan dealer to schedule service for the vehicle.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

- **Stolen Vehicle Locator** – A Response Specialist will attempt to obtain location information from a reported stolen vehicle and provide that information to local law enforcement agencies to assist in the recovery of your stolen vehicle.
- **Remote Door Lock/Unlock** – Remotely access your vehicle via a NissanConnect Services Response Specialist, the NissanConnect Services companion app or website to remotely lock or unlock your vehicle.
- **Remote Engine Start** – Start your engine remotely using the NissanConnect Services companion app or website.
- **Remote Sound Horn and Flash Lights** – Sound the horn and flash the lights remotely using the NissanConnect Services companion app or website.
- **Alarm Notification** – This system will notify you when the factory-installed vehicle alarm system has been activated.
- **Maintenance Alert** – Receive notifications via a selected method of a vehicle system malfunction that triggers instrument panel warning lights.
- **Connected Search** – Select “Connected Search” from the Destination menu on the vehicle’s Navigation System to conduct a Point Of Interest (POI) search within a certain distance of the vehicle’s location.
- **Assisted Search** – Allows the subscriber to verbally request POI destination data from a live operator.
- **Destination Download** – Use the NissanConnect Services companion app or website to search for and send destinations directly to the vehicle.
- **Journey Planner** – Send a route with up to five waypoints and a destination directly to the vehicle.
- **Boundary Alert** – Monitor the movement of your vehicle within a specified region. Set up boundaries in the Monitoring section of the NissanConnect Services web portal.
- **Speed Alert** – Set up a maximum speed on the NissanConnect Services web portal. You will receive notifications if your vehicle exceeds the maximum speed setting.
- **Account Management** – Speak with a live Agent regarding your NissanConnect Services account.
- **Curfew Alert** – Specify curfew limits via the NissanConnect Services companion app or website and be notified via a selected method if curfew is violated.

¹ Only use NissanConnectSM Services powered by SiriusXM[®] and NissanConnectSM Mobile Apps when safe to do so. NissanConnectSM Services and Mobile Apps availability is dependent on vehicle model, trim level, packaging, and/or options. See www.NissanUSA.com/connect for complete product and service availability details. Late availability for some features. Compatible smartphone required to operate NissanConnectSM Mobile Apps. Services require an operating vehicle device and cellular and GPS coverage. Cellular network and GPS signals are not available in all areas and/or at all times. Neither NISSAN nor SiriusXM are responsible for associated costs, if any, for continued operation due to cellular network termination/changes. Cellular provider may terminate/restrict service without notice. Certain services require a PIN for activation. Applicable Subscription Agreement required. See www.NissanUSA.com/connect for details and service limitations. Enrollment is required to receive the full suite of services. Text rates and/or data usage may apply.

For more information, refer to the “**Information (section 5)**” of your Navigation System Owner’s Manual.

NEW SYSTEM FEATURES

AROUND VIEW® MONITOR (AVM) WITH MOVING OBJECT DETECTION (MOD) (if so equipped)

- With the ignition switch in the ON position, the Around View® Monitor is activated by pressing the **CAMERA** button **1**, located on the control panel, or by moving the shift lever to the **R (REVERSE)** position. The monitor displays various views of the position of the vehicle.

 


- When the shift lever is in the **P (PARK)**, **N (NEUTRAL)** or **D (DRIVE)** position and the **CAMERA** button **1** is pressed, the following views will display in order:

Start from any Control Panel screen



Press



Front view & bird's-eye view



Press



Front view & front-side view



Press



- When the shift lever is in the **R (REVERSE)** position and the **CAMERA** button **1** is pressed, the following views will display in order:

Rear view & bird's-eye view



 
Press




Rear view & front-side view




Press



Full-screen rear view

 


Press

 

- The colored guide lines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line.
 - Red 1.5 ft (0.5 m); Yellow 3 ft (1 m); Green 7 ft (2 m) and 10 ft (3 m).

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

 - When the vehicle's outside mirrors are extended for towing, you may see the mirrors in the bird's-eye view or the front-side view.
- For information regarding how to access additional viewing cycles, please see your Owner's Manual.
- There are some areas where the system will not detect objects.
 - When in the front or the rear view display, an object below the bumper or on the ground may not be detected **2**.
 - When in the bird's-eye view, a tall object near the seams of the camera detecting areas **3** will not appear in the monitor.
 - The distance between objects viewed on the Around View Monitor differs from the actual distance.
- Objects in the bird's-eye view will appear further than the actual distance.

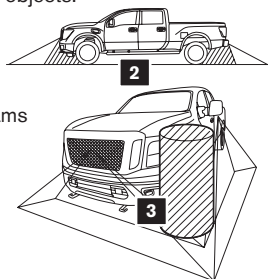

MOVING OBJECT DETECTION (MOD) (if so equipped)

- The MOD system helps inform the driver of moving objects around the vehicle.
- The system will operate when the shift lever is in the **D (DRIVE)**, **N (NEUTRAL)**, **R (REVERSE)**, or **P (PARK)** position and the vehicle is driven at speeds of approximately 5 mph (8 km/h) or less.
- If the MOD system detects moving objects, a yellow frame will be displayed on the camera image.
- When the following is displayed:
 - Blue **MOD** icon **4**; the system is active.
 - Gray **MOD** icon; the system is not active.
 - No **MOD** icon; the system is off. The indicator will also be off if all of the warning systems are deactivated using the Settings menu.



For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

HILL START ASSIST (HSA) AND HILL DESCENT CONTROL (HDC) (if so equipped)

HILL START ASSIST (HSA)

The HSA system allows time for the driver to release the brake pedal and apply the accelerator when the vehicle is parked on a hill. The brakes are applied automatically for 2 seconds after the driver releases the brake pedal.

- The HSA system will operate automatically under these conditions:
 - The shift lever is shifted into a forward or a reverse gear.
 - The vehicle is stopped completely on a hill by applying the brake.
- The HSA system will not operate when the shift lever is in the **N (NEUTRAL)** or **P (PARK)** position or when the vehicle is on a flat and level road.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

NEW SYSTEM FEATURES

HILL DESCENT CONTROL (HDC) (if so equipped)

- The HDC system is designed to apply the brakes to help control the speed of the vehicle and reduce the workload of the driver while descending steep hills. To activate the system:
 - The HDC switch **1** must be on. To deactivate the HDC system, push the HDC switch **1** to the OFF position.
 - The vehicle must be in 4H (4WD) mode.
 - The shift lever must be in a forward or a reverse gear.
 - The HDC system operates at speeds of 15 mph (25 km/h) or less.



For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

BLIND SPOT WARNING (BSW) WITH REAR CROSS TRAFFIC ALERT (RCTA)* (if so equipped)

- The BSW helps to alert the driver when another vehicle moves into the vehicle’s detection zone.
- An indicator light located on the outside mirrors **1** will illuminate if the radar sensors detect a vehicle in the detection zone.
- Push the warning systems switch **2** to temporarily turn the system off. When the system is off, the indicator light **3** on the switch and the indicator light **4** in the vehicle information display will extinguish.
- The indicator light **3** will also be off if all of the warning systems are deactivated using the Setting menu.
- The indicator lights **3** and **4** will illuminate after the ignition switch is ON and the BSW system is enabled. This indicates that the BSW system is operational.
- The RCTA system helps to alert the driver of an approaching vehicle when the driver is backing out of a parking space. The system operates when the shift lever is in the **R (REVERSE)** position and the vehicle speed is less than approximately 5 mph (8 km/h).
- The radar sensors detect an approaching vehicle from up to 66 ft (20 m). The sensors are located on both sides of the vehicle’s near the rear and front bumpers. The system gives visual and audible warnings if an approaching vehicle is detected.



For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

TOWING

TRAILER BRAKE CONTROLLER UNIT (if so equipped)

The Trailer Brake Controller Unit will assist with effective and smooth braking while towing a trailer.

■ Operating Modes

- Automatic: Automatic operation of trailer brake pressure based on gain and boost settings
- Manual: Manually applies trailer brake pressure without pressing the vehicle brake pedal

■ In automatic mode, the gain controls the amount of trailer braking pressure. To set the gain:

- Press the **-** or **+** button **1** to decrease or increase the braking force supplied to the trailer brakes. For example, a gain setting of 6.0 is a typical starting point for heavy loads.



■ In automatic mode, the boost can be set to change the feel of the trailer brake when the vehicle's brake pedal is pressed. To set the boost:

- Press the **gear icon** button **2** once to display the current boost setting.
- Press the **gear icon** button **2** again to increase the boost level or continue to press the **gear icon** button **2** to return boost to OFF.

■ To manually apply brake pressure to the trailer without pushing the vehicle's brake pedal, pinch the manual control levers **3** together. The amount of pinch pressure applied to the levers will correlate to the amount of brake pressure applied.

TRAILER LIGHT CHECKING (if so equipped)

Your Nissan Intelligent Key® can be used to check the trailer lights from outside the vehicle. If your vehicle is equipped with a three-button key fob, this feature operates in the same manner.

1. Aim the Intelligent Key at the vehicle.
2. Press and release the **lock** button **4**.
3. Within 2 seconds, press the **lock** button **4** again and hold it until the horn beeps once and the parking lights turn on.



The trailer light check will follow the following sequence:

- The left turn light on the vehicle and trailer will flash for 5 seconds.
- The right turn light on the vehicle and trailer will flash for 5 seconds.
- The brake lights on the vehicle and trailer will turn on for 5 seconds.

NEW SYSTEM FEATURES


GOOSENECK HITCH (if so equipped)

- The integrated gooseneck hitch is located in the center of the vehicle bed **5**.
- For installation instructions and towing information, refer to the “Starting and driving (section 5)” and the “Technical and consumer information (section 10)” of your Owner’s Manual.



For more information, refer to the “**Instruments and controls (section 2)**”, the “**Pre-driving checks and adjustments (section 3)**” and the “**Technical and consumer information (section 10)**” of your Owner’s Manual.

DIESEL EXHAUST FLUID (DEF) (diesel models only)

 

- A **DEF Low** message will appear in the vehicle information display **1** and the  warning light **2** will illuminate if the DEF is low and needs to be topped off.
- If the fluid is contaminated, it will need to be replaced.




For more information, refer to the “**Instrument panel (section 2)**” and the “**Fuel and refueling (section 4)**” of your Titan Diesel Owner’s Manual.




DIESEL PARTICULATE FILTER (DPF) (diesel models only)

- An **Exhaust Filter Overloaded** message will appear in the vehicle information display **1** and the  warning light **2** will illuminate if the particulate matter has accumulated in the DPF to the specified limit.
- As soon as safely possible, drive the vehicle at a speed greater than 55 mph (89 km/h) for at least 45 minutes.
- If the  warning light **2** is blinking, refer to the “Do-it-yourself (section 6)” of your Titan Diesel Owner’s Manual.

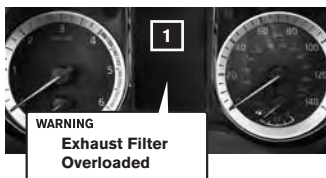 

For more information, refer to the “**Instrument panel (section 2)**” and the “**Do-it-yourself (section 6)**” of your Titan Diesel Owner’s Manual.

SIRI® EYES FREE¹ (if so equipped)

- If you have a compatible iPhone®² with Siri®, you can link your iPhone® to the Siri® Eyes Free function in your vehicle's Bluetooth®³ system.
- If you have a compatible iPhone® connected to the system, press and hold the  button **1** on the steering wheel for a few seconds and Siri will be activated in Eyes Free mode.



¹ Siri® is a trademark of Apple Inc., registered in the U.S. and other countries.

² iPhone is a registered trademark of Apple, Inc. All rights reserved. iPhone not included.

³ Availability of specific features is dependent upon the phone's Bluetooth® support. Please refer to your phone owner's manual for details. Bluetooth® word mark and logos are owned by Bluetooth SIG, Inc., and any use of such marks by NISSAN is under license. See www.NissanUSA.com/bluetooth for details.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual and visit www.NissanUSA.com/bluetooth.

SiriusXM TRAVEL LINK* AND SiriusXM TRAFFIC* (if so equipped)

- Your vehicle's Navigation System is equipped with SiriusXM Travel Link and SiriusXM Traffic capabilities.
- SiriusXM Travel Link provides access to real-time weather information and forecasts, nearby fuel prices, movie listings, sports scores and stock quotes.
- SiriusXM Traffic provides information that may help to avoid delays due to traffic incidents. Traffic jams, roadwork, road closures around the current location, etc., are represented graphically on the map by icons depicting the nature of the event. Incidents on the route are automatically displayed as they are approached.



*These features, SiriusXM® Satellite Radio, Travel Link and Traffic, require an active subscription. Multiple subscriptions may be necessary to activate the various features.

For more information, refer to the "**Navigation (section 4)**" and the "**General system information (section 6)**" of your Navigation System Owner's Manual.

ESSENTIAL INFORMATION

TIRE PRESSURE MONITORING SYSTEM (TPMS) WITH EASY FILL TIRE ALERT

- A **Tire Pressure Low Add Air** warning message will appear in the vehicle information display **1** and the low tire pressure warning light **2** will illuminate when one or more tires are low in pressure and air is needed.



- The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mi (1.6 km) at moderate speeds.

- After tire pressures are adjusted, drive the vehicle at speeds above 16 mph (25 km/h). The **Tire Pressure Low Add Air** warning message and low tire pressure warning light **2** will extinguish.
- In addition to the **Tire Pressure Low Add Air** warning message, you can view the individual tire's pressure in the vehicle information display as well as the recommended pressure, denoted by blue lettering, for each tire.
- When adding air to an under-inflated tire, the TPMS with Easy Fill Tire Alert provides visual and audible signals to help you inflate the tire to the recommended COLD tire pressure.




To use the Easy Fill Tire Alert:

 
1. Move the shift lever to the **P (PARK)** position and apply the parking brake.
 2. Place the ignition switch in the ON position. Do not start the engine.
 3. Add air to the under-inflated tire, and within a few seconds, the hazard warning lights will start flashing.
 4. When the designated tire pressure is reached, the horn will beep once and the hazard warning flashers will stop flashing.
 5. Repeat this procedure for any additional under-inflated tires.
- When the low tire pressure warning light **2** flashes for 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked. It is recommended you visit a Nissan dealer for this service.
 - Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light **2** to illuminate. If the warning light illuminates, check the tire pressure in your tires.
 - Check the tire pressure (including the spare tire) often and always prior to long distance trips.
 - The Tire and Loading Information label contains valuable information. Refer to the "Technical and consumer information (section 10)" of your Owner's Manual for the location of the Tire and Loading Information label.

For more information, refer to the "**Instruments and controls (section 2)**", the "**Starting and driving (section 5)**" and the "**Do-it-yourself (section 8)**" of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

LOOSE FUEL CAP (gas engine models only)

- A **LOOSE FUEL CAP** warning message will display in the vehicle information display/odometer **1** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- If the cap is not properly tightened, the Malfunction Indicator Light  may also illuminate.

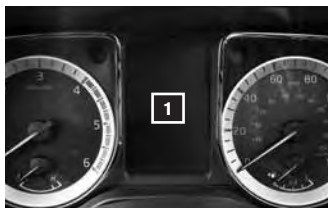

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

FUEL-FILLER DOOR AND DIESEL EXHAUST FLUID (DEF) CAP

- The fuel-filler door **1** is located on the driver’s side of the vehicle.
- To open the fuel-filler door, pull the lid open.

DEF CAP (diesel models only)

- The DEF cap **2** is located next to the fuel cap behind the fuel-filler door **1**.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual and the “**Fuel and refueling (section 4)**” of your Titan Diesel Owner’s Manual.



WIDE OPEN DOOR (King Cab models only)

- Do not open the driver’s side Wide Open Door to the fully open position while the fuel-filler door is open; only open it as far as the first detent.
- Opening the door to the fully open position may damage the fuel-filler door and the Wide Open Door.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

ESSENTIAL INFORMATION

CLOCK SET/ADJUSTMENT

WITHOUT NAVIGATION (if so equipped)

1. Press the **ENTER/SETTING** button **1** to show the “Settings” screen on the display.
2. Turn the **TUNE-SCROLL** knob **2** to highlight “Clock Adjust”.
3. Press the **ENTER/SETTING** button **1** to highlight the hours, minutes or AM/PM and use the **TUNE-SCROLL** knob **2** to adjust the value.
4. Press the **ENTER/SETTING** button **1** to set the value.
5. Press the **BACK** button **3** to return to the previous screen.



WITH NAVIGATION (if so equipped)

 
- To adjust the time and the appearance of the clock on the display:

1. Press the **APPS** button **4**.
2. Touch the “Settings” key.
3. Touch the “System” key.
4. Touch the “Clock/Date” key.



- The following settings can be adjusted:

- **Time Format:** The clock can be set to 12 hours or 24 hours.
- **Date Format:** The date can be changed to one of two different formats.
- **Clock Mode:** From here, the clock mode options are:
 - **Manual:** Allows for the option “Set Clock/Date Manually”. Touch this to begin setting the clock manually using the “+” or “-” to adjust the hours, minutes, day and month up or down.
 - **Time Zone:** Touch the “Time Zone” key **5** to choose from the applicable time zone list and/or touch the “Daylight Savings Time” key to switch between on and off.
 - **Auto:** Automatically sets the clock to the vehicle’s current location.

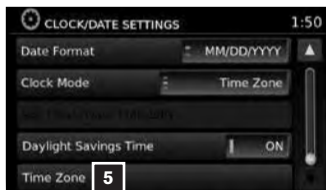

- Press the **BACK** button **6** to return to the previous screen.

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

FIRST DRIVE FEATURES

NISSAN INTELLIGENT KEY® SYSTEM

The Nissan Intelligent Key® system allows you to lock or unlock the vehicle and start the engine. It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).



- The operating range of the Intelligent Key is within 31.5 in (80 cm) of the corresponding request switch.

- To lock the vehicle, push either door handle request switch **1** (if so equipped) or press the **i** button **2** on the key fob.



- To unlock the vehicle, perform one of the following procedures:
 - Push either door handle request switch **1** (if so equipped) once and the corresponding door will unlock. Push the request switch **1** (if so equipped) again within 5 seconds; all other doors will unlock, or
 - Press the **i** button **3** on the key fob to unlock the driver's side door. Press the **i** button **3** again; all other doors will unlock.
- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the **▶** button **4** for more than 1 second. Once activated, the panic alarm and headlights will stay on for a period of time.

INTELLIGENT KEY BATTERY DISCHARGE

- If the battery of the Intelligent Key is discharged or environmental conditions interfere with the Intelligent Key operation, start the engine according to the following procedure:



1. Move the shift lever to the **P (PARK)** position.
2. Firmly apply the foot brake.
3. Touch the ignition switch with the Intelligent Key, and a chime will sound.
4. Within 10 seconds after the chime sounds, press the ignition switch **START/STOP** button while depressing the brake pedal and the engine will start.

REMOTE ENGINE START* (if so equipped)

- The remote start operating range is approximately 200 ft (60 m) from the vehicle. The effective operating range may be shorter if there are walls, strong radio wave sources near the operating location or other obstructions between the key and the vehicle.
- For the remote start to function, the vehicle must be in the **P (PARK)** position with the ignition off and all of the doors must be closed and locked. Please see your Owner's Manual for additional information.

*State laws may apply; review local laws before using.

FIRST DRIVE FEATURES

- To start your vehicle remotely:
 1. Press the **1** button **2** to lock all of the doors.
 2. Within 5 seconds, press and hold the engine start  button **5** for at least 2 seconds.
- The engine will start, and the parking lights will turn on.
- While the remote start feature is being used, the manual or automatic climate control system will default to the last used heating or cooling mode.
- The engine will run for 10 minutes and then turn off.
- Repeat steps 1 through 2 to extend the time for an additional 10-minute period. Remote start can only be activated for a maximum of 20 minutes.
 - After two remote starts, the ignition switch must be cycled before the remote start can be used again.
 - To cancel remote start, press the engine start  button **5**.
- To start driving, depress the brake pedal and press the ignition switch **START/STOP** button.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” and the “**Starting and driving (section 5)**” of your Owner’s Manual.

OPENING THE TAILGATE

- Pull the tailgate handle **1** upward and lower the tailgate. Support cables hold the tailgate open.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

 


POWER SEAT ADJUSTMENTS (if so equipped)

- To slide the seat forward or backward, push the switch **1** forward or backward.
- To adjust the angle of the seatback, push the switch **2** forward or backward.

SEAT LIFTER (driver's seat)

- To adjust the angle and height of the seat cushion, push the front or rear end of the switch **1** up or down.

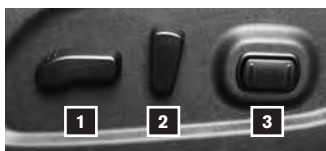

POWER LUMBAR SUPPORT (driver's seat)

- To adjust the lumbar area, push the front or back end of the switch **3**.

For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.

REAR SEATS (if so equipped)

- To access the under seat storage (if so equipped):

- Pull up the bottom of the seat toward the rear of the vehicle to fold the seat.
- Lift the flat floor panels **1** toward the seat.



- When not in use, the storage bin’s cover may be locked.

- To use the flat floor feature (if so equipped):

- Pull up the bottom of the seat toward the rear of the vehicle to fold the seat.
- Pull the handle **2** of the smaller top panel toward the rear of the vehicle.
- Pull the flat floor panels **3** up and toward the front seats to fully unfold them and place them on the floor.



- Up to 247 lbs (112 kg) of cargo can be attached to the flat floor panels using bungee cords. Only use bungee cords rated at the appropriate strength.



For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.



FIRST DRIVE FEATURES

OUTSIDE MIRROR CONTROL SWITCH (if so equipped)

- The outside mirror control switch is located on the driver's side door panel.
- To select the left or right mirror, turn the knob **1** to select the desired mirror.
- Adjust each mirror to the desired position by pushing the side of the knob **1** up, down, left, or right.



REVERSE TILT-DOWN FEATURE (if so equipped)

- The reverse tilt-down feature will turn both outside mirror surfaces downward to provide better rear visibility close to the vehicle.
 1. Apply the brake.
 2. Push the ignition switch to the ON position.
 3. Move the shift lever to the **R (REVERSE)** position.
 4. Both outside mirror surfaces will turn downward. (The mirror control switch **1** must be out of the center [neutral] position.)
- The outside mirror surfaces will return to their original positions when one of the following conditions occurs:
 - The shift lever is moved to any position other than **R (REVERSE)**.
 - The outside mirror control switch **1** is set to the center (neutral) position.
 - The ignition switch is pushed to the OFF position.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

AUTOMATIC DRIVE POSITIONER (if so equipped)

- Two positions for the driver's seat, steering column and outside mirrors can be stored in the automatic drive positioner memory.
- Follow this procedure to set the memory positions:
 - Confirm that the shift lever is in the **P (PARK)** position.
 - Place the ignition switch in the ON or ACC position.
 - Adjust the driver's seat, steering column and outside mirrors to the desired positions using the adjusting switches for each feature.
 - Push the **SET** switch, and within 5 seconds, push the memory switch (**1** or **2**) for at least 1 second.
 - The indicator light on the memory switch you select will illuminate for approximately 5 seconds.
 - The driver's seat, steering column and outside mirror positions are now set to your preferences.
- These memorized positions can also be linked to your Nissan Intelligent Key®. To link a memorized position to your Nissan Intelligent Key®, press the unlock button on the key fob after completing the previous step.



For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner's Manual.

HEADLIGHT CONTROL SWITCH

- Turn the headlight control switch to the DDD position **1** to turn on the front parking, tail, license plate and instrument panel lights.
- Turn the control switch to the D position **2** to turn on the headlights.



AUTOLIGHT SYSTEM (if so equipped)

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all the doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **3** then push the ignition switch to ON. To deactivate the autolight system, turn the headlight control switch to the **OFF** position **4**, DDD position **1** or D position **2**.



FIRST DRIVE FEATURES

HIGH BEAM SELECT

- With the headlights on (either in the **AUTO** or \equiv position), push the lever forward **5** to select the high beam function. The blue indicator light \equiv will illuminate in the instrument panel. Pull the lever back to the original position to select the low beam function and the blue indicator light will extinguish.
- Pull and release the lever **6** to flash the headlight high beams on and off.

FOG LIGHT SWITCH (if so equipped)

- The headlights must be on and the low beams selected for the fog lights to operate.
- Push the $\#D$ switch **7** to turn the fog lights on.
- To turn them off, push the $\#D$ switch **7** again.
- The fog lights will turn off if the headlights are turned off.



LANE CHANGE SIGNAL

- Move the lever up or down until the turn signal begins to flash but the lever does not latch to signal a lane change. Hold the lever until the lane change is completed.
- Move the lever up or down until the turn signal begins to flash but the lever does not latch and release the lever. The turn signal will automatically flash three times.

Choose the appropriate method to signal a lane change based on the road and traffic conditions.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

WIPER AND WASHER SWITCH

- Rotate the control ring to one of the following positions to operate the windshield wipers:

- 1** Mist (**MIST**) – One sweep operation of the wipers.
- 2** Auto (**AUTO**) (if so equipped) – Operates the rain-sensing wipers intermittently. The intermittent speed can be adjusted by rotating the control ring to increase or decrease wiper sensitivity.
- 3** Low (**LO**) – Wipers operate at a continuous low-speed.
- 4** High (**HI**) – Wipers operate at a continuous high-speed.
- 5** To activate the washer, press the button on the end of the lever. The wipers will operate several times.



For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

STARTING/STOPPING THE ENGINE

- It is important to make sure the Nissan Intelligent Key® is with you (that is, in your pocket or purse).
- Depress the brake pedal.
- Press the ignition switch **START/STOP** button to start the engine.

 


TURNING THE ENGINE OFF


- Move the shift lever to the **P (PARK)** position.
- Press the ignition switch **START/STOP** button to turn the engine off.

START HESITATION (diesel models only)

- The starter for diesel models is designed to not engage until the glow plugs have had sufficient time to warm up.
- If the glow plugs need to warm up, the **Engine Warming – Keep Foot on Brake** message will appear in the vehicle information display **1** when the ignition switch is pushed to the ON position.
- Keep the brake pedal depressed and wait until the **Engine Warming – Keep Foot on Brake** message extinguishes.
- During cold weather, the glow plugs may need approximately 4 seconds to warm up.
- Refer to the “Starting and stopping the engine (section 3)” of your Titan Diesel Owner’s Manual for important information on starting and stopping the diesel engine.

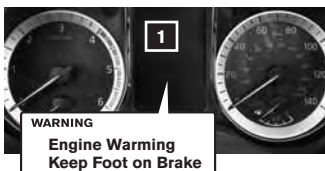

 For more information, refer to the “Starting and driving (section 5)” of your Owner’s Manual, the “Instrument panel (section 2)” and the “Starting and stopping the engine (section 3)” of your Titan Diesel Owner’s Manual.

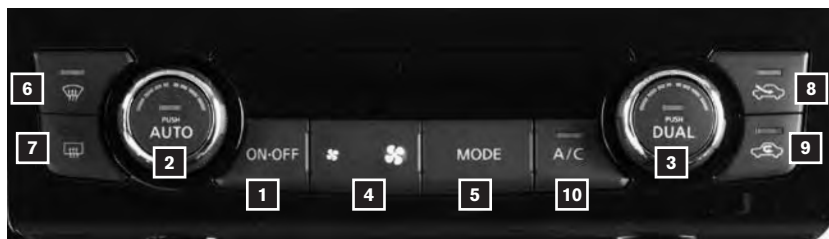

HEATER AND AIR CONDITIONER (automatic) (if so equipped)

1 ON-OFF BUTTON

- Press the **ON-OFF** button to turn the system on or off.

2 AUTO BUTTON/DRIVER’S SIDE TEMPERATURE CONTROL DIAL

- The automatic mode may be used year-round. Press the **AUTO** button to turn the automatic mode on, and the system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.
- Turn the driver’s side temperature control dial left for cooler air or right for warmer air.

FIRST DRIVE FEATURES

3 DUAL BUTTON/PASSENGER'S SIDE TEMPERATURE CONTROL DIAL

- Press the **DUAL** button to turn the passenger's side temperature controls on or off. This will allow the passenger's side temperature to be adjusted independently from the driver's side.
- Turn the passenger's side temperature control dial left for cooler air or right for warmer air.

4 FAN SPEED CONTROL BUTTON

- Press the  side or  side of the button to decrease or increase the fan speed.

5 MODE BUTTON

- Press the **MODE** button to manually control air flow.



Air flows from the center and side vents.



Air flows from the center, side and foot vents.




Air flows mainly from the foot vents.




Air flows from the front defroster and foot vents.


6 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the front defroster button  to turn the system on. The A/C automatically turns on when the front defroster mode is selected. This feature removes humidity from the air.
- Set the temperature control dial **2** and the fan speed control button **4** to their maximum settings.




7 REAR WINDOW AND/OR OUTSIDE MIRROR DEFROSTER SWITCH (if so equipped)

- Push the rear window defroster switch  to turn the system on or off.
- The rear window defroster automatically turns off after approximately 15 minutes.

8 FRESH AIR INTAKE CONTROL BUTTON

- Press the fresh air intake control button  to draw outside air into the passenger compartment. The indicator light on the button will illuminate.

9 AIR RECIRCULATION BUTTON

- Press the air recirculation button  to recirculate air inside the vehicle. The indicator light on the button will illuminate. This system is used to avoid certain outside odors and to help adjust the inside vehicle temperature more effectively.
- Press the air recirculation button  again to turn air recirculation off. This allows outside air to be drawn into the passenger compartment to prevent fogging in the front defroster, floor or front defroster/floor mode.
- The air recirculation mode cannot be activated when the climate control system is in the front defroster mode .

10 A/C BUTTON

- Press the **A/C** button to manually turn the A/C on or off.

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner's Manual.

USB (Universal Serial Bus) CONNECTION PORT/AUX JACK AND iPod® INTERFACE (if so equipped)

- The USB port/Aux jack **1** is located on the control panel below the climate controls.
- When a compatible USB memory device or iPod® is plugged into the USB port, compatible audio files stored on the device can be played through the vehicle's audio system and front display.



For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner's Manual.



FM/AM/SiriusXM®* SATELLITE RADIO WITH CD PLAYER (if so equipped)

1 POWER BUTTON/VOLUME CONTROL KNOB

- Press the **POWER** button to turn the system on or off.
- Turn the **VOLUME** control knob to the right or left to increase or decrease the volume.

2 ENTER/AUDIO BUTTON/TUNE-SCROLL KNOB

- Press the **ENTER/AUDIO** button to go to the audio settings screen.
- To manually tune the radio, turn the **TUNE-SCROLL** knob left or right.

3 SEEK BUTTONS

- To tune and stop at the previous or next broadcast station, press the seek buttons **◀◀** or **▶▶**.
- For satellite radio to switch to the first channel of the previous or next category, press the seek buttons **◀◀** or **▶▶**.
- To change tracks on a CD, press the seek buttons **◀◀** or **▶▶**.
- To rewind or fast forward a track on a CD, press and hold the seek buttons **◀◀** or **▶▶**.

*SiriusXM® Satellite Radio is only available on vehicles equipped with an optional satellite radio subscription service.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

FIRST DRIVE FEATURES

4 STATION SELECT KEYS

- Twelve stations can be set for the FM band, six for the AM band and 18 for satellite radio.
- To store a station in a preset, you must first select a radio band by pressing the **FM-AM** button **5** or **SXM** button **6** then tune to the desired FM, AM or satellite radio station.
- Next touch and hold the desired station select key (**1-6**) until a beep is heard and the sound is briefly muted. The channel indicator will appear on the display, and the sound will resume. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then touch the corresponding station select button (**1-6**).

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

CRUISE CONTROL

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 mph (40 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **ON/OFF** switch **1** on the steering wheel. The **CRUISE** indicator light in the vehicle information display will illuminate.
- To set a cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **2** on the steering wheel and release. The **SET** indicator light in the vehicle information display will illuminate. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push up and hold the **ACCEL/RES** switch **3** on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push down and hold the **COAST/SET** switch **2** on the steering wheel. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, tap the brake pedal or push the **CANCEL** switch **4** on the steering wheel.
- To turn off cruise control, push the **ON/OFF** switch **1** on the steering wheel. Both the **CRUISE** indicator light and **SET** indicator light in the vehicle information display will extinguish.



For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

POWER OUTLETS

12V OUTLETS

- The 12V power outlets are only powered when the ignition switch is in the ACC or ON position.
- The 12V power outlets are for powering electrical accessories such as cellular phones.
- The power outlets located below the control panel **1**, on the passenger's side of the control panel **2** and inside the center console **3** are powered directly by the vehicle's battery.
- To use a power outlet, open the cap.



120V OUTLETS (if so equipped)

- 120V power outlets are not powered directly by the battery and require the ignition to be on and the power inverter switch **4** to be depressed.
- 400W mode is only available with the shift lever in the **P (PARK)** position.
- The 120V power outlets are for powering electrical devices up to 120V.
- The power outlets located in the 2nd row, behind the center console **5**, and in the truck box **6** are powered directly by the vehicle's battery.
- For devices that require power of 120V or more, the shift lever must be placed in the **P (PARK)** position.



For more information, refer to the “**Instruments and controls (section 2)**” of your Owner's Manual.



SYSTEM GUIDE

VEHICLE INFORMATION DISPLAY

The vehicle information display **1** displays items such as:

- Vehicle settings
- Auxiliary gauges
- DEF level (diesel models only)
- Off-road information
- Fuel economy
- Trip computer information
- Drive system warnings and settings (if so equipped)
- Cruise control system
- Indicators and warnings
- Tire pressure information
- 4X4 information (if so equipped)



USING THE VEHICLE INFORMATION DISPLAY

The vehicle information display modes can be changed using the ◀▶ buttons **2**, the ⬆ switch **3** and the **ENTER** button **4** located on the steering wheel.

- Press the ◀▶ buttons **2** and push the ⬆ switch **3** to navigate through the items in the vehicle information display.
- Press the **ENTER** button **4** to change or select an item in the vehicle information display.
- Press the ◀ button **2** to go back to the previous menu.



RESETTING THE TRIP COMPUTER

1. Press the ◀▶ buttons **2** until you reach the "Trip" screen **5**.
2. Press the **ENTER** button **4** for more than 1.5 seconds to reset average fuel consumption, average speed, distance to empty and journey time.



SETTINGS

The setting mode displays the settings that can be changed:

- | | | |
|-----------------------|--------------------|-------------------|
| ■ Meter Settings | ■ Vehicle Settings | ■ Towing Settings |
| ■ Maintenance | ■ Unit | ■ Alarm |
| ■ Main Menu Selection | ■ Vehicle Color | ■ Welcome Effect |
| ■ Eco Drive Report | ■ Language | |

For more information, refer to the "**Instruments and controls (section 2)**" of your Owner's Manual.

HANDS-FREE TEXT MESSAGING ASSISTANT^{1,2} (if so equipped)

- This system allows for sending and receiving text messages through the vehicle's interface.
- Using predefined or custom messages, send a text to a name or phone number stored in your Bluetooth® Hands-free Phone System³.
- Once enabled, the text message, sender and delivery time are shown on the control panel display when the vehicle speed is less than 5 mph (8 km/h).
- Text messages have the option of being read aloud at all vehicle speeds.
- Many cellular phones may require special permission to enable text messaging. Check the cellular phone's screen during Bluetooth®³ pairing. For some cellular phones, you need to enable "Notifications" in the cellular phone's Bluetooth®³ menu for text messages to appear on the touch-screen display. For more information and instructions, refer to your cellular phone's Owner's Manual.
- Text message integration requires that the cellular phone support Message Access Profile (MAP) for both receiving and sending text messages. Some cellular phones may not support all text messaging features. Please see www.NissanUSA.com/bluetooth for compatibility information as well as your device's Owner's Manual.



¹ Laws in some jurisdictions may restrict the use of "Text-to-Speech". Some of the applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

² Compatible smartphone required. Text rates and/or data usage may apply.

³ Availability of specific features is dependent upon the phone's Bluetooth® support. Please refer to your phone owner's manual for details. Bluetooth® word mark and logos are owned by Bluetooth SIG, Inc., and any use of such marks by NISSAN is under license. See www.NissanUSA.com/bluetooth for details.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

SYSTEM GUIDE

NISSANCONNECTSM MOBILE APPS¹ (if so equipped)

- Integrates popular smartphone apps and services into your vehicle.
- The NissanConnectSM Mobile Apps companion app must be downloaded to your smartphone, and you must be enrolled in a NissanConnect account.

FOR SYSTEM WITH NAVIGATION

- iPhone^{®2}: Please connect via USB when using an iPhone[®] with NissanConnect Mobile Apps.
- Android^{®3}: Please connect via Bluetooth^{®4} when using an Android[®] device with NissanConnect Mobile Apps.

FOR SYSTEM WITHOUT NAVIGATION

- iPhone[®]: Please connect via Bluetooth^{®4} when using an iPhone[®] with NissanConnect Mobile Apps.
- Android[®]: Please connect via Bluetooth^{®4} when using an Android[®] device with NissanConnect Mobile Apps.
- For more information on how to pair your cellular phone and set up NissanConnect Mobile Apps, visit: www.NissanUSA.com/connect/support.

¹ Only use NissanConnectSM Services powered by SiriusXM[®] and NissanConnectSM Mobile Apps when safe to do so. NissanConnectSM Services and Mobile Apps availability is dependent on vehicle model, trim level, packaging, and/or options. See www.NissanUSA.com/connect for complete product and service availability details. Late availability for some features. Compatible smartphone required to operate NissanConnectSM Mobile Apps. Services require an operating vehicle device and cellular and GPS coverage. Cellular network and GPS signals are not available in all areas and/or at all times. Neither NISSAN nor SiriusXM are responsible for associated costs, if any, for continued operation due to cellular network termination/changes. Cellular provider may terminate/restrict service without notice. Certain services require a PIN for activation. Applicable Subscription Agreement required. See www.NissanUSA.com/connect for details and service limitations. Enrollment is required to receive the full suite of services. Text rates and/or data usage may apply.

² iPhone is a registered trademark of Apple, Inc. All rights reserved. iPhone not included.

³ Android[®] is a registered trademark of Google, Inc.

⁴ Availability of specific features is dependent upon the phone's Bluetooth[®] support. Please refer to your phone owner's manual for details. Bluetooth[®] word mark and logos are owned by Bluetooth SIG, Inc., and any use of such marks by NISSAN is under license. See www.NissanUSA.com/bluetooth for details.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

BLUETOOTH® HANDS-FREE PHONE SYSTEM¹ (if so equipped)

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation².

SYSTEM OPERATING TIPS

- Press the  button on the steering wheel to interrupt the voice prompts at any time and speak a command after the tone.
- To use the system faster, you may speak the second level commands with the main menu command on the main menu. For example, press the  button on the steering wheel, and after the tone, say "Call Redial".
- The "Help" command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing HVAC vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.
- To cancel a Voice Recognition session, say "Cancel" or "Quit" or press and hold the  button on the steering wheel for 5 seconds.
- To increase or decrease the volume of the voice prompts, push the volume control switches **+** or **-** on the steering wheel or turn the control dial on the audio system while the audio system is responding.
- Voice commands can be used to operate various Bluetooth[®],¹ system features using the NISSAN Voice Recognition system. See your Owner's Manual for detailed information.



¹ Availability of specific features is dependent upon the phone's Bluetooth[®] support. Please refer to your phone owner's manual for details. Bluetooth[®] word mark and logos are owned by Bluetooth SIG, Inc., and any use of such marks by NISSAN is under license. See www.NissanUSA.com/bluetooth for details.

² Some jurisdictions prohibit the use of cellular telephones while driving.


For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

SYSTEM GUIDE

BLUETOOTH® SYSTEM WITHOUT NAVIGATION^{1,2} (if so equipped)

CONNECTING PROCEDURE³


The vehicle must be stationary when connecting the cellular phone.

1. Press the  button on the steering wheel. The system announces the available commands.
2. Say: "Add Phone". The system acknowledges the command and asks you to initiate connecting from the cellular phone handset.
3. Initiate connecting from the cellular phone:
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible cellular phones, please visit www.NissanUSA.com/bluetooth.
 - When prompted, confirm that the PIN on the display matches the PIN shown on the handset. If your handset does not support Secure Simple Pairing and requests you to input a PIN, enter "1234" from the handset.


PHONEBOOK SETUP

- The phonebook stores up to 1,000 entries for each cellular phone paired with the system.
- Depending on your cellular phone, the system may automatically download your cellular phone's entire phonebook to the vehicle's Bluetooth[®] system.




MAKING A CALL FROM THE PHONEBOOK

1. Press the  button on the steering wheel.
2. After waiting for the tone, say "Call" followed by the name of a phonebook entry. For example, "Call Michael Smith".
3. Confirm the correct name is recognized by saying "Dial" after the tone.

MAKING A CALL BY PHONE NUMBER

1. Press the  button on the steering wheel. A tone will sound.
2. Say: "Phone". The system acknowledges the command and announces the next set of available commands.
3. Say: "Dial Number". The system acknowledges the command and announces the next set of available commands.
4. Say the number you wish to call starting with the area code in single digit format.
5. When you have finished speaking the phone number, the system repeats it back and announces the available commands.
6. Say: "Dial". The system acknowledges the command and makes the call.

RECEIVING/ENDING A CALL

- When you receive a phone call, a ring tone sounds through the audio system.
- To accept the call, press the  button on the steering wheel.
- To reject the call, press the  button on the steering wheel.
- To hang up the cellular phone at the end of a call or to disconnect during call placement, press the  button on the steering wheel.

¹ Some jurisdictions prohibit the use of cellular telephones while driving.

² Availability of specific features is dependent upon the phone's Bluetooth® support. Please refer to your phone owner's manual for details. Bluetooth® word mark and logos are owned by Bluetooth SIG, Inc., and any use of such marks by NISSAN is under license. See www.NissanUSA.com/bluetooth for details.

³ Laws in some jurisdictions may restrict the use of "Text-to-Speech". Some applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

Compatible smartphone required. Text rates and/or data usage may apply.

 



To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.


For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

BLUETOOTH® SYSTEM WITH NAVIGATION^{1,2} (if so equipped)

- Send predefined or custom text messages³ through your vehicle's Bluetooth®² system.
- Receive texts through your vehicle's Bluetooth®² system that can be read to you.
- Bluetooth®² Streaming Audio allows you to use a compatible Bluetooth®² device to play audio files on your device. Your compatible device can be connected to the vehicle's audio system, allowing audio files to play through the vehicle's speakers.

CONNECTING PROCEDURE

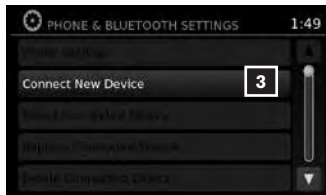 

1. Press the **APPS**- button on the control panel.
2. Touch the "Settings" key .
3. Touch the "Phone & Bluetooth" key .
4. Touch the "Connect New Device" key .
5. Initiate the connecting process from the handset. The system will display the message: "Is PIN XXXXXX displayed on your Bluetooth device?"
If the PIN is displayed on your Bluetooth®² device, select "Yes" to complete the connecting process.

 


SYSTEM GUIDE




VEHICLE PHONEBOOK

To access the vehicle phonebook:

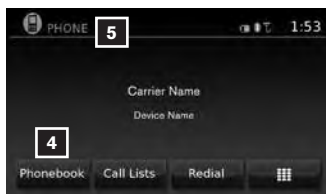





1. Press the  button on the control panel.
2. Select the “Phonebook” key .
3. Choose the desired entry from the displayed list.

 


MAKING A CALL

1. Press the  button on the control panel. The “PHONE” screen  will appear on the display.
2. Select one of the following options to make a call:
 - “Phonebook”: Select the name from an entry stored in the vehicle phonebook.
 - “Call Lists”: Select the name from the incoming, outgoing or missed call history.
 - “Redial”: Dial the last outgoing call from the vehicle.
 - : Input the phone number manually using the keypad displayed on the screen.

RECEIVING/ENDING A CALL

- To accept the incoming call, either:
 - Press the  button on the steering wheel, or
 - Select the  icon on the screen.
- To reject the incoming call, either:
 - Press the  button on the steering wheel, or
 - Select the  icon on the screen.
- To end a cellular phone call, either:
 - Press the  button on the steering wheel, or
 - Select the  icon on the screen.

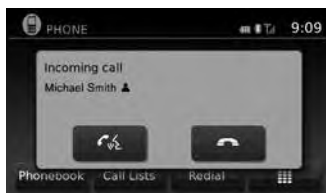

¹ Some jurisdictions prohibit the use of cellular telephones while driving.

² Availability of specific features is dependent upon the phone's Bluetooth® support. Please refer to your phone owner's manual for details. Bluetooth® word mark and logos are owned by Bluetooth SIG, Inc., and any use of such marks by NISSAN is under license. See www.NissanUSA.com/bluetooth for details.

³ Laws in some jurisdictions may restrict the use of “Text-to-Speech”. Some applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.







Compatible smartphone required. Text rates and/or data usage may apply.

 
To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi. For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner's Manual.

NISSAN MOBILE ENTERTAINMENT SYSTEM (MES) (if so equipped)

- With the MES, you can play DVD videos, video CDs or CDs that contain music or sound content. Images will display on the corresponding monitor. Sound will play from the vehicle's audio system (or wireless headphones provided in the kit) or your own wired headphones after connecting them to the headphone jacks of the corresponding DVD player.




1. Place the ignition switch in the ACC or ON position.
 2. Press the  (power) button **1** on each monitor control panel to power on.
 3. Insert a DVD (label facing to the rear of the vehicle) into either monitor.
 4. Press the  button **2** to begin playing the DVD if it does not begin automatically.
 5. To eject a DVD:
 - Press the  button **3** on the corresponding monitor control panel, or
 - Press the corresponding monitor control button (**DVD-A** or **DVD-B**) on the remote control and then press the  button **3**.
 6. To turn the DVD system off:
 - Press the  (power) button **1** on the corresponding monitor control panel, or
 - Press the corresponding monitor control button (**DVD-A** or **DVD-B**) on the remote control and then press the  (power) button **1**.
- You can also connect auxiliary devices, such as video games, camcorders, portable video players or USB devices, to the auxiliary jacks located on the corresponding monitor control panel. (Your device will be controlled through its own control panel.)
 - The system provides a priority for each of the following device inputs:
 - RCA ports, USB port, disc player
 - A device connected through the RCA connections will override play of the disc player and USB port.
 - Use the remote control provided with the system or the buttons on the corresponding monitor control panel to operate the rear display screens.
 - Press the **AUX** button on the factory radio to listen to the audio through the vehicle's speakers.

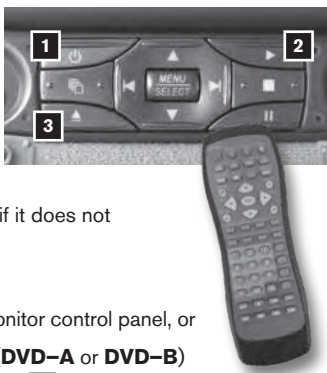

SYSTEM GUIDE

 - Use the headphones **4**, also provided with the system, to listen to audio wirelessly and independently. You may also connect your own wired headphones to the headphone jacks **5** located under the port covers of the corresponding monitor control panel.
- To use the headphones, set the select switch to **A** or **B** for use with the Monitor A or Monitor B respectively.
- For the best audio sound quality, please ensure you are facing the monitor directly in front of you.
- The wireless headphones will only operate in the line of sight.
- Press the source button **6** on the corresponding monitor control panel or remote control to allow viewing Monitor A video on Monitor B and vice versa. Press the source button **6** to cycle through the available video sources.

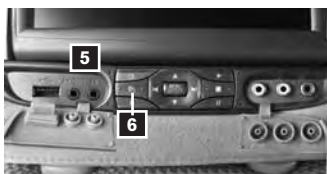

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.



NAVIGATION SYSTEM (if so equipped)

- Your Navigation System can calculate a route from your current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.
- To help promote safe driving, some functions cannot be operated or have limited operation when the vehicle speed is above 5 mph (8 km/h). The on-screen text and keys for these restricted functions will be "grayed-out" or muted and cannot be selected while driving. These functions will become available again when the vehicle speed is reduced to 5 mph (8 km/h). Voice commands may be available for some of the restricted functions. For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

- 1 NAV** button – Press to access the functions of the Navigation System.
- 2 MAP** button – Press to display the current location map screen.
- 3 VOL** control knob – Turn right to increase the volume or left to decrease the volume.
- 4** key – Select to zoom the map in.
- 5** key – Select to zoom the map out.
- 6 APPS** button – Press to access SiriusXM Traffic, MyApps, Settings, SiriusXM Travel Link, Voice Commands, and NissanConnectSM Services.
- 7** button – Press to change the display brightness between day and night modes. While the mode is being displayed, the brightness can be adjusted using the **TUNE-SCROLL** knob. Press and hold to turn the display off. Press again to turn the display on.
- 8 BACK** button – Press to return to the previous screen.
- 9 TUNE-SCROLL** knob – Turn to navigate the items in a list. Press to select a menu item.
- 10** Touch-screen display
- 11** SD-card location – An SD-card with map data must be inserted here for map functions to operate.

For more information, refer to your Navigation System Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

SYSTEM GUIDE



HOMELINK® UNIVERSAL TRANSCIEVER (if so equipped)

- The HomeLink® Universal Transceiver can learn and consolidate the functions of up to three different hand-held transmitters, operating items such as garage doors, property gates, outdoor and indoor lights or alarm systems.
- To program the HomeLink® Universal Transceiver:
 - Position the handheld transceiver 1-3 in (26-76 mm) away from the HomeLink surface, keeping the HomeLink indicator light in view.
 - Press and hold the desired HomeLink button and the handheld transmitter button simultaneously until the HomeLink indicator light flashes slowly and then rapidly.
 - Both buttons may be released when the indicator light flashes rapidly.
- To verify the programing is complete, press and hold the HomeLink button and observe the indicator light:
 - A solid, continuous light indicates the programing is complete and the HomeLink button will activate your device.
 - A blinking light that turns to a solid, continuous light after 2 seconds indicates additional steps are required to complete the programing.
- An additional person may make the remaining steps easier. To complete the programing process:
 - At the receiver of the device that you are programing to the HomeLink button, press and release the learn or smart button (the name may vary by manufacturer, but it is usually located near where the hanging antenna wire is attached to the unit). You have approximately 30 seconds to initiate the following step.
 - Press and hold the programed HomeLink button for 2 seconds and release.
- You may have to repeat the previous two steps up to three times to complete the programing process. HomeLink should now activate your device.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual, the HomeLink website at www.homelink.com or call 1-800-355-3515.

MEMO

MEMO

MEMO



Helpful Resources

Below is a list of helpful resources that can be used to learn more about the vehicle's systems and feature operations.

- Vehicle Owner's Manual
- Navigation Owner's Manual (if so equipped)
- Printed Quick Reference Guide (this document)
- www.NissanUSA.com/bluetooth
- www.NissanUSA.com/connect
- www.youtube.com/user/NissanUSA
- Nissan Consumer Affairs 1-800-647-7261
- Electronic Quick Reference Guide (Use Quick Response (QR) code or URL below.)
- Nissan Quick Guide (available in the iPhone App Store or Android Google Play Store for download to your smartphone)



To view detailed instructional videos,
go to www.nissanownersinfo.mobi/2016/titan
or snap this barcode with an appropriate barcode reader.



This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain with this Quick Reference Guide all revision updates sent to you by NISSAN to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the NISSAN website at <https://owners.nissanusa.com/nowners/navigation/manualsGuide>. If you have questions concerning any information in your Owner's Manual, contact NISSAN Consumer Affairs. See the NISSAN CUSTOMER CARE PROGRAM page in the Owner's Manual for contact information.

