

# 2018 **VERSA NOTE**

## QUICK REFERENCE GUIDE





- |   |  |   |   |
|---|--|---|---|
| <b>1</b> Trip Computer                    | <b>7</b> Steering Wheel Switches for Audio Control/Bluetooth®/ Trip Computer | <b>11</b> Fuel-filler Door Release              | <b>15</b> Heater and Air Conditioner (manual) |
| <b>2</b> Low Tire Pressure Warning Light  | <b>8</b> Cruise Control  | <b>12</b> Hood Release*                         | <b>16</b> USB Port/AUX Jack                   |
| <b>3</b> Instrument Brightness Control*   | <b>9</b> Steering Wheel Tilt Adjustment*                                     | <b>13</b> Front Passenger Air Bag Status Light* | <b>17</b> 12V Power Outlet                    |
| <b>4</b> Headlight and Turn Signal Switch | <b>10</b> Vehicle Dynamic Control (VDC) OFF Switch*                          | <b>14</b> Audio System                          |   |
| <b>5</b> Wiper and Washer Switch          |  |   |   |
| <b>6</b> Outside Mirror Control Switch    |  |   |   |

\*See your Owner's Manual for information.

# TABLE OF CONTENTS

## NEW SYSTEM FEATURES

RearView Monitor (if so equipped) .....	2
Siri® Eyes Free (if so equipped) .....	2
USB (Universal Serial Bus) Connection Port/Aux Jack	
and iPod® Interface (if so equipped) .....	2
Trip Computer .....	3
Divide-N-Hide® Adjustable Floor (if so equipped) .....	4

## ESSENTIAL INFORMATION

Tire Pressure Monitoring System (TPMS) with Easy-Fill Tire Alert (if so equipped) ...	5
Loose Fuel Cap .....	6
Fuel-filler Door .....	6
Clock Set/Adjustment .....	7

## FIRST DRIVE FEATURES

Nissan Intelligent Key® System (if so equipped) .....	8
Rear Hatch Release (Nissan Intelligent Key® models only – if so equipped) .....	9
Seat Adjustments .....	9
Starting/Stopping the Engine .....	10
Headlight Control Switch .....	11
Heater and Air Conditioner (manual) .....	12
Wiper and Washer Switch .....	13
Outside Mirror Control Switch .....	13
Cruise Control (if so equipped) .....	14
FM/AM/SiriusXM® Satellite Radio with CD Player (if so equipped) .....	15

## SYSTEM GUIDE

Bluetooth® Hands-free Phone System .....	16
• System Operating Tips .....	16
Hands-free Text Messaging Assistant (if so equipped) .....	18



Additional information about your vehicle is also available in your Owner's Manual at [www.NissanUSA.com](http://www.NissanUSA.com).



- Please see your Owner's Manual for important safety information and system operation limitations.
- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
  - Always wear your seat belt.
  - Supplemental air bags do not replace proper seat belt usage.
  - Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
  - Do not drink and drive.

For more information, refer to the **"Safety – Seats, seat belts and supplemental restraint system (section 1)"**, the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** and the **"Starting and driving (section 5)"** of your Owner's Manual.

# NEW SYSTEM FEATURES

## REARVIEW MONITOR (if so equipped)



- When the shift lever is moved to the **R (REVERSE)** position, the front display shows the view to the rear of the vehicle.
- The colored lines on the display screen indicate approximate distances to objects.
  - Red 1.5 ft (0.5 m); Yellow 3 ft (1 m); Green 7 ft (2 m) and 10 ft (3 m).



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

## SIRI® EYES FREE (if so equipped)

- If you have a compatible iPhone® with Siri®, you can link your iPhone® to the Siri® Eyes Free function in your vehicle's Bluetooth® system.
- If you have a compatible iPhone® connected to the system, press and hold the  or  button **1** on the steering wheel for a few seconds and Siri® will be activated in Eyes Free mode.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual and visit [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth).

## USB (Universal Serial Bus) CONNECTION PORT/AUX JACK AND IPOD® INTERFACE (if so equipped)

- The USB port/AUX jack **1** is located on the instrument panel below the climate controls.
- When a compatible USB memory device, iPod® or auxiliary device is plugged into the USB port/AUX jack **1**, compatible audio files stored on the device can be played through the vehicle's audio system.
- The port is illuminated when the headlights are turned on.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

## TRIP COMPUTER

- With the ignition switch in the ON position, modes of the trip computer **1** can be selected by pressing the menu button **2** on the steering wheel.



- When the menu button **2** on the steering wheel is pressed, the following modes will appear on the trip computer:

- **mpg** – Displays the current fuel consumption.
- **AVG mph** – Displays the average fuel consumption since the last reset.
- **miles**  – Displays the estimated distance to empty (dte) that can be driven before refueling.
- **AVG MPH** – Displays the average speed.
-  – Displays the total travel time since the last reset.
  - Pressing the menu button **2** on the steering wheel for more than 3 seconds will reset the average fuel consumption, average speed and travel time.
- Outside Air Temperature (if so equipped) – Displays the outside air temperature in °F or °C.



- To select trip **A** or trip **B**, press the brightness control knob **3**. Press the brightness control knob **3** for approximately 1 second to reset the currently displayed trip odometer to zero.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.



# NEW SYSTEM FEATURES

## DIVIDE-N-HIDE® ADJUSTABLE FLOOR (if so equipped)


- Do not place more than 110 lbs (50 kg) on the adjustable floor.
- There are two positions to store the adjustable floor. The upper position **1** allows for additional storage below the adjustable floor **2**.
- The adjustable floor has two retaining tabs **4** on each side to secure the floor in place. When the retaining tabs **4** are in the lock position (outboard), the adjustable floor may be moved along the tracks from the lower position **3** to the upper position **1** and vice versa. When the tabs are in the unlock position (inboard), the adjustable floor may be removed completely.

To slide the adjustable floor from the lower position **3** to the upper position **1** using the guide tracks:

1. Fold the adjustable floor **2** in half.
2. Lift the floor and pull up along the guide tracks.
3. Push the floor back then unfold the floor.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.


For more information, refer to the "Instruments and controls (section 2)" and the "In case of emergency (section 6)" of your Owner's Manual.

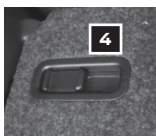

# ESSENTIAL INFORMATION

## TIRE PRESSURE MONITORING SYSTEM (TPMS) WITH EASY-FILL TIRE ALERT (if so equipped)

- When one or more tires are low in pressure and air is needed, the low tire pressure warning light **2** will illuminate in the trip computer **1** and the low pressure light **3** for the corresponding tire will blink.
  - The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mi (1.6 km) at moderate speeds.
- After tire pressures are adjusted, drive the vehicle at speeds above 16 mph (25 km/h). The low tire pressure warning light **2** and the low pressure light **3** for the corresponding tire will extinguish.
- When adding air to an under-inflated tire, the TPMS with Easy-Fill Tire Alert (if so equipped) provides visual and audible signals to help you inflate the tire to the recommended COLD tire pressure.
- To use the Easy-Fill Tire Alert (if so equipped):
  1. Move the shift lever to the **P (PARK)** position and apply the parking brake.
  2. Place the ignition switch in the ON position. Do not start the engine.
  3. Add air to the under-inflated tire, and within a few seconds, the hazard warning lights will start flashing.
  4. When the designated tire pressure is reached, the horn will beep once and the hazard warning flashers will stop flashing.
  5. Repeat this procedure for any additional under-inflated tires.
- When the low tire pressure warning light **2** flashes for 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked. It is recommended you visit a Nissan dealer for this service.
- Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light **2** to illuminate. If the warning light illuminates, check the tire pressure in your tires.
  - Check the tire pressure (including the spare tire) often and always prior to long distance trips.
- The Tire and Loading Information label contains valuable information. Please refer to the "Technical and consumer information (section 10)" of your Owner's Manual for the location of the Tire and Loading Information label.

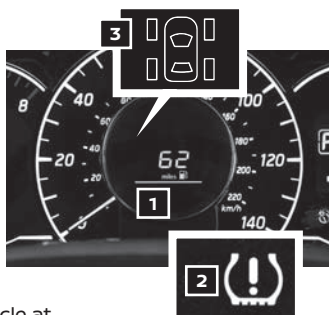


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)", the "Starting and driving (section 5)" and the "Do-it-yourself (section 8)" of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to [www.nissanownersinfo.mobi](http://www.nissanownersinfo.mobi).

# ESSENTIAL INFORMATION

## LOOSE FUEL CAP

- A **LOOSE FUEL CAP** warning message will display in the trip computer **1** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will extinguish when the vehicle detects the fuel-filler cap is properly tightened and the reset button **2** is pressed for more than 1 second.
- If the cap is not fully tightened, the Malfunction Indicator Light  may also illuminate.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

## FUEL-FILLER DOOR

- The fuel-filler door release **1** is located to the left of the steering wheel and below the instrument panel.
- To open the fuel-filler door, pull the release. To lock, close the fuel-filler door securely.
- The fuel-filler door is located on the driver's side of the vehicle.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.





## CLOCK SET/ADJUSTMENT

FM/AM RADIO WITH COMPACT DISC (CD) PLAYER (if so equipped)

1. Press the **MENU** button **1** repeatedly until "Adjust Clock: NO" appears on the display.
2. Turn the **TUNE/FOLDER** knob **2** to change to "Adjust Clock: YES".
3. Press the **MENU** button **1**.
4. When "Change Hour" appears, turn the **TUNE/FOLDER** knob **2** to adjust the hours.
5. Press the **MENU** button **1**.
6. When "Change Minute" appears, turn the **TUNE/FOLDER** knob **2** to adjust the minutes.
7. Press the **MENU** button **1** to finish.



FM/AM/SAT RADIO WITH COMPACT DISC (CD) PLAYER (if so equipped)

1. Press the **ENTER/SETTING/CLOCK** button **3** to show the "Settings" screen on the display.
2. Turn the **TUNE/SCROLL** knob **4** to highlight "Clock Adjust".
3. Press the **ENTER/SETTING/CLOCK** button **3** to highlight the hours or minutes and use the **TUNE/SCROLL** knob **4** to adjust the value.
4. Press the **ENTER/SETTING/CLOCK** button **3** to set the value.
- Press the **BACK** button **5** to return to the previous screen.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.


# FIRST DRIVE FEATURES

## NISSAN INTELLIGENT KEY® SYSTEM (if so equipped)

The Nissan Intelligent Key® system allows you to lock or unlock your vehicle and activate the panic alarm. It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).



- The operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, press the **1** button **1** on the key fob or push either door handle request switch **2** once.
- To unlock the vehicle, perform one of the following procedures:
  - Push either door handle request switch **2** once; the corresponding door will unlock. Push the door handle request switch **2** again within 60 seconds; all other doors will unlock, or
  - Press the **1** button **3** on the key fob to unlock the driver's side door. Press the **1** button **3** again; all other doors will unlock.
- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the **4** button **4** for more than 0.5 seconds. Once activated, the panic alarm and headlights will stay on for a period of time.

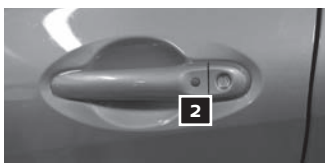

### INTELLIGENT KEY BATTERY DISCHARGE


- If the battery of the Intelligent Key is discharged or environmental conditions interfere with the Intelligent Key operation, start the engine according to the following procedure:
  1. Move the shift lever to the **P (PARK)** or **N (NEUTRAL)** position.
  2. Firmly apply the foot brake.
  3. Touch the ignition switch with the Intelligent Key, and a chime will sound.
  4. Within 10 seconds after the chime sounds, push the ignition switch while depressing the brake pedal and the engine will start.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)", the "Starting and driving (section 5)" and the "Do-it-yourself (section 8)" of your Owner's Manual.

## REAR HATCH RELEASE (Nissan Intelligent Key® models only – if so equipped)

- To open the rear hatch, unlock it with one of the following operations:
  - Press the  button **1** on the key fob twice.
  - Push the rear hatch request switch **2** while carrying the Nissan Intelligent Key® with you.
- Then pull the handle **3** located below the rear hatch request switch **2**.
- Pull up on the rear hatch to open.




Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.



## SEAT ADJUSTMENTS

- To slide the front seat forward or backward, pull up on the lever **1** under the front of the seat and slide forward or backward. Release the lever to lock the seat in position.
- To recline the seatback, pull up on the lever **2** and lean back. To bring the seatback forward, pull the lever up and lean your body forward. Release the lever to lock the seatback in position.

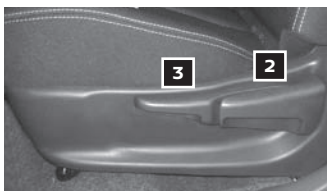

SEAT LIFTER (if so equipped for driver's seat)

- To adjust the seat height, pull up or push down on the adjusting lever **3** repeatedly.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Safety – Seats, seat belts and supplemental restraint system (section 1)" of your Owner's Manual.

# FIRST DRIVE FEATURES

## STARTING/STOPPING THE ENGINE

### STARTING THE ENGINE

- It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

CONTINUOUSLY VARIABLE TRANSMISSION (Nissan Intelligent Key® models only – if so equipped)

- Depress the brake pedal.
  - If the brake pedal is not depressed, pushing the ignition switch once enters to ACC.
  - If the ignition switch is pushed a second time, the vehicle will enter to ON.
- Move the shift lever to the **P (PARK)** position.
- Push the ignition switch to start or stop the engine.



MANUAL TRANSMISSION/CONTINUOUSLY VARIABLE TRANSMISSION (if so equipped)

- Depress the brake pedal.
- Move the shift lever to the **N (NEUTRAL)** position.
- Depress the clutch pedal to the floor (manual transmission only).
- Turn the ignition switch to the **START** position.



### TURNING THE ENGINE OFF


 
- For a Continuously Variable Transmission (Nissan Intelligent Key® models only – if so equipped), apply the brake pedal, move the shift lever to the **P (PARK)** position, apply the parking brake and push the ignition switch button or turn the ignition switch to the **LOCK** position to turn the engine off.
- For a manual transmission, apply the brake pedal, place the vehicle in **N (NEUTRAL)**, apply the parking brake and turn the ignition switch to the **LOCK** position.


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.


## HEADLIGHT CONTROL SWITCH

### HEADLIGHT CONTROL

- Turn the headlight control switch to the  position **1** to turn on the front parking, tail, license plate and instrument panel lights. Turn the switch to the  position **2** to turn on the headlights.

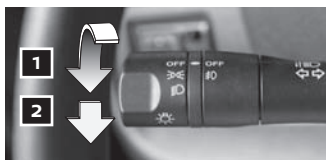
 



### HIGH BEAM SELECT

- With the headlights ON, push the headlight control switch forward **3** to select the high beam function. The blue indicator light  will illuminate in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light will extinguish.
- Pull and release the headlight control switch **4** to flash the headlight high beams on and off.




### FOG LIGHT SWITCH (if so equipped)

- The headlights must be on and the low beams  selected for the fog lights to operate.
- Turn the switch (inside collar) to the  position **5** to turn the fog lights on.
- Turn the switch (inside collar) to the **OFF** position to turn the fog lights off.

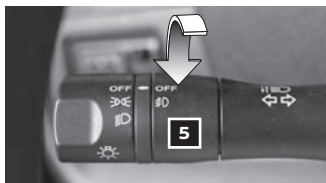

### LANE CHANGE SIGNAL

- Move the lever up or down until the turn signal begins to flash but the lever does not latch to signal a lane change. Hold the lever until the lane change is completed.
- Move the lever up or down until the turn signal begins to flash but the lever does not latch and release the lever. The turn signal will automatically flash three times.

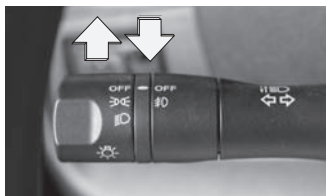

Choose the appropriate method to signal a lane change based on road and traffic conditions.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" of your Owner's Manual.

# FIRST DRIVE FEATURES


## HEATER AND AIR CONDITIONER (manual)


### 1 FAN SPEED CONTROL DIAL


- Turn the dial to the left to decrease fan speed or to the right to increase fan speed.

### 2 AIR FLOW CONTROL DIAL

- Turn the dial to select one of the following air flow outlets:

 Air flows from the center and side vents.

 Air flows from the center, side and foot vents.

 Air flows mainly from the foot vents.

 Air flows from the front defroster and foot vents.

 Air flows mainly from the front defroster and side vents.



### 3 TEMPERATURE CONTROL DIAL


- Turn the temperature control dial left for cooler air or right for warmer air.



### 4 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS


- First, move the air intake lever **5** to the left position  to draw fresh air into the vehicle.

- Next turn the air flow control dial **2** to the front defroster mode .


- Align the left and right side vents **6** to direct the air flow toward the front side windows.

- Then turn the  fan control dial **1** to the desired position and the temperature control dial **3** to the desired position.

- When the  or  position is selected, press the **A/C** button **8** for better performance. This will dehumidify the air and help defog the windows.

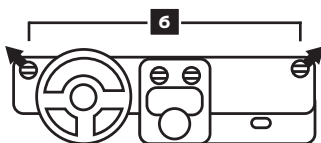

### 7 REAR WINDOW AND OUTSIDE MIRROR (if so equipped) DEFROSTER SWITCH

- Push the rear window and outside mirror (if so equipped) defroster switch  to turn the system on or off.

- This function automatically turns off after approximately 15 minutes.

### 8 A/C BUTTON

- Press the **A/C** button to turn the air conditioner on. This system helps cool and dehumidify the air inside the cabin and defog the windows.


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.


For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to [www.nissanownersinfo.mobi](http://www.nissanownersinfo.mobi).

## WIPER AND WASHER SWITCH


- Move the lever to one of the following positions to operate the windshield wipers:

- 1** Mist (**MIST**) – One sweep operation of the wipers.
- 2** Intermittent (**INT**) – Wipers operate intermittently. The intermittent operation speed can be adjusted by rotating the time control ring **3** to increase or decrease wiper speed (if so equipped).
- 4** Low (**LO**) – Wipers operate at a continuous low-speed.
- 5** High (**HI**) – Wipers operate at a continuous high-speed.
- 6** Washer  – Pull the lever toward you to activate the washer. The wipers will operate several times.

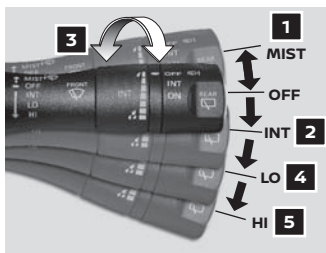

### REAR WIPER AND WASHER

- 7** Intermittent (**INT**) – Rear wiper operates intermittently.
- 8** Low (**ON**) – Rear wiper operates at a continuous low-speed.
- 9** Push the lever forward to activate the rear washer. The rear wiper will operate several times.

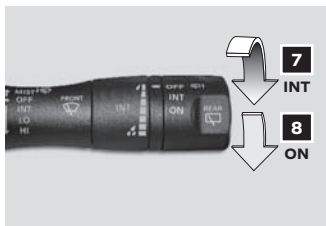


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

## OUTSIDE MIRROR CONTROL SWITCH

- Move the small switch **1** right or left to select the right or left mirror.
- Adjust each mirror to the desired position using the switch **2**.
- Move the switch **1** to the center (neutral) position to prevent accidentally moving the mirror.

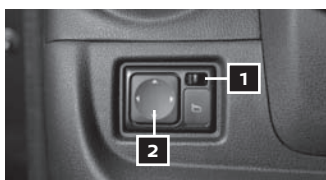

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

# FIRST DRIVE FEATURES

## CRUISE CONTROL (if so equipped)

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 mph (40 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **ON/OFF** switch **1** on the steering wheel. The **CRUISE** indicator light in the instrument panel will illuminate.
- To set a cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **2** on the steering wheel and release. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **3** on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **2** on the steering wheel. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, push the **CANCEL** switch **4** on the steering wheel.
- To turn off cruise control, push the **ON/OFF** switch **1** on the steering wheel. The **CRUISE** indicator light in the instrument panel will extinguish.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.





## FM/AM/SiriusXM® SATELLITE RADIO WITH CD PLAYER (if so equipped)

- 1** **⏻ (power) BUTTON and VOL (volume) CONTROL KNOB**
  - Press the **⏻ (power)** button to turn the system on or off.
  - Turn the **VOL (volume)** control knob to the right or left to increase or decrease the volume.
- 2** **ENTER/SETTING/CLOCK BUTTON and TUNE/SCROLL KNOB**
  - Press the **ENTER/SETTING/CLOCK** button to show the settings screen and make a selection.
  - To manually tune the radio, turn the **TUNE/SCROLL** knob left or right.
- 3** **SEEK/CAT BUTTONS**
  - To tune and stop at the previous or next broadcast station, press the seek buttons **⏮** or **⏭**.
  - For satellite radio to switch to the first channel of the previous or next category, press the seek buttons **⏮** or **⏭**.
  - To change tracks on a CD, press the seek buttons **⏮** or **⏭**.
  - To rewind or fast forward a track on a CD, press and hold the seek buttons **⏮** or **⏭**.
- 4** **STATION SELECT BUTTONS**
  - Twelve stations can be set for the FM band, six for the AM band and 18 for satellite radio.
  - To store a station in a preset, you must first select a radio band by pressing the **FM-AM** button **5** or the **XM** button **6** then tune to the desired FM, AM or satellite radio station.
  - Now touch and hold the desired station memory key (1-6) **4** until the preset number is updated on the display and a beep is heard. Programming is now complete.
  - To retrieve a previously set station, select the radio band where the preset was stored then touch the corresponding station memory key (1-6) **4**.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.







For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.


# SYSTEM GUIDE

## BLUETOOTH® HANDS-FREE PHONE SYSTEM\*

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.



### SYSTEM OPERATING TIPS

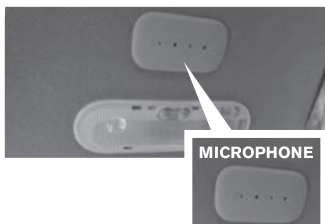- Press the  or  button on the steering wheel to interrupt the voice prompts at any time and speak a command after the tone.
- To use the system faster, you may speak the second level commands with the main menu command on the main menu. For example, press the  or  button on the steering wheel, and after the tone, say "Call Redial".
- The "Help" command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing HVAC vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.
- To cancel a Voice Recognition session, simply wait 5 seconds, say "Cancel" or "Quit", or press and hold the  or  button on the steering wheel for 5 seconds.
- To increase or decrease the volume of the voice prompts, push the volume control switches + or - on the steering wheel or turn the volume control knob on the audio system while the audio system is responding.
- Voice commands can be used to operate various Bluetooth® system features using the Nissan Voice Recognition system. See your Owner's Manual for detailed information.
- If the Voice Recognition system does not recognize your voice commands, train the system using the Voice Adaptation Mode. See your Owner's Manual for detailed information.
- For more detailed information and instructions, refer to your cellular phone's Owner's Manual and visit [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth).



### CONNECTING PROCEDURE


The vehicle must be stationary when connecting the cellular phone.

1. Press the  or  button on the steering wheel. The system announces the available commands.
2. Say: "Connect Phone". The system acknowledges the command and announces the next set of available commands.
3. Say: "Add Phone". The system acknowledges the command and asks you to initiate connecting from the cellular phone handset.

To view detailed instructional videos regarding these and other features, please go to [www.nissanownersinfo.mobi](http://www.nissanownersinfo.mobi).

 

4. Initiate connecting from the cellular phone:
  - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and compatible cellular phones, please visit [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth).
  - When prompted for a PIN, enter "1234" from the handset. (The PIN is assigned by NISSAN and cannot be changed.)
5. Say a name for the cellular phone when the system asks you to provide one. You can give the cellular phone a name of your choice.

#### PHONEBOOK SETUP

- The phonebook stores up to 1,000 entries for each cellular phone paired with the system.
- Depending on your cellular phone, the system may automatically download your cellular phone's entire phonebook to the vehicle's Bluetooth® system.
- If the phonebook does not download automatically, entries can be individually downloaded.
- To manually download entries:
  1. Press the  button on the steering wheel.
  2. After the tone, say "Phonebook".
  3. After the next tone, say "Transfer Entry". The system acknowledges the command and asks you to initiate the transfer from the cellular phone handset. The new contact phone number will be transferred from the cellular phone to the vehicle.
    - The transfer procedure varies according to each cellular phone. See your cellular phone's Owner's Manual for details. You can also visit [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth) for instructions on transferring phone numbers from Nissan-recommended cellular phones.
  4. The system repeats the number and prompts you for the next command. When you have finished entering numbers or transferring an entry, say "Store".
  5. The system confirms the name, location and number.


 
#### MAKING A CALL FROM THE PHONEBOOK

In some cases, names stored using all UPPERCASE letters may not be recognized by the Voice Recognition system.







1. Press the  or  button on the steering wheel.
2. After waiting for the tone, say "Call".
3. After the next tone, speak the name of a phonebook entry. For example, "Michael Smith".
4. Confirm the correct name is recognized by saying "Dial" after the tone.

# SYSTEM GUIDE

## MAKING A CALL BY PHONE NUMBER

1. Press the  or  button on the steering wheel. A tone will sound.
2. Say: "Call". The system acknowledges the command and announces the next set of available commands.
3. Say: "Phone Number". The system acknowledges the command and announces the next set of available commands.
4. Say the number you wish to call starting with the area code in single digit format.
5. When you have finished speaking the phone number, the system repeats it back and announces the available commands.
6. Say: "Dial". The system acknowledges the command and makes the call.

## RECEIVING/ENDING A CALL

- When you receive a cellular phone call, a ring tone sounds through the audio system.
- To accept the call, press the  or  button on the steering wheel.
- To reject the call, press the  or  button on the steering wheel.
- To hang up the cellular phone at the end of a call or to disconnect during call placement, press the  or  button on the steering wheel.


\* Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual or please visit [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth).

## HANDS-FREE TEXT MESSAGING ASSISTANT\* (if so equipped)

- This system allows for sending and receiving text messages through the vehicle's interface.
- Using predefined or custom messages, send a text to an entry stored in your Bluetooth® Hands-free Phone System.
- Once enabled, the text message, sender and delivery time are shown on the control panel display when the vehicle speed is less than 5 mph (8 km/h).
- Text messages have the option of being read aloud at all vehicle speeds.
- Many cellular phones may require special permission to enable text messaging. Check the cellular phone's screen during Bluetooth® pairing. For some cellular phones, you need to enable "Notifications" in the cellular phone's Bluetooth® menu for text messages to appear on the touch-screen display. For more information and instructions, refer to your cellular phone's Owner's Manual.

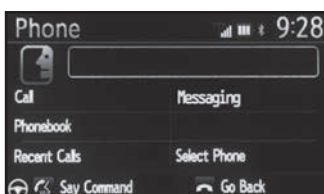

To view detailed instructional videos regarding these and other features, please go to [www.nissanownersinfo.mobi](http://www.nissanownersinfo.mobi).

- Text message integration requires that the cellular phone support Message Access Profile (MAP) for both receiving and sending text messages. Some cellular phones may not support all text messaging features. Please see [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth) for compatibility information as well as your device's Owner's Manual.

\* Laws in some jurisdictions may restrict the use of "Text-to-Speech". Some of the applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

# MEMO





## Helpful Resources

Below is a list of helpful resources that can be used to learn more about the vehicle's systems and feature operations.

- Vehicle Owner's Manual
- Printed Quick Reference Guide (this document)
- [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth)
- [www.youtube.com/user/NissanUSA](http://www.youtube.com/user/NissanUSA)
- Nissan Consumer Affairs: 1-800-647-7261
- Electronic Quick Reference Guide (Use Quick Response (QR) code or URL below.)
- Nissan Quick Guide (available in the iPhone App Store or Android Google Play Store for download to your smartphone)



To view detailed instructional videos, go to [www.nissanownersinfo.mobi/2018/versanote](http://www.nissanownersinfo.mobi/2018/versanote) or snap this barcode with an appropriate barcode reader.



This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain with this Quick Reference Guide all revision updates sent to you by NISSAN to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the NISSAN website at <https://owners.nissanusa.com/owners/navigation/manualsguide>. If you have questions concerning any information in your Owner's Manual, contact NISSAN Consumer Affairs. See the NISSAN CUSTOMER CARE PROGRAM page in the Owner's Manual for contact information.






# 2018.5 **VERSA NOTE**

## QUICK REFERENCE GUIDE



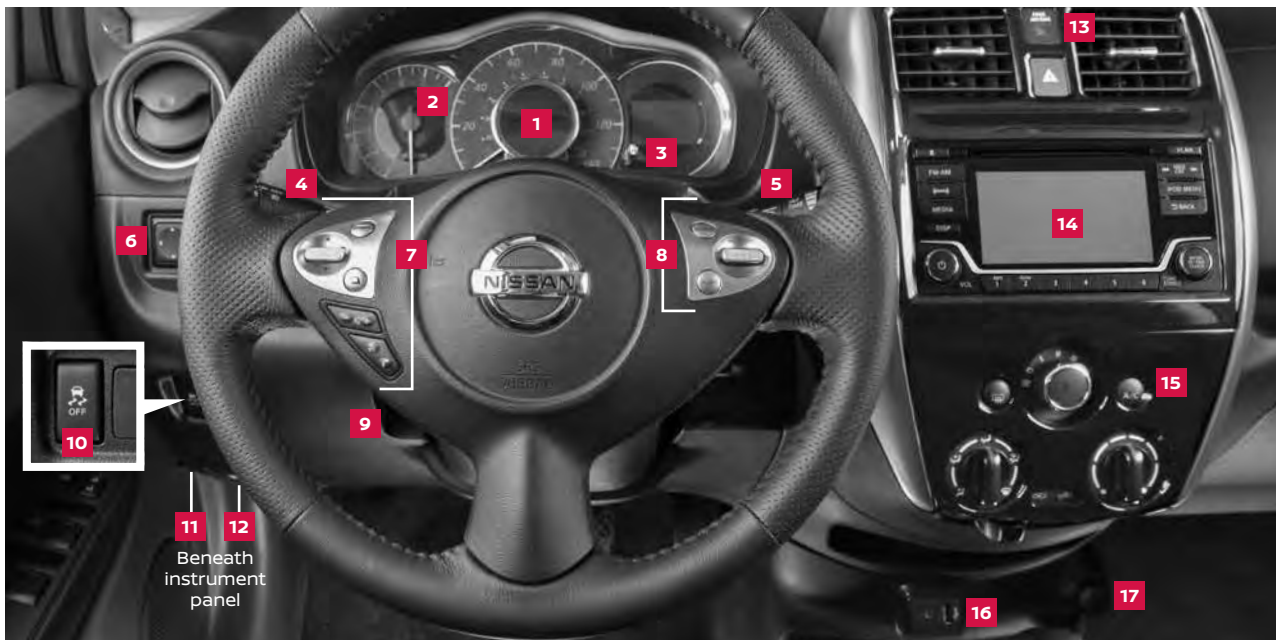

- |   |  |   |   |
|---|--|---|---|
| <b>1</b> Trip Computer                    | <b>6</b> Outside Mirror Control Switch                                       | <b>10</b> Vehicle Dynamic Control (VDC) OFF Switch* | <b>14</b> Audio System                        |
| <b>2</b> Low Tire Pressure Warning Light  | <b>7</b> Steering Wheel Switches for Audio Control/Bluetooth®/ Trip Computer | <b>11</b> Fuel-filler Door Release                  | <b>15</b> Heater and Air Conditioner (manual) |
| <b>3</b> Instrument Brightness Control*   | <b>8</b> Cruise Control  | <b>12</b> Hood Release*                             | <b>16</b> USB Port/AUX Jack                   |
| <b>4</b> Headlight and Turn Signal Switch | <b>9</b> Steering Wheel Tilt Adjustment*                                     | <b>13</b> Front Passenger Air Bag Status Light*     | <b>17</b> 12V Power Outlet                    |
| <b>5</b> Wiper and Washer Switch          |  |   |   |

\*See your Owner's Manual for information.

# TABLE OF CONTENTS

## NEW SYSTEM FEATURES

RearView Monitor .....	2
Siri® Eyes Free .....	2
USB (Universal Serial Bus) Connection Port/AUX Jack and iPod® Interface .....	2
Trip Computer .....	3
Divide-N-Hide® Adjustable Floor (if so equipped) .....	4

## ESSENTIAL INFORMATION

Tire Pressure Monitoring System (TPMS) with Easy-Fill Tire Alert (if so equipped) . . . .	5
Loose Fuel Cap .....	6
Fuel-filler Door .....	6
Clock Set/Adjustment .....	7

## FIRST DRIVE FEATURES

Nissan Intelligent Key® System (if so equipped) .....	8
Rear Hatch Release (Nissan Intelligent Key® models only – if so equipped) .....	9
Seat Adjustments .....	9
Starting/Stopping the Engine .....	10
Headlight Control Switch .....	11
Heater and Air Conditioner (manual) .....	12
Wiper and Washer Switch .....	13
Outside Mirror Control Switch .....	13
Cruise Control (if so equipped) .....	14
FM/AM Radio .....	15

## SYSTEM GUIDE

Bluetooth® Hands-free Phone System .....	16
• System Operating Tips .....	16
Hands-free Text Messaging Assistant .....	19



Additional information about your vehicle is also available in your Owner's Manual at [www.NissanUSA.com](http://www.NissanUSA.com).



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the "**Safety – Seats, seat belts and supplemental restraint system (section 1)**", the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" and the "**Starting and driving (section 5)**" of your Owner's Manual.

# NEW SYSTEM FEATURES

## REARVIEW MONITOR



- When the shift lever is moved to the **R (Reverse)** position, the front display shows the view to the rear of the vehicle.
- The colored lines on the display screen indicate approximate distances to objects.
  - Red 1.5 ft (0.5 m)
  - Yellow 3 ft (1 m)
  - Green 7 ft (2 m)
  - Green 10 ft (3 m) (if so equipped)



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

## SIRI® EYES FREE

- If you have a compatible iPhone® with Siri®, you can link your iPhone to the Siri Eyes Free function in your vehicle's Bluetooth® system.
- If you have a compatible iPhone connected to the system, press and hold the  or  button **1** on the steering wheel for a few seconds and Siri will be activated in Eyes Free mode.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual and visit [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth).

## USB (Universal Serial Bus) CONNECTION PORT/AUX JACK AND IPOD® INTERFACE

- The USB port/AUX jack **1** is located on the instrument panel below the climate controls.
- When a compatible USB memory device, iPod® or auxiliary device is plugged into the USB port/AUX jack **1**, compatible audio files stored on the device can be played through the vehicle's audio system.




Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.


For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

## TRIP COMPUTER

- With the ignition switch in the ON position, modes of the trip computer **1** can be selected by pressing the menu button **2** on the steering wheel.

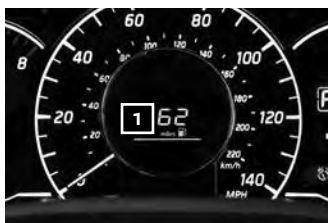

- When the menu button **2** on the steering wheel is pressed, the following modes will appear on the trip computer:

- **mpg** – Displays the current fuel consumption.
- **AVG mph** – Displays the average fuel consumption since the last reset.
- **miles**  – Displays the estimated distance to empty (dte) that can be driven before refueling.
- **AVG MPH** – Displays the average speed.
- **●→⊙** – Displays the total travel time since the last reset.



- Pressing the menu button **2** on the steering wheel for more than 3 seconds will reset the average fuel consumption, average speed and travel time.
- Outside Air Temperature (if so equipped) – Displays the outside air temperature in °F or °C.

- To select trip A or trip B, press the trip odometer reset switch **3**. Press the reset switch **3** for approximately 1 second to reset the currently displayed trip odometer to zero.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" of your Owner's Manual.

# NEW SYSTEM FEATURES

## DIVIDE-N-HIDE® ADJUSTABLE FLOOR (if so equipped)

- Do not place more than 110 lbs (50 kg) on the adjustable floor.
- There are two positions to store the adjustable floor. The upper position **1** allows for additional storage below the adjustable floor **2**.
- The adjustable floor has two retaining tabs **4** on each side to secure the floor in place. When the retaining tabs **4** are in the lock position (outboard), the adjustable floor may be moved along the tracks from the lower position **3** to the upper position **1** and vice versa. When the tabs are in the unlock position (inboard), the adjustable floor may be removed completely.

To slide the adjustable floor from the lower position **3** to the upper position **1** using the guide tracks:

1. Fold the adjustable floor **2** in half.
2. Lift the floor and pull up along the guide tracks.
3. Push the floor back then unfold the floor.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "In case of emergency (section 6)" of your Owner's Manual.

# ESSENTIAL INFORMATION

## TIRE PRESSURE MONITORING SYSTEM (TPMS) WITH EASY-FILL TIRE ALERT (if so equipped)

- When one or more tires are low in pressure and air is needed, the low tire pressure warning light **2** will illuminate in the odometer **1** and the **CHECK TIRE PRES** (pressure) warning message **3** is displayed.
  - The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mi (1.6 km) at moderate speeds.
- After tire pressures are adjusted, drive the vehicle at speeds above 16 mph (25 km/h) to activate the TPMS and the low tire pressure warning light **2** will extinguish.
- When adding air to an under-inflated tire, the TPMS with Easy-Fill Tire Alert (if so equipped) provides visual and audible signals to help you inflate the tire to the recommended COLD tire pressure.
- To use the Easy-Fill Tire Alert (if so equipped):
  1. Move the shift lever to the **P (Park)** position and apply the parking brake.
  2. Place the ignition switch in the ON position. Do not start the engine.
  3. Add air to the under-inflated tire, and within a few seconds, the hazard warning lights will start flashing.
  4. When the designated tire pressure is reached, the horn will beep once and the hazard warning flashers will stop flashing.
  5. Repeat this procedure for any additional under-inflated tires.
- When the low tire pressure warning light **2** flashes for 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked. It is recommended that you visit a Nissan dealer for this service.
- Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light **2** to illuminate. If the warning light illuminates, check the tire pressure in your tires.
  - Check the tire pressure (including the spare tire) often and always prior to long distance trips.
- The Tire and Loading Information label contains valuable information. Please refer to the "Technical and consumer information (section 10)" of your Owner's Manual for the location of the Tire and Loading Information label.




Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.


For more information, refer to the "Instruments and controls (section 2)", the "Starting and driving (section 5)", the "In case of emergency (section 6)" and the "Do-it-yourself (section 8)" of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to [www.nissanownersinfo.mobi](http://www.nissanownersinfo.mobi).

# ESSENTIAL INFORMATION

## LOOSE FUEL CAP

- A **LOOSE FUEL CAP** warning message will display in the odometer **1** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will extinguish when the vehicle detects the fuel-filler cap is properly tightened and the reset switch **2** is pressed for more than 1 second.
- If the cap is not fully tightened, the Malfunction Indicator Light  may also illuminate.

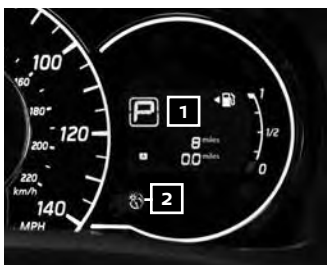

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" and the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.

## FUEL-FILLER DOOR

- The fuel-filler door release **1** is located to the left of the steering wheel and below the instrument panel.
- To open the fuel-filler door, pull the release. To lock, close the fuel-filler door securely.
- The fuel-filler door is located on the driver's side of the vehicle.




Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" and the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.




## CLOCK SET/ADJUSTMENT

### FM/AM RADIO

1. Press the  **MENU** button on the control panel.
2. Touch the "Settings" key.
3. Touch the "Clock" key.

■ The following settings can be adjusted:

- **On-screen Clock:** The clock in the upper right corner of the display can be turned "ON" or "OFF".
- **Clock Format (24h):** The clock can be set to 12 hours or 24 hours.
- **Daylight Savings Time:** The application of Daylight Savings Time can be turned "ON" or "OFF".
- **Set Clock Manually:** The clock can be adjusted manually. Choose from "AM/PM" and adjust the "Hours" and "Minutes" values by touching the "-" / "+" keys.

4. Touch the  key to return to the previous screen.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.





For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.


# FIRST DRIVE FEATURES

## NISSAN INTELLIGENT KEY® SYSTEM (if so equipped)

The Nissan Intelligent Key® system allows you to lock or unlock your vehicle and activate the panic alarm. It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).



- The operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, press the  button **1** on the key fob or push either door handle request switch **2** once.
- To unlock the vehicle, perform one of the following procedures:
  - Push either door handle request switch **2** once; the corresponding door will unlock. Push the door handle request switch **2** again within 60 seconds; all other doors will unlock, or
  - Press the  button **3** on the key fob to unlock the driver's side door. Press the  button **3** again; all other doors will unlock.
- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button **4** for more than 0.5 seconds. Once activated, the panic alarm and headlights will stay on for a period of time.

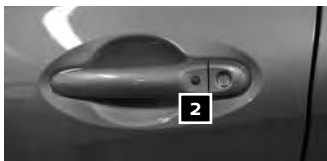

### INTELLIGENT KEY BATTERY DISCHARGE

- If the battery of the Intelligent Key is discharged or environmental conditions interfere with the Intelligent Key operation, start the engine according to the following procedure:

1. Move the shift lever to the **P (Park)** or **N (Neutral)** position.
2. Firmly apply the foot brake.
3. Touch the ignition switch with the Intelligent Key, and a chime will sound.
4. Within 10 seconds after the chime sounds, push the ignition switch while depressing the brake pedal and the engine will start.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Pre-driving checks and adjustments (section 3)**", the "**Starting and driving (section 5)**", the "**Do-it-yourself (section 8)**" and the "**Maintenance and schedules (section 9)**" of your Owner's Manual.

## REAR HATCH RELEASE (Nissan Intelligent Key® models only – if so equipped)

- To open the rear hatch, unlock it with one of the following operations:
  - Press the **1** button **1** on the key fob twice.
  - Push the rear hatch request switch **2** while carrying the Nissan Intelligent Key® with you.
- Then pull the handle **3** located below the rear hatch request switch **2**.
- Pull up on the rear hatch to open.




Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.



## SEAT ADJUSTMENTS

- To slide the front seat forward or backward, pull up on the lever **1** under the front of the seat and slide forward or backward. Release the lever to lock the seat in position.
- To recline the seatback, pull up on the lever **2** and lean back. To bring the seatback forward, pull the lever up and lean your body forward. Release the lever to lock the seatback in position.

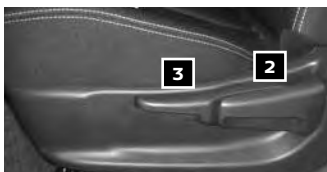

SEAT LIFTER (if so equipped for driver's seat)

- To adjust the seat height, pull up or push down on the adjusting lever **3** repeatedly.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Safety – Seats, seat belts and supplemental restraint system (section 1)" of your Owner's Manual.

# FIRST DRIVE FEATURES

## STARTING/STOPPING THE ENGINE

### CONTINUOUSLY VARIABLE TRANSMISSION

(Nissan Intelligent Key® models only – if so equipped)

- It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).
- Depress the brake pedal.
  - If the brake pedal is not depressed, pushing the ignition switch once enters to ACC.
  - If the ignition switch is pushed a second time, the vehicle will enter to ON.
- Move the shift lever to the **P (Park)** position.
- Push the ignition switch to start or stop the engine.



### CONTINUOUSLY VARIABLE TRANSMISSION (if so equipped)

- Depress the brake pedal.
- Move the shift lever to the **N (Neutral)** position.
- Turn the ignition switch to the **START** position.



### TURNING THE ENGINE OFF


 
- Turn the ignition switch to the **LOCK** position to turn the engine off.
- For Nissan Intelligent Key models only (if so equipped), apply the brake pedal, move the shift lever to the **P (Park)** position, apply the parking brake and push the ignition switch button.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.


## HEADLIGHT CONTROL SWITCH

### HEADLIGHT CONTROL

- Turn the headlight control switch to the  position **1** to turn on the front parking, tail, license plate and instrument panel lights. Turn the switch to the  position **2** to turn on the headlights.


 



### HIGH BEAM SELECT

- With the headlights ON, push the headlight control switch forward **3** to select the high beam function. The blue indicator light  will illuminate in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light will extinguish.
- Pull and release the headlight control switch **4** to flash the headlight high beams on and off.




### FOG LIGHT SWITCH (if so equipped)

- The headlights must be on and the low beams  selected for the fog lights to operate.
- Turn the switch (inside collar) to the  position **5** to turn the fog lights on.
- Turn the switch (inside collar) to the **OFF** position to turn the fog lights off.

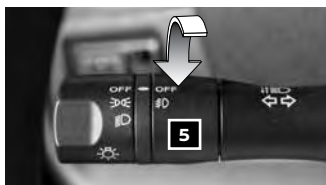

### LANE CHANGE SIGNAL

- Move the lever up or down until the turn signal begins to flash but the lever does not latch to signal a lane change. Hold the lever until the lane change is completed.
- Move the lever up or down until the turn signal begins to flash but the lever does not latch and release the lever. The turn signal will automatically flash three times.

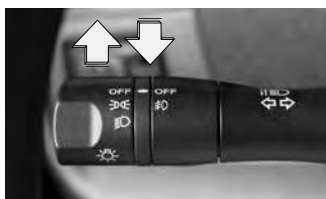

Choose the appropriate method to signal a lane change based on road and traffic conditions.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

# FIRST DRIVE FEATURES






## HEATER AND AIR CONDITIONER (manual)

### 1 FAN SPEED CONTROL DIAL

- Turn the dial to the left to decrease fan speed or to the right to increase fan speed.

### 2 AIR FLOW CONTROL DIAL

- Turn the dial to select one of the following air flow outlets:

 




-  Air flows from the center and side vents.
-  Air flows from the center, side and foot vents.
-  Air flows mainly from the foot vents.
-  Air flows from the front defroster and foot vents.
-  Air flows mainly from the front defroster and side vents.




### 3 TEMPERATURE CONTROL DIAL

- Turn the temperature control dial left for cooler air or right for warmer air.

### 4 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- First, move the air intake lever **5** to the left position  to draw fresh air into the vehicle.
- Next turn the air flow control dial **2** to the front defroster mode .
- Then turn the  fan control dial **1** to the desired position and the temperature control dial **3** to the desired position.
- When the  or  position is selected, press the **A/C** button **7** for better performance. This will dehumidify the air and help defog the windows.

### 6 REAR WINDOW DEFROSTER SWITCH

- Push the rear window defroster switch  to turn the system on or off.
- This function automatically turns off after approximately 15 minutes.

### 7 A/C BUTTON


- Press the **A/C** button to turn the air conditioner on. This system helps cool and dehumidify the air inside the cabin and defog the windows.


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

## WIPER AND WASHER SWITCH


- Move the lever to one of the following positions to operate the windshield wipers:

- 1** Mist (**MIST**) – One sweep operation of the wipers.
- 2** Intermittent (**INT**) – Wipers operate intermittently. The intermittent operation speed can be adjusted by rotating the time control ring **3** to increase or decrease wiper speed.
- 4** Low (**LO**) – Wipers operate at a continuous low-speed.
- 5** High (**HI**) – Wipers operate at a continuous high-speed.
- 6** Washer  – Pull the lever toward you to activate the washer. The wipers will operate several times.

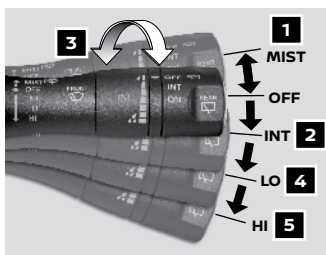

## REAR WIPER AND WASHER

- 7** Intermittent (**INT**) – Rear wiper operates intermittently.
- 8** Low (**ON**) – Rear wiper operates at a continuous low-speed.
- 9** Push the lever forward to activate the rear washer. The rear wiper will operate several times.

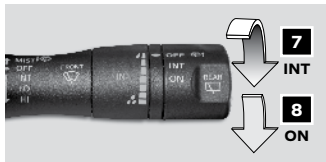


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

## OUTSIDE MIRROR CONTROL SWITCH

- Push the small switch **1** to the right or left to select the right or left mirror.
- Adjust each mirror to the desired position using the switch **2**.
- Push the switch **1** to the center (neutral) position to prevent accidentally moving the mirror.

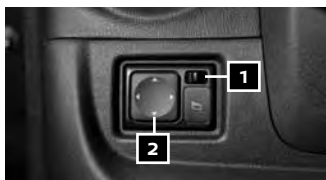

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

# FIRST DRIVE FEATURES

## CRUISE CONTROL (if so equipped)

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 mph (40 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **ON/OFF** switch **1** on the steering wheel. The **CRUISE** indicator light in the instrument panel will illuminate.
- To set a cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **2** on the steering wheel and release. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **3** on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **2** on the steering wheel. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, push the **CANCEL** switch **4** on the steering wheel.
- To turn off cruise control, push the **ON/OFF** switch **1** on the steering wheel. The **CRUISE** indicator light in the instrument panel will extinguish.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.


For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.






## FM/AM RADIO

### 1 PUSH (power) BUTTON/VOL (volume) CONTROL KNOB

- Press the **PUSH ** button to turn the audio system on or off.
- Turn the **VOL** (volume) control knob right or left to increase or decrease the volume.

### 2 / (SEEK/TRACK) BUTTONS

- Press the  button or the  button to seek up or down to the next receivable station.

### 3 AUDIO BUTTON

- Press the **AUDIO** button to bring up the current source's control screen.
- Pressing this button will give access to the **AM, FM, USB/iPod®, Bluetooth Audio** or **AUX** audio source.
- Twelve memory stations can be set for the FM band and six for the AM band. These appear at the bottom of the screen when one of these sources is selected.
- To store a station in a preset, you must first select a radio band by touching the "AM" key **4** or "FM" key **5** then tune to the desired AM or FM radio station. Next, touch and hold the desired station preset key until you hear a beep. The channel indicator will then display, and the sound will resume. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then touch the corresponding station select key.

### 4 AM KEY / 5 FM KEY

- Touch the "AM Menu" or "FM Menu" key to view the station list.

### 6 AUX KEY

- A cable with 1/8 in (3.5 mm) stereo mini plugs is required for audio playback.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.





For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.


# SYSTEM GUIDE

## BLUETOOTH® HANDS-FREE PHONE SYSTEM\*



- A cellular phone should not be used while driving so full attention may be given to vehicle operation.
- For Information regarding connecting your cellular phone, refer to the connecting procedure within this guide.


### SYSTEM OPERATING TIPS

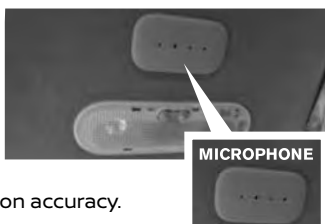- Press the  or  button on the steering wheel to interrupt the voice prompts at any time and speak a command after the tone.
- Reduce background noise as much as possible by closing windows and pointing heater and air conditioner vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.
- If you experience difficulty with the Voice Recognition System recognizing a contact name, please try saying both the first and last name of the contact as this improves recognition accuracy.
- To cancel a Voice Recognition session, simply wait 5 seconds, say "Cancel" or "Quit", or press and hold the  or  button on the steering wheel for 5 seconds.
- To increase or decrease the volume of the voice prompts, push the volume control switches **+** or **-** on the steering wheel or turn the volume control knob on the control panel while the audio system is responding.
- For more detailed information and instructions, refer to your cellular phone's Owner's Manual and visit [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth).




### CONNECTING PROCEDURE

- The vehicle must be stationary when connecting the cellular phone.
1. Press the  or  button on the steering wheel. The system announces the available commands.
  2. Say: "Add Phone". The system acknowledges the command and asks you to initiate connecting from the cellular phone handset.
  3. Initiate connecting from the cellular phone.
    - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible cellular phones, please visit [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth).

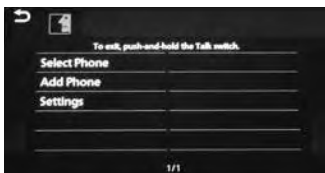

- When prompted, confirm the PIN on the display with the PIN shown on the handset. If your device does not support Secure Simple Pairing and requests you to input a PIN, enter "1234" from the handset.

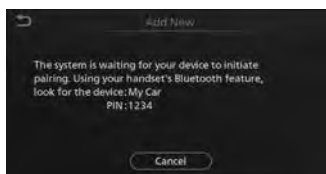

- Some cellular phones may incorrectly state that the connection was unsuccessful. Please verify that the touch-screen display shows the connection is successful, or press the **HOME MENU** button on the control panel, touch the "Connections" key and confirm that your cellular phone is listed.

4. When connecting is complete, the screen will return to the Phone menu display.

#### PHONEBOOK SETUP

- Press the **HOME MENU** button on the control panel.


- Touch the "Phone" key and then touch the "Phonebook" key.



- Depending on your cellular phone, the system may automatically download your cellular phone's entire phonebook to the vehicle's Bluetooth® system.

- The Quick Dial phonebook can also be set with up to twenty entries that can be used with your cellular phone.

1. From the "Phone" display screen, touch the "Quick Dial" key.

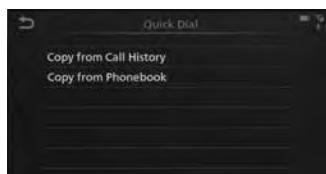



2. Touch the "Edit" key and then the "Add New" key at the top of the display. There are


different methods to input a phone number. Select one of the following options:

- "Copy from Call History" to save a number from the Outgoing, Incoming or Missed Calls lists.
- "Copy from the Phonebook" to save a number that has been downloaded from your handset to the vehicle.



# SYSTEM GUIDE
  
## MAKING A CALL FROM THE PHONEBOOK


 


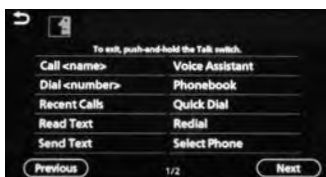- In some cases, names stored using all UPPERCASE letters may not be recognized by the Voice Recognition system.
1. Press the  or  button on the steering wheel.
  2. After waiting for the tone, say "Call".
  3. The system will ask for a phonebook name followed by location type if known.
  4. After the next tone, speak the name of a phonebook entry. For example, "Michael Smith".
  5. If it does not automatically dial, confirm the correct name and location is recognized by saying or selecting the item number.





## MAKING A CALL BY PHONE NUMBER

1. Press the  or  button on the steering wheel. A tone will sound.
2. Say: "Dial". The system will ask for a phone number.
3. Say the number you wish to call starting with the area code in single digit format.
4. The system repeats it back and announces the available commands.
5. Say: "Dial". The system acknowledges the command and makes the call.

## RECEIVING/ENDING A CALL

- To accept the call:
  - Press the  or  button on the steering wheel, or
  - Touch the "Answer" key on the touch-screen display.
- To reject the call:
  - Touch the "Decline" key on the touch-screen display.
- To hold the call:
  - Touch the "Hold Call" key on the touch-screen display.
- To hang up:
  - Press the  or  button on the steering wheel, or
  - Touch the "Hang up" key on the touch-screen display.

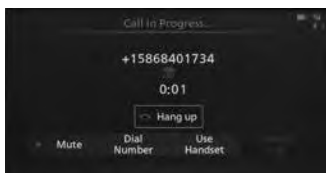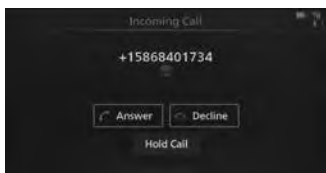




\* Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual or please visit [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth).

## HANDS-FREE TEXT MESSAGING ASSISTANT\*

- This text messaging feature allows for sending and receiving text messages through the vehicle's interface.
- Using predefined or custom messages, send a text to an entry stored in your Bluetooth® Hands-free Phone System.
- Once enabled, the text message, sender, date and delivery time are shown on the control panel display when the vehicle speed is less than 5 mph (8 km/h).
- Text messages have the option of being read aloud.
- Once the vehicle is in motion, text messages can only be replied to using the Voice Recognition  or  button on the steering wheel.
- Text messages can be created manually when the vehicle is not in motion.
- Custom text messages must be created in advance.
- Many cellular phones may require special permission to enable text messaging. Check the cellular phone's screen during Bluetooth® pairing. For some cellular phones, you may need to enable "Notifications" in the cellular phone's Bluetooth® menu for text messages to appear on the touch-screen display. For more detailed information and instructions, refer to your cellular phone's Owner's Manual.
- Text message integration requires that the cellular phone support Message Access Profile (MAP) for both receiving and sending text messages. Some cellular phones may not support all text messaging features. Please see [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth) for compatibility information as well as your device's Owner's Manual.

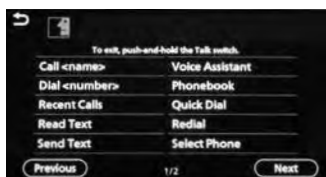

\* Laws in some jurisdictions may restrict the use of "Text-to-Speech". Some of the applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

# MEMO

# MEMO



## Helpful Resources

Below is a list of helpful resources that can be used to learn more about the vehicle's systems and feature operations.

- Vehicle Owner's Manual
- Printed Quick Reference Guide (this document)
- [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth)
- [www.youtube.com/user/NissanUSA](http://www.youtube.com/user/NissanUSA)
- Nissan Consumer Affairs: 1-800-647-7261
- Electronic Quick Reference Guide (Use Quick Response (QR) code or URL below.)
- Nissan Quick Guide (available in the App Store® or Google Play store for download to your smartphone)



To view detailed instructional videos, go to [www.nissanownersinfo.mobi/2018-5/versanote](http://www.nissanownersinfo.mobi/2018-5/versanote) or snap this barcode with an appropriate barcode reader.



This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain with this Quick Reference Guide all revision updates sent to you by NISSAN to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the NISSAN website at <https://owners.nissanusa.com/owners/navigation/manualsguide>. If you have questions concerning any information in your Owner's Manual, contact NISSAN Consumer Affairs. See the NISSAN CUSTOMER CARE PROGRAM page in the Owner's Manual for contact information.

