


2010 **VERSA**

QUICK REFERENCE GUIDE



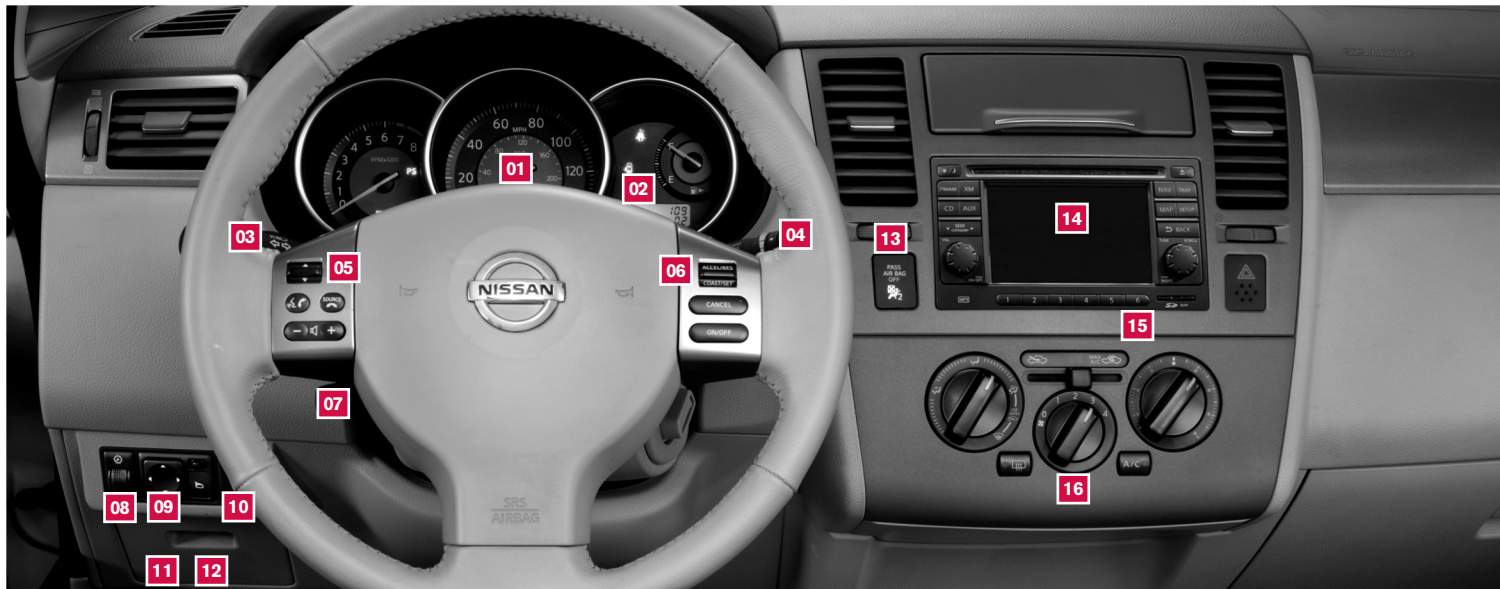

- 01** LOW TIRE PRESSURE WARNING LIGHT
- 02** TWIN TRIP ODOMETER
- 03** HEADLIGHT AND TURN SIGNAL CONTROL
- 04** WINDSHIELD WIPER/WASHER SWITCH

- 05** STEERING WHEEL SWITCHES FOR AUDIO CONTROL AND BLUETOOTH*
- 06** CRUISE CONTROL
- 07** STEERING WHEEL TILT ADJUSTMENT*
- 08** INSTRUMENT BRIGHTNESS CONTROL*

- 09** OUTSIDE MIRROR CONTROL SWITCH*
- 10** VEHICLE DYNAMIC CONTROL (VDC) OFF SWITCH (behind steering wheel)
- 11** FUEL-FILLER DOOR RELEASE*
- 12** HOOD RELEASE*

- 13** FRONT PASSENGER AIR BAG STATUS LIGHT
- 14** AUDIO AND NAVIGATION SYSTEM
- 15** AUXILIARY AUDIO INPUT JACK* (if so equipped)
- 16** MANUAL CLIMATE CONTROL

*See your Owner's Manual for more information.

TABLE OF CONTENTS


Remote Keyless Entry System (if so equipped)	2
NISSAN Intelligent Key™ (if so equipped)	2
Automatic Door Locks (if so equipped)	3
Windshield Wiper/Washer Switch	3
Headlight and Turn Signal Control	4
Steering Wheel Switches for Audio Control/Bluetooth® (if so equipped)	4
Cruise Control (if so equipped)	5
Manual Climate Control	5
FM/AM/XM®* Radio with CD Player (if so equipped)	6
iPod® Player Operation (if so equipped)	8
Clock Set/Adjustment	8
Twin Trip Odometer	9
4-Speed Automatic Transmission (if so equipped)	9
Continuously Variable Transmission (CVT) (if so equipped)	9
5-Speed Manual Transmission (if so equipped)	10
6-Speed Manual Transmission (if so equipped)	10
Vehicle Dynamic Control (VDC) Off Switch (if so equipped)	10
Front Passenger Air Bag Status Light	11
Tire Pressure Monitoring System (TPMS)	11
Seat Belt Warning Light and Chime	11
High and Low Temperature Indicator	12
Child Safety Rear Door Locks	12
Moonroof Controls (if so equipped)	12
Interior Light	13
Front Seat Adjustments	13
Rear Seat Adjustments	13
Bluetooth® Hands-free Phone System (if so equipped)	14
Navigation System (if so equipped)	17

This easy-to-use Quick Reference Guide is intended to help you more fully appreciate some of the unique features and functions of your new vehicle. However, it is not intended to replace your Owner's Manual. The Owner's Manual contains more detailed information to help you better understand the important safety warnings, features, operation and maintenance of your vehicle. All information, specifications, photographs and illustrations in this publication are those in effect at the time of printing. NISSAN reserves the right to change specifications or design without notice and without obligation.

REMOTE KEYLESS ENTRY SYSTEM (if so equipped)




LOCK DOORS

Press the  button to lock all doors.




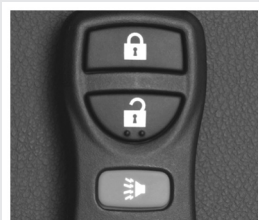
UNLOCK DOORS

Press the  button once to unlock the driver's door only. Press the button again within 5 seconds to unlock all doors.



USING THE PANIC ALARM

Press and hold the  button for longer than 0.5 seconds. The panic alarm will sound and the headlights will stay on for 25 seconds. The panic alarm stops when it has run for 25 seconds or when any button is pressed on the keyfob.




NISSAN INTELLIGENT KEY™ (if so equipped)

The NISSAN Intelligent Key™ allows you to lock or unlock your vehicle, open your trunk or rear hatch and start the engine.

NOTE: It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

- The operating range of the door and rear hatch/trunk lock/unlock function is approximately 31 in (0.8 m).
- Locking the vehicle - Push any door handle Request Switch **01** once.
- Unlocking the vehicle - Push any door handle Request Switch **01** once. The corresponding door will unlock. Push the door handle Request Switch **01** again within 1 minute; all other doors will unlock.

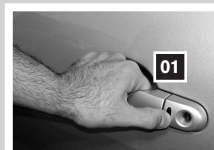

OPENING THE REAR HATCH (if so equipped)

- Push the Rear Hatch Request Switch **02** .
- Push the Release Switch **03** under the rear hatch handle.
- Pull up and out on the handle to open the rear hatch.



OPENING THE TRUNK (if so equipped)

- Push the Trunk Request Switch **02** .
- Push the Release Switch **03** under the trunk handle.
- Pull up and out on the handle to open the trunk.



SILENCING THE HORN BEEP FEATURE

- To deactivate: Press and hold the  and  buttons for at least 2 seconds.
- To activate: Press and hold the  and  buttons for at least 2 seconds.

AUTOMATIC DOOR LOCKS (if so equipped)

- All doors lock automatically when the vehicle speed reaches 15 MPH (24 km/h).
- All doors unlock automatically when the ignition is placed in the OFF position (NISSAN Intelligent Key™ equipped vehicles) or when the key is removed from the ignition switch (mechanical key equipped vehicles).


The automatic lock and unlock functions can be deactivated or activated independently of each other. To deactivate or activate the automatic door lock or unlock system, perform the following procedure:

1. Close all doors.
2. Place the ignition switch in the ON position.
3. Do one of the following within 20 seconds of performing Step #2:
 - To change AUTO UNLOCK settings: Push and hold the Power Door Lock switch to the **UNLOCK** position for more than 5 seconds.
 - To change AUTO LOCK settings: Push and hold the Power Door Lock switch to the **LOCK** position for more than 5 seconds.
4. When activated, the hazard indicator will flash twice. When deactivated, the hazard indicator will flash once.
5. The ignition switch must be placed in the OFF and ON position again between each setting change.

WINDSHIELD WIPER/WASHER SWITCH



- The ignition switch must be in the ON position to activate the windshield wipers.
- Move the lever to the following positions to operate the windshield wipers:


- 1A** Intermittent (**INT**) – Front wipers operate intermittently and can be further adjusted by twisting the time control ring **1B**.
 - 02** Low Speed (**LO**) – Continuous low-speed operation of front wipers.
 - 03** High Speed (**HI**) – Continuous high-speed operation of front wipers.
 - 04** Mist (**MIST**) – Lift the lever up for one sweep of the front wipers.
 - 05** Rear Wiper (**REAR**) (if so equipped) – Twist the end section to operate the first (**INT**) or second (**ON**) speed settings for the rear wipers.
- For Front Washer, pull the lever toward you.
 - For Rear Washer, push the lever away from you.

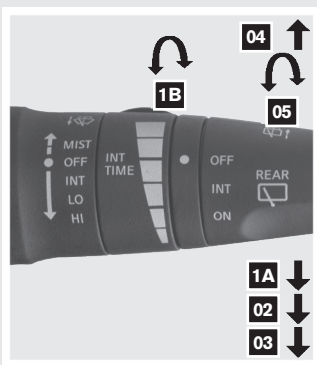

HEADLIGHT AND TURN SIGNAL CONTROL

  
HEADLIGHT CONTROL SWITCH

- Turn the headlight control switch **01** to the  position to turn on the front parking, tail, license plate and instrument panel lights.
- Turn the headlight control switch **01** to the  position to turn on the headlights. All other lights remain on.

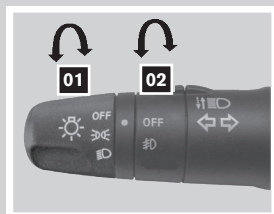



FOG LIGHT OPERATION (if so equipped)

  NOTE: The headlights must be on and the low beams selected for the fog lights to operate.


 
 

- Turn the switch (inside collar) **02** to the  position to turn on the fog lights.
- Turn the switch (inside collar) **02** to the **OFF** position to turn off the fog lights.

HIGH BEAM

- Push the headlight control switch forward **A** to select the high beam function. The blue  indicator light illuminates. Pull the headlight switch back to the original position to select the low beam function. The blue indicator light goes off.
- Pull and release the headlight control switch **B** to flash the headlight high beams on and off.

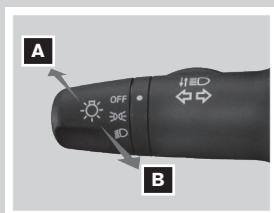

STEERING WHEEL SWITCHES FOR AUDIO CONTROL/ BLUETOOTH® (if so equipped)

- Press the **SOURCE** button to turn the audio system on.
- To choose Preset A, B, C, CD or AUX press **SOURCE** repeatedly.
- The tuning up or down  switch can be used to perform the following:
 - Push the  switch for less than 1.5 seconds to change to a preset station.
 - Push and hold the  switch for more than 1.5 seconds to seek the next or previous broadcasting radio station.
 - Push the  switch while playing a CD for less than 1.5 seconds to change tracks on the CD.
- Push the **+** or **-** control switch to increase or decrease the volume.




CRUISE CONTROL (if so equipped)

- To activate cruise control, push the **ON/OFF** switch. The indicator light in the instrument panel will illuminate.
- To set cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch and release. The SET indicator light in the instrument panel will illuminate.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch. When the vehicle attains the speed you desire, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch. Release the switch when the vehicle slows to the desired speed.
- To cancel cruise control, push the **CANCEL** switch or tap the brake pedal. The SET indicator light in the instrument panel will go out.
- To resume a preset speed, push and release the **ACCEL/RES** switch. The vehicle returns to the last set cruising speed when the vehicle speed is over 25 MPH (40 km/h).
- To turn off cruise control, push the **ON/OFF** switch. Both the CRUISE indicator light and the SET indicator light in the instrument panel will go out.



MANUAL CLIMATE CONTROL

01 FAN SPEED CONTROL DIAL






Turn the fan speed control dial  to the left (slow) or right (fast) to control fan speed.

02 TEMPERATURE CONTROL DIAL

 

Turn the temperature control dial to select the desired temperature. Turn the control dial to the left for cold air or right for hot air.

03 AIR FLOW CONTROL DIAL


Turn the dial to select from the following air flow outlets:

-  Air flows from the center and side vents.
-  Air flows from the center, side and foot vents.
-  Air flows mainly from the foot vents.
-  Air flows from the defroster and foot vents.
-  Air flows mainly from the defroster vents.

04 DEFROSTING/DEMISTING FRONT AND SIDE WINDOWS

- Move the air intake lever **07** to the  left position for fresh air.
- Turn the air flow control dial **03** to the front window defroster mode .
- Turn the temperature control dial **02** left or right to set the desired temperature.
- To set the defroster on high, turn both the fan speed control dial **01** and the temperature control dial **02**, all the way to the right.
- The A/C will automatically turn on for enhanced defrosting/demisting performance. The A/C indicator light will not illuminate.

 


05 REAR WINDOW DEFROSTER

Push the rear window defroster switch  on. Push the switch again to manually turn the defroster off. This function automatically turns off after approximately 15 minutes.

06 A/C ON/OFF BUTTON (if so equipped)

Press the **A/C** button to manually turn the A/C on or off.

07 AIR INTAKE LEVER

- Move the air intake lever to the  position to draw in fresh outside air.
- Move the air intake lever to the  position to recirculate air inside the vehicle.
- Move the air intake lever to the  position for maximum cooling when using the air conditioner (if so equipped).



FM/AM/XM[®]* RADIO WITH CD PLAYER (if so equipped)

01 MUTE BUTTON

Press the **MUTE** button to mute the audio sound. Press again to resume the audio sound.

02 FM/AM BUTTON

Pressing the **FM/AM** button will change the band to either AM, FM1 or FM2 radio stations.

03 CD BUTTON

Press the **CD** button to play a CD.

05 AUX BUTTON

- Press the **AUX** button to play a compatible device such as an MP3 player when it is plugged into the **AUX** (auxiliary) jack.
- Pressing the **AUX** button will also change the satellite band (AUX, SAT1 and SAT2) (if so equipped).

NOTE: You may need to adjust the volume on any compatible device plugged into the auxiliary jack to find the most desired sound level of the audio system.

06 EJECT BUTTON

EJECT A DISC - Press the **▲** button for less than 1.5 seconds. The CD will then eject.

07 DISP/TEXT BUTTON

Press the **DISP/TEXT** button to change the text displayed while playing an FM radio station, CD or iPod®.

08 SEEK/TRACK BUTTON

- To scan quickly through each broadcasting station, press the **SEEK/TRACK** button.
- To skip from one track to another on a CD, press the **SEEK/TRACK** button.

10 STATION SELECT BUTTONS

Your radio is equipped with three separate banks, each with six station presets. Choose a radio band AM, FM1 or FM2 using the **FM/AM** button. Tune to the desired station using **SEEK/TRACK** or **SCAN** tuning. Press and hold any of the desired station select buttons (1 - 6) until a beep is heard. Now the station is set in memory.

11 SCAN/RPT BUTTON

- Press the **SCAN/RPT** button to stop at each broadcasting station for 5 seconds. Pressing the button again during this 5-second period will stop scan tuning and the radio will remain tuned to that station.
- Press the **SCAN/RPT** button to change the play pattern while listening to a CD, MP3 CD or iPod®.

13 AUDIO BUTTON

- To adjust the bass, treble, fade, balance, Speed Sensitive Volume (SSV) (if so equipped) and beep settings, press the **AUDIO** button until the desired mode appears in the display.
- Press the **TUNE** or **SEEK** buttons to adjust the selected mode to the desired level.
- Once you've adjusted the sound quality to the desired level, press the **AUDIO** button repeatedly until the radio or CD mode appears on the display.

15 TUNE/FF-REW/FOLDER BUTTON

- To manually tune the radio, press the **TUNE/FF-REW/FOLDER** button.
- While listening to a CD, press the **TUNE/FF-REW/FOLDER** button for more than 1.5 seconds to **▲** fast forward or **▼** rewind. When the button is released, the CD returns to normal play.
- If playing a CD that is formatted with MP3/WMA folders, press the **TUNE/FF-REW/FOLDER** button to scroll through the available folders.

iPod® PLAYER OPERATION (if so equipped)

The iPod® outlet connector is located on the center console. Connect the cable to the iPod® connector and then connect the other end of the cable to your iPod®. Your vehicle is equipped with the specialized cable for connecting the iPod® to your vehicle's audio unit. If compatible, the battery of your iPod® will charge while connected to the vehicle.

PLAYING AN iPod®

The interface for iPod® operation shown on the vehicle's display is similar to the iPod® interface. The iPod® can only be operated by the vehicle audio controls while connected.

04 IPOD® BUTTON

- Press the **iPod®** button to switch to the iPod® mode.

09 IPOD® MENU BUTTON

- Press the **iPod® MENU** button to show the interface for iPod® operation on the audio display.

TUNE/FF-REW/FOLDER BUTTON

- When the **TUNE/FF-REW/FOLDER** button is pressed for more than 1.5 seconds, the iPod® will play while fast forwarding or rewinding. When the button is released, the iPod® will return to normal play.
- When the **TUNE/FF-REW/FOLDER** button is pressed for less than 1.5 seconds while the iPod® is playing, the next track or the beginning of the current track on the iPod® will be played.

SCAN/RPT BUTTON

- Press the **SCAN/RPT** button to change the iPod® play pattern.

DISP/TEXT

- Press the **DISP/TEXT** button to change the displayed program information (Album Title, Artist Name, Song Title, Normal Mode, Podcast) while a program is playing.

12 ENTER AND 14 BACK BUTTONS

Press the **ENTER** button while the top menu is displayed to show program details on the audio display. Use the **SEEK** button to scroll through the choices and press the **ENTER** button to make a selection. Press the **BACK** button to return to the previous display.


*XM® Satellite Radio is only available on vehicles equipped with optional XM® Satellite subscription service.

CLOCK SET/ADJUSTMENT

Pressing the **CLOCK** button displays the clock with the radio on or off.


To set the clock:

1. Press and hold the **CLOCK** button until the clock display starts to flash.
2. Press the **SEEK/TRACK** button to adjust the hours.
3. Press the **TUNE/FF-REW/FOLDER** button to adjust the minutes.
4. Press the **CLOCK** button again to exit the clock set mode.

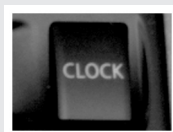

TWIN TRIP ODOMETER

- The twin trip odometer records the distance of two individual trips.
- Press the button **01** to change the display as follows:
Trip A → Trip B → Trip A.
- Press and hold the button **01** for more than 1 second to reset the currently displayed trip odometer to zero.

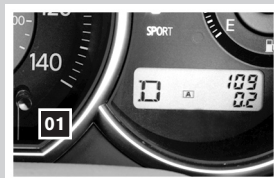

4-SPEED AUTOMATIC TRANSMISSION (if so equipped)

- The 4-speed automatic transmission is electronically controlled to produce maximum power and smooth operation.
- The automatic transmission in your vehicle is designed so that the brake pedal must be depressed before shifting from P (PARK) to any gear position while the ignition switch is in the ON position.
- The shift lever cannot be moved out of P (PARK) and into any of the other gear positions if the ignition is turned to the LOCK position or if the key is removed.



CONTINUOUSLY VARIABLE TRANSMISSION (CVT) (if so equipped)

- The CVT does not produce a gear change sensation like traditional automatic transmissions.
- R (REVERSE) speed for CVT vehicles is limited to 15 MPH (25 km/h).

The transmission in your vehicle requires a special fluid available only at your NISSAN dealer. No other fluid will meet the exact requirements of the CVT.

STARTING THE ENGINE WITH CVT (NISSAN Intelligent Key™ models only)

- Depress the brake pedal.
- Push the ignition knob in.
- Confirm the Intelligent Key system warning light is illuminated green.
- Turn the ignition knob to start the engine.



TURNING THE ENGINE OFF WITH CVT (NISSAN Intelligent Key™ models only)

- Shift the shift lever into the P (PARK) position.
- Turn the ignition knob to the LOCK position.


OVERDRIVE (O/D) OFF SWITCH

- Each time your vehicle is started, the CVT is automatically "reset" to Overdrive on.
- To turn Overdrive mode off, push the **O/D OFF** switch **01**. The light in the instrument panel will illuminate.
- Use the Overdrive off mode when you need improved engine braking.

5-SPEED MANUAL TRANSMISSION (if so equipped)

To change gears, depress the clutch pedal fully and shift into the appropriate gear, then release the clutch pedal slowly.

- Start the vehicle in 1st gear and shift into 2nd, 3rd, 4th and 5th gear according to the vehicle speed.
- On the 5-speed manual transmission, you cannot shift directly from 5th gear into R (REVERSE). Stop the vehicle completely, move the shift lever into the N (NEUTRAL) position, then move into the R (REVERSE) position.

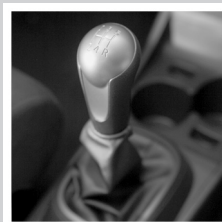


6-SPEED MANUAL TRANSMISSION (if so equipped)

LOCK OUT

- In 6-speed manual transmission equipped vehicles, the shift lever is equipped with a Reverse lock-out feature that prevents accidental selection of Reverse (instead of 1st gear).

SHIFTING TO REVERSE

- Lift up on the collar just below the shift knob, then move the shift lever left and up into Reverse.

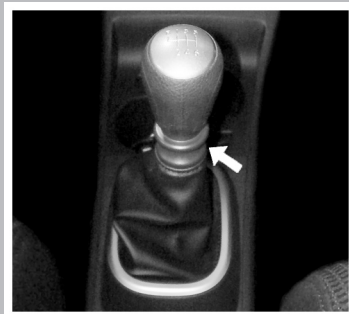

VEHICLE DYNAMIC CONTROL (VDC) OFF SWITCH (if so equipped)



The Vehicle Dynamic Control (VDC) system uses various sensors to monitor driver inputs and vehicle motion. Under certain driving situations, the system will control braking and engine output to help keep the vehicle on its steered path. VDC may need to be temporarily shut off if you are trying to free a vehicle stuck in snow or mud.

- Push the Vehicle Dynamic Control (VDC) OFF switch to deactivate the VDC system. The **VDC OFF** light will illuminate in the instrument panel gauge area.
- Push the Vehicle Dynamic Control (VDC) OFF switch again to activate the VDC system. The **VDC OFF** light in the instrument panel gauge area will turn off.
- The VDC system is active while the vehicle is running until the switch is pressed to turn it off.



FRONT PASSENGER AIR BAG STATUS LIGHT

This vehicle is equipped with the Nissan Advanced Air Bag System. Under some conditions, depending on the type of occupant or object detected in the front-passenger's seat by the occupant classification sensor, the front passenger air bag is designed to automatically turn **OFF**. When the front passenger air bag is **OFF**, the front passenger air bag status light will illuminate*. For example:

- When the system detects that the front-passenger's seat is occupied by a small adult, child or child restraint as outlined in the Owner's Manual, the  **will illuminate** to indicate that the front passenger **air bag is OFF and will not inflate in a crash**.
- When the front-passenger's seat is occupied and the passenger meets the conditions outlined in the Owner's Manual, the  **will not illuminate** to indicate that the front passenger **air bag is operational**.


***When the system detects that the front-passenger's seat is unoccupied, the front passenger air bag status light will not illuminate even though the front passenger air bag is OFF.**



TIRE PRESSURE MONITORING SYSTEM (TPMS)


This system monitors tire pressure. If the low tire pressure warning light illuminates, check the tire pressure in all four tires.

Adjust the low tire pressure to the recommended COLD tire pressure shown on the Tire and Loading Information label, located in the driver's door opening. After tire pressures are adjusted, the vehicle will need to be driven at speeds above 16 MPH (25 km/h) to activate the TPMS and turn off the low tire pressure warning light.

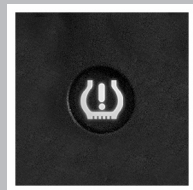

SEAT BELT WARNING LIGHT AND CHIME


- The light and chime remind you to fasten your seat belts. The light illuminates whenever the ignition switch is placed in the ON or START position and remains illuminated until the driver's seat belt is fastened. At the same time, the chime sounds for approximately 6 seconds unless the driver's seat belt is securely fastened.
- With the ignition ON, the seat belt warning light may also illuminate if the front-passenger's seat is occupied with the front-passenger's seat belt unfastened.

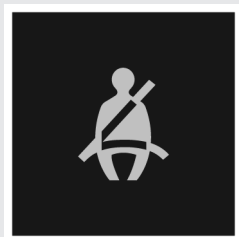

HIGH AND LOW TEMPERATURE INDICATOR

HIGH TEMPERATURE INDICATOR (Red)

 When the ignition switch is in the ON position, the high temperature warning light illuminates and then turns off.




LOW TEMPERATURE INDICATOR (Blue)

When the ignition switch is in the ON position, the low temperature indicator light illuminates and then turns off after the engine coolant has warmed up.

CHILD SAFETY REAR DOOR LOCKS

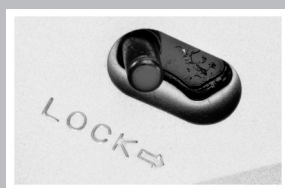

- The child safety lock levers are located on the edge of the rear doors.
- Child safety locks help prevent the rear doors from being opened accidentally, especially when small children are in the vehicle.
- When the lever is in the LOCK position, the door can only be opened from the outside.




MOONROOF CONTROLS (if so equipped)



The ignition switch must be in the ON position to operate the moonroof.

TILTING THE MOONROOF

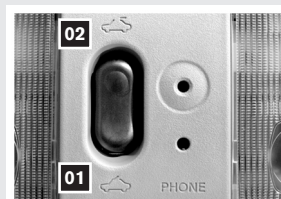- To tilt the moonroof up, push the tilt switch toward the  **01** position.
- To tilt the moonroof down, push the tilt switch toward the  **02** position.




SLIDING THE MOONROOF

- To open the moonroof, push the switch toward the  **02** position.
- To close the moonroof, push the switch toward the  **01** position.
- To open or close the moonroof part way, push the switch in either direction **01** or **02** while the moonroof is sliding to stop in the desired position.

INTERIOR LIGHT

- Push the switch to the ON position **01**. The interior lights illuminate regardless of door position.
- Push the switch to the OFF position **02**. The interior lights will not illuminate regardless of door position.
- Push the switch to the DOOR position **03**. The interior lights will stay on for approximately 30 seconds when:
 - The doors are unlocked by a keyfob, key or Power Door Lock switch while all doors are closed and the ignition is in the OFF position.
 - The driver's door is opened and then closed with the key removed from the ignition.
 - The key is removed from the ignition and all doors are closed.

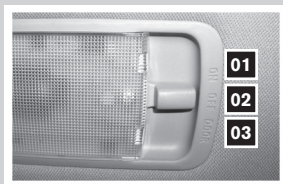

FRONT SEAT ADJUSTMENTS


WITH MANUAL SEATS

- Pull up on the lever **01** under the front of the seat and slide forward or backward. Release the lever to lock the seat in position.
- Lift the lever **02** on the side of the seat to adjust your seatback forward or backward; release the lever when you have found a comfortable angle and the seat belt fits properly.



Seat lifter (driver's seat, if so equipped)

- Pull up or push down the adjusting lever **03** repeatedly to adjust the seat height.

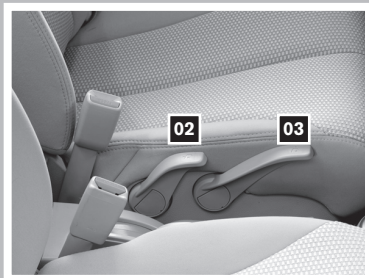


REAR SEAT ADJUSTMENTS

FOLDING DOWN THE REAR SEATS (if so equipped)

Either side of the seatback (or both) can be folded and has its own release.

- Pull the **01** release on the top of the seatback to fold the rear seat down.

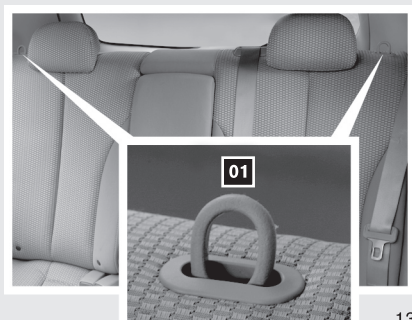



BLUETOOTH® HANDS-FREE PHONE SYSTEM (if so equipped)

With an overhead microphone and sound transmitted through the audio system speakers, the Bluetooth® Hands-free Phone System utilizes Bluetooth® wireless technology and voice recognition to provide hands-free cellular phone communication.

Bluetooth® controls location



SYSTEM OPERATING TIPS

- Close all windows. Surrounding noises may interfere with system operation and performance.
- Press the  button on the steering wheel to activate voice recognition.
- Wait for the tone before speaking.
- Begin speaking a command within 5 seconds of the tone.
- Speak in a clear and natural voice without pausing between words.
- To go back to the previous command, say "Go back" or "Correction."
- To cancel a voice recognition session, simply wait 5 seconds, say "Cancel" or "Quit," or press the  button.
- To increase or decrease the volume of the voice prompts, push the **VOL** (volume) control switch on the steering wheel or turn the **POWER/VOLUME** knob on the audio system while the system is responding.
- If the Voice Recognition system does not recognize your voice commands, train the system using the Speaker Adaptation Mode. See your Owner's Manual for detailed information.
- Some commands are not available while the vehicle is in motion.
- The "Help" command can be used in any menu to hear a list of available commands.
- Please refer to the cellular phone manufacturer's Owner's Manual for detailed information regarding your Bluetooth® phone.
- **For recommended phones and detailed instructions, please visit www.nissanusa.com/bluetooth.**


CONNECTING YOUR PHONE

To use the hands-free feature, you need to set up, or connect, the system to recognize your cellular phone(s). Five Bluetooth®-enabled phones can be connected. After setup, the system automatically connects with a connected phone when the ignition is in the ACC or ON position, as long as the phone is on and in the vehicle.


NOTE: Some cellular phones require the user to enable the automatic reconnection feature. Please refer to the cellular phone manufacturer's Owner's Manual for Bluetooth® setup information.

CONNECTING PROCEDURE

NOTE: The vehicle must be stationary when connecting the phone.

 


1. Press the  button on the steering wheel. The system announces the available commands.
2. Say "Connect Phone."
3. The system acknowledges the previous command and announces the next set of available commands. Say "Add phone."
4. Initiate connecting from the phone.
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible phones, please visit www.nissanusa.com/bluetooth.
 - When prompted for a Passkey code, enter "1234" from the handset. (The Passkey code is assigned by NISSAN and cannot be changed.)
5. Say a name for the phone when the system asks you to provide one. You can give the phone a name of your choice.

MAKING A PHONE CALL

1. Press the  button.
2. After the tone, do one of the following:
 - Say "Call." After the system responds, say the name of the person in the phonebook.
 - Say "Call Phone Number." After waiting for the tone, say [number]. For example, say "Call Phone Number." After waiting for the tone, say "1 23-456-7891."
 - Say "Redial" to redial the previous phone number.
 - Say "Call Phone Number." After the system responds, say "Special Number" to dial more than 10 digits or special characters.
 - You can say all the digits of a 7- or 10-digit phone number at one time.
 - For a 10-digit number, saying the phone number in groups of 3, 3 and 4 digits may improve recognition for some speakers. To use this group dialing method, say only the first 3 digits of the phone number. After the system recognizes the number, it will request the next 3 digits and finally the last 4 digits.
 - If a phone number is incorrectly recognized, you can try entering the phone number again using the 3-3-4 group dialing procedure by saying "Correction."
 - When you have finished speaking the phone number wait for the system to repeat it back to you, then say "Dial."

RECEIVING/ENDING A PHONE CALL

When you receive a phone call, a ring tone sounds through the audio system.

- To accept the call, press the  button. To reject the call, press the  button.
- To hang up the phone at the end of a call or to disconnect during call placement, press the  button.

HOW TO SAY NUMBERS


NISSAN voice recognition permits numbers to be spoken in a variety of ways.

- Say “zero” or “oh” for “0.” Example: 1-800-662-6200 – Say “one eight zero zero six six two six two oh oh.”
- Say “pound” for “#.” Say “star” for “*” (available when using the “Call Phone Number” then “Special Number” command and the “Send” command during a call).
- Say “plus” for “+” (available only when using the “Call Phone Number” then “Special Number” command).
- Say “pause” for a 2-second pause.

USING YOUR PHONEBOOK


When a phone is connected to the system, the phonebook is automatically downloaded. This allows you to access your phonebook from the Bluetooth® system to call contacts by name.

Up to 1,000 contacts will be transferred. To access your phonebook:

1. Press the  button and wait for the tone.
2. Say “Phonebook.”
3. Wait for the tone, then say [a name] or say “List names.” The name must be said exactly as it is entered in your phonebook for the system to recognize it. For example, say “Phonebook” then after the system responds, say “Michelle.”

The phonebook can transfer multiple numbers for each entry. If you select a name with multiple numbers, the system will ask you which number you want to dial.

The system allows for up to 40 voice tags to be recorded. You can record a voice tag for phonebook entries that the system has difficulty recognizing or to directly dial an entry with multiple numbers. To record a voice tag:

1. Press the  button and wait for the tone.
2. Say “Phonebook.”
3. Wait for the tone, then say [a name] or say “List names.” Select the name for which you want to record a voice tag.
4. Say “Record Name.”






NAVIGATION SYSTEM (if so equipped)

GETTING STARTED

The Navigation System begins when the ignition is placed in the ACC or ON position. Park the vehicle in a safe location and then operate the Navigation System.


BASIC FUNCTIONS

- Touch the screen to select the item or key displayed.
- Touch the map screen once to activate map scrolling. Then touch the screen again and drag your finger in the direction you want to move. To return to the current vehicle location, push the **BACK** button **05**.
- To select a menu item from a list, touch the item or turn the **SCROLL** knob **06** to highlight the selection, then press the **SCROLL** knob to select the highlighted feature.
- Press the **BACK** button **05** to return to the previous function shown on the navigation display.
- Not all features can be operated while the vehicle is in motion. These features will become available again when the vehicle is stopped.
- Press the day/night button  **07** to switch between the day screen (bright) and the night screen (dark). Within 5 seconds of pressing the  button, you can adjust the brightness of the map display screen by turning the **SCROLL** knob.
- Press the "Voice" key to hear the current navigation situation when a route is active.

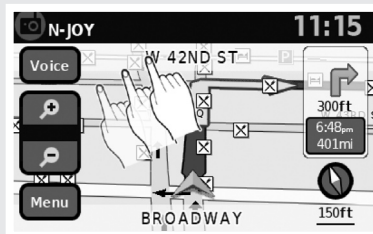

MAP BUTTON


- Press the **MAP** button **03** to display the vehicle's current location on the map screen.

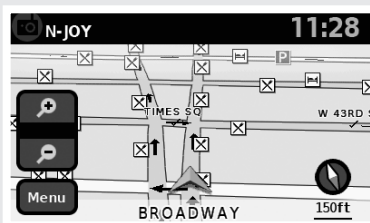

- Select the  or  key to zoom in or out.


NAV BUTTON

- Press the **NAV** button **01** to display navigation functions.

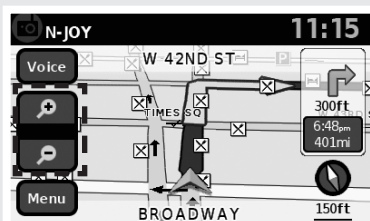



TRAF BUTTON

- Press the **TRAF** button **02** for real time traffic information (requires active subscription to XM NavTraffic® service) and related navigation features*.

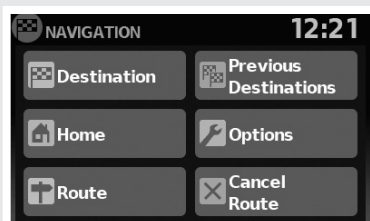

SETUP BUTTON

- Press the **SETUP** button **04** to change settings for Audio, Navigation, XM®, System or NavTraffic® information*.

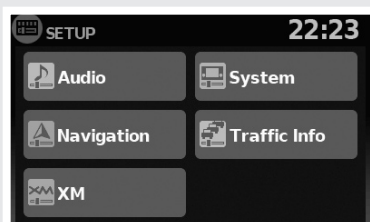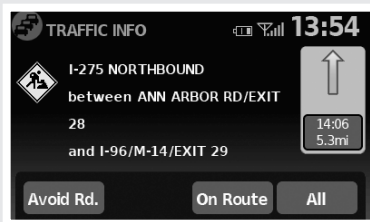


* Required XM Radio® and NavTraffic® subscriptions sold separately.

SWITCHING THE MAP VIEW

- Press the **MAP** button **03** . The current location map screen is displayed.
- Select the “Menu” key on the map screen to display the MAP OPTIONS.




- Select the “Map Setup” key.

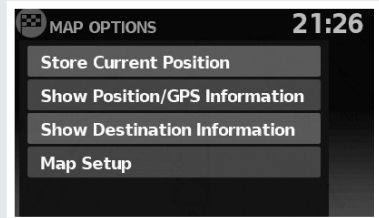

- Select the “Map View” key to switch between the 2D and 3D views.
- Press the **MAP** button **03** or the **BACK** button **05** to accept the changes.




2D VIEW

- Displays the map in a 2-dimensional environment similar to a road map.
- NOTE: In 2D view, you can select the  key to switch between “North Up” and “Heading Up” map views.







3D VIEW

- Displays the map in a 3-dimensional or elevated perspective.
- NOTE: In 3D view, the map is always shown in “Heading Up” map view.

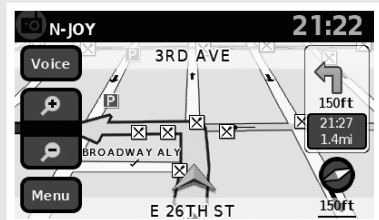


STORING YOUR HOME IN THE ADDRESS BOOK


- Press the **NAV** button **01** . Then select the “Home” key.
- Select the “Change” key.
- Select the state. Then select the “Street” key.
- Enter the house number, then select “OK.”
- Enter the street name. Then select the “List” key to pick the correct street name.
- If the street name is found in multiple cities, select the correct city name from the list.

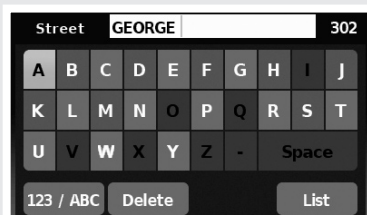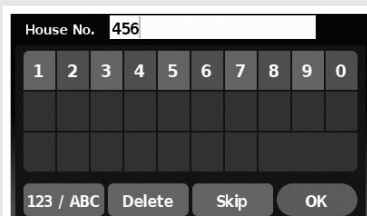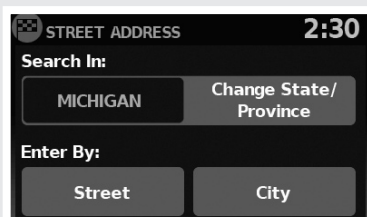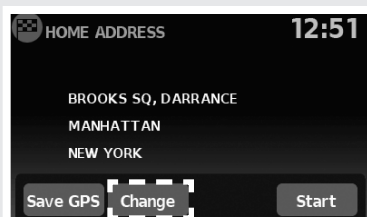

- You may be asked to spell the city name to narrow down the matches.
- Enter the city name, then select the “List” key to pick the correct city name.
- Select the “Save” key. Your home is displayed at the center of the map.
- Press the **MAP** button **03** to return to the current location map screen.

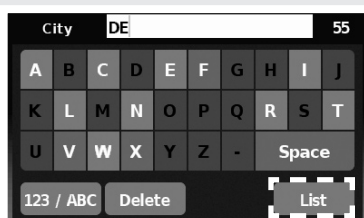


- If route guidance is active, you can choose how to use the new destination. Select “Add as Waypoint” to keep the current destination and to add the current location as a waypoint along the route. Select “Current Destination” to cancel the current route and replace the current destination with a new destination.

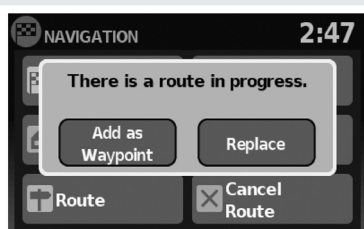


SETTING A STREET ADDRESS AS A DESTINATION


- Press the **NAV** button **01**. Then select the “Destination” key.
- Select the “Street Address” key.

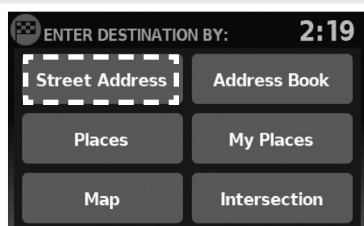


- Select the state. Then select the “Street” key.

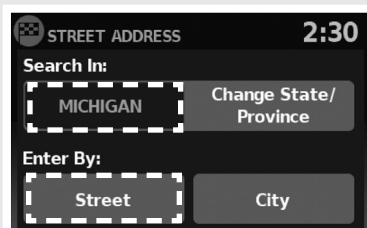

- Enter the house number, then select “OK.”

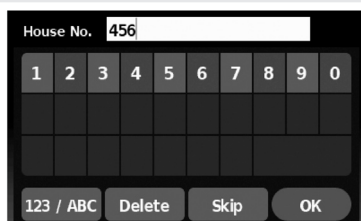


- Enter the street name. Then select the “List” key to pick the correct street name.

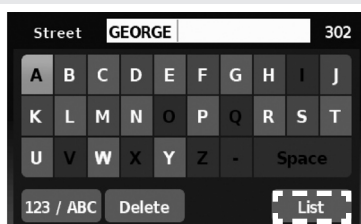


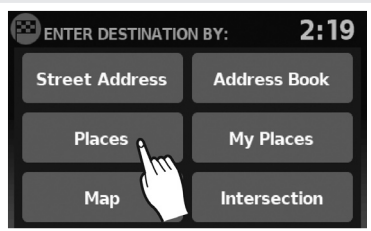
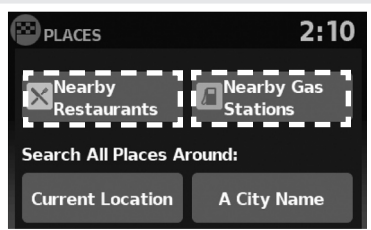

- If the street name is found in multiple cities, select the correct city name from the list. You may be asked to spell the city name to narrow down the matches.



- Push the “Start” key to calculate a route.

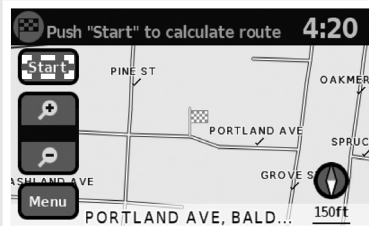

SETTING A PLACE AS A DESTINATION

- Press the **NAV** button **01** . Then select the "Destination" key.
- Select the "Places" key.
- Select "Nearby Restaurants" or "Nearby Gas Stations" to search for destinations near your current position.
- Select the preferred destination from the list.
 - You may need to select the scroll "up" or "down" keys to find the preferred destination.
- A detailed description of the destination is provided.
 - Select "List" to go back and pick another destination.
 - Select "Start" and the system calculates the route to the selected destination.

MEMO

MEMO

Nissan, the Nissan Brand Symbol, "SHIFT_" tagline,
Z and Nissan model names are Nissan trademarks.
© 2009 Nissan North America, Inc.
QR0E-0C11U1
Printing: October 2009 (09)

