 


2015 **VERSA SEDAN**

QUICK REFERENCE GUIDE



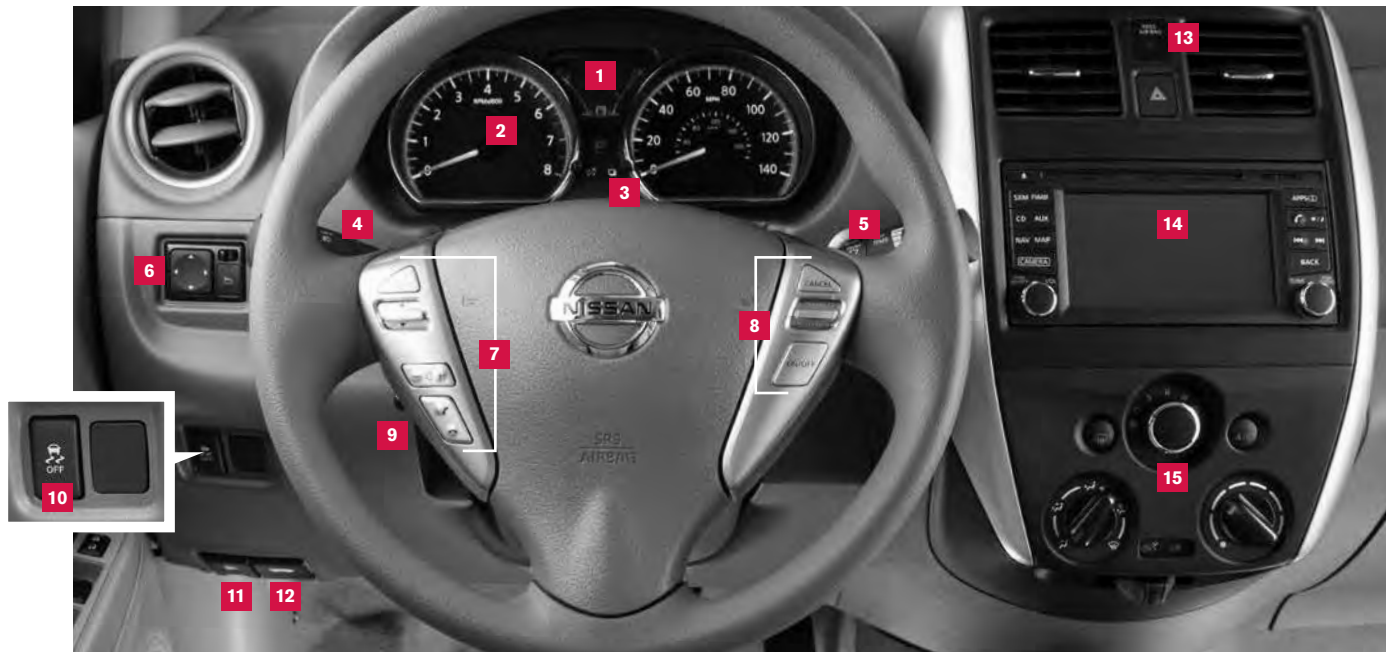

- | | | | |
|--|---|---|---|
| 1 Trip Computer | 5 Windshield Wiper and Washer Switch | 8 Cruise Control | 12 Hood Release* |
| 2 Low Tire Pressure Warning Light | 6 Outside Mirror Control Switch | 9 Steering Wheel Tilt Adjustment* | 13 Front Passenger Air Bag Status Light* |
| 3 Instrument Brightness Control* | 7 Steering Wheel Switches for Audio Control/Bluetooth® | 10 Vehicle Dynamic Control (VDC) Off Switch* | 14 Audio and Navigation System |
| 4 Headlight and Turn Signal Control | | 11 Fuel-filler Door Release | 15 Climate Controls |

*See your Owner's Manual for information.

TABLE OF CONTENTS

NEW SYSTEM FEATURES

RearView Monitor (if so equipped).....	2
Trip Computer.....	2
USB (Universal Serial Bus) Connection Port/Aux Jack and iPod® Interface (if so equipped)	2
Text Messaging (if so equipped).....	3
SiriusXM Travel Link and SiriusXM Traffic (if so equipped).....	3

ESSENTIAL INFORMATION

Tire Pressure Monitoring System (TPMS) with Easy Fill Tire Alert (if so equipped).....	4
Loose Fuel Cap.....	4
Fuel-filler Door.....	5
Clock Set/Adjustment.....	5

FIRST DRIVE FEATURES

NISSAN Intelligent Key® System (if so equipped).....	6
Rear Trunk Release (if so equipped).....	7
Seat Adjustments.....	7
Power Outside Mirror Control Switch (if so equipped).....	7
Starting/Stopping the Engine.....	8
Headlight Control Switch.....	8
Windshield Wiper and Washer Switch.....	9
Manual Climate Controls.....	10
FM/AM/SiriusXM® Satellite Radio with CD Player (if so equipped).....	11
Cruise Control (if so equipped).....	12

SYSTEM GUIDE

NissanConnect™ with Mobile Apps Smartphone Integration (if so equipped).....	13
Bluetooth® Hands-free Phone System.....	13
▪ System Operating Tips.....	13
Bluetooth® System without Navigation (if so equipped).....	14
Bluetooth® System with Navigation (if so equipped).....	16
Navigation System (if so equipped).....	18



Additional information about your vehicle is also available in your Owner's Manual, Navigation System Owner's Manual and at www.nissanusa.com.



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the **"Safety — Seats, seat belts and supplemental restraint system (section 1)"**, **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** and **"Starting and driving (section 5)"** of your Owner's Manual.

NEW SYSTEM FEATURES


REARVIEW MONITOR (if so equipped)

- When the shift lever is moved to the **R (REVERSE)** position, the front display shows the view to the rear of the vehicle.
- The colored lines on the display screen indicate approximate distances to objects.
 - Red 1.5 ft (0.5 m); Yellow 3 ft (1 m);
 - Green 7 ft (2 m) and 10 ft (3 m).



For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

TRIP COMPUTER

- With the ignition switch in the **ON** position, modes of the trip computer **1** can be selected by pushing the trip computer change button **2** on the instrument panel.
- The following modes can be selected in the display:
 - **ODO** – records the total distance the vehicle has been driven.
 - **Trip A** – measures the distance of one specific trip.
 - **Trip B** – measures the distance of a second specific trip.
 - **mpg** – displays the instant fuel consumption.
 - **mpg AVG** – displays the average fuel consumption since the last reset.
 - **mls** →  – displays the estimated distance that can be driven before refueling.
 - **Outside Air Temperature (if so equipped)** – displays the outside air temperature in °F or °C.
- To reset **TRIP A**, **TRIP B**, **mpg** or **mpg AVG**, go to the desired mode on the trip computer and hold the change button **2** for more than 3 seconds.



For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

USB (Universal Serial Bus) CONNECTION PORT/AUX JACK AND IPOD® INTERFACE (if so equipped)

- The USB port/Aux jack **1** is located on the center console.
- When a compatible USB memory device, iPod® or auxiliary device is plugged into the USB port/Aux jack, compatible audio files stored on the device can be played through the vehicle’s audio system.



For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

TEXT MESSAGING* (if so equipped)

- This system allows for sending and receiving text messages through the vehicle interface.
- Using predefined or custom messages, send a text to a name or phone number stored in your Bluetooth® Hands-free Phone System.
- Once enabled, the text message, sender and delivery time are shown on the control panel display screen.
- Text messages have the option of being read aloud.
- Text messages are only displayed on the control panel if the vehicle speed is less than 5 mph (8 km/h).
- This feature is not supported by all phones. See your cellular phone's Owner's Manual for details and also visit www.nissanusa.com/bluetooth.



*Laws in some jurisdictions may restrict the use of "Text-to-Speech." Some of the applications and features, such as social networking and texting may also be restricted. Check local regulations for any requirements before using these features.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

SiriusXM TRAVEL LINK* AND SiriusXM TRAFFIC* (if so equipped)

- Your vehicle's Navigation System is equipped with SiriusXM Travel Link and SiriusXM Traffic capabilities.
- SiriusXM Travel Link provides access to real-time weather information and forecasts, nearby fuel prices, movie listings and stock quotes.
- SiriusXM Traffic provides information that may help to avoid delays due to traffic incidents. Traffic jams, roadwork, road closures around the current location, etc., are represented graphically on the map by icons depicting the nature of the event. Incidents on the route are automatically displayed when they are approached.



*These features, SiriusXM® Satellite Radio, Travel Link and Traffic require an active subscription. Multiple subscriptions may be necessary to activate the various features.

For more information, refer to the "**Navigation (section 4)**" and the "**General system information (section 6)**" of your Navigation System Owner's Manual.

ESSENTIAL INFORMATION

TIRE PRESSURE MONITORING SYSTEM (TPMS) WITH EASY FILL TIRE ALERT (if so equipped)

- A **CHECK TIRE PRES** warning message will appear in the trip computer **1** and the low tire pressure warning light **2** will illuminate when one or more tires are low on pressure and air is needed.
 - The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mi (1.6 km) at moderate speeds.
- After the tire pressures are adjusted, drive the vehicle at speeds above 16 mph (25 km/h). The **CHECK TIRE PRES** warning message and low tire pressure warning light will extinguish.
- When adding air to an under-inflated tire, the TPMS with Easy Fill Tire Alert (if so equipped) provides visual and audible signals to help you inflate the tires to the recommended COLD tire pressure.

To use the Easy Fill Tire Alert (if so equipped):

 1. Move the shift lever to the **P (PARK)** position and apply the parking brake.
 2. Place the ignition switch in the **ON** position. Do not start the engine.
 3. Add air to the under-inflated tire, and within a few seconds the hazard warning lights will start flashing.
 4. When the designated tire pressure is reached, the horn will beep once and the hazard warning flashers will stop flashing.
 5. Repeat this procedure for any additional under-inflated tires.
- When the low tire pressure warning light flashes for 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked by a NISSAN dealer.
- Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light to illuminate. If the warning light illuminates, check the tire pressure in your tires.
 - Check the tire pressure (including the spare tire) often and always prior to long distance trips.
- The Tire and Loading Information label contains valuable information. Please refer to "Technical and consumer information (section 9)", in your Owner's Manual for the location of the Tire and Loading Information label.




For more information, refer to the "**Instruments and controls (section 2)**", the "**Starting and driving (section 5)**" and the "**Maintenance and do-it-yourself (section 8)**" of your Owner's Manual.

LOOSE FUEL CAP

- A **LOOSE FUEL CAP** warning message will display in the odometer **1** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.



To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

- The warning message will disappear when the vehicle detects the fuel-filler cap is properly tightened and the reset button **2** is pressed for more than 1 second.
- If the cap is not fully tightened, the Malfunction Indicator light  may also illuminate.

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

FUEL-FILLER DOOR


- The fuel-filler door release **1** is located to the left of the steering wheel and below the instrument panel.
- To open the fuel-filler door, pull the release. To lock, close the fuel-filler door securely.



For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

CLOCK SET/ADJUSTMENT

- To adjust the time and the appearance of the clock on the display:

1. Press the **APPS**  button **1**.
2. Touch the “Settings” key.
3. Touch the “System” key.
4. Touch the “Clock” key.

- The following settings can be adjusted:

- **Time Format:** The clock can be set to 12 hours or 24 hours.

- **Date Format:** The date can be changed to one of five different formats.

 
- **Clock Mode:** From here, the clock mode options are:

- **Manual:** Allows for the option “Set Clock Manually”. Touch this to begin setting the clock manually using the “+” or “-” key to adjust the hours, minutes, day and month up or down.

- **Time Zone:** Touch the “Time Zone” key **2** to choose from the applicable time zone list and/or touch the “Daylight Savings Time” key to switch between on and off.

- **Auto:** Automatically sets the clock to the vehicle’s current location.


- Press the **BACK** button **3** to return to the previous screen.

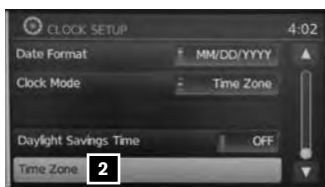





For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

FIRST DRIVE FEATURES

NISSAN INTELLIGENT KEY® SYSTEM (if so equipped)

- The NISSAN Intelligent Key® system allows you to lock or unlock your vehicle, open your trunk and start the engine.
- It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).
- The operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, push either door handle request switch **1** once or press the  button **2** on the key fob.



- To unlock the vehicle, perform one of the following procedures:
 - Push either door handle request switch **1** once; the corresponding door will unlock. Push the door handle request switch **1** again within 5 seconds; all other doors will unlock, or
 - Press the  button **3** on the key fob to unlock the driver's side door. Press the  button again; all other doors will unlock.
- To open the trunk, press the  button **4** for more than 1 second.
- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button **5** for more than 1 second. Once activated, the panic alarm and headlights will stay on for a period of time.




INTELLIGENT KEY BATTERY DISCHARGE

- If the battery of the Intelligent Key is discharged or environmental conditions interfere with the Intelligent Key operation, start the engine according to the following procedure:
 1. Move the shift lever to the **P (PARK)** position.
 2. Firmly apply the foot brake.
 3. Touch the ignition switch with the Intelligent Key and a chime will sound.
 4. Within 10 seconds after the chime sounds, push the ignition switch while depressing the brake pedal and the engine will start.

 


For more information, refer to the “**Pre-driving checks and adjustments (section 3)**”, “**Starting and driving (section 5)**” and the “**Maintenance and do-it-yourself (section 8)**” of your Owner’s Manual.

REAR TRUNK RELEASE (if so equipped)

- Use one of the following methods to open the trunk:
 - Push the trunk opener request switch **1**, located under the center of the trunk handle, for more than 1 second while carrying the NISSAN Intelligent Key® (if so equipped) with you.
 - Press the trunk release  button **2** on the Intelligent Key (if so equipped) for more than 1 second.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

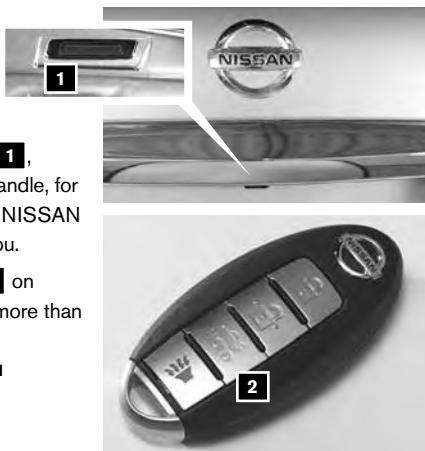


SEAT ADJUSTMENTS

- To slide the front seat forward or backward, pull up on the lever **1** under the front of the seat and slide forward or backward. Release the lever to lock the seat in position.
- To recline the seatback, pull up on the lever **2** and lean back. To bring the seatback forward, pull the lever up and lean your body forward. Release the lever to lock the seatback in position.

SEAT LIFTER (if so equipped for driver’s seat)


- To adjust the seat height, pull up or push down on the adjusting lever **3** repeatedly.

 For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.

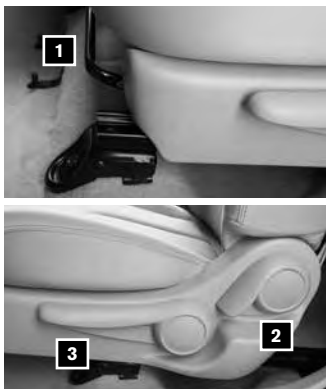

POWER OUTSIDE MIRROR CONTROL SWITCH (if so equipped)

 - Move the switch **1** right or left to select the right or left mirror.
- Adjust each mirror to the desired position using the switch **2**.
- Move the switch **1** to the middle (neutral) position to prevent accidentally moving the mirrors.

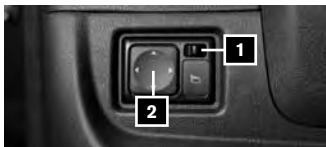

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

FIRST DRIVE FEATURES

STARTING/STOPPING THE ENGINE

STARTING THE ENGINE

- It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

CONTINUOUSLY VARIABLE TRANSMISSION (NISSAN Intelligent Key® models only - if so equipped)

- Depress the brake pedal.
 - If the brake pedal is not depressed, pushing the ignition switch once enters the ACC mode.
 - If the ignition is pushed a second time, the vehicle will enter the ON mode.
- Move the shift lever to the **P (PARK)** position.
- Push the ignition switch to start or stop the engine.



CONTINUOUSLY VARIABLE TRANSMISSION/AUTOMATIC/MANUAL TRANSMISSION (if so equipped)

- Depress the brake pedal.
- Move the shift lever to the **N (NEUTRAL)** position (manual transmission only).
- Depress the clutch (manual transmission only) pedal to the floor.
- Turn the ignition switch to **START**.



TURNING THE ENGINE OFF

- For a Continuously Variable Transmission (NISSAN Intelligent Key® models only - if so equipped), apply the brake pedal, move the shift lever to the **P (PARK)** position, apply the parking brake and push the ignition **START/STOP** switch to turn the engine off.
- For a manual transmission, apply the brake pedal, place the vehicle in 1st gear, apply the parking brake and turn the ignition switch to the **LOCK** position.
- For automatic transmission and Continuously Variable Transmission, apply the brake pedal, move the shift lever to **P (PARK)** position, apply the parking brake and turn the ignition switch to the **LOCK** position.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

 
HEADLIGHT CONTROL SWITCH


HEADLIGHT CONTROL

- Turn the headlight control switch to the $\text{D} \text{D} \text{D}$ position **1** to turn on the front parking, tail, license plate and instrument panel lights. Turn the switch to the $\text{D} \text{D}$ position **2** to turn on the headlights.







HIGH BEAM SELECT

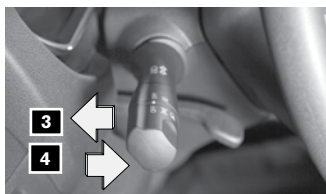 - Push the headlight control switch forward **3** to select the high beam function. The blue indicator light  illuminates in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light will extinguish.
- Pull and release the headlight control switch **4** to flash the headlight high beams on and off.



FOG LIGHT SWITCH (if so equipped)

  - The headlights must be on and the low beams  selected for the fog lights to operate.
- Turn the switch (inside collar) to the  position **5** to turn the fog lights on.
- Turn the switch (inside collar) to the **OFF** position to turn the fog lights off.

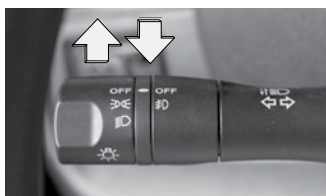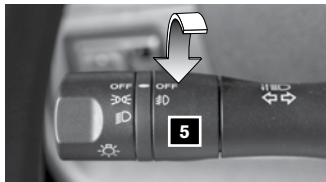



LANE CHANGE SIGNAL

- To signal a lane change, move the lever up or down to the point where the indicator light begins to flash, but the lever does not latch.
- The turn signal will flash three times automatically.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

 WINDSHIELD WIPER AND WASHER SWITCH

- Move the lever to the following positions to operate the windshield wipers:
 - 1** Mist (**MIST**) – One sweep operation of the wipers.
 - 2** Intermittent (**INT**) – Move the lever down to the intermittent position and then rotate the time control ring **3** to increase or decrease wiper speeds (if so equipped).
 - 4** Low (**LO**) – Wipers operate at a continuous low-speed.
 - 5** High (**HI**) – Wipers operate at a continuous high-speed.
 - 6** Washer  – Pull the lever toward you to activate the washer. The wipers will operate several times.

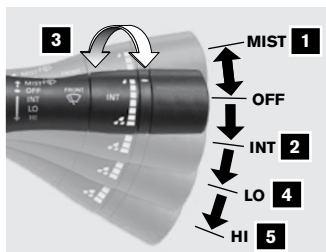 

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

FIRST DRIVE FEATURES


MANUAL CLIMATE CONTROLS


1 FAN SPEED CONTROL DIAL


- Turn the dial to the left to decrease fan speed or to the right to increase fan speed.


2 AIR FLOW CONTROL DIAL


- Turn the dial to select the following air flow outlets:

 Air flows from the center and side vents.

 Air flows from the center, side and foot vents.

 Air flows mainly from the foot vents.

 Air flows from the defroster and foot vents.





 Air flows mainly from the defroster vents.




3 TEMPERATURE CONTROL DIAL

- Turn the temperature control dial left for cooler air or right for warmer air.

4 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- First, move the air intake lever **5** to the left position  to draw fresh air into the vehicle.
- Then turn the air flow control dial **2** to the front window defroster mode .
- Align the left and right side vents to direct airflow towards the front side windows.
- When the  or  position is selected, the air conditioner will turn on automatically for better performance. This will dehumidify the air and help defog the windows.

6 REAR WINDOW DEFROSTER SWITCH

- Push the rear window defroster switch  to turn the system on or off.

7 A/C BUTTON

- Press the **A/C** button to turn the air conditioner on. This system helps cool and dehumidify the air inside the cabin and defog the windows.

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.



FM/AM/SiriusXM®* SATELLITE RADIO WITH CD PLAYER (if so equipped)

1 ON-OFF BUTTON/VOL (volume) CONTROL KNOB

- Press the **ON-OFF** button to turn the system on or off.
- Turn the **VOL** control knob to the right or left to increase or decrease the volume.

2 AUDIO BUTTON/TUNE KNOB

- Press the **AUDIO** button to go to the audio settings screen.
- To manually tune the radio, turn the **TUNE** knob left or right.

3 SEEK BUTTONS

- To tune and stop at the previous or next broadcast station, press the seek buttons ◀◀ or ▶▶.
- For satellite radio, to switch to the first channel of the previous or next category, press the seek buttons ◀◀ or ▶▶.
- To change tracks on a CD, press the seek buttons ◀◀ or ▶▶.
- To rewind or fast forward a track on a CD, press and hold the seek buttons ◀◀ or ▶▶.

4 STATION SELECT BUTTONS

- Twelve stations can be set for the FM band, 6 for the AM band and 18 for satellite radio.
- To store a station in a preset, you must first select a radio band by pressing the **FM-AM** button **5** or the **SXM** button **6** then tune to the desired FM, AM or satellite radio station.
- Now select and hold the desired station memory key (1-6) **4** until the preset number is updated on the display and a beep is heard. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored, then select the corresponding station memory key (1-6) **4**.

*SiriusXM® Satellite Radio is only available on vehicles equipped with an optional satellite radio subscription service.

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

FIRST DRIVE FEATURES

CRUISE CONTROL (if so equipped)

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 mph (40 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **CRUISE ON/OFF** switch **1**. The **CRUISE** indicator light in the instrument panel will illuminate.
- To set cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **2** and release. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **3**. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **2**. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, push the **CANCEL** switch **4**.
- To turn off cruise control, push the **CRUISE ON/OFF** switch **1**. The **CRUISE** indicator light in the instrument panel will extinguish.



For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

SYSTEM GUIDE

NISSANCONNECTSM WITH MOBILE APPS SMARTPHONE INTEGRATION (if so equipped)




- Integrates popular smartphone apps and services into your vehicle.
- The NissanConnectSM App must be downloaded to your smartphone and you must be enrolled.
- For more information on how to pair your phone and set up NissanConnectSM with Mobile Apps, visit: www.nissanusa.com/connect/support.

 
For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

BLUETOOTH[®] HANDS-FREE PHONE SYSTEM

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.*

SYSTEM OPERATING TIPS

- Press the  button to interrupt the voice prompts at any time and speak a command after the tone.
- To use the system faster, you may speak the second level commands with the main menu command on the main menu. For example, press the  button and after the tone say “Call Redial”.
- The “Help” command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing HVAC vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.
- When speaking Phonebook names, please be aware some phones require the last name to be spoken before the first name. For example, “Michael Smith” may be spoken as “Smith Michael”.
- To cancel a voice recognition session, simply wait 5 seconds, say “Cancel” or “Quit”, or press and hold the  button for 5 seconds.
- To increase or decrease the volume of the voice prompts, push the volume control switches **+** or **-** on the steering wheel or turn the control dial on the audio system while the audio system is responding.
- If the Voice Recognition system does not recognize your voice commands, train the system using the Voice Adaptation Mode. See your Owner’s Manual for detailed information.
- For more detailed information and instructions, refer to your cellular phone’s Owner’s Manual and visit www.nissanusa.com/bluetooth.

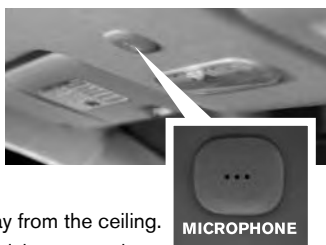


*Some jurisdictions prohibit the use of cellular telephones while driving.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.


SYSTEM GUIDE

BLUETOOTH® SYSTEM WITHOUT NAVIGATION (if so equipped)

 CONNECTING PROCEDURE

- The vehicle must be stationary when connecting the phone.
- 1. Press the  button on the steering wheel. The system announces the available commands.
- 2. Say: "Connect phone". The system acknowledges the command and announces the next set of available commands.
- 3. Say: "Add phone". The system acknowledges the command and asks you to initiate connecting from the phone handset.
- 4. Initiate connecting from the phone:
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and compatible phones, please visit www.nissanusa.com/bluetooth.
 - When prompted for a PIN code, enter "1234" from the handset. (The PIN code is assigned by NISSAN and cannot be changed.)
- 5. Say a name for the phone when the system asks you to provide one. You can give the phone a name of your choice.


PHONEBOOK SETUP

- The phonebook stores up to 1,000 entries for each phone paired with the system.
- Depending on your cellular phone, the system may automatically download your cellular phone's entire phonebook to the vehicle's Bluetooth® system.
- If the phonebook does not download automatically, entries can be individually downloaded.
- To manually download entries:
 1. Push the  button on the steering wheel.
 2. After the tone, say "Phonebook".
 3. After the next tone, say "Transfer Entry". The system acknowledges the command and asks you to initiate the transfer from the phone handset. The new contact phone number will be transferred from the cellular phone to the vehicle.
 - The transfer procedure varies according to each cellular phone. See your cellular phone's Owner's Manual for details. You can also visit www.nissanusa.com/bluetooth for instructions on transferring phone numbers from NISSAN-recommended cellular phones.
 4. The system repeats the number and prompts you for the next command. When you have finished entering numbers or transferring an entry, choose "Store".
 5. The system confirms the name, location and number.




MAKING A CALL FROM THE PHONEBOOK




- In some cases, names stored using all UPPERCASE letters may not be recognized by the voice recognition system.

 1. Press the  button.
 2. After waiting for the tone, say "Call".
 3. After the next tone, speak the name of a phonebook entry. For example, "Michael Smith".
 4. Confirm the correct name is recognized by saying "Dial" after the tone.

MAKING A CALL BY PHONE NUMBER

1. Press the  button. A tone will sound.
2. Say: "Call". The system acknowledges the command and announces the next set of available commands.
3. Say: "Phone Number". The system acknowledges the command and announces the next set of available commands.
4. Say the number you wish to call, starting with the area code in single digit format.
5. When you have finished speaking the phone number, the system repeats it back and announces the available commands.
6. Say: "Dial". The system acknowledges the command and makes the call.

RECEIVING/ENDING A CALL

- When you receive a phone call, a ring tone sounds through the audio system.
- To accept the call, press the  button.
- To reject the call, press the  button.
- To hang-up the phone at the end of a call or to disconnect during call placement, press the  button.


For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual or please visit www.nissanusa.com/bluetooth.

SYSTEM GUIDE

BLUETOOTH® SYSTEM WITH NAVIGATION (if so equipped)

- Send predefined or custom text messages* through your vehicle's Bluetooth® system.
- Receive texts through your vehicle's Bluetooth® system that can be read to you.
- Bluetooth® Streaming Audio allows you to use a compatible Bluetooth® phone to play audio files on your device. Your compatible cellular phone can be connected to the vehicle's audio system, allowing audio files to play through the vehicle's speakers.


CONNECTING PROCEDURE

1. Press the **APPS**  button on the control panel.
2. Select the "Settings" key **1**.
3. Select the "Phone & Bluetooth" key **2**.
4. Select the "Connect New Device" key **3**.
5. Initiate the connecting process from the handset.
The system will display the message:
"Is PIN XXXXXX displayed on your Bluetooth device?"

 
 
 
If the PIN is displayed on your Bluetooth® device, select "Yes" to complete the connecting process.

VEHICLE PHONEBOOK


To access the vehicle phonebook:

1. Press the  button on the instrument panel.
2. Select the "Phonebook" key **4**.
3. Choose the desired entry from the displayed list.


*Laws in some jurisdictions may restrict the use of "Text-to-Speech." Some of the applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

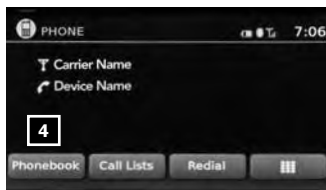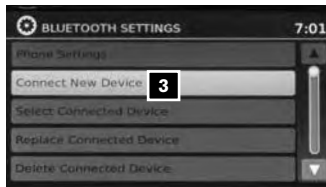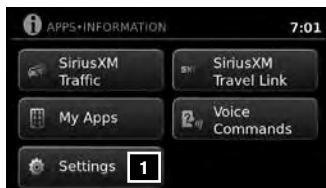

MAKING A CALL FROM THE PHONEBOOK



1. Press the  button on the steering wheel to activate Voice Recognition.
2. Say: "Call".
3. Say a name in the vehicle phonebook to call that entry.

MAKING A CALL BY PHONE NUMBER



1. Press the  button on the steering wheel to activate Voice Recognition.
2. Say: "Phone".
3. Say: "Dial Number". When prompted, speak the digits of the number you wish to dial.
4. Say: "Dial".

RECEIVING/ENDING A CALL



To accept the incoming call, either:

 
1. Press the  button on the steering wheel, or
2. Select the  icon on the screen.

To reject the incoming call, either:

1. Press the  button on the steering wheel, or
2. Select the  icon on the screen.

To end a phone call, either:

1. Press the  button on the steering wheel, or
2. Select the  icon on the screen.

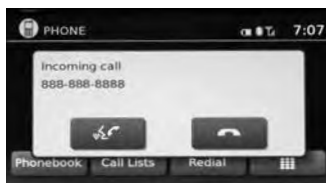

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

SYSTEM GUIDE



NAVIGATION SYSTEM (if so equipped)

- Your Navigation System can calculate a route from the current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.
- NissanConnectSM Mobile Apps integrates popular smartphone apps and services into your vehicle. NissanConnectSM Mobile Apps requires a subscription. Please visit www.nissanusa.com/connect for more information.

- 1 NAV** button – Press to access the functions of the Navigation System.
- 2 MAP** button – Press to display the current location map screen.
- 3 VOL** knob – Turn right to increase the volume or left to decrease the volume.
- 4** key – Select to zoom the map in.
- 5** key – Select to zoom the map out.
- 6 APPS** button – Press to access Traffic messages, MyApps, SiriusXM[®] Travel Link, Voice Commands and Settings.
- 7** button – Press to change the display brightness between day and night modes. While the mode is being displayed, the brightness can be adjusted using the **SCROLL** knob. Press and hold to turn the display off. Press again to turn the display on.
- 8 BACK** button – Press to return to the previous screen.
- 9 TUNE** knob – Turn to navigate the items in a list. Press to select a menu item.
- 10** Touch-screen display.
- 11** SD-card location – An SD-card with map data must be inserted here for map functions to operate.

For more information, refer to your Navigation System Owner's Manual.

MEMO

MEMO

MEMO

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain with this Quick Reference Guide all revision updates sent to you by NISSAN to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guide, Owner's Manuals and any updates can also be found in the Owner section of the NISSAN website at <https://owners.nissanusa.com/nowners/navigation/manualsGuide>. If you have questions concerning any information in your Owner's Manual, contact NISSAN Consumer Affairs. See the NISSAN CUSTOMER CARE PROGRAM page in the Owner's Manual for contact information.



To view detailed instructional videos,
go to www.nissanownersinfo.mobi/2015/versasedan
or snap this barcode with an appropriate barcode reader.

