


2013 XTERRA

QUICK REFERENCE GUIDE



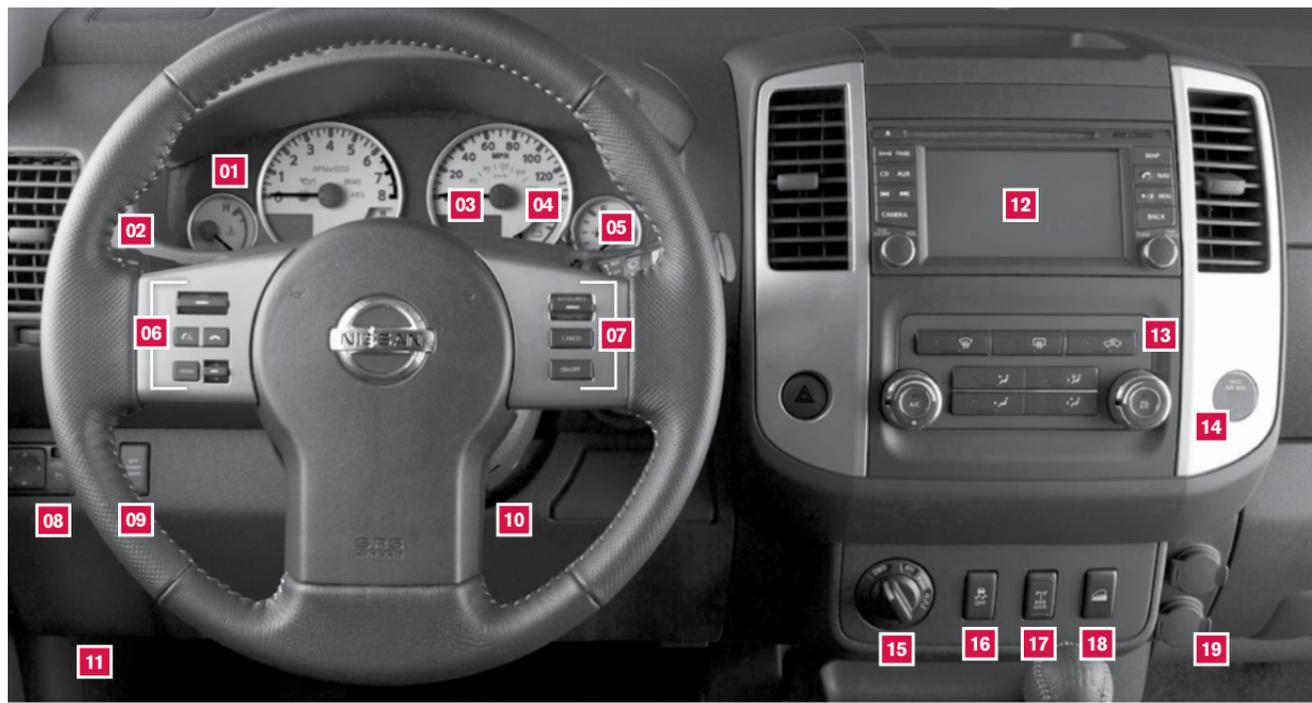

- 01** LOW TIRE PRESSURE WARNING LIGHT
- 02** HEADLIGHT AND TURN SIGNAL CONTROL
- 03** TRIP COMPUTER
- 04** INSTRUMENT BRIGHTNESS CONTROL* / TRIP CHANGE BUTTON
- 05** WINDSHIELD WIPER AND WASHER SWITCH

- 06** STEERING WHEEL SWITCHES FOR AUDIO CONTROL* / BLUETOOTH®
- 07** CRUISE CONTROL
- 08** OUTSIDE MIRROR CONTROL SWITCH
- 09** OFF-ROAD LAMPS SWITCH*
- 10** STEERING WHEEL TILT ADJUSTMENT*

- 11** HOOD RELEASE*
- 12** AUDIO AND NAVIGATION SYSTEM
- 13** CLIMATE CONTROLS
- 14** FRONT PASSENGER AIR BAG STATUS LIGHT*
- 15** 4-WHEEL DRIVE (4WD) SHIFT SWITCH*

- 16** VEHICLE DYNAMIC CONTROL (VDC) OFF SWITCH*
- 17** E-LOCK SWITCH*
- 18** HILL DESCENT CONTROL SWITCH*
- 19** POWER OUTLETS

*See your Owner's Manual for information.

NEW SYSTEM FEATURES

Navigation System (if so equipped) 2
 RearView Monitor (if so equipped) 3

ESSENTIAL INFORMATION

Tire Pressure Monitoring System (TPMS) 4
 Loose Fuel Cap 4
 Clock Set/Adjustment 5

FIRST DRIVE FEATURES

Remote Keyless Entry System 6
 Liftgate Release 6
 Seat Adjustments 6
 Outside Mirror Control Switch (if so equipped) 7
 Starting/Stopping the Engine 7
 Headlight Control Switch 8
 Windshield Wiper and Washer Switch 8
 Manual Climate Controls (if so equipped) 9
 FM/AM/SiriusXM Satellite Radio with CD Player (if so equipped) 10
 USB/iPOD® Interface (if so equipped) 11
 Cruise Control 12
 Fuel-Filler Door 12

SYSTEM GUIDE

Trip Computer (if so equipped) 13
 Bluetooth® Hands-free Phone System (if so equipped) 13
 Bluetooth® System Operating Tips 13
 Bluetooth® System without Navigation (if so equipped) 14
 Bluetooth® System with Navigation (if so equipped) 16



- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**”, the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” and the “**Starting and driving (section 5)**” of your Owner’s Manual.



To view detailed instructional videos, go to www.nissanownersinfo.mobi/2013/xterra or snap this barcode with an appropriate barcode reader.



Additional information about your vehicle is also available in your Owner’s Manual, Navigation System Owner’s Manual and at www.nissanusa.com.

new system features



NAVIGATION SYSTEM (if so equipped)

- Your Navigation System can calculate a route from the current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.
- Your Navigation System, along with POIs (Point Of Interest) powered by Google™* (if so equipped), allows you to enter a destination using Google search results.
- Using Google™ Send-to-Car* (if so equipped) you can send a destination from Google Maps to your vehicle's Navigation System.
- Hands-free Text Messaging – The system allows for the sending and receiving of text messages through the vehicle interface.

01 VOL/ON-OFF control dial – Rotate clockwise to increase the volume or counterclockwise to decrease the volume.

02 TUNE knob/**AUDIO** button – Turn to scroll through the items in a list. Press to select a menu item.

03 MAP button – Press to display the current location map screen.

04 NAV button – Press to access the functions of the Navigation System.

05 ☀/☾ – Press to change the display brightness between day and night modes. While the mode is being displayed, the brightness can be adjusted using the TUNE knob. Press and hold to turn the display off. Press again to turn the display on.

06 MENU button – Press to access the system settings key.

07 BACK button – Press to return to the previous screen.

*An account must first be registered from the Info Services settings screen and a compatible Bluetooth® Hands-free phone and subscription service is required. Please visit www.nissanusa.com/bluetooth for compatible phone information.

For more information, refer to your **Navigation System** Owner's Manual.

REARVIEW MONITOR (if so equipped)

- When the shift selector is shifted into the **R (REVERSE)** position, the monitor display shows a rearward view from the vehicle.
- The colored guide lines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line.
 - Red 1.5 ft (0.5 m); Yellow 3 ft (1 m); Green 7 ft (2 m) and 10 ft (3 m).



For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

TIRE PRESSURE MONITORING SYSTEM (TPMS)

- A **CHECK TIRE PRES** warning message will display in the trip computer **01** and the low tire pressure warning light **02** will illuminate when one or more tires are low on pressure and air is needed.

- The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mi (1.6 km) at moderate speeds.

- After tire pressures are adjusted, press the reset button **03** for more than 1 second. Drive the vehicle at

speeds above 16 MPH (25 km/h). The **CHECK TIRE PRES** warning message and low tire pressure warning light will disappear.


- When the low tire pressure warning light flashes for approximately 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked by a NISSAN dealer.

- Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light to illuminate. If the warning light illuminates, check the tire pressure in your tires.

- Check the tire pressures (including the spare tire) often and always prior to long distance trips.

- The Tire and Loading Information label contains valuable information. Please refer to section 9, "Technical and consumer information", in your Owner's Manual for the location of the Tire and Loading Information label.

For more information, refer to the "Instruments and controls (section 2)", the "Starting and driving (section 5)" and the "Maintenance and do-it-yourself (section 8)" of your Owner's Manual.

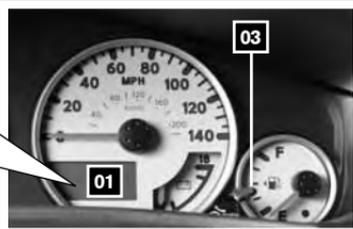


LOOSE FUEL CAP

- A **LOOSE FUEL CAP** warning message will appear in the trip computer **01** when the fuel-filler cap is not tightened correctly.

- To tighten, turn the cap clockwise until a single click is heard.

- The warning message will disappear when the vehicle detects the fuel-filler cap is properly tightened and the reset button **02** is pressed for more than 1 second.

- If the cap is not properly tightened the Malfunction Indicator Light  may illuminate.

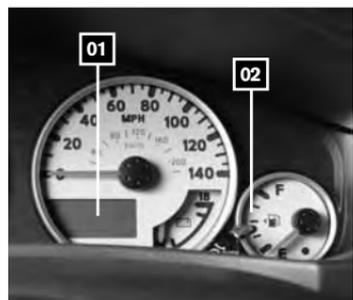

For more information, refer to the "Instruments and controls (section 2)" and the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

CLOCK SET/ADJUSTMENT

- To adjust the time and the appearance of the clock on the display:

1. Press the **MENU** button **01**
2. Touch the “Settings” key.
3. Touch the “System” key.
4. Touch the “Clock Settings” key.

- The following settings can be adjusted:

- **Time Format:** The clock can be set to 12 hours or 24 hours.


- **Date Format:** The date can be changed to one of 5 different formats.

- **Clock Mode:** From here the clock mode options are:

- **Manual:** Allows for the option “Set Clock Manually”. Touch this to begin setting the clock manually using the “+” or “-” to adjust the hours and minutes up or down.
- **Time Zone:** Touch the “Time Zone” key **02** to choose from the applicable time zone list, and/or touch “Daylight savings time” to switch between on and off.
- **Auto:** Automatically sets the clock to the vehicles current location.

- Press the **BACK** button **03** to return to the previous screen.

For more information please refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual

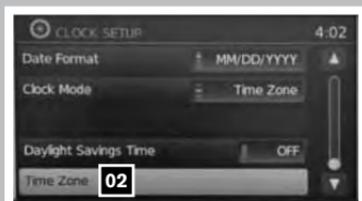

first drive features

REMOTE KEYLESS ENTRY SYSTEM

The Remote Keyless Entry System allows you to lock or unlock your vehicle and turn on the interior lights.

- To lock the vehicle, press the  button on your keyfob.
- To unlock the driver's door, press the  button on your keyfob.
- Press the  button again within 5 seconds and all doors will unlock.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner's Manual.



LIFTGATE RELEASE

- Unlock the liftgate by pressing the  button on the keyfob twice.

- To open the liftgate, pull up on the handle  .

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner's Manual.



SEAT ADJUSTMENTS

- To slide the seat forward or backward, pull up on the lever  under the front of the seat and slide forward or backward. Release the lever to lock the seat in position.
- To recline the seatback, pull up on the lever  and lean back. To bring the seatback forward, pull the lever up and lean your body forward. Release the lever to lock the seatback in position.


SEAT LIFTER (if so equipped for driver's seat)

- Turn either dial  to adjust the angle and height of the seat cushion to the desired position.

LUMBAR SUPPORT (if so equipped for driver's seat)

- To adjust the seat lumbar area, move the lever  forward or backward.

For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner's Manual.

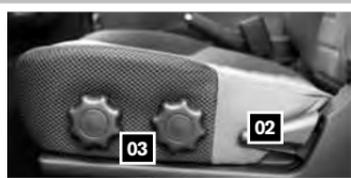

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

OUTSIDE MIRROR CONTROL SWITCH (if so equipped)

- The outside mirror control switch is located on the left side of the instrument panel.
- To select the left or right mirror, move the switch **01** .
- Adjust each mirror to the desired position using the switch **02** .
- To prevent accidentally moving the mirror, move this switch **01** to the center “neutral” position.



For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

STARTING/STOPPING THE ENGINE

AUTOMATIC TRANSMISSION (if so equipped)

- Depress the brake pedal.
- Move the shift lever to **P (PARK)**.
- Turn the ignition switch to **START**.

MANUAL TRANSMISSION (if so equipped)

- Depress the brake pedal.
- Move the shift lever to **N (NEUTRAL)**.
- Depress the clutch pedal to the floor.
- Turn the ignition switch to **START**.



TURNING THE ENGINE OFF

- For an automatic transmission, move the shift lever to the **P (PARK)** position, apply the parking brake and turn the ignition switch to the **LOCK** position.
- For a manual transmission, apply the foot brake, place the vehicle in 1st gear, apply the parking brake and turn the ignition switch to the **LOCK** position.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

first drive features


HEADLIGHT CONTROL SWITCH

HEADLIGHT CONTROL

- Turn the headlight control switch to the  position **01** to turn on the front parking, tail, license plate and instrument panel lights. Turn the switch to the  position **02** to turn on the headlights.


AUTOLIGHT SYSTEM (if so equipped)

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **03** then turn the ignition switch to **ON**. To deactivate the autolight system, turn the headlight control switch to the **OFF**,  **01** or  position **02**.

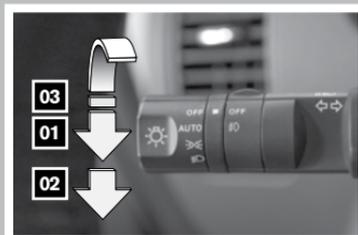

HIGH BEAM SELECT


- Push the headlight control switch forward **04** to select the high beam function. The blue indicator light  illuminates in the instrument panel. Pull the headlight control switch back to the original position to select the low beam. The blue indicator light goes off.
- Pull and release the headlight control switch **05** to flash the headlight high beams on and off.

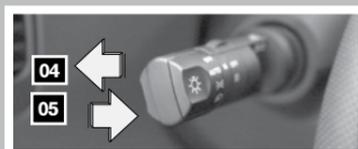

FOG LIGHT SWITCH (if so equipped)

NOTE: The headlights must be on and the low beams  selected for the fog lights to operate.

- Turn the switch (inside collar) to the  position **06** to turn the fog lights on.
- Turn the switch (inside collar) to the **OFF** position to turn the fog lights off.

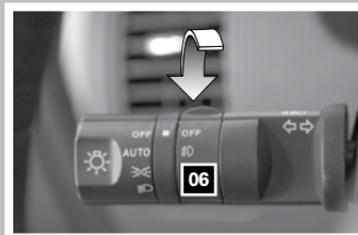


For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

WINDSHIELD WIPER AND WASHER SWITCH

- Move the lever to the following positions to operate the windshield wipers:

- 01** Mist (**MIST**) - One sweep operation of the front wipers.
- 02** Intermittent (**INT**) - Move the lever down to the **INT** position and then rotate the control ring **03** away from you to increase **INT** wiper speeds.
- 04** Low (**LO**) - Front wipers operate at a continuous low-speed.

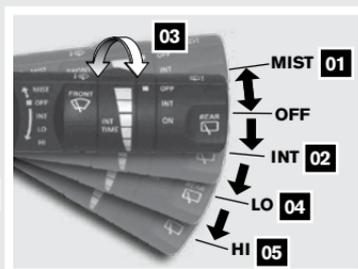

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

05 High (**HI**) - Front wipers operate at a continuous high-speed.

06 Pull the lever toward you to activate the washer. The front wipers will operate several times.

REAR WINDSHIELD WIPER AND WASHER

07 Intermittent (**INT**) - Rear wiper operates intermittently.

08 Low (**ON**) - Rear wiper operates at a continuous low-speed.

09 Push the lever forward to activate the rear washer. The rear wiper will operate several times.



For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.



MANUAL CLIMATE CONTROLS (if so equipped)

01 FAN SPEED CONTROL DIAL

- Turn the fan speed control dial  to the left (low) or right (high) to control fan speed.

02 TEMPERATURE CONTROL DIAL

- Turn the temperature control dial left for cooler air or right for warmer air.

03 AIR FLOW CONTROL BUTTONS

- Select the air flow outlets by pressing the corresponding air flow control button:

 Air flows from the center and side vents.

 Air flows from the defroster and foot vents.

 Air flows mainly from the foot vents.

 Air flows from the center, side and foot vents.

04 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the front window defroster button  to turn the system on. The A/C automatically turns on when the defroster mode is selected. This feature removes humidity from the air.
- Set the fan speed control dial **01** and the temperature control dial **02** to their maximum settings.

first drive features

05 REAR WINDOW AND OUTSIDE MIRROR (if so equipped) DEFROSTER SWITCH

- Push the rear window defroster switch  to turn the system on or off.
- The rear window defroster automatically turns off after approximately 15 minutes.

06 AIR RECIRCULATION BUTTON

- Press the air recirculation button  to recirculate air inside the vehicle. The indicator light on the button will illuminate. This system is used to avoid certain outside odors and helps to adjust the inside vehicle temperature more effectively.
- Press the air recirculation button  again to turn air recirculation off. This allows outside air to be drawn into the passenger compartment to prevent fogging in defrost, floor or defrost/floor modes.
- The air recirculation mode can only be selected if the air flow control mode is in the  or  position.

07 A/C BUTTON

- Press the **A/C** button to turn the air conditioner system on or off. This system helps dehumidify the air inside the cabin and defog the windows.

08 MAX A/C BUTTON

- Press the **MAX A/C** button for maximum cooling (air conditioning).

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.



FM/AM/SiriusXM* SATELLITE RADIO WITH CD PLAYER (if so equipped)

01 VOL/ON-OFF CONTROL DIAL

- Press the **VOL/ON-OFF** control dial to turn the system on or off.
- Turn the **VOL/ON-OFF** control dial to the right or left to increase or decrease the volume.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

02 TUNE KNOB/AUDIO BUTTON

- To manually tune the radio, turn the **TUNE** knob left or right.

03 SEEK BUTTONS

- To tune and stop at the next or previous broadcasting station, press the seek buttons **◀◀** or **▶▶**.
- For SiriusXM Satellite Radio, to switch to the first channel of the previous or next category, press the seek buttons **◀◀** or **▶▶**.
- To change tracks on a CD, press the seek buttons **◀◀** or **▶▶**.
- When the seek buttons **◀◀** or **▶▶** are pressed and held while a CD is playing, the CD will rewind or fast forward. When the button is released, the CD will play at normal speed.

04 STATION MEMORY KEYS

Twelve stations can be set for the FM band, six for the AM band and eighteen for SiriusXM Satellite Radio.

- To store a station in a preset first select a radio band by pressing the **FM-AM** **05** or **XM** button **06**, then tune to the desired FM, AM or SiriusXM Satellite Radio station.
- Now select and hold the desired station memory key (**1-6**) until the preset number is updated on the display and a beep is heard. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then press the corresponding station memory key (**1-6**).

*SiriusXM Satellite Radio is only available on vehicles equipped with optional SiriusXM Satellite Radio subscription service.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

USB/iPOD® INTERFACE (if so equipped)

- The USB jack **01** is located inside the center console storage box.
- When a compatible USB memory device or iPod® is plugged into the USB jack, compatible audio files stored on the device can be played through the vehicle's audio system.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.



first drive features

CRUISE CONTROL

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 MPH (40 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **ON-OFF** switch **01**. The **CRUISE** indicator light in the instrument panel will illuminate.
- To set cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **02** and release. The **SET** indicator light in the instrument panel will illuminate. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **03**. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **02**. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, tap the brake pedal or push the **CANCEL** switch **04**.
- To turn off cruise control, push the **ON-OFF** switch **01**. Both the **CRUISE** indicator light and **SET** indicator light in the instrument panel will turn off.



For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

FUEL-FILLER DOOR


- The fuel-filler door **01** is located on the left, rear side of the vehicle.
- To open the fuel-filler door, pull the lid open.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.



TRIP COMPUTER (if so equipped)

- With the ignition switch in the **ON** position, modes of the trip computer **01** can be selected by pressing the trip computer change button **02** on the instrument panel.
- The following modes can be selected in the display:
 - Trip **A** – measures the distance of one specific trip.
 - Trip **B** – measures the distance of a second specific trip.
 - **dte** (distance to empty) – displays the estimated distance to empty (dte) the vehicle can be driven before refueling.
 - **mph** – displays the average speed since the last reset.
 - **mpg** – displays the average fuel consumption since the last reset.
 - (Journey time) – displays the elapsed time since the last reset.
 - To reset Trip **A**, Trip **B**, **mph**, **mpg**, and (Journey time) go to the desired mode on the trip computer and hold the trip computer change button **02** for more than 3 seconds.

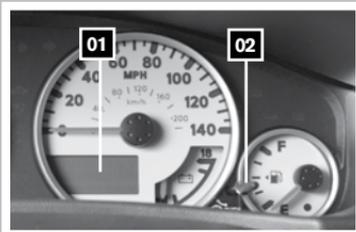


For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

BLUETOOTH® HANDS-FREE PHONE SYSTEM (if so equipped)

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.*

SYSTEM OPERATING TIPS

- The “Help” command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing HVAC vents away from the ceiling.
- Say commands after the tone, or press the  button to say a command at any time.
- Speak naturally without long pauses and without raising your voice.
- When speaking Phonebook names, please be aware some phones require the last name to be spoken before the first name. For example, “Michael Smith” may be spoken as “Smith Michael”.
- To cancel a voice recognition session, simply wait 5 seconds, say “Cancel” or “Quit”, or press and hold the  button for 5 seconds.
- To increase or decrease the volume of the voice prompts, push the volume control switches **+** or **-** on the steering wheel or turn the control dial on the audio system while the audio system is responding.

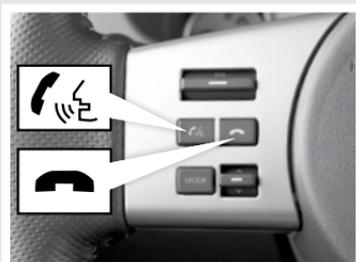

*Some jurisdictions prohibit the use of cellular telephones while driving.

- If the Voice Recognition system does not recognize your voice commands, train the system using the Voice Adaptation Mode. See your Owner's Manual for detailed information.
- For more detailed information and instructions, refer to your cellular phone Owner's Manual and visit www.nissanusa.com/bluetooth.

BLUETOOTH® SYSTEM WITHOUT NAVIGATION (if so equipped)


CONNECTING PROCEDURE

NOTE: The vehicle must be stationary when connecting the phone.

1. Press the  button on the steering wheel. The system announces the available commands.
2. Say: "Connect phone". The system acknowledges the command and announces the next set of available commands.
3. Say: "Add phone". The system acknowledges the command and asks you to initiate connecting from the phone handset.
4. Initiate connecting from the phone:
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and compatible phones, please visit www.nissanusa.com/bluetooth.
 - When prompted for a PIN code, enter "1234" from the handset. (The PIN code is assigned by NISSAN and cannot be changed.)
5. Say a name for the phone when the system asks you to provide one. You can give the phone a name of your choice.

PHONEBOOK SETUP

- The phonebook stores up to 1,000 names for each phone paired with the system.
- Depending on your cell phone, the system may automatically download your cell phone's entire phonebook to the vehicle's Bluetooth system.
- If the phonebook does not download automatically, entries can be individually downloaded.
- To manually download entries:
 1. Push the  button on the steering wheel.
 2. After the tone, say "Phonebook".
 3. After the next tone, say "Transfer Entry". The system acknowledges the command and asks you to initiate the transfer from the phone handset. The new contact phone number will be transferred from the cellular phone to the vehicle.
 - The transfer procedure varies according to each cellular phone. See your cellular phone's owner's manual for details. You can also visit www.nissanusa.com/bluetooth for instructions on transferring phone numbers from NISSAN recommended cellular phones.
 4. The system repeats the number and prompts you for the next command. When you have finished entering numbers or transferring an entry, choose "Store."
 5. The system confirms the name, location and number.

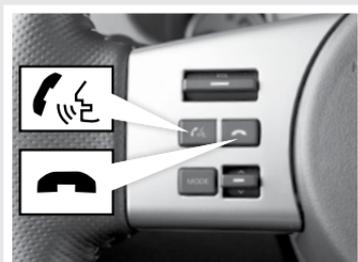

MAKING A CALL FROM THE PHONEBOOK

1. Press the  button.
2. After waiting for the tone, say "Call".
3. After the next tone, speak the name of a phonebook entry. For example "Michael Smith".
4. Confirm the correct name is recognized by saying "Dial" after the tone.

NOTE: In some cases, names stored using all UPPERCASE letters may not be recognized by the voice recognition system.

MAKING A CALL BY PHONE NUMBER

1. Press the  button. A tone will sound.
2. Say: "Call". The system acknowledges the command and announces the next set of available commands.
3. Say: "Phone Number". The system acknowledges the command and announces the next set of available commands.
4. Say the number you wish to call starting with the area code in single digit format.
5. When you have finished speaking the phone number, the system repeats it back and announces the available commands.
6. Say: "Dial". The system acknowledges the command and makes the call.

RECEIVING/ENDING A CALL

- When you receive a phone call, a ring tone sounds through the audio system.
- To accept the call, press the  button.
- To reject the call, press the  button.
- To hang up the phone at the end of a call or to disconnect during call placement, press the  button.


For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual or please visit www.nissanusa.com/bluetooth.

BLUETOOTH® SYSTEM WITH NAVIGATION (if so equipped)

- Send predefined or custom text messages* through your vehicle's Bluetooth® system.
- Receive texts through your vehicle's Bluetooth® system that can be read to you.
- Bluetooth® Streaming Audio allows you to use a compatible Bluetooth® phone to play audio files on your device. Your compatible cellular phone can be connected to the vehicle's audio system, allowing audio files to play through the vehicle's speakers.

CONNECTING PROCEDURE

1. Press the **MENU** button on the control panel.
2. Select the "Settings" key **01**.

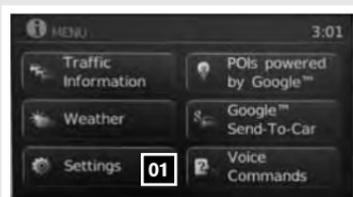

3. Select the "Phone & Bluetooth" key **02**.



4. Select the "Connect New Device" key **03**.
5. Initiate the connecting process from the handset. The system will display the message: "is PIN XXXXXX displayed on your Bluetooth® device?" If the PIN is displayed on your Bluetooth® device, select "Yes" to complete the connecting process.



VEHICLE PHONEBOOK

To access the vehicle phonebook:

1. Press the **PHONE** button on the control panel.
2. Select the "Phonebook" key **04**.
3. Choose the desired entry from the displayed list.

MAKING A CALL FROM THE PHONEBOOK

1. Press the **PHONE** button on the steering wheel to activate Voice Recognition.
2. Say "Call".
3. Say a name in the vehicle phonebook to call that entry.



MAKING A CALL BY PHONE NUMBER

1. Press the **PHONE** button on the steering wheel to activate Voice Recognition.
2. Say "Phone".
3. Say "Dial Number", and when prompted speak the digits of the number you wish to dial.
4. Say "Dial".


RECEIVING A CALL

To accept the incoming call, either:

1. Press the  button on the steering wheel, or
2. Select the green  on the screen.

To reject the incoming call, either:

1. Press the  button on the steering wheel, or
2. Select the red  on the screen.

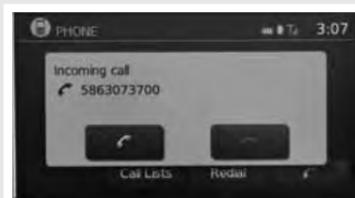

*Laws in some communities may restrict the use of text messaging. Check local regulations before using this feature.

For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. See your Owner's Manual, which contains important safety warnings and information about the operation and maintenance of your vehicle, for complete details. Nissan North America, Inc. reserves the right to make changes, at any time, without prior notice, in prices, colors, materials, equipment, specifications, and models and to discontinue models or equipment. Due to continuous product development and other pre- and post-production factors, actual vehicle, materials and specifications may vary. Some vehicles are shown with optional equipment. See the actual vehicle for complete accuracy. Specifications, options and accessories may differ in Hawaii, U.S. territories and other countries. For additional information on availability, options or accessories, see your NISSAN dealer or contact Nissan North America, Inc.



To view detailed instructional videos,
go to www.nissanownersinfo.mobi/2013/xterra
or snap this barcode with an appropriate barcode reader.

