

2015 XTERRA

QUICK REFERENCE GUIDE





11  
Underneath  
instrument panel

- |  |  |   |   |
|--|--|---|---|
| <b>1</b> Low Tire Pressure Warning Light                     | <b>6</b> Steering Wheel Switches for Audio Control* / Bluetooth® | <b>11</b> Hood Release*                         | <b>16</b> Vehicle Dynamic Control (VDC) Off Switch* |
| <b>2</b> Headlight and Turn Signal Control                   | <b>7</b> Cruise Control  | <b>12</b> Audio and Navigation System           | <b>17</b> Hill Descent Control Switch*              |
| <b>3</b> Trip Computer                                       | <b>8</b> Outside Mirror Control Switch                           | <b>13</b> Climate Controls                      | <b>18</b> E-Lock Switch*                            |
| <b>4</b> Instrument Brightness Control* / Trip Change Button | <b>9</b> Off-road Lamps Switch*                                  | <b>14</b> Front Passenger Air Bag Status Light* | <b>19</b> Heated Seat Switches                      |
| <b>5</b> Windshield Wiper and Washer Switch                  | <b>10</b> Steering Wheel Tilt Adjustment*                        | <b>15</b> 4-Wheel Drive (4WD) Shift Switch*     | <b>20</b> Power Outlets                             |

\*See your Owner's Manual for information.

# TABLE OF CONTENTS

## NEW SYSTEM FEATURES

Navigation System (if so equipped) . . . . .	2
RearView Monitor (if so equipped) . . . . .	3
Hill Start Assist (HSA) System (if so equipped) . . . . .	3
Hill Descent Control (HDC) System (if so equipped) . . . . .	3
Vehicle Dynamic Control (VDC) . . . . .	4
Heated Seats (if so equipped) . . . . .	4
SiriusXM Travel Link and SiriusXM Traffic (if so equipped) . . . . .	4
Text Messaging (if so equipped) . . . . .	5

## ESSENTIAL INFORMATION

Tire Pressure Monitoring System (TPMS) . . . . .	6
Loose Fuel Cap. . . . .	6
Fuel-filler Door. . . . .	7
Clock Set/Adjustment . . . . .	7

## FIRST DRIVE FEATURES

Remote Keyless Entry System. . . . .	8
Liftgate Release . . . . .	8
Seat Adjustments . . . . .	8
Outside Mirror Control Switch (if so equipped). . . . .	9
Starting/Stopping the Engine . . . . .	9
Headlight Control Switch. . . . .	10
Windshield Wiper and Washer Switch. . . . .	10
Climate Controls. . . . .	11
FM/AM/SiriusXM® Satellite Radio with CD Player (if so equipped) . . . . .	12
USB (Universal Serial Bus) Connection Port/Aux Jack and iPod® Interface (if so equipped) . . . . .	13
Cruise Control. . . . .	14

## SYSTEM GUIDE

Trip Computer . . . . .	15
NissanConnect™ with Mobile Apps Smartphone Integration (if so equipped) . . . . .	15
Bluetooth® Hands-free Phone System . . . . .	15
▪ System Operating Tips. . . . .	15
Bluetooth® System without Navigation (if so equipped) . . . . .	16
Bluetooth® System with Navigation (if so equipped) . . . . .	18



Additional information about your vehicle is also available in your Owner's Manual, Navigation System Owner's Manual and at [www.nissanusa.com](http://www.nissanusa.com).



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information refer to the **"Safety — Seats, seat belts and supplemental restraint system (section 1)"**, the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** and the **"Starting and driving (section 5)"** of your Owner's Manual.

# NEW SYSTEM FEATURES



## NAVIGATION SYSTEM (if so equipped)

- Your Navigation System can calculate a route from your current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.
- NissanConnect™ Mobile Apps integrates popular smartphone apps and services into your vehicle. NissanConnect™ Mobile Apps requires a subscription. Please visit [www.nissanusa.com/connect](http://www.nissanusa.com/connect) for more information.

- 1 NAV** button – Press to access the functions of the Navigation System.
- 2 MAP** button – Press to display the current location map screen.
- 3 VOL** knob – Turn right to increase the volume or left to decrease the volume.
- 4** key – Select to zoom the map in.
- 5** key – Select to zoom the map out.
- 6 APPS** button – Press to access SiriusXM Traffic, MyApps, SiriusXM Travel Link, Voice Commands and Settings.
- 7** button – Press to change the display brightness between day and night modes. While the mode is being displayed, the brightness can be adjusted using the **SCROLL** knob. Press and hold to turn the display off. Press again to turn the display on.
- 8 BACK** button – Press to return to the previous screen.
- 9 TUNE** knob – Turn to navigate the items in a list. Press to select a menu item.
- 10** Touch-screen display.
- 11** SD-card location – An SD-card with map data must be inserted here for map functions to operate.

For more information, refer to your Navigation System Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to [www.nissanownersinfo.mobi](http://www.nissanownersinfo.mobi).

## REARVIEW MONITOR (if so equipped)

- When the shift lever is shifted into the **R (REVERSE)** position, the monitor display shows a rearward view from the vehicle.
- The colored guide lines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line.
  - Red 1.5 ft (0.5 m); Yellow 3 ft (1 m); Green 7 ft (2 m) and 10 ft (3 m).



For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

## HILL START ASSIST (HSA) SYSTEM (if so equipped)

The HSA system allows time for the driver to release the brake pedal and apply the accelerator when the vehicle is parked on a hill. The brakes are applied automatically for 2 seconds after the driver releases the brake pedal.

- The Hill Start Assist will operate automatically under these conditions:
  - The shift lever is shifted into a forward or a reverse gear.
  - The vehicle is stopped completely on a hill by applying the brake.
- The Hill Start Assist will not operate when the shift lever is in the **N (Neutral)** or **P (Park)** position or on a flat and level road.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

## HILL DESCENT CONTROL (HDC) SYSTEM (if so equipped)

The Hill Descent Control system is designed to reduce driver workload when going down steep hills. The Hill Descent Control system helps to control vehicle speed so the driver can concentrate on steering the vehicle. To activate the system:

- The 4WD switch must be in the 4LO **1** position and the vehicle speed must be under 15 MPH (25 km/h) or
- The 4WD switch must be in the 4H **2** position and the vehicle speed must be under 21 MPH (35 km/h), and
- The Hill Descent Control system switch **3** must be ON.



For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

# NEW SYSTEM FEATURES

## VEHICLE DYNAMIC CONTROL (VDC)

- Always make sure VDC is ON by ensuring the VDC OFF light is not on before driving the vehicle.
- The VDC OFF **1** switch should ONLY be used briefly to help free the vehicle if stuck in snow or mud.



For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

## HEATED SEATS (if so equipped)

- The front seats can be warmed by built-in heaters.
- The heated seat switches **1** are located below the climate control switches and can be operated independently of each other.
- The heater is controlled by a thermostat, automatically turning the heater on and off. The indicator light will remain on as long as the switch is on.



For more information, refer to the "**Instruments and controls (section 2)**" of your Owner's Manual.

## SiriusXM Travel Link\* AND SiriusXM Traffic\* (if so equipped)

- Your vehicle's Navigation System is equipped with SiriusXM Travel Link and SiriusXM Traffic capabilities.
- SiriusXM Travel Link provides access to real-time weather information and forecasts, nearby fuel prices, movie listings and stock quotes.
- SiriusXM Traffic provides information that may help to avoid delays due to traffic incidents. Traffic jams, roadwork, road closures around the current location, etc. are represented graphically on the map by icons depicting the nature of the event. Incidents on the route are automatically displayed when they are approached.



\*These features, SiriusXM® Satellite Radio, Travel Link and Traffic require an active subscription. Multiple subscriptions may be necessary to activate the various features.

For more information, refer to "**Navigation (section 4)**" and "**General system information (section 6)**" of your Navigation System Owner's Manual.

## TEXT MESSAGING\* (if so equipped)

- This system allows for sending and receiving text messages through the vehicle interface.
- Using predefined or custom messages, send a text to a name or phone number stored in your Bluetooth® Hands-free Phone System.
- Once enabled, the text message, sender and delivery time are shown on the control panel display screen.
- Text messages have the option of being read aloud.
- Text messages are only displayed on the control panel if the vehicle speed is less than 5 MPH (8 km/h).
- This feature is not supported by all phones. See your cellular phone's Owner's Manual for details and also visit [www.nissanusa.com/bluetooth](http://www.nissanusa.com/bluetooth).




\*Laws in some jurisdictions may restrict the use of "Text-to-Speech". Some of the applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

# ESSENTIAL INFORMATION

## TIRE PRESSURE MONITORING SYSTEM (TPMS)

- The tire pressures should be checked when the tires are cold. The tires are considered cold if the vehicle has been parked for 3 hours or driven less than 1 mi (1.6 km) at moderate speeds.

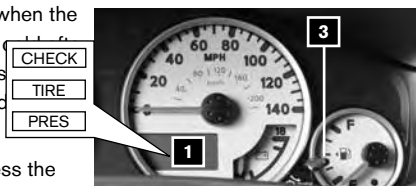


- After the tire pressures are adjusted, press the reset button **3** for more than 1 second. Drive the vehicle at speeds above 16 MPH (25 km/h). The **CHECK TIRE PRES** warning message and low tire pressure warning light will extinguish.




- When the low tire pressure warning light flashes for approximately 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked by a NISSAN dealer.
- Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light to illuminate. If the warning light illuminates, check the tire pressure in your tires.
  - Check the tire pressures (including the spare tire) often and always prior to long distance trips.
- The Tire and Loading Information label contains valuable information. Please refer to "Technical and consumer information (section 9)" in your Owner's Manual for the location of the Tire and Loading Information label.

For more information, refer to the "**Instruments and controls (section 2)**", the "**Starting and driving (section 5)**" and the "**Maintenance and do-it-yourself (section 8)**" of your Owner's Manual.

## LOOSE FUEL CAP

- A **LOOSE FUEL CAP** warning message will appear in the trip computer **1** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will disappear when the vehicle detects the fuel-filler cap is properly tightened and the reset button **2** is pressed for more than 1 second.
- If the cap is not properly tightened, the Malfunction Indicator Light  may illuminate.

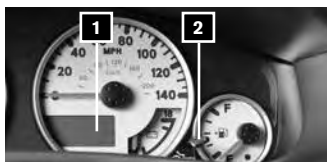

For more information, refer to the "**Instruments and controls (section 2)**" and the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to [www.nissanownersinfo.mobi](http://www.nissanownersinfo.mobi).



## FUEL-FILLER DOOR

- The fuel-filler door **1** is located on the left, rear side of the vehicle.
- To open the fuel-filler door, pull the lid open.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.



## CLOCK SET/ADJUSTMENT

- To adjust the time and the appearance of the clock on the display:

1. Press the **APPS** button **1**.
2. Touch the “Settings” key.
3. Touch the “System” key.
4. Touch the “Clock” key.

- The following settings can be adjusted:

- **Time Format:** The clock can be set to 12 hours or 24 hours.
- **Date Format:** The date can be changed to 1 of 5 different formats.
- **Clock Mode:** From here, the clock mode options are:
  - **Manual:** Allows for the option “Set Clock Manually”. Touch this to begin setting the clock manually using the “+” or “-” to adjust the hours, minutes, day and month up or down.
  - **Time Zone:** Touch the “Time Zone” key **2** to choose from the applicable time zone list and/or touch the “Daylight Savings Time” key to switch between on and off.
  - **Auto:** Automatically sets the clock to the vehicle’s current location.

- Press the **BACK** button **3** to return to the previous screen.




For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.



# FIRST DRIVE FEATURES

## REMOTE KEYLESS ENTRY SYSTEM


The Remote Keyless Entry system allows you to lock or unlock your vehicle and turn on the interior lights.

- To lock the vehicle, press the  button on your key fob.
- To unlock the driver's door, press the  button on your key fob.
- Press the  button again within 5 seconds and all doors will unlock.



For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner's Manual.

## LIFTGATE RELEASE


- Unlock the liftgate by pressing the  button on the key fob twice.
- To open the liftgate, pull up on the handle **1**.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner's Manual.



## SEAT ADJUSTMENTS

- To slide the seat forward or backward, pull up on the lever **1** under the front of the seat and slide forward or backward. Release the lever to lock the seat in position.
- To recline the seatback, pull up on the lever **2** and lean back. To bring the seatback forward, pull the lever up and lean your body forward. Release the lever to lock the seatback in position.

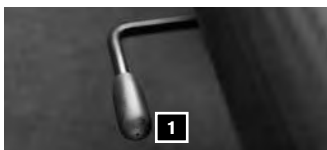

SEAT LIFTER (if so equipped for driver's seat)

- Turn either dial **3** to adjust the angle and height of the seat cushion to the desired position.

LUMBAR SUPPORT (if so equipped for driver's seat)

- To adjust the seat lumbar area, move the lever **4** forward or backward.



For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner's Manual.

## OUTSIDE MIRROR CONTROL SWITCH (if so equipped)

- The outside mirror control switch is located on the left side of the instrument panel.
- To select the left or right mirror, move the switch **1**.
- Adjust each mirror to the desired position using the switch **2**.
- To prevent accidentally moving the mirror, move the switch **1** to the center (neutral) position.



For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

---

## STARTING/STOPPING THE ENGINE

### AUTOMATIC TRANSMISSION (if so equipped)

- Depress the brake pedal.
- Move the shift lever to the **P (PARK)** position.
- Turn the ignition switch to **START**.

### MANUAL TRANSMISSION (if so equipped)

- Depress the brake pedal.
- Depress the clutch pedal to the floor.
- Move the shift lever to the **N (NEUTRAL)** position.
- Turn the ignition switch to **START**.



### TURNING THE ENGINE OFF

 

- For an automatic transmission, move the shift lever to the **P (PARK)** position, apply the parking brake and turn the ignition switch to the **LOCK** position.
- For a manual transmission, apply the foot brake, move the shift lever to 1<sup>st</sup> gear, apply the parking brake and turn the ignition switch to the **LOCK** position.


For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

# FIRST DRIVE FEATURES



## HEADLIGHT CONTROL SWITCH

### HEADLIGHT CONTROL


- Turn the headlight control switch to the  position **1** to turn on the front parking, tail, license plate and instrument panel lights. Turn the switch to the  position **2** to turn on the headlights.

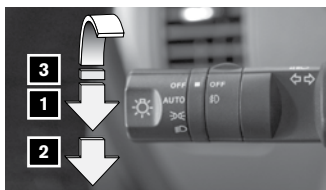


### AUTOLIGHT SYSTEM (if so equipped)

 
 
- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **3** then turn the ignition switch to **ON**. To deactivate the autolight system, turn the headlight control switch to the **OFF**,  position **1** or  position **2**.

### HIGH BEAM SELECT

 - Push the headlight control switch forward **4** to select the high beam function. The blue indicator light  illuminates in the instrument panel. Pull the headlight control switch back to the original position to select the low beam. The blue indicator light will extinguish.
- Pull and release the headlight control switch **5** to flash the headlight high beams on and off.

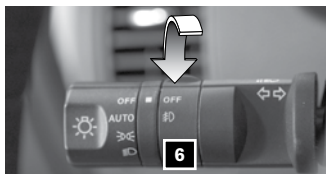

### FOG LIGHT SWITCH (if so equipped)

  
- The headlights must be on and the low beams  selected for the fog lights to operate.
- Turn the switch (inside collar) to the  position **6** to turn the fog lights on.
- Turn the switch (inside collar) to the **OFF** position to turn the fog lights off.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

## WINDSHIELD WIPER AND WASHER SWITCH


- Move the lever to one of the following positions to operate the windshield wipers:

- 1** Mist (**MIST**) – One sweep operation of the front wipers.
- 2** Intermittent (**INT**) – Move the lever down to the **INT** position and then rotate the control ring **3** to increase or decrease **INT** wiper speed.
- 4** Low (**LO**) – Front wipers operate at a continuous low-speed.
- 5** High (**HI**) – Front wipers operate at a continuous high-speed.

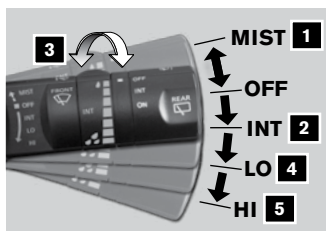


To view detailed instructional videos regarding these and other features, please go to [www.nissanownersinfo.mobi](http://www.nissanownersinfo.mobi).

- 6** Pull the lever toward you to activate the washer. The front wipers will operate several times.

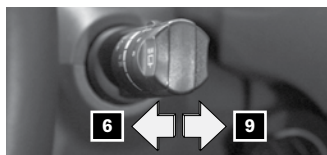


## REAR WINDSHIELD WIPER AND WASHER

- 7** Intermittent (**INT**) – Rear wiper operates intermittently.
- 8** Low (**ON**) – Rear wiper operates at a continuous low-speed.
- 9** Push the lever forward to activate the rear washer. The rear wiper will operate several times.

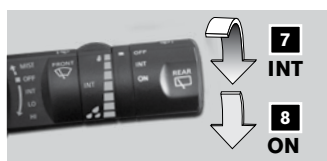


For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

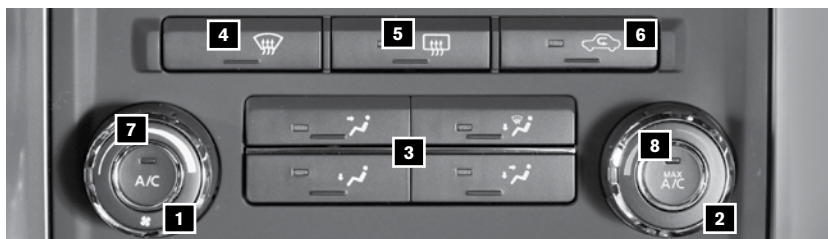

## CLIMATE CONTROLS

### **1 FAN SPEED CONTROL DIAL**





- Turn the fan speed control dial  to the left (low) or right (high) to control fan speed.

### **2 TEMPERATURE CONTROL DIAL**


- Turn the temperature control dial left for cooler air or right for warmer air.

### **3 AIR FLOW CONTROL BUTTONS**

- Select one of the air flow outlets by pressing the corresponding air flow control button:


-  Air flows from the center and side vents.
-  Air flows from the defroster and foot vents.
-  Air flows mainly from the foot vents.
-  Air flows from the center, side and foot vents.

### **4 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS**





- Press the front window defroster button  to turn the system on. The A/C automatically turns on when the defroster mode is selected. This feature removes humidity from the air.
- Set the fan speed control dial **1** and the temperature control dial **2** to their maximum settings.

# FIRST DRIVE FEATURES

## 5 REAR WINDOW DEFROSTER BUTTON

- Push the rear window defroster button  to turn the system on or off.
- The rear window defroster automatically turns off after approximately 15 minutes.

## 6 AIR RECIRCULATION BUTTON

- Press the air recirculation button  to recirculate air inside the vehicle. The indicator light on the button will illuminate. This system is used to avoid certain outside odors and to help adjust the inside vehicle temperature more effectively.
- Press the air recirculation button  again to turn air recirculation off. This allows outside air to be drawn into the passenger compartment to prevent fogging in defroster, floor or defroster/floor modes.
- The air recirculation mode cannot be activated when the climate control system is in the front defroster mode  or the front defroster and foot outlet mode .

## 7 A/C BUTTON

- Press the **A/C** button to turn the air conditioner system on or off. This system helps dehumidify the air inside the cabin and defog the windows.

## 8 MAX A/C BUTTON

- Press the **MAX A/C** button for maximum cooling (air conditioning).

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.



## FM/AM/SiriusXM®\* SATELLITE RADIO WITH CD PLAYER (if so equipped)

### 1 ON-OFF BUTTON/VOL (volume) CONTROL KNOB

- Press the **ON-OFF** button to turn the system on or off.
- Turn the **VOL** (volume) control knob to the right or left to increase or decrease the volume.

### 2 AUDIO BUTTON/TUNE KNOB

- To manually tune the radio, turn the **TUNE** knob left or right.
- Press the **AUDIO** button to go to the audio settings screen.

\*SiriusXM® Satellite Radio is only available on vehicles equipped with an optional satellite radio subscription service.

To view detailed instructional videos regarding these and other features, please go to [www.nissanownersinfo.mobi](http://www.nissanownersinfo.mobi).

### 3 SEEK BUTTONS

- To tune and stop at the previous or next broadcast station, press the seek buttons ◀◀ or ▶▶.
- For satellite radio, to switch to the first channel of the previous or next category, press the seek buttons ◀◀ or ▶▶.
- To change tracks on a CD, press the seek buttons ◀◀ or ▶▶.
- To rewind or fast forward a track on a CD, press and hold the seek buttons ◀◀ or ▶▶.

### 4 STATION MEMORY KEYS

Twelve stations can be set for the FM band, 6 for the AM band and 18 for satellite radio.

- To store a station in a preset, you must first select a radio band by pressing the **FM-AM** button **5** or **SXM** button **6** then tune to the desired FM, AM or satellite radio station.
- Then select and hold the desired station memory key (**1-6**) until the preset number is updated on the display and a beep is heard. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then press the corresponding station memory key (**1-6**).

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

---

## USB (Universal Serial Bus) CONNECTION PORT/AUX JACK AND IPOD® INTERFACE (if so equipped)

- The USB port/Aux jack **1** is located inside the center console storage box.
- When a compatible USB memory device, iPod® or auxiliary device is plugged into the USB port/Aux jack, compatible audio files stored on the device can be played through the vehicle’s audio system.

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.



# FIRST DRIVE FEATURES

## CRUISE CONTROL

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 MPH (40 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **ON-OFF** switch **1**. The **CRUISE** indicator light in the instrument panel will illuminate.
- To set a cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **2** and release. The **SET** indicator light in the instrument panel will illuminate. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **3**. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **2**. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, tap the brake pedal or push the **CANCEL** switch **4**.
- To turn off cruise control, push the **ON-OFF** switch **1**. Both the **CRUISE** indicator light and **SET** indicator light in the instrument panel will extinguish.




For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.



# SYSTEM GUIDE

## TRIP COMPUTER

- With the ignition switch in the **ON** position, modes of the trip computer **1** can be selected by pressing the trip computer change button **2** on the instrument panel.
- The following modes can be selected in the display:
  - Trip **A** – measures the distance of one specific trip.
  - Trip **B** – measures the distance of a second specific trip.
  - **dte** (distance to empty) – displays the estimated distance to empty (dte) the vehicle can be driven before refueling.
  - **mph** – displays the average speed since the last reset.
  - **mpg** – displays the average fuel consumption since the last reset.
  - Journey time – displays the elapsed time since the last reset.
- To reset Trip **A**, Trip **B**, **mph**, **mpg** and Journey time, go to the desired mode on the trip computer and hold the trip computer change button **2** for more than 1 second.

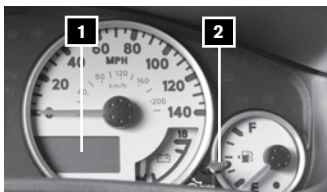

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

## NISSANCONNECT<sup>SM</sup> WITH MOBILE APPS SMARTPHONE INTEGRATION (if so equipped)


- Integrates popular smartphone apps and services into your vehicle.
- The NissanConnect<sup>SM</sup> App must be downloaded to your smartphone, and you must be enrolled.
- For more information on how to pair your phone and set up NissanConnect<sup>SM</sup> with Mobile Apps, visit: [www.nissanusa.com/connect/support](http://www.nissanusa.com/connect/support).

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

## BLUETOOTH<sup>®</sup> HANDS-FREE PHONE SYSTEM

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.\*



### SYSTEM OPERATING TIPS

- Press the  button to interrupt the voice prompts at any time and speak a command after the tone.



\*Some jurisdictions prohibit the use of cellular telephones while driving.


# SYSTEM GUIDE


- To use the system faster, you may speak the second level commands with the main menu command on the main menu. For example, press the  button and after the tone, say "Call Redial".
- The "Help" command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing HVAC vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.
- When speaking Phonebook names, please be aware some phones require the last name to be spoken before the first name. For example, "Michael Smith" may be spoken as "Smith Michael".
- To cancel a voice recognition session, simply wait 5 seconds, say "Cancel" or "Quit", or press and hold the  button for 5 seconds.
- To increase or decrease the volume of the voice prompts, push the volume control switches **+** or **-** on the steering wheel or turn the control dial on the audio system while the audio system is responding.
- If the Voice Recognition system does not recognize your voice commands, train the system using the Voice Adaptation Mode. See your Owner's Manual for detailed information.
- For more detailed information and instructions, refer to your cellular phone's Owner's Manual and visit [www.nissanusa.com/bluetooth](http://www.nissanusa.com/bluetooth).



## BLUETOOTH® SYSTEM WITHOUT NAVIGATION\* (if so equipped)

### CONNECTING PROCEDURE


- The vehicle must be stationary when connecting the phone.
1. Press the  button on the steering wheel. The system announces the available commands.
  2. Say: "Connect phone". The system acknowledges the command and announces the next set of available commands.
  3. Say: "Add phone". The system acknowledges the command and asks you to initiate connecting from the phone handset.
  4. Initiate connecting from the phone:
    - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and compatible phones, please visit [www.nissanusa.com/bluetooth](http://www.nissanusa.com/bluetooth).
    - When prompted for a PIN code, enter "1234" from the handset. (The PIN code is assigned by NISSAN and cannot be changed.)
  5. Say a name for the phone when the system asks you to provide one. You can give the phone a name of your choice.

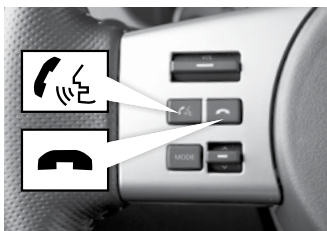


\*Some jurisdictions prohibit the use of cellular telephones while driving.

To view detailed instructional videos regarding these and other features, please go to [www.nissanownersinfo.mobi](http://www.nissanownersinfo.mobi).


## PHONEBOOK SETUP

- The phonebook stores up to 1,000 entries for each phone paired with the system.
- Depending on your cellular phone, the system may automatically download your cellular phone's entire phonebook to the vehicle's Bluetooth® system.
- If the phonebook does not download automatically, entries can be individually downloaded.
- To manually download entries:
  1. Push the  button on the steering wheel.
  2. After the tone, say "Phonebook".
  3. After the next tone, say "Transfer Entry". The system acknowledges the command and asks you to initiate the transfer from the phone handset. The new contact phone number will be transferred from the cellular phone to the vehicle.
    - The transfer procedure varies according to each cellular phone. See your cellular phone's Owner's Manual for details. You can also visit [www.nissanusa.com/bluetooth](http://www.nissanusa.com/bluetooth) for instructions on transferring phone numbers from NISSAN-recommended cellular phones.
  4. The system repeats the number and prompts you for the next command. When you have finished entering numbers or transferring an entry, choose "Store".
  5. The system confirms the name, location and number.




## MAKING A CALL FROM THE PHONEBOOK

1. Press the  button.
  2. After waiting for the tone, say "Call".
  3. After the next tone, speak the name of a phonebook entry. For example, "Michael Smith".
  4. Confirm the correct name is recognized by saying "Dial" after the tone.
- In some cases, names stored using all UPPERCASE letters may not be recognized by the Voice Recognition system.

## MAKING A CALL BY PHONE NUMBER

1. Press the  button. A tone will sound.
2. Say: "Call". The system acknowledges the command and announces the next set of available commands.
3. Say: "Phone Number". The system acknowledges the command and announces the next set of available commands.
4. Say the number you wish to call starting with the area code in single digit format.
5. When you have finished speaking the phone number, the system repeats it back and announces the available commands.
6. Say: "Dial". The system acknowledges the command and makes the call.

## RECEIVING/ENDING A CALL

- When you receive a phone call, a ring tone sounds through the audio system.
- To accept the call, press the  button.
- To reject the call, press the  button.
- To hang-up the phone at the end of a call or to disconnect during call placement, press the  button.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual or please visit [www.nissanusa.com/bluetooth](http://www.nissanusa.com/bluetooth).

To view detailed instructional videos regarding these and other features, please go to [www.nissanownersinfo.mobi](http://www.nissanownersinfo.mobi).

# SYSTEM GUIDE

## BLUETOOTH® SYSTEM WITH NAVIGATION (if so equipped)

- Send predefined or custom text messages\* through your vehicle's Bluetooth® system.
- Receive texts through your vehicle's Bluetooth® system that can be read to you.
- Bluetooth® Streaming Audio allows you to use a compatible Bluetooth® phone to play audio files on your device. Your compatible cellular phone can be connected to the vehicle's audio system, allowing audio files to play through the vehicle's speakers.



### CONNECTING PROCEDURE

1. Press the **APPS** button on the control panel.
2. Select the "Settings" key **1**.
3. Select the "Phone & Bluetooth" key **2**.
4. Select the "Connect New Device" key **3**.
5. Initiate the connecting process from the handset.

The system will display the message:

"Is PIN XXXXXX displayed on your Bluetooth device?"

If the PIN is displayed on your Bluetooth® device, select "Yes" to complete the connecting process.

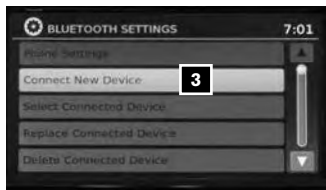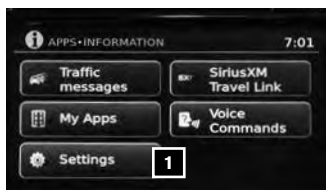


### VEHICLE PHONEBOOK

To access the vehicle phonebook:

1. Press the **PHONE** button on the control panel.
2. Select the "Phonebook" key **4**.
3. Choose the desired entry from the displayed list.



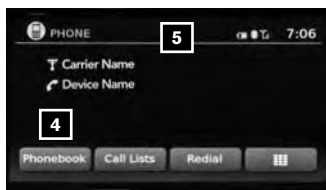


### MAKING A CALL


1. Press the **PHONE** button on the instrument panel. The "Phone" screen **5** will appear on the display.
2. Select one of the following options to make a call:
  - "Phonebook": Select the name from an entry stored in the vehicle's phonebook.
  - "Call Lists": Select the name from the incoming, outgoing or missed call history.
  - "Redial": Dial the last outgoing call from the vehicle.
  - **☰** – Input the phone number manually using the keypad displayed on the screen.



\*Laws in some jurisdictions may restrict the use of "Text-to-Speech". Some of the applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

## RECEIVING/ENDING A CALL

- To accept the incoming call, either:
  - Press the  button on the steering wheel, or
  - Select the  icon on the screen.
- To reject the incoming call, either:
  - Press the  button on the steering wheel, or
  - Select the  icon on the screen.
- To hang-up the phone at the end of a call or to disconnect during call placement, press the  button.

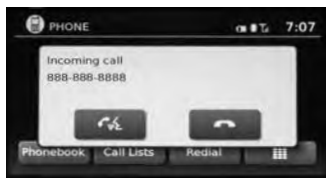

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner's Manual.

# MEMO

# MEMO

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain with this Quick Reference Guide all revision updates sent to you by NISSAN to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the NISSAN website at <https://owners.nissanusa.com/nowners/navigation/manualsGuide>. If you have questions concerning any information in your Owner's Manual, contact NISSAN Consumer Affairs. See the NISSAN CUSTOMER CARE PROGRAM page in the Owner's Manual for contact information.



To view detailed instructional videos,  
go to [www.nissanownersinfo.mobi/2015/xterra](http://www.nissanownersinfo.mobi/2015/xterra)  
or snap this barcode with an appropriate barcode reader.

