


QUICK REFERENCE GUIDE

2019 **LEAF**[®]



Zero Emission



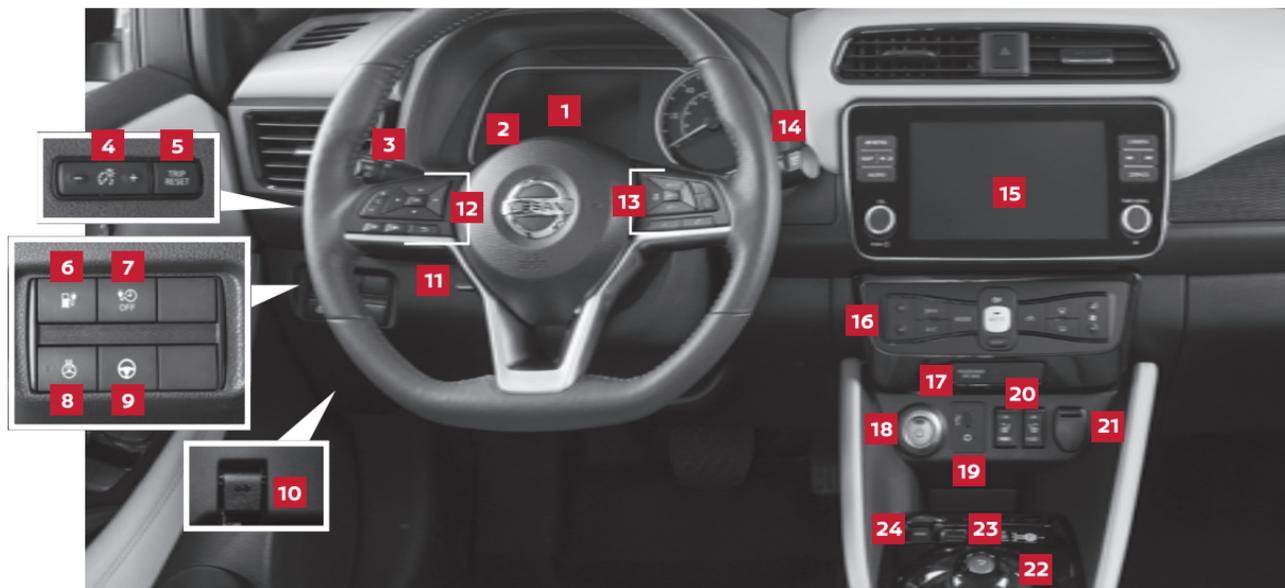

- 1** Vehicle Information Display/
Power Meter/Li-ion Battery
Temperature Gauge
- 2** Li-ion Battery Available Charge
Gauge/Driving Range
- 3** Headlight, Fog Light and
Turn Signal Switch
- 4** Instrument Brightness
Control Switch*
- 5** Trip Reset Switch

- 6** Charge Port Lid Switch
- 7** Immediate Charge Switch*
- 8** Heated Steering Wheel Switch*
- 9** Steering Assist Switch
- 10** Hood Release*
- 11** Tilting Steering Wheel Lever*
- 12** Steering Wheel Switches for
Audio Control/Navigation/Vehicle
Information Display

- 13** Steering Wheel Switches for Cruise
Control/Intelligent Cruise Control/
ProPILOT Assist/Bluetooth®
- 14** Wiper and Washer Switch
- 15** Control Panel Touch Screen Display
- 16** Heater and Air
Conditioner (automatic)
- 17** Front Passenger Air
Bag Status Light*

- 18** Push-Button Power Switch
- 19** USB Port/AUX Jack/
iPod® Interface
- 20** Front Heated Seat Switches
- 21** 12-Volt Power Outlet*
- 22** Shift Lever
- 23** e-Pedal Switch
- 24** ECO Switch

*See your Owner's Manual for information.

TABLE OF CONTENTS

NEW SYSTEM FEATURES

How to Use Your Leaf's Touch-Screen Display (if so equipped for models with 40 kWh battery).....	3
How to Use Your Leaf's Touch-Screen Display (if so equipped for models with 62 kWh battery).....	4
NissanConnect® EV & Services Powered by SiriusXM® (if so equipped for models with 40 kWh battery).....	5
NissanConnect® Services Powered by SiriusXM® (if so equipped for models with 62 kWh battery).....	7
ProPILOT Assist (if so equipped).....	9
e-Pedal System.....	12
Hill Start Assist.....	12
Intelligent Around View Monitor (if so equipped).....	13
Intelligent Driver Alertness (I-DA) (if so equipped).....	14
Lane Departure Warning (LDW) and Intelligent Lane Intervention (I-LI) (if so equipped).....	15
Blind Spot Warning (BSW) with Rear Cross Traffic Alert (RCTA) (if so equipped).....	15
Automatic Emergency Braking (AEB) (if so equipped).....	16
Automatic Emergency Braking (AEB) with Pedestrian Detection System (if so equipped).....	16
Approaching Vehicle Sound for Pedestrians (VSP) System.....	17
Intelligent Forward Collision Warning (I-FCW).....	17
Intelligent Trace Control (I-TC).....	17
Shift Control System.....	18
Heated Seats (if so equipped).....	18
Rear Door Alert (if so equipped).....	19
SiriusXM® Travel Link and SiriusXM® Traffic (if so equipped for models with 40 kWh battery).....	19
SiriusXM® Travel Link and SiriusXM® Traffic (if so equipped for models with 62 kWh battery).....	20
Apple CarPlay® (if so equipped for models with 40 kWh battery).....	20
Apple CarPlay® (if so equipped for models with 62 kWh battery).....	21
Android Auto™ (if so equipped for models with 40 kWh battery).....	23
Android Auto™ (if so equipped for models with 62 kWh battery).....	24

ESSENTIAL INFORMATION

Cold Weather Range and Parking in Extremely Cold Weather.....	25
Quick Charge in Cold Weather (if so equipped).....	25
Li-ion Battery Temperature Gauge and Li-ion Battery Gauges.....	25
Power Limitation Indicator Light.....	26
Clock Set/Adjustment.....	26



Additional information about your vehicle is also available in your Owner's Manual, NissanConnect® Manual (for Leaf) and at www.NissanUSA.com.



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)", the "Monitor, climate, audio, phone and voice recognition systems (section 4)" and the "Starting and driving (section 5)" of your Owner's Manual and your NissanConnect® Manual (for Leaf).

TABLE OF CONTENTS

Charge Port Lid/Charge Connector Lock System	28
Li-ion Battery Charging	29
Tire Pressure Monitoring System (TPMS) with Easy-Fill Tire Alert	31
FIRST DRIVE FEATURES	
Nissan Intelligent Key® System	33
Outside Mirror Control Switch	33
Seat Adjustments	34
Rear Hatch Release	34
Power Meter	35
Electric Vehicle (EV) System Warning Light	35
Starting/Stopping the Electric Vehicle (EV) System	35
Headlight Control Switch	36
Wiper and Washer Switch	37
Heater and Air Conditioner (automatic)	38
FM/AM/SiriusXM® Satellite Radio with CD Player (if so equipped for models with 40 kWh battery)	40
FM/AM/SiriusXM® Satellite Radio (if so equipped for models with 62 kWh battery)	42
USB (Universal Serial Bus) Connection Port/AUX Jack and iPod® Interface	43
Cruise Control (if so equipped)	43
Intelligent Cruise Control (ICC) (if so equipped) (for vehicles without ProPILOT Assist)	44
SYSTEM GUIDE	
Vehicle Information Display	45
Bluetooth® Hands-free Phone System	46
• System Operating Tips	46
Bluetooth® System without Navigation (if so equipped for models with 40 kWh battery)	46
Bluetooth® System without Navigation (if so equipped for models with 62 kWh battery)	48
Bluetooth® System with Navigation (if so equipped for models with 40 kWh battery)	49
Bluetooth® System with Navigation (if so equipped for models with 62 kWh battery)	51
Hands-free Text Messaging Assistant (for models with 40 kWh battery)	52
Hands-free Text Messaging Assistant (for models with 62 kWh battery)	53
Bluetooth® Streaming Audio	54
Navigation System (if so equipped for models with 40 kWh battery)	55
Navigation System (if so equipped for models with 62 kWh battery)	57
HomeLink® Universal Transceiver (if so equipped)	58



Additional information about your vehicle is also available in your Owner's Manual, NissanConnect® Manual (for Leaf) and at www.NissanUSA.com.




Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the "Safety – Seats, seat belts and supplemental restraint system (section 1)", the "Monitor, climate, audio, phone and voice recognition systems (section 4)" and the "Starting and driving (section 5)" of your Owner's Manual and your NissanConnect® Manual (for Leaf).

NEW SYSTEM FEATURES

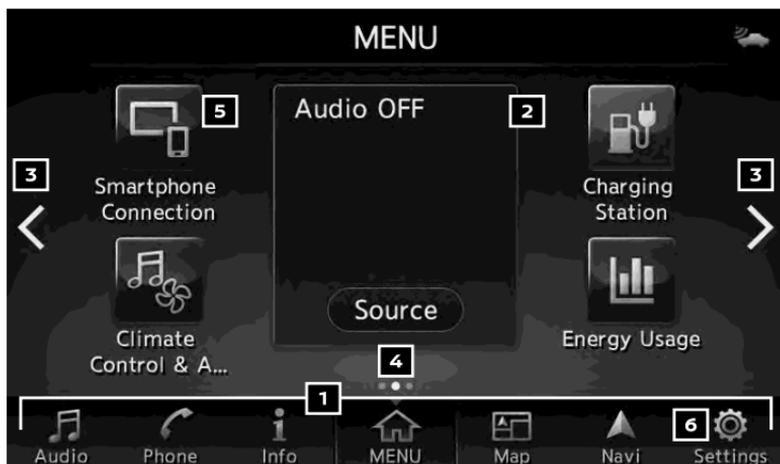

HOW TO USE YOUR LEAF'S TOUCH-SCREEN DISPLAY (if so equipped for models with 40 kWh battery)

- 1** Launch Bar - Various functions can be accessed by touching the items on the Launch Bar, which is displayed on most of the main screens. Touching these keys will bring up the corresponding screens.
- 2** Widget - These items can be interchanged, moved, or deleted from the MENU pages.
- 3** Touch either arrow to navigate to the next or previous page of the "MENU" screen. These screens can also be swiped, as you would with a smartphone, to move from screen to screen.
- 4** These dots indicate the page you are currently on, in white, out of the number of pages there are available, in gray.
- 5** Shortcut - Shortcuts, once touched, will bring up the system they correspond to for quick, one-touch convenience for commonly used features.
- Shortcuts and widgets can be set up through the "Edit Menu" screen which can be accessed by touching the Settings key **6** followed by the "Edit Home Menu" key **7**. This will display the "Edit Menu" screen, which allows shortcuts and widgets to be moved and rearranged **8**, deleted **9** or created **10**.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to your NissanConnect® Manual (for Leaf).



NEW SYSTEM FEATURES



HOW TO USE YOUR LEAF'S TOUCH-SCREEN DISPLAY (if so equipped for models with 62 kWh battery)

- 1** Launch Bar - Various functions can be accessed by touching the items on the Launch Bar, which is displayed on most of the main screens. Touching these keys will bring up the corresponding screens.
- 2** These dots indicate the page you are currently on, in white, out of the number of pages there are available, in gray.
- 3** Touch either arrow to navigate to the next or previous page of the "MENU" screen.
- 4** Widgets - Useful information from primary menu functions can be displayed as widgets.
- 5** Shortcuts - Icons for frequently used menu items can be placed on the Home "MENU" screens as shortcuts.
 - Shortcut and widget selections can be set up in the "Customize Home Menu" screen which can be accessed by touching the Settings key **6** followed by the "Customize Home Menu" key **7**. This will display the "Customize Home Menu" screen, which allows shortcuts and widgets to be added, replaced **8**, rearranged or deleted **9**.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to your NissanConnect® Manual (for Leaf).

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

NISSANCONNECT® EV & SERVICES POWERED by SiriusXM® (if so equipped for models with 40 kWh battery)

NissanConnect® EV & Services is a collection of telematics features that add innovation to your daily drive.

NissanConnect EV enables you to perform remote functions from a compatible internet-enabled smartphone or personal computer, such as:


- Battery status check, the status of the battery can be checked even if you are not in the vehicle.
- Unplugged status and charge status, a notification e-mail can be sent if the charging connector is disconnected or if charging is complete.
- Remote charge and remote climate control, start battery charging, or climate controls can be set.
- Destinations by Google™, allows you to search for locations near your vehicle's current location, near a plotted destination, near the map's scroll position or near a searched city center.

To enroll in NissanConnect EV & Services, create an account or log into your Nissan Owner Portal with your Vehicle Identification Number (VIN). Follow the prompts to enroll in NissanConnect Services. Next, download the NissanConnect EV & Services companion app and log into it using your Nissan Owner Portal ID and password.

For full details on NissanConnect EV & Services or to enroll your vehicle, please visit www.NissanUSA.com/connect or call **855-426-6628**.

Here is a quick overview of some of the features that may be available for your vehicle. A full description of these and other NissanConnect EV & Services can be found in your NissanConnect® Manual (for Leaf).

- Automatic Collision Notification, a service that generates an automatic connection between the vehicle and the Emergency Response Center when the vehicle has been involved in an accident that was severe enough to deploy the air bags.
- Emergency Call, which connects you to a NissanConnect EV & Services Specialist who will assist in the dispatch of emergency services to the vehicle's location. To use this feature, press the **SOS** button **1** on the overhead console. The **SOS** button **1** should only be used in emergency situations.
- Roadside Assistance, which dispatches roadside assistance to the vehicle's location in non-emergency situations. Roadside Assistance can be accessed by touching the headset icon **2** on the map screen, via NissanConnect EV & Services Companion app or by calling the Roadside Assistance provider directly.

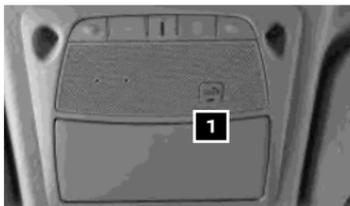

NEW SYSTEM FEATURES

- **Stolen Vehicle Locator**, a service that works in coordination with law enforcement agencies to assist in the recovery of a stolen vehicle.
- **Remote Door Lock/Unlock**, for use when you forget to lock your car or if you need to open it and don't have the keys. To use this feature, log into the NissanConnect EV & Services companion app or website or contact a NissanConnect EV & Services Response Specialist.
- **Alarm Notification**, this system will notify you when the factory-installed vehicle alarm system has been activated.
- **Maintenance Alert**, review notifications via a selected method of a vehicle system malfunction that triggers instrument panel warning lights.
- **Valet Alert**, use Valet Alert to set up a 0.2-mile radius around your vehicle. Activate alerts via the NissanConnect EV & Services companion app or website.
- **Curfew Alert**, specify curfew limits via the NissanConnect EV & Services companion app or website and will be notified via a selected method if curfew is violated.
- **Route Planner**, allows you to plan your itinerary and simplify your trip. By entering a starting point and end destination, Route Planner will look at the vehicle's range and suggest routes by identifying charging station waypoints along the way.
- **Boundary Alert**, a feature that allows you to monitor the movement of your vehicle in and out of specified regions you have set on the Monitoring section of the NissanConnect EV & Services web portal or companion app.
- **Speed Alert**, which sends you alerts when your vehicle speed exceeds a threshold you have set on the web portal or companion app.

To access these features in your vehicle:

- Press the **MENU** button **3** on the control panel.
- Touch the **i** info key **4**
- Touch the "NissanConnect EV & Services" key **5**.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Charging (section CH)**" of your Owner's Manual and the "**System overview (section IT)**" and your NissanConnect® Manual (for Leaf).

NISSANCONNECT® SERVICES POWERED by SiriusXM® (if so equipped for models with 62 kWh battery)

NissanConnect® Services is a collection of telematics features that add innovation to your daily drive.

NissanConnect EV enables you to perform remote functions from a compatible internet-enabled smartphone or personal computer, such as:


- Battery status check, the status of the battery can be checked even if you are not in the vehicle.
- Unplugged status and charge status, a notification e-mail can be sent if the charging connector is disconnected or if charging is complete.
- Remote charge and remote climate control, start battery charging, or climate controls can be set.
- Destinations by Google™, allows you to search for locations near your vehicle's current location, near a plotted destination, near the map's scroll position or near a searched city center.

To enroll in NissanConnect Services, create an account or log into your Nissan Owner Portal with your Vehicle Identification Number (VIN). Follow the prompts to enroll in NissanConnect Services. Next, download the NissanConnect Services companion app and log into it using your Nissan Owner Portal ID and password.

For full details on NissanConnect Services or to enroll your vehicle, please visit www.NissanUSA.com/connect or call **855-426-6628**.

Here is a quick overview of some of the features that may be available for your vehicle. A full description of these and other NissanConnect Services can be found in your NissanConnect® Manual (for Leaf).

- Automatic Collision Notification, a service that generates an automatic connection between the vehicle and the Emergency Response Center when the vehicle has been involved in an accident that was severe enough to deploy the air bags.
- Emergency Call, which connects you to a NissanConnect Services Specialist who will assist in the dispatch of emergency services to the vehicle's location. To use this feature, press the **SOS** button **1** on the overhead console. The **SOS** button **1** should only be used in emergency situations.
- Roadside Assistance, which dispatches roadside assistance to the vehicle's location in non-emergency situations. Roadside Assistance can be accessed by touching the headset key **2** on the map screen, via NissanConnect Services Companion app or by calling the Roadside Assistance provider directly.

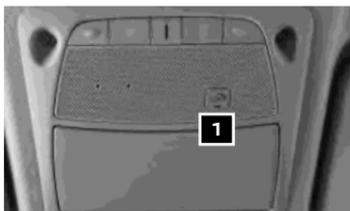


NEW SYSTEM FEATURES

- **Stolen Vehicle Locator**, a service that works in coordination with law enforcement agencies to assist in the recovery of a stolen vehicle.
- **Remote Door Lock/Unlock**, for use when you forget to lock your car or if you need to open it and don't have the keys. To use this feature, log into the NissanConnect Services companion app or website or contact a NissanConnect Services Response Specialist.
- **Alarm Notification**, this system will notify you when the factory-installed vehicle alarm system has been activated.
- **Maintenance Alert**, review notifications via a selected method of a vehicle system malfunction that triggers instrument panel warning lights.
- **Valet Alert**, use Valet Alert to set up a 0.2-mile radius around your vehicle. Activate alerts via the NissanConnect Services companion app or website.
- **Curfew Alert**, specify curfew limits via the NissanConnect Services companion app or website and will be notified via a selected method if curfew is violated.
- **Route Planner**, allows you to plan your itinerary and simplify your trip. By entering a starting point and end destination, Route Planner will look at the vehicle's range and suggest routes by identifying charging station waypoints along the way.
- **Boundary Alert**, a feature that allows you to monitor the movement of your vehicle in and out of specified regions you have set on the Monitoring section of the NissanConnect Services web portal or companion app.
- **Speed Alert**, which sends you alerts when your vehicle speed exceeds a threshold you have set on the web portal or companion app.

To access these features in your vehicle:

- Press the  **MENU** button **3** on the control panel.
- Touch the  **Info** key **4**.
- Touch the "NissanConnect Services" key **5**.

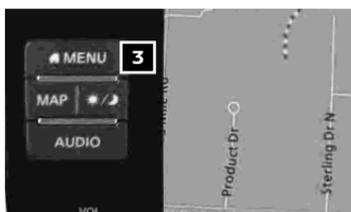

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" of your Owner's Manual and the "**Charging (section CH)**" and the "**System overview (section IT)**" of your NissanConnect® Manual (for Leaf).




PROPILOT ASSIST (if so equipped)

ProPILOT Assist is a combination of Intelligent Cruise Control (ICC) and Steering Assist. The ProPILOT Assist system is intended to enhance the operation of the vehicle when following a vehicle traveling in the same lane and direction. The ProPILOT Assist system is a “hands-on” driver assistance system and is intended for use on expressways/highways.

The driver must be prepared to steer and brake the vehicle at all times.


SETTING THE PROPILOT ASSIST SYSTEM

1. To set ProPILOT Assist, push the ProPILOT Assist switch **1** on the steering wheel. The ProPILOT Assist system display will appear on the vehicle information display.
2. Push the **SET-** switch **2** when at the desired speed.
3. Push the distance switch **3** to select the following distance.

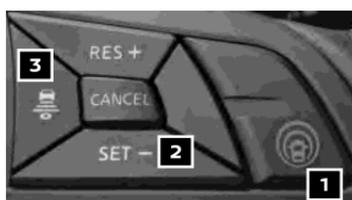

PROPILOT ASSIST SYSTEM DISPLAY AND INDICATORS

- 4 Set vehicle speed indicator
 - Displays the speed set by the driver.
- 5 Steering Assist indicator
 - Shows whether Steering Assist is active or not (green-active, grey-standby, orange-malfunction).
- 6 Lane marker indicator
 - Indicates whether the system detects the lane markers.
- 7 ProPILOT Assist status indicator
 - Indicates the status of the ProPILOT Assist system by the color of the indicator (blue-active, white-standby).
- 8 Vehicle ahead detection indicator
 - Appears on the display when a vehicle is detected ahead.

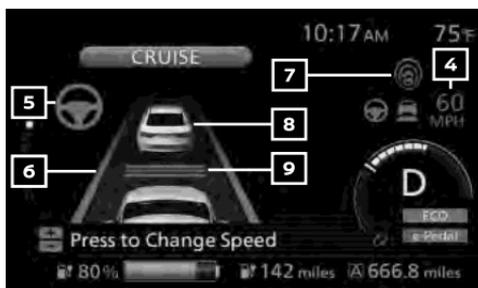


NEW SYSTEM FEATURES

9 Set distance indicator

- Displays the selected distance set by driver.

CANCELLING THE PROPILOT ASSIST SYSTEM

- To cancel ProPILOT Assist, do one of the following:
 - Push the **CANCEL** switch **10** on the steering wheel.
 - Tap the brake pedal.
 - Push the ProPILOT Assist switch **1**.

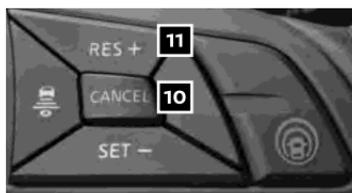

PROPILOT ASSIST INTELLIGENT CRUISE CONTROL (ICC)

- The set speed range is between approximately 20 and 90 mph (32 and 144 km/h).
- To accelerate or decelerate your vehicle to the desired speed, push the **RES+** switch **11** or **SET-** switch **2** and release it.
- When a vehicle is detected in the lane ahead, the ICC system controls the vehicle speed to maintain the distance from the vehicle ahead set by the driver.
- For more information, refer to the ICC section in this book.

VEHICLE AHEAD DECELERATES AND/OR STOPS

- When the vehicle ahead decelerates, your vehicle decelerates to maintain the distance from the vehicle ahead set by the driver.
- Once the vehicle ahead stops, the ICC system will stop your vehicle and apply the brakes to keep the vehicle stopped.
- When the vehicle ahead accelerates, push and release the **RES+** switch **11** or depress the accelerator pedal. The ICC system starts to follow the vehicle ahead.
- If your vehicle comes closer to the vehicle ahead due to rapid deceleration of that vehicle or if another vehicle cuts in, the system warns the driver with a chime and ICC system display. The driver must control the vehicle to prevent a collision.


STEERING ASSIST

- The Steering Assist system assists the driving operation to help keep the vehicle within the traveling lane.
 - Lane markers must be clear and consistent on both sides of the vehicle.
 - This feature will operate when vehicle speed is above 37 mph (60 km/h).
 - Below 37 mph (60 km/h), ProPILOT Assist must detect a vehicle ahead in order for steering assistance to activate.
- Steering Assist provides a warning, is canceled or temporarily goes into standby mode under the following conditions:
 - The turn signals are activated.
 - Both hands are not detected on the steering wheel. Simply apply more pressure or a tighter grip on the steering wheel.
 - The wipers are in LO or HI speed position.
 - Steering Assist will not activate if the system does not detect lane markers.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

To cancel Steering Assist on Instrument Panel and Display:

- Push the Steering Assist switch **12** on the instrument panel to switch off.
- In the vehicle information display, do the following to cancel Steering Assist:
 - Press the \blacktriangle or \blacktriangleleft buttons **13** on the steering wheel to select "Settings" and then press the **OK** button.
 - Use the \blacktriangle buttons **13** to select "Driver Assistance". Then press the **OK** button **14**.
 - Select "Steering Assist" **15** and press the **OK** button **14**.
- Steering Assist may not operate as expected under all conditions. Always be prepared to steer if needed. For example, lighting conditions, weather, lane splits (such as exit ramps) and confusing lane markers may cause the system to not operate as expected. For more information see Owner's Manual.
- ICC may not operate as expected under all conditions. Always be prepared to brake if needed. For example, vehicles cutting into your lane or approaching stopped traffic may not be detected. For more information see Owner's Manual.
- If the driver lightly touches (instead of firmly grips) the steering wheel, the steering torque sensor may not detect the driver's hand(s) on the wheel and a sequence of warnings may occur. When the driver holds and operates the steering wheel again, the warnings turn off.

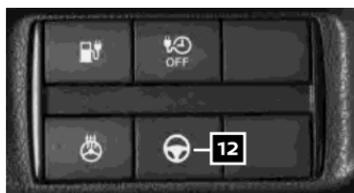

ELECTRONIC PARKING BRAKE (if so equipped)

- To apply the parking brake, pull the electronic parking brake switch **16**, located in the center console. The electronic parking brake indicator light **17** will illuminate.
- To release the parking brake, and with the ignition switch in the ON position, depress the brake pedal and push the parking brake switch **16** down. The electronic parking brake indicator light **17** will turn off.




Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)", "Starting and driving (section 5)", and the "Technical and consumer information (section 9)" of your Owner's Manual.

NEW SYSTEM FEATURES

e-PEDAL SYSTEM

- The e-Pedal system enables the driver to slow or stop the vehicle, or to keep the vehicle stopped, by operating only the accelerator pedal.
- When the e-Pedal system is activated, the regenerative brake is enhanced and the driver can adjust the vehicle speed by only depressing or returning the accelerator pedal.
- Be sure to confirm the status of the e-Pedal system in the vehicle information display before driving.
- To activate or deactivate the e-Pedal system, place the power switch in the **ON** position and pull the e-Pedal switch **1** located on the center console.
- The e-Pedal system indicator illuminates **e-Pedal 2** in the vehicle information display when the e-Pedal system has been activated. **e-Pedal OFF** illuminates when the system is deactivated.
- To turn the e-Pedal system off while the vehicle is kept stopped by the e-Pedal system, depress the brake pedal and then pull the e-Pedal switch **1**.
- The e-Pedal system will not function under the following conditions.
 - When the vehicle is placed in the **P** (Park) or **N** (Neutral) position.
 - When the cruise control (if so equipped), ProPILOT Assist (if so equipped) or Automatic Emergency Braking (AEB) (if so equipped) is operated.

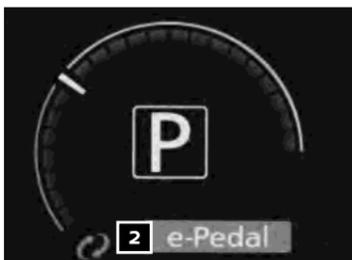

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" and the "**Starting and driving (section 5)**" of your Owner's Manual.

HILL START ASSIST

Hill Start Assist allows time for the driver to release the brake pedal and apply the accelerator when the vehicle is parked on a hill. The brakes are applied automatically for 2 seconds after the driver releases the brake pedal.


- Hill Start Assist system will operate automatically under these conditions:
 - The shift lever is placed in the **D** (Drive), **B** mode or **R** (Reverse) position.
 - The vehicle is stopped completely on a hill by applying the brake.
- The Hill Start Assist system will not operate when the shift lever is in the **N** (Neutral) or **P** (Park) position or when the vehicle is on a flat and level road.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.


For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

INTELLIGENT AROUND VIEW MONITOR (if so equipped)


- With the power switch in the ON position, the Intelligent Around View Monitor is activated by pressing the **CAMERA** button **1**, located on the navigation unit, or by moving the shift lever to the **R** (Reverse) position. The monitor displays various views of the position of the vehicle.

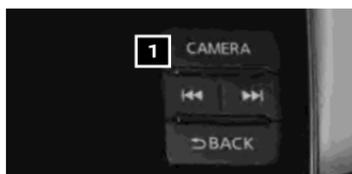


- When the vehicle is in the **P** (Park), **N** (Neutral) or **D** (Drive) position and the **CAMERA** button **1** is pressed, the following views will display in order:

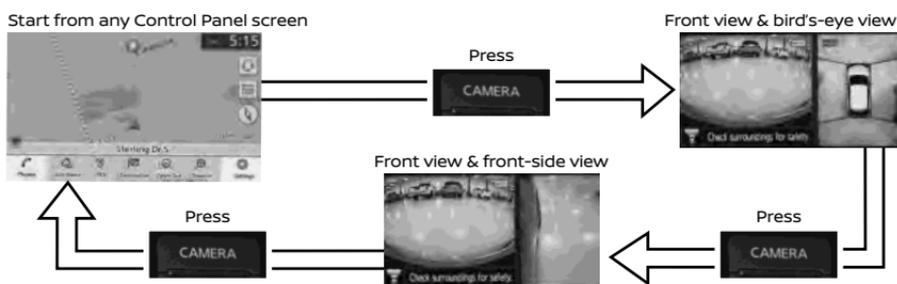

- When the vehicle is in the **R** (Reverse) position and the **CAMERA** button **1** is pressed, the following views will display in order:

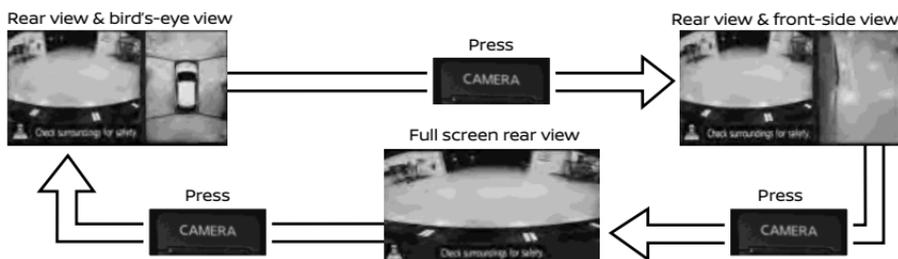


- The colored guide lines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line.
 - Red 1.5 ft (0.5 m)
 - Yellow 3 ft (1 m)
 - Green 7 ft (2 m)
 - Green 10 ft (3 m) (if so equipped)
- For information regarding how to access additional viewing cycles, please see your Owner's Manual.
- There are some areas where the system will not show objects.
 - When in the front or the rear view display, an object below the bumper or on the ground may not be viewed **2**.



NEW SYSTEM FEATURES

- When in the bird's-eye view, a tall object near the seam of the camera detecting areas **3** will not appear in the monitor.
- The distance between objects viewed on the Intelligent Around View Monitor differs from the actual distance.
- Objects in the bird's-eye view will appear farther than the actual distance.

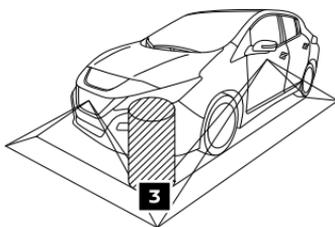

MOVING OBJECT DETECTION (MOD)

- The MOD system helps inform the driver of moving objects around the vehicle.
- The system will operate when the shift lever is in the **P** (Park), **R** (Reverse), **N** (Neutral) or **D** (Drive) position and the vehicle is driven at speeds of approximately 5 mph (8 km/h) or less.
- If the MOD system detects moving objects, a yellow frame will be displayed on the camera image and a chime will sound.
- When the following is displayed:
 - Blue **MOD** icon **4**; the system is active.
 - Gray **MOD** icon; the system is not active.
 - No **MOD** icon; the system is off. The indicator will also be off if all of the warning systems are deactivated using the Settings menu.
- The MOD system will not operate if the rear hatch is open.




Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

INTELLIGENT DRIVER ALERTNESS (I-DA) (if so equipped)

- When Driver Attention Alert **1** is selected in the vehicle information display, the system uses an audible and visual warning to suggest that the driver take a break:
 - If the system detects that driver attention is decreasing, the **Take a Break?** message **2** appears in the vehicle information display and a chime sounds when the vehicle is driven at speeds above 37 mph (60 km/h).

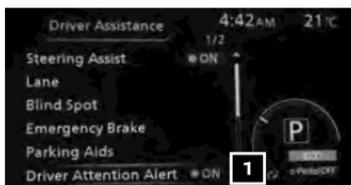

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Starting and driving (section 5)" of your Owner's Manual.

LANE DEPARTURE WARNING (LDW) AND INTELLIGENT LANE INTERVENTION (I-LI) (if so equipped)

- The LDW system can help alert the driver when the vehicle is traveling too close to either the left or the right side of a traveling lane.
- The system will operate when the vehicle is driven at speeds of approximately 37 mph (60 km/h) and above and only when the lane markings are clearly visible on the road.
- When the vehicle approaches either the left or the right side of the traveling lane, the LDW system will vibrate and the LDW light **1** on the vehicle information display will blink to alert the driver.
- The I-LI system can assist the driver in returning the vehicle to the center of the traveling lane by applying individual brake pressure to the left or right wheels for a short period of time.
- The LDW system can be turned on and off through the vehicle information display.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Starting and driving (section 5)" of your Owner's Manual.

BLIND SPOT WARNING (BSW) WITH REAR CROSS TRAFFIC ALERT (RCTA) (if so equipped)

- The BSW system helps to alert the driver when another vehicle moves into the vehicle's detection zone.
- An indicator light **1** located on the outside mirrors will illuminate if the radar sensors detect a vehicle in the detection zone.
- The indicator lights **1** will illuminate after the ignition switch is ON and the BSW system is enabled. This indicates that the BSW system is operational.
- The RCTA system helps to alert the driver of an approaching vehicle when the driver is backing out of a parking space. The system operates when the shift lever is in the **R** (Reverse) position and the vehicle speed is less than approximately 5 mph (8 km/h).
- The radar sensors detect an approaching vehicle from up to 66 ft (20 m). The sensors are located on both sides near the rear bumper. The system gives visual and audible warnings if an approaching vehicle is detected.
- The RCTA and BSW system can be turned on or off through the Settings menu in the vehicle information display.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Starting and driving (section 5)" of your Owner's Manual.

NEW SYSTEM FEATURES

AUTOMATIC EMERGENCY BRAKING (AEB) (if so equipped)

- The AEB system can assist the driver when there is a risk of a forward collision with a vehicle ahead in the traveling lane.
- The AEB system will function when your vehicle is driven at speeds above approximately 3 mph (5 km/h).
- If there is a risk of a forward collision with a vehicle, an audible tone will sound and the vehicle ahead detection indicator **1** will illuminate.
- If there is a risk of a forward collision with a vehicle, an audible tone will sound and the AEB emergency warning indicator **2** will flash. Partial braking will be applied, followed by harder braking if the driver fails to react.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Starting and driving (section 5)" of your Owner's Manual.

AUTOMATIC EMERGENCY BRAKING (AEB) WITH PEDESTRIAN DETECTION SYSTEM (if so equipped)

- The AEB with Pedestrian Detection System can assist the driver when there is a risk of a forward collision with a vehicle ahead in the traveling lane or with a pedestrian.
- The AEB Pedestrian Detection System will function when your vehicle is driven at speeds above approximately 3 mph (5 km/h). For the pedestrian detection function, the AEB Pedestrian Detection System operates at speeds between 6-37 mph (10-60 km/h).
- If there is a risk of a forward collision with a vehicle, an audible tone will sound and the vehicle ahead detection indicator **1** will illuminate. In addition, the system applies partial braking. If the driver does not take action, the AEB Pedestrian Detection System will provide a second set of audible and visual warnings to the driver and then automatically apply harder braking.
- If there is a risk of a forward collision with a pedestrian, an audible tone will sound and the AEB emergency warning indicator **2** will flash. Partial braking will be applied, followed by harder braking if the driver fails to react.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Starting and driving (section 5)" of your Owner's Manual.

APPROACHING VEHICLE SOUND FOR PEDESTRIANS (VSP) SYSTEM


- The VSP system helps alert pedestrians to the presence of the vehicle when it is being driven at a low-speed.
- When the vehicle starts to move, it produces a sound. The sound stops when the vehicle speed reaches approximately 19 mph (30 km/h) while accelerating.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**EV overview (section EV)**" and the "**Instruments and controls (section 2)**" of your Owner's Manual.

INTELLIGENT FORWARD COLLISION WARNING (I-FCW)

- The I-FCW system can help alert the driver of sudden braking by the second vehicle traveling ahead of your vehicle in the same lane.
- The I-FCW system operates at speeds above approximately 3 mph (5 km/h).
- If there is a potential risk of a forward collision, the I-FCW system will warn the driver with the vehicle ahead detection indicator **1** and sounding an alert.

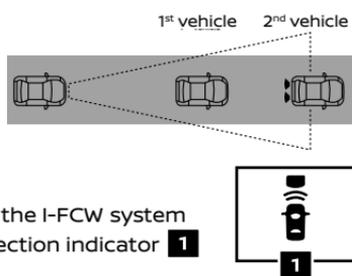

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" and the "**Starting and driving (section 5)**" of your Owner's Manual.

INTELLIGENT TRACE CONTROL (I-TC)

- The I-TC system senses driving based on the driver's steering and acceleration/braking patterns. It controls brake pressure at individual wheels to aid tracing at corners and help smooth vehicle response.
- The I-TC system can be enabled or disabled through the vehicle information display.
- When the I-TC system is operating, you may feel a pulsation in the brake pedal and hear a noise. This is normal and indicates that the I-TC is operating properly.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" and the "**Starting and driving (section 5)**" of your Owner's Manual.

NEW SYSTEM FEATURES

SHIFT CONTROL SYSTEM

This vehicle is equipped with an electric shift control system **1**, providing smooth and easy shift lever operation.

- There are five shift positions for operating the vehicle: **P** (Park), **R** (Reverse), **N** (Neutral), **D** (Drive) and **B** mode.
 - **P** (Park) – Activated by pushing the **P** (Park) switch on the shift lever when the vehicle has come to a complete stop.
 - **D** (Drive) – For normal driving, it is activated by moving the shift lever left and down. The shift lever will then return to the center position.
 - **B** mode – Engages the regenerative braking system more aggressively when decelerating, helping to put energy back into the battery pack. To enter **B** mode, the vehicle must be in **D** (Drive) and then move the shift lever to the **D** (Drive) position again. The shift lever will then return to the center position.
- **ECO** mode – Consumes less power and helps extend vehicle range.
 - **ECO** mode can be activated by pushing the **ECO** switch **2** located in the center console.
 - The **ECO** mode helps reduce power consumption by reducing acceleration when compared to the same accelerator pedal position in the **D** (Drive) position.




Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**EV overview (section EV)**" and the "**Starting and driving (section 5)**" of your Owner's Manual.

HEATED SEATS (if so equipped)

- The front seats can be warmed by built-in heaters.
- The heated switches **1**, located on the center console, can be operated independently of each other.
- The heater is controlled by a thermostat, automatically turning the heater on and off. The indicator light will remain on as long as the switch **1** is on.

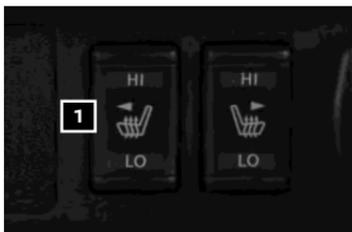

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" of your Owner's Manual.

REAR DOOR ALERT (if so equipped)

The Rear Door Alert functions under certain conditions to indicate there may be an object or passenger in the rear seat(s). The system is activated when a rear door is opened and closed within 10 minutes of the vehicle being started.

REAR DOOR ALERT (ACTIVE)

- To activate Rear Door Alert, in your vehicle information display:
 - Press the  or  buttons on the steering wheel until the "Settings" menu screen appears.
 - Using the  buttons, select "Vehicle Settings", "Rear Door Alert" and press the **OK** button.
 - Choose from the following options: "OFF", "Horn & Alert" or "Alert Only", and then press the **OK** button.



- To Dismiss Rear Door Alert:
 - To dismiss the warning, use the  buttons on the steering wheel to select "Dismiss Message" **1**. If no selection is made, this message will disappear after a period of time.
- To temporarily disable Rear Door Alert for the remainder of the current trip, use the  buttons on the steering wheel to select "Disable Alert" **2** and press the **OK** button.



- When the system is active, an audible alert (horn) will sound and a **Check Rear Seat For All Articles** warning **3** will appear on the vehicle information display.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.


SiriusXM® TRAVEL LINK AND SiriusXM® TRAFFIC (if so equipped for models with 40 kWh battery)

- Your vehicle's Navigation System is equipped with SiriusXM Travel Link and SiriusXM Traffic capabilities.
- Touch the  Info key to access SiriusXM Travel Link and SiriusXM Traffic.
- SiriusXM Travel Link provides access to real-time weather information and forecasts, Charging Station Info, movie listings, sport scores and stock quotes.



NEW SYSTEM FEATURES

- SiriusXM Traffic provides information that may help to avoid delays due to traffic incidents. Traffic jams, roadwork, road closures around the current location, etc., are represented graphically on the map by icons depicting the nature of the event. Incidents on the route are automatically displayed as they are approached.

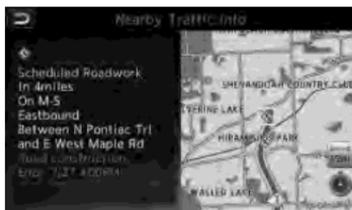

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to your NissanConnect® Manual (for Leaf).

SiriusXM® TRAVEL LINK AND SiriusXM® TRAFFIC (if so equipped for models with 62 kWh battery)

- Your vehicle's Navigation System is equipped with SiriusXM Travel Link and SiriusXM Traffic capabilities.
- Touch the **i** Info key to access SiriusXM Travel Link and SiriusXM Traffic.
- SiriusXM Travel Link provides access to real-time weather information and forecasts, Charging Station Info, movie listings, sport scores and stock quotes.
- SiriusXM Traffic provides information that may help to avoid delays due to traffic incidents. Traffic jams, roadwork, road closures around the current location, etc., are represented graphically on the map by icons depicting the nature of the event. Incidents on the route are automatically displayed as they are approached.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to your NissanConnect® Manual (for Leaf).

APPLE CARPLAY® (if so equipped for models with 40 kWh battery)


- Apple CarPlay® lets you use your compatible iPhone® to make calls, listen to music, send and receive messages, get directions and use iPhone apps directly from your vehicle display.
 - Connect your compatible iPhone to the system to the USB connection port located in the center console.
- Depending on the setting, the startup information screen will appear on the center display.

- Touch “Yes” to use Apple CarPlay.
- After the iPhone is connected, the Apple CarPlay home screen will appear, and the iPhone functions displayed on the screen can be operated by the in-vehicle system.

■ When connected to Apple CarPlay, Siri® operation can also be accessed.

■ There are two ways to start a Siri session.

1. Press and hold the  button on the steering wheel.
2. Touch and hold the  key **1** at the lower left corner of the Apple CarPlay screen.

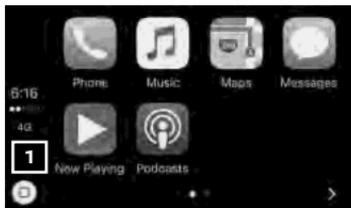

■ Press the  button on the steering wheel or touch the  key **1** at the lower left corner of the Apple CarPlay screen to end the Siri session.

■ Keep the interior of the vehicle as quiet as possible. Close the windows to eliminate the surrounding noises (traffic noises, vibration sounds, etc.), which may prevent the system from recognizing the voice commands correctly.

■ Some Siri functions may not be available during driving.

■ For functions that can be used with Siri, please refer to the Apple® website.

■ To return to the Apple CarPlay home menu screen after operation, touch the  key **1** on the lower left corner of the Apple CarPlay screen.

■ To exit the Apple CarPlay screen, press the **MENU** button or one of the other buttons on the control panel.

■ To return to the Apple CarPlay screen from the main menu, touch the  key **2** on the Launch Bar and then touch the “Apple CarPlay” key **3**.



■ Nissan Phone menu and Nissan Voice Recognition cellular phone commands will not be available when Apple CarPlay is active.

Please see your Owner’s Manual for important safety information, system limitations, and additional operating and feature information.


For more information, refer to the “**Getting started (section 1)**”, the “**Viewing information (section 6)**” and the “**Troubleshooting guide (section 10)**” of your NissanConnect® Manual (for Leaf).

APPLE CARPLAY® (if so equipped for models with 62 kWh battery)

- Apple CarPlay® lets you use your compatible iPhone® to make calls, listen to music, send and receive messages, get directions and use iPhone apps directly from your vehicle display.
- Connect your compatible iPhone to the system to the USB connection port located in the center console.

NEW SYSTEM FEATURES

- Depending on the setting, the startup information screen will appear on the center display.
 - Touch "OK" to use Apple CarPlay.
 - After the iPhone is connected, the Apple CarPlay home screen will appear, and the iPhone functions displayed on the screen can be operated by the in-vehicle system.
- While connected to Apple CarPlay, Siri® operation can be accessed.
 - There are two ways to start a Siri session.
 1. Press and hold the  button on the steering wheel.
 2. Touch and hold the  key **1** at the lower left corner of the Apple CarPlay screen.
 - Press the  button on the steering wheel or touch the  key **1** on the lower left corner of the Apple CarPlay screen to end the Siri session.
 - Keep the interior of the vehicle as quiet as possible. Close the windows to eliminate the surrounding noises (traffic noises, vibration sounds, etc.), which may prevent the system from recognizing the voice commands correctly.
 - Some Siri functions may not be available during driving.
 - For functions that can be used with Siri, please refer to the Apple® website.
 - To return to the Apple CarPlay home screen after operation, touch the  key **1** on the lower left corner of the Apple CarPlay screen.
 - To exit the Apple CarPlay screen, press the  **MENU** button or touch the "Nissan" key **2** on the Apple CarPlay home screen.
 - To return to the Apple CarPlay screen:
 - Touch the  CarPlay key **3**, or
 - Touch the  Info key **4** on the Launch Bar, touch the "Apps" key and then select the "Apple CarPlay" key.
 - Nissan Phone menu and Nissan Voice Recognition cellular phone commands will not be available when Apple CarPlay is active.

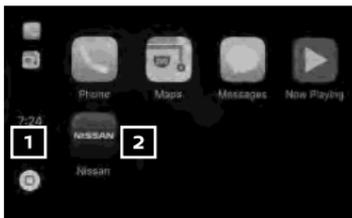

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started (section 1)", the "Information (section 5)" and the "Troubleshooting guide (section 8)" of your NissanConnect® Manual (for Leaf).

ANDROID AUTO™ (if so equipped for models with 40 kWh battery)

- Android Auto™ connects with your compatible Android® phone to control your apps, phone and navigation directly from your vehicle display.

INITIAL SETUP

- Download the Android Auto app from the Google Play™ store to your compatible Android phone.
- Launch the app from your Android phone and follow the directions for setting up the application. Several permissions will need to be given to the app for Android Auto to fully function on your in-vehicle system.


USING ANDROID AUTO

- To connect your Android phone to the in-vehicle system, you must connect a USB cable to the USB connection port located in the center console.
 - Depending on the setting, the startup information screen will appear on the center display.
 - Touch “Yes” to use Android Auto.
 - After the cellular phone is connected, the Android Auto top menu screen will appear, and can be operated by the in-vehicle system.

- When connected to Android Auto, voice operation can be accessed. There are three ways to start voice operation:

1. Press and hold the  button on the steering wheel until a beep is heard.
2. Touch the  key **1** on the upper right corner of the Android Auto screen.
3. Say “OK Google” (requires appropriate permissions enabled via cellular phone).

- To return to the Android Auto home screen after operation, touch the  key **2** on the bottom of the Launch Bar.

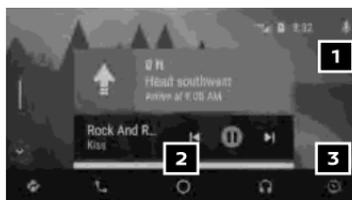

- To exit the Android Auto screen, press the **MENU** button or touch the  key **3**.

- To return to the Android Auto home screen from the main menu, touch the  Info key **4** on the Launch Bar and then touch the “Android Auto” key **5**.



- Nissan Phone menu and Nissan Voice Recognition cellular phone commands will not be available when Android Auto is active.
- If you have difficulties with connection or performance, try a different certified USB cable.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “**Getting started (section 1)**”, the “**Viewing information (section 6)**” and the “**Troubleshooting guide (section 10)**” of your NissanConnect® Manual (for Leaf).

NEW SYSTEM FEATURES

ANDROID AUTO™ (if so equipped for models with 62 kWh battery)

- Android Auto™ connects with your compatible Android® phone to control your apps, phone and navigation directly from your vehicle display.

INITIAL SETUP


- Download the Android Auto app from the Google Play™ store to your compatible Android phone.
- Launch the app from your Android phone and follow the directions for setting up the application. Several permissions will need to be given to the app for Android Auto to fully function on your in-vehicle system.

USING ANDROID AUTO

- To connect your Android phone to the in-vehicle system, you must connect a USB cable to the USB connection port located in the center console.
 - Depending on the setting, the startup information screen will appear on the center display.
 - Touch "Ok" to use Android Auto.
 - After the cellular phone is connected, the Android Auto top menu screen will appear and can be operated by the in-vehicle system.

- When connected to Android Auto, voice operation can be accessed. There are three ways to start voice operation:

1. Press and hold the  button on the steering wheel until a beep is heard.
2. Touch the  key **1** on the upper right corner of the Android Auto screen.
3. Say "OK Google" (requires appropriate permissions enabled via cellular phone).

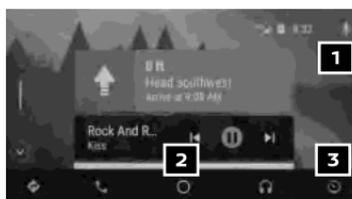

- To return to the Android Auto home screen after operation, touch the  key **2** on the Launch Bar.

- To exit the Android Auto screen, press the  MENU button or touch the  key **3** and select the "Return To Nissan" key on the Android Auto menu.

- To return to the Android Auto home screen from the main menu:

- Touch the  key **4** on the Launch Bar, or
- Touch the  Info key **5** on the Launch Bar, touch the "Apps" key and then select the "Android Auto" key.



- Nissan Phone menu and Nissan Voice Recognition cellular phone commands will not be available when Android Auto is active.

- If you have difficulties with connection or performance, try a different certified USB cable.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started (section 1)", the "Information (section 5)" and the "Troubleshooting guide (section 8)" of your NissanConnect® Manual (for Leaf).

ESSENTIAL INFORMATION

COLD WEATHER RANGE AND PARKING IN EXTREMELY COLD WEATHER

COLD WEATHER RANGE

- Vehicle range is reduced when the heater is used and the battery temperature drops below 77°F (25°C).
- Using the climate control system to heat the cabin when the outside temperature is below 32°F (0°C) uses more electricity (heat pump, if so equipped) and affects vehicle range more than using the heater at temperatures above 32°F (0°C).

PARKING IN EXTREMELY COLD WEATHER

- Do not store the vehicle in temperatures below -13°F (-25°C) for over seven days. If the outside temperature is -13°F (-25°C) or lower, the Li-ion battery may freeze, and it cannot be charged or provide power to run the vehicle.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

QUICK CHARGE IN COLD WEATHER (if so equipped)

- It may take more time to charge the Li-ion battery using the quick charger if the vehicle is parked in a cold location (for example, 32°F [0°C]) for a long period of time.
- It may take more time to charge the Li-ion battery using the quick charger if the temperature of the Li-ion battery is high or low.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Charging (section CH)", the "Instruments and controls (section 2)", and the "Starting and driving (section 5)" of your Owner's Manual.

LI-ION BATTERY TEMPERATURE GAUGE AND LI-ION BATTERY GAUGES

LI-ION BATTERY TEMPERATURE GAUGE

- Quick charging is possible if the battery temperature is not near the red zone **1**.
- If the battery temperature reaches the red zone **1**, quick charging is not allowed and the power limitation mode will be triggered.



LI-ION BATTERY GAUGES

- The Li-ion Battery Available Charge Gauge **2** displays the approximate available Li-ion battery power remaining to drive the vehicle. Charge the Li-ion battery before the blue bar of the gauge disappears.

ESSENTIAL INFORMATION

- The driving range **3** provides an estimated distance that the vehicle can be driven before recharging is necessary. The driving range is constantly being calculated based on the amount of available Li-ion battery charge and the actual power consumption average.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "EV overview (section EV)", the "Charging (section CH)", and the "Instruments and controls (section 2)" of your Owner's Manual.

POWER LIMITATION INDICATOR LIGHT

- When the power limitation indicator light illuminates, power provided to the traction motor is reduced.
- This light illuminates in the following conditions:
 - The Li-ion battery available charge is extremely low.
 - The Li-ion battery temperature is very low. Approximately -4°F (-20°C).
 - The temperature of the Electric Vehicle (EV) system is high (motor, inverter, coolant system, Li-ion battery, etc.).
 - The EV system has a malfunction.
- If the power limitation indicator light is illuminated, follow the instructions provided on the center display.




Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "EV overview (section EV)", the "Charging (section CH)", and the "Instruments and controls (section 2)" of your Owner's Manual.

CLOCK SET/ADJUSTMENT

FM/AM/SAT RADIO WITH COMPACT DISC (CD) PLAYER WITHOUT NAVIGATION SYSTEM
(if so equipped for models with 40 kWh battery)

1. Press the **ENTER/SETTING** button **1** to show the "Settings" screen on the display.
2. Turn the **TUNE/SCROLL** knob **2** to highlight "Clock Adjust".
3. Press the **ENTER/SETTING** button **1** to highlight the hours or minutes and then use the **TUNE/SCROLL** knob **2** to adjust the value.
4. Press the **ENTER/SETTING** button **1** again to set the value.
5. Press the **BACK** button **3** to return to the previous screen.

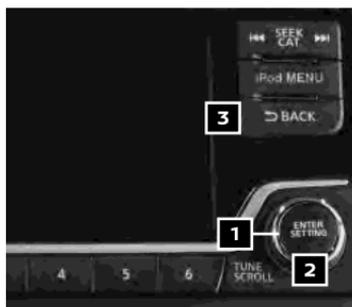

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

FM/AM/SAT RADIO WITH COMPACT DISC (CD) PLAYER WITH NAVIGATION SYSTEM (if so equipped for models with 40 kWh battery)

1. Press the **MENU** button on the control panel.
2. Touch the  Settings key on the Launch Bar.
3. Touch the "Clock" key.



■ The following settings can be adjusted:

- **On-screen Clock:** Sets the clock in the upper right corner of the display on/off.
- **Clock Format (24h):** The clock can be set to 12 hours or 24 hours.
- **Offset (hour):** The time can be adjusted by increasing or decreasing per hour.
- **Offset (min):** The time can be adjusted by increasing or decreasing per minute.
- **Daylight Savings Time:** Turns on/off the daylight saving time setting.
- **Time Zone:** Select an appropriate time zone from the list.

FM/AM/SAT RADIO WITHOUT NAVIGATION SYSTEM (if so equipped for models with 62 kWh battery)


1. Press the  **MENU** button on the control panel.
2. Touch the  Settings key **4** on the Launch Bar.
3. Touch the "Clock" key **5**.



■ The following settings can be adjusted:

- **On-Screen Clock:** Sets the clock display on/off. When this item is on, the clock display appears.
- **Clock Format:** The clock can be set to 12 hours or 24 hours.
- **Date Format:** The display format of the day, month and year display can be selected.
- **Set Clock Manually:** Adjust the clock manually. Touch + or - to adjust the hours, minutes, day, month and year up or down. Clock Mode must be set to Manual for this option.

4. Touch the  key **6** to return to the previous screen.

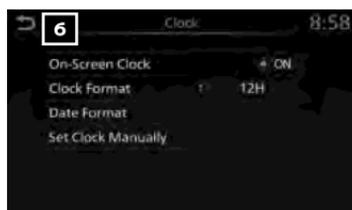

- The clock setting of the vehicle information display will also change when the setting of the clock displayed on the touch screen display is changed.

ESSENTIAL INFORMATION

FM/AM/SAT RADIO WITH NAVIGATION SYSTEM
(if so equipped for models with 62 kWh battery)

1. Press the  **MENU** button on the control panel.
2. Touch the  Settings key **7** on the Launch Bar.
3. Touch the "Clock" key **8**.



- The following settings can be adjusted:

- **On-Screen Clock:** Sets the clock in the upper right corner of the display on/off.
- **Clock Mode:** The time can be changed from automatic, time zone and manual mode.
- **Clock Format:** The clock can be set to 12 hours or 24 hours.
- **Date Format:** The display format of the day, month and year can be selected.
- **Offset (hour):** The time can be adjusted by increasing or decreasing per hour.
- **Offset (min.):** The time can be adjusted by increasing or decreasing per minute.
- **Daylight Savings Time:** Turns on/off the daylight saving time setting.
- **Time Zone:** Select an appropriate time zone from the list.
- **Set Clock Manually:** Adjusts the clock manually.



4. Touch the  key **9** or press the  **BACK** button to return to the previous screen.

- The clock setting of the vehicle information display will also change when the setting of the clock displayed on the touch screen display is changed.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual and the "Getting started (section 1)" of your NissanConnect® Manual (for Leaf).

CHARGE PORT LID/CHARGE CONNECTOR LOCK SYSTEM

- To open the charge port lid, do the following:
 - Push the charge port lid switch **1** on the instrument panel, or
 - Press and hold the charge port lid opener button **2** on the Intelligent Key for more than 1 second.
 - When the charge port lid springs up slightly, place your hand underneath the lid and open it fully.
- To close the charge port lid, slowly move the lid down and lock it securely in place.



- The normal or trickle charge connector can be locked to the normal charge port by selecting the charge connector lock mode in the vehicle information display.
- There are three different modes of the charge connector lock system:



AUTO – The charge connector is locked while charging is in progress and unlocked automatically when charging is complete.

LOCK – The charge connector will remain locked until UNLOCK mode is selected or until the temporary unlock operation is performed.

UNLOCK – When the unlock mode is selected, the charge connector will unlock and remain unlocked.

TEMPORARY UNLOCK MODE

When the charge connector lock mode is selected **AUTO** or **LOCK** in the vehicle information display, the charge connector lock can be unlocked temporarily with the Intelligent Key or the charge port lid switch **1** on the instrument panel.

- Press the charge port lid opener button **2** on the Intelligent Key for more than 1 second or push the charge port lid switch **1** on the instrument panel.
 - The status indicator light flashes three times.
 - A beep sounds three times.
 - The charge connector lock is unlocked for 30 seconds.
- After 30 seconds, the charge connector lock is locked.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Charging (section CH)**", the "**Instruments and controls (section 2)**", the "**Pre-driving checks and adjustments (section 3)**" and the "**Starting and driving (section 5)**" of your Owner's Manual.

LI-ION BATTERY CHARGING

Before charging the Li-ion battery, see your Owner's Manual for detailed warnings and cautions when charging your battery.


- There are three methods available to perform the charge operation: normal charge, trickle charge and quick charge (if so equipped).

NORMAL CHARGE

- Perform a normal charge using the charging device installed in your home.
- Normal charging uses SAE J1772 compliant charger connected to a dedicated 220-240 volt circuit.
- To charge your vehicle:
 - Place the power switch in the OFF position.

ESSENTIAL INFORMATION

- Push the charge port lid switch located on the instrument panel to the left of the steering wheel.
- Press the charge port tab and open the cap.
- Connect the charge connector **1** to the charge port **2**. When connected correctly, a beep will sound once.

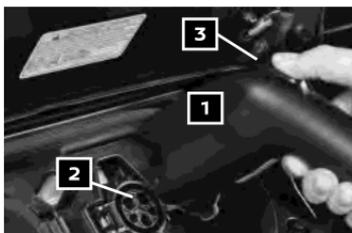


- To stop charging:
 - Ensure that the charge connector lock is not engaged.
 - Press the button on the charge connector **3** to release the lock and remove the charge connector from the charge port.
 - Close the charge port cap and the charge port lid.

TRICKLE CHARGE

- Perform a trickle charge by connecting the Electric Vehicle Supply Equipment (EVSE) (if so equipped) or a SAE J1772 compliant cord set to connect the vehicle to a dedicated AC 110-120 volt, 15A dedicated outlet.

- To charge your vehicle:

- Place the power switch in the OFF position.
- Open the charge port lid.
- Connect the EVSE plug **4** to the 110-120 volt, 15A dedicated electrical outlet. The EVSE control box's green indicator light **5** will illuminate when connected properly.
- Open the charge port cap.
- Remove the safety cap from the charge connector.
- Connect the charge connector **6** to the charge port **2**. A beep will sound once.
- You can pass a rope through the hole on the EVSE control box **7** in order to hang it up while the Li-ion battery is charging.

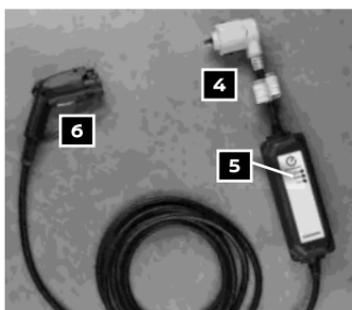

- To stop charging:
 - Ensure that the charge connector lock is not engaged.
 - Press the button on the charge connector **3** to release the lock and remove the charge connector from the charge port.
 - Close the charge port cap and the charge port lid.
 - Attach the safety cap to the charge connector, remove the electrical plug from the dedicated outlet and store it in the case.



To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

QUICK CHARGE (if so equipped)

- Perform a quick charge by connecting the charge connector at a public charging station to charge the battery in a short period of time.
- Quick charging is possible if the battery temperature is not near the red zone.
- To charge your vehicle:
 - Place the power switch in the OFF position.
 - Open the charge port lid and the charge port cap.
 - Align the groove of the charge connector **8** with the groove of the charge port then insert the charge connector.
 - Grasp the lock lever and lock the charge connector.
 - Follow the instructions on the quick charge equipment to start charging. When the equipment is properly installed and ready to charge, a beep sounds twice and the charging status indicator light will change.
- To stop charging:
 - The charge connector can be disconnected from the vehicle when the charging is stopped.
 - Unlock the charge connector and remove it from the vehicle.
 - After closing the charge port cap, close the charge port lid.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "EV overview (section EV)", the "Charging (section CH)" and the "Technical and consumer information (section 9)" of your Owner's Manual.

TIRE PRESSURE MONITORING SYSTEM (TPMS) WITH EASY-FILL TIRE ALERT

- A **Tire Pressure Low - Add Air** warning message will appear in the vehicle information display **1** and the low tire pressure warning light **2** will illuminate when one or more tires are low in pressure and air is needed.
- When adding air to an under-inflated tire, the TPMS with Easy-Fill Tire Alert system provides visual and audible signals to help you inflate the tire to the recommended COLD tire pressure.
- To use the Easy-Fill Tire Alert system:
 1. Apply the parking brake and push the **P** (Park) switch on the shift lever.
 2. Place the power switch in the ON position. Do not place the power switch in the READY to drive mode.



ESSENTIAL INFORMATION

3. Add air to the under-inflated tire, and within a few seconds, the hazard warning lights will flash.
 4. When the designated tire pressure is reached, the horn will beep once and the hazard warning lights will stop flashing.
 5. Repeat this procedure for any additional under-inflated tires.
- After tire pressures are adjusted, drive the vehicle at speeds above 16 mph (25 km/h) and the warning message and warning light will extinguish.
 - When the low tire pressure warning light **2** flashes for approximately 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked. It is recommended that you visit a Nissan dealer for this service.
 - Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light **2** to illuminate. If the warning light illuminates, check the tire pressure in your tires.
 - The Tire and Loading Information label contains valuable information. Please refer to the "Technical and consumer information (section 9)" of your Owner's Manual for the location of the Tire and Loading Information label.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



For more information, refer to the "**Instruments and controls (section 2)**", the "**Starting and driving (section 5)**", the "**In case of emergency (section 6)**" and the "**Maintenance and do-it-yourself (section 8)**" of your Owner's Manual.

FIRST DRIVE FEATURES

NISSAN INTELLIGENT KEY® SYSTEM

The Nissan Intelligent Key® System allows you to lock or unlock the vehicle, open the rear hatch and start your vehicle. It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

- To lock the vehicle, push either door handle request switch **1** or the rear hatch request switch **2** once or press the **i** button **3** on the key fob.
- To unlock the vehicle, perform one of the following procedures:
 - Push any request switch once; the corresponding door will unlock. Push the request switch again within 60 seconds; all other doors will unlock, or
 - Press the **i** button **4** on the key fob to unlock the driver's side door. Press the **i** button **4** again within 60 seconds; all other doors will unlock.
- To open the charge port lid, press and hold the charge port lid opener button **5** for more than 1 second.
- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the **panic** button **6** for more than 1 second. Once activated, the panic alarm and headlights will stay on for a period of time.

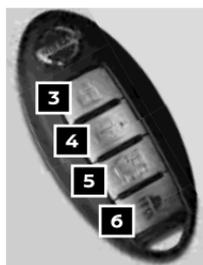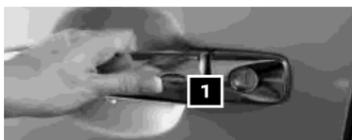

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

OUTSIDE MIRROR CONTROL SWITCH

- To select the right or left side mirror, turn the control switch **1** right or left.
- To adjust the mirror angle, move the control switch **1** up, down, right or left.
- To prevent accidentally moving the mirror, turn and set the switch to the center (neutral) position.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

FIRST DRIVE FEATURES

SEAT ADJUSTMENTS

FRONT POWER SEATS (driver's seat if so equipped)

- To slide the seat forward or backward, push the switch **1** forward or backward.
- To recline the seatback, push the switch **2** forward or backward.



FRONT POWER SEAT LIFTER (driver's seat if so equipped)

- To raise or lower the front portion or height of the seat, push the front or back end of the switch **1** up or down.



FRONT POWER LUMBAR SUPPORT (driver's seat if so equipped)

- To adjust the seat lumbar support, push the front or back end of the switch **3**.



FOLDING THE REAR SEATBACKS DOWN

- Secure the seat belt on the seat belt hooks **4** located on the side wall.
- To fold the seatback down, pull the release knob **5**.
- To return the seatback to the seating position, lift up each seatback and push it to the upright position until it is latched. Then return the seat belt to its original position.




Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Safety - Seats, seat belts and supplemental restraint system (section 1)**" of your Owner's Manual.

REAR HATCH RELEASE

To open the rear hatch, unlock it and push the rear hatch opener switch **1**. Pull the rear hatch up to open. The rear hatch can be unlocked by:

- Pressing the **1** button **2** on the Nissan Intelligent Key® twice.
- Pushing the rear hatch opener switch **1** or rear hatch request switch **3** while carrying the Intelligent Key with you (that is, in your purse or pocket).
- Pushing the door handle request switch twice.
- Pushing the power door lock switch to the unlock position.

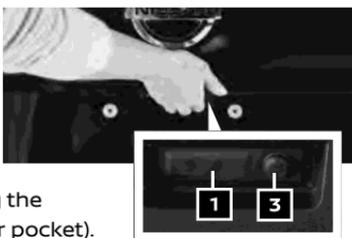

The rear hatch does not lock when closed. To lock the rear hatch, use the rear hatch request switch, power door lock or key fob.


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.



POWER METER

- The power meter **1** displays the traction motor power consumption and the regenerative brake power applied to the Li-ion battery.
- The white segment moves to the right when power is provided to the traction motor.
- The white segment moves to the left when power is generated and provided to the Li-ion battery by the regenerative brake system.
- The illuminated segments on the display are narrowed if the power provided to the motor is limited or if regenerative braking is limited.

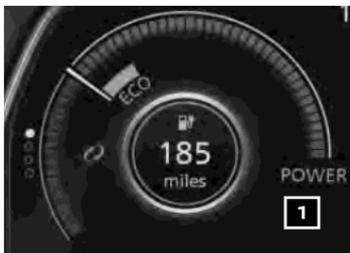

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

ELECTRIC VEHICLE (EV) SYSTEM WARNING LIGHT

- The warning light will illuminate if there is a malfunction in the following systems:
 - Traction motor and inverter system
 - Charge port or on-board charger
 - Li-ion battery system
 - Cooling system
 - Shift control system
 - Emergency shut-off system is activated
- If the warning light illuminates, it is recommended that you visit a NISSAN certified LEAF dealer.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "EV overview (section EV)" and the "Instruments and controls (section 2)" of your Owner's Manual.

STARTING/STOPPING THE ELECTRIC VEHICLE (EV) SYSTEM


It is important to make sure the Nissan Intelligent Key® is with you (that is, in your pocket or purse).

- Confirm the parking brake is applied and push the **P** (Park) switch on the shift lever to place it in the **P** (Park) position.
- Depress the brake pedal.
- Push the power switch to start the EV system.



FIRST DRIVE FEATURES

- Check that the READY to drive indicator light **1** illuminates and the start-up sound is audible.
- Check the Li-ion battery level and the estimated driving range shown on the meter.

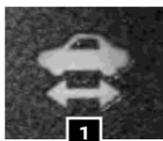

TURNING THE EV SYSTEM OFF

- Push the **P** (Park) switch on the shift lever to place it in the **P** (Park) position.
- Apply the parking brake.
- Push the power switch to the OFF position.


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

HEADLIGHT CONTROL SWITCH

HEADLIGHT CONTROL

- Turn the headlight control switch to the $\Xi D \Xi$ position **1** to turn on the front parking, side marker, tail, license plate and instrument panel lights. Turn the switch to the ΞD position **2** to turn on the headlights.

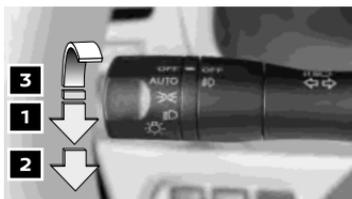


AUTOLIGHT SYSTEM

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **3** then turn the power switch to ON. To deactivate the autolight system, turn the headlight control switch to the **OFF** position, $\Xi D \Xi$ position **1** or ΞD position **2**.

HIGH BEAM SELECT

- With the headlights turned to the ΞD position **2**, push the headlight control switch forward **4** to select the high beam function. The blue indicator light will illuminate in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light will extinguish.
- Pull and release the headlight control switch **5** to flash the headlight high beams on and off.

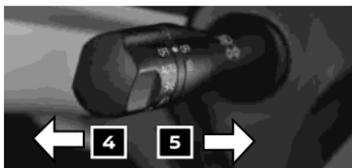

HIGH BEAM ASSIST (if so equipped)

- To activate the High Beam Assist system, turn the headlight switch to the **AUTO** position **3** and push the lever forward **4**. The High Beam Assist indicator light in the meter will illuminate while the headlights are turned on.
- When the vehicle speed lowers to less than approximately 19 mph (30 km/h), the headlight uses the low beam.
- To turn off the High Beam Assist system, turn the headlight switch to the **OFF** position **2** or select the low beam position by placing the lever in the neutral position.



FOG LIGHT SWITCH (if so equipped)

In order to operate the fog lights, you must have your headlights on with the low beams selected.

- Turn the switch (inside collar) to the **ON** position **6** to turn the fog lights on.
- Turn the switch (inside collar) to the **OFF** position to turn the fog lights off.

LANE CHANGE SIGNAL

- Move the lever up or down until the turn signal begins to flash but the lever does not latch to signal a lane change. Hold the lever until the lane change is completed.
- Move the lever up or down until the turn signal begins to flash but the lever does not latch and release the lever. The turn signal will automatically flash three times.

Choose the appropriate method to signal a lane change based on road and traffic conditions.


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" of your Owner's Manual.

WIPER AND WASHER SWITCH


- Move the lever to one of the following positions to operate the windshield wipers:

- 1** Mist (**MIST**) - This is a one-sweep operation of the front wipers.
- 2** Intermittent (**INT**) - Front wipers operate intermittently by moving the lever down to the **INT** position and then rotating the control ring **3** to increase or decrease **INT** wiper speed. Also, the intermittent operation speed varies in accordance to the vehicle speed.
- 4** Low (**LO**) - Front wipers operate at a continuous low-speed.

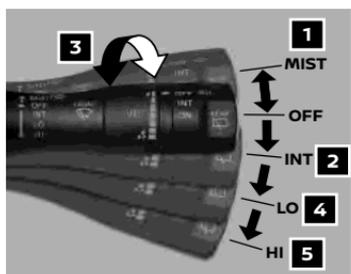

FIRST DRIVE FEATURES

- 5** High (**HI**) – Front wipers operate at a continuous high-speed.
- 6** Front washer – Pull the lever toward you to activate the front washer. The front wipers will operate several times.

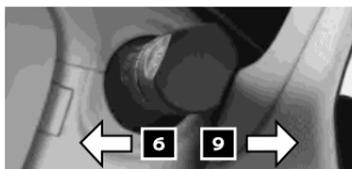

DRIP WIPE

- Once the wiper spray cycle is finished, there will be a short delay. Then the wipers will sweep one more time to clear off any remaining drips from the windshield.

REAR WIPER AND WASHER SWITCH

- 7** Intermittent (**INT**) – Rear wiper operates intermittently.
- 8** Low (**ON**) – Rear wiper operates at a continuous low-speed.
- 9** Rear washer – Push the lever forward to activate the rear washer. The rear wiper will operate several times.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.



HEATER AND AIR CONDITIONER (automatic)

- 1 ON-OFF BUTTON**
 - Press the **ON-OFF** button to turn the climate control system on or off.
- 2 AUTO BUTTON**
 - The automatic mode may be used year-round. Press the **AUTO** button, and the system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.
- 3 TEMPERATURE CONTROL BUTTON**
 - Press the temperature control button up ▲ for warmer air or down ▼ for cooler air.
- 4 FAN SPEED CONTROL BUTTON**
 - Press the fan speed control button to manually adjust the fan speed up + or down -.

5 MODE BUTTON

- Press the **MODE** button to cycle through the following air flow outlets:

-  Air flows from the center and side vents.
-  Air flows from the center, side and foot vents.
-  Air flows mainly from the foot vents.
-  Air flows from the front defroster and foot vents.
-  Air flows from the front defroster vents.

6 HEAT BUTTON

- Press the  **HEAT** button to manually turn the heater on and off.

7 A/C BUTTON

- Press the **A/C** button to manually turn the A/C on or off.

8 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the  front defroster button to turn the system on. Both the air conditioner and heater will automatically turn on when the front defroster mode is selected. The driving range will be reduced when using this setting.
- To remove moisture or fog on the front window quickly, set the temperature control buttons **3** and the fan speed control buttons **4** to their maximum settings.

9 INTAKE AIR CONTROL BUTTON

- For air recirculation, press the  intake air control button to recirculate air inside the vehicle. The indicator light on the button will illuminate. This system is used to avoid certain outside odors and to help adjust the inside vehicle temperature more effectively.
- For outside air recirculation, press the  intake air control button again to turn air recirculation off. This allows outside air to be drawn into the passenger compartment to prevent fogging in the front defroster, floor vent or front defroster/floor vent mode.
- For automatic air intake control mode, press and hold the  intake air control button. The indicator light will blink twice and the inside/outside circulation will then be controlled automatically.

10 REAR WINDOW AND OUTSIDE MIRROR (if so equipped) DEFROSTER SWITCH

- Push the  rear window and outside mirror (if so equipped) defroster switch to turn the system on or off.
- The rear window defroster automatically turns off after approximately 15 minutes.

11 CLIMATE CONTROL TIMER INDICATOR

- The climate control timer indicator light will illuminate when the timer has been set to operate. The climate control timer may be set to a specific date and time in the vehicle information display.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

FIRST DRIVE FEATURES



FM/AM/SiriusXM® SATELLITE RADIO WITH CD PLAYER (if so equipped for models with 40 kWh battery)

Touch the  Audio key on the Launch Bar to display the current audio source. Touch the  Audio key a second time to access the source selection screen.

1 (ON-OFF) BUTTON/VOL (volume) CONTROL KNOB

- Press the  (on-off) button to turn the audio system on or off.
- Turn the **VOL** (volume) control knob right or left to increase or decrease the volume.

2 AUDIO KEY

- Touch the  Audio key on the Launch Bar to bring up the current source's control screen.

3 / (SEEK and CAT/TRACK) BUTTONS

- Press the  button or the  button to seek up or down to the next receivable station.
- For satellite radio to switch to the first channel of the previous or next category, press the  button or the  button.
- To change tracks on a CD, press the  button or the  button.
- To rewind or fast forward a track on a CD, press and hold the  button or the  button.

4 **SOUND** BUTTON/TUNE-SCROLL KNOB

- Press the **SOUND** button to cycle through the audio settings individually and use the **TUNE-SCROLL** knob to adjust the current setting.
- Touch the  Settings key on the Launch Bar and then touch the "Sound" key to view all audio settings.
- To manually tune the radio, turn the **TUNE-SCROLL** knob left or right.

5 AUDIO (SOURCE) BUTTON

- Pressing this button will give access to the AM, FM, SXM, CD, USB/iPod®, Bluetooth® Audio or AUX audio source.
- Twelve memory stations can be set for the FM band, six for the AM band and 18 for satellite radio. These appear at the bottom of the screen when one of these sources is selected.
- To store a station in a preset, you must first select a radio band by touching the "AM" key **6**, "FM" key **7** or "SXM" key **8** then tune to the desired AM, FM or satellite radio station. Next, press and hold the desired station preset key until you hear a beep. The channel indicator will then display, and the sound will resume. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then press the corresponding station select key.

6 AM KEY / 7 FM KEY

- Touch the "AM" or "FM" key to view the station list or to turn HD mode on or off.
- Tag favorite songs to save to an iPod.
 - Apple® website: If you are listening to a radio station that supports iTunes® Tagging, you can tag a song you hear so you can preview and purchase it later on the iTunes Store. Songs that can be tagged are marked with a tag icon next to the song title or on the "Now Playing" screen.

8 SXM KEY

- Touch the "SXM" key to bring up the categories, favorites and replay options.

9 CD KEY

- Touch the "CD" key to view the track list.

10 AUX KEY

- A cable with 1/8 in (3.5 mm) stereo mini plugs is required for audio playback.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Audio system (section 3)**" of your NissanConnect® Manual (for Leaf).

FIRST DRIVE FEATURES



FM/AM/SiriusXM® SATELLITE RADIO (if so equipped for models with 62 kWh battery)

Touch the Audio key on the Launch Bar to display the current audio source. Touch the Source key to access the source selection screen.

1 (ON-OFF) BUTTON/VOL (volume) CONTROL KNOB

- Press the (on-off) button to turn the audio system on or off.
- Turn the **VOL** (volume) control knob right or left to increase or decrease the volume.

2 **OK** BUTTON/TUNE-SCROLL KNOB

- Press the **OK** button to cycle through the audio settings individually and use the **TUNE-SCROLL** knob to adjust the current setting.
- Touch the Settings key on the Launch Bar and then touch the "Sound" key to view all audio settings.
- To manually tune the radio, turn the **TUNE-SCROLL** knob left or right.

3 / (SEEK and CAT/TRACK) BUTTONS

- Press the button or the button to seek up or down to the next receivable station.
- For satellite radio to switch to the first channel of the previous or next category, press the button or the button.

4 **AUDIO (SOURCE) BUTTON**

- Pressing this button will give access to the AM, FM, SiriusXM, USB1, USB2, Bluetooth Audio, AUX, Apple CarPlay or Android Auto audio source.
- Twelve memory stations can be set for the FM band, six for the AM band and 18 for satellite radio. These appear at the bottom of the screen when one of these sources is selected.

- To store a station in a preset, you must first select a radio band by touching the "AM" key, "FM" key or "SiriusXM" key then tune to the desired AM, FM or satellite radio station. Next, press and hold the desired station preset key until you hear a beep. The channel indicator will then display, and the sound will resume. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then press the corresponding station select key.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Audio system (section 3)" of your NissanConnect® Manual (for Leaf).

USB (Universal Serial Bus) CONNECTION PORT/AUX JACK AND IPOD® INTERFACE

- The USB port/AUX jack **1** is located beneath the climate controls.
- When a compatible USB memory device, iPod® or auxiliary device is plugged into the USB port or AUX jack **1**, compatible audio files stored on the device can be played through the vehicle's audio system.
- Touch the "USB/iPod" key to view the folder list and track listing, playlist, album artwork, album name, artist and songs.




For a full list of compatible devices, refer to your NissanConnect® Manual (for Leaf).

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual and your NissanConnect® Manual (for Leaf).

CRUISE CONTROL (if so equipped)

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 mph (40 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the cruise control switch **1** on the steering wheel. The  indicator in the instrument panel will illuminate.
- To set a cruising speed, accelerate the vehicle to the desired speed, push the SET- switch **2** on the steering wheel and release. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.

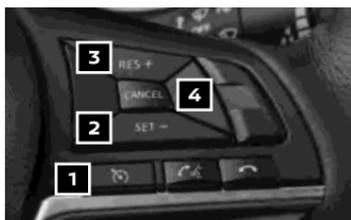

FIRST DRIVE FEATURES

- To reset at a faster cruising speed, push and hold the **RES+** switch **3**. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **SET-** switch **2**. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, push the **CANCEL** switch **4**.
- To turn off cruise control, push the cruise control switch **1**. The  indicator in the vehicle information display will extinguish.


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

INTELLIGENT CRUISE CONTROL (ICC) (if so equipped) (for vehicles without ProPILOT Assist)

VEHICLE-TO-VEHICLE DISTANCE CONTROL MODE

- To set Vehicle-To-Vehicle Distance Control mode, push the ICC Switch **1** on the steering wheel. The ICC system ON indicator **2** will illuminate.
- Accelerate to the desired speed.
- Push down on the **SET-** switch **3** on the steering wheel and release it. ICC will be set to the desired speed.
- Push the  distance switch **4** on the steering wheel repeatedly to change the set distance between long, middle and short.
- When a vehicle is not detected ahead of you in the lane, the set distance and set vehicle speed indicator **5** will illuminate in set mode.
- When a vehicle is detected ahead of you in the lane, the vehicle ahead detection, set distance and set vehicle speed indicator **6** will illuminate in set mode.
- To reset at a faster cruising speed, push and hold the **RES+** switch **7** on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **SET-** switch **3** on the steering wheel. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, push the **CANCEL** switch **8** on the steering wheel or tap the brake pedal. The set vehicle speed indicator **5** will extinguish.
- To turn off ICC, push the ICC switch **1** on the steering wheel. The ICC system ON indicator **2** in the instrument panel will extinguish.

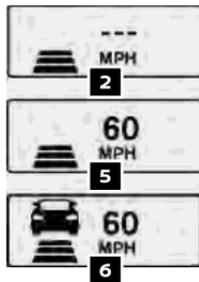

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

SYSTEM GUIDE

VEHICLE INFORMATION DISPLAY

The vehicle information display **1** displays items such as:

- Battery information
- Audio
- Navigation
- Energy economy
- Safety Shield
- Average vehicle speed
- Driving distance
- Driving time
- Cruise control information
- Intelligent Key information
- Indicators and warnings
- Settings



USING THE VEHICLE INFORMATION DISPLAY

The vehicle information display can be changed or selected using the **OK** button **2** and the **▲** or **▶** buttons **3** located on the steering wheel.

- Push the **▲** or **▶** buttons **3** on the steering wheel to navigate the vehicle information display.
- Push the **OK** button **2** on the steering wheel to change or select an item.
- Push the **↶** button **4** on the steering wheel to go back to the previous menu.

ODOMETER/TWIN TRIP A & B

The odometer and twin trip odometer **5** are displayed on the vehicle information display when the power switch is in the ON or READY to drive position.

1. Push the **TRIP RESET** switch **6** to change the display between Odometer > TRIP A > TRIP B.
2. Push the **TRIP RESET** switch **6** for approximately 1 second to reset the current displayed trip odometer to zero.



SETTINGS

The setting mode allows you to change the information displayed in the vehicle information display:

- VDC Setting
- Driver Assistance
- Customize Display
- Vehicle Settings
- EV Settings
- TPMS Settings
- Maintenance
- Clock
- Unit /Language
- Factory Reset

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" of your Owner's Manual.


SYSTEM GUIDE

BLUETOOTH® HANDS-FREE PHONE SYSTEM*

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.
- For information regarding connecting your cellular phone, refer to the appropriate “Bluetooth® System” section within this guide.

SYSTEM OPERATING TIPS

- Press the  or  button on the steering wheel to interrupt the voice prompts at any time and speak a command after the tone.
- The “Help” command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing heater and air conditioner vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.
- If you experience difficulty with the Nissan Voice Recognition System recognizing a contact name, please try saying both the first and last name of the contact as this improves recognition accuracy.
- To cancel a Voice Recognition session, simply wait 5 seconds, say “Cancel” or “Quit” or press and hold the  or  button on the steering wheel for 5 seconds.
- For more detailed information and instructions, see your cellular phone’s Owner’s Manual and visit www.NissanUSA.com/bluetooth.

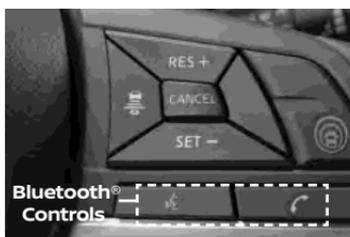

* Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner’s Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual and your NissanConnect® Manual (for Leaf) or please visit www.NissanUSA.com/bluetooth.

BLUETOOTH® SYSTEM WITHOUT NAVIGATION* (if so equipped for models with 40 kWh battery)

CONNECTING PROCEDURE

1. Press the **ENTER/SETTING** button.
2. Press the **ENTER/SETTING** button again to select “Bluetooth”.
3. Use the **TUNE/SCROLL** knob to select “Add Phone.” This same screen can be accessed to remove, replace or select a different Bluetooth® device.



4. The system acknowledges the command and asks you to initiate connecting from the cellular phone handset.

- The connecting procedure of the cellular phone varies according to each cellular phone model. For additional information, refer to the cellular phone's Owner's Manual for details. You can also visit www.NissanUSA.com/bluetooth for instructions on connecting Nissan-recommended cellular phones.
- When prompted, confirm the PIN on the display with the PIN shown on the handset. If your device does not support Secure Simple Pairing and requests you to input a PIN, enter "1234" from the handset.

PHONEBOOK REGISTRATION

- When the cellular phone is connected to the in-vehicle module, the data stored in the cellular phone, such as phonebook, outgoing call logs, incoming call logs and missed call logs, is automatically transferred and registered to the system.
- The availability of this function depends on each cellular phone. The copying procedure also varies according to each cellular phone. See your cellular phone's Owner's Manual for more information.
- Up to 1,000 entries per registered cellular phone can be stored in the phonebook.

MAKING A CALL

1. Press the  button on the steering wheel. The system will announce the available commands; afterward, a tone will sound.
2. Say: "Call". The system acknowledges the command and announces the next set of available commands.
3. Say the registered person's name. The system acknowledges the command and announces the next set of available commands.
4. Say: "Yes". The system acknowledges the command and makes the call.

RECEIVING/ENDING A CALL

- To accept the call, press the  button on the steering wheel.
- To reject the call, press the  button on the steering wheel.
- To hang up, press the  button on the steering wheel.

*Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual or please visit www.NissanUSA.com/bluetooth.

SYSTEM GUIDE

BLUETOOTH® SYSTEM WITHOUT NAVIGATION* (if so equipped for models with 62 kWh battery)

CONNECTING PROCEDURE

1. Select the  Settings key **1** on the Launch Bar.
2. Touch the "Connections" key **2**.
3. Touch the "Bluetooth" tab **3** and touch "Add New".
4. Touch "Yes" to connect a cellular phone. Touch "No" to connect an audio device and operate as guided by the system. (Operations may differ depending on the device).



VEHICLE PHONEBOOK

To access the vehicle phonebook:

1. Press the  or  button on the steering wheel or touch the  Phone key on the Launch Bar.
2. Touch the "Phonebook" key **4**.
3. Choose the desired entry from the displayed list.

MAKING A CALL

1. Press the  Phone key on the Launch Bar. The "Phone" screen will appear on the display.
2. Select one of the following options to make a call:
 - "Quick Dial": Select a telephone number registered as a Quick Dial.
 - "Phonebook": Select the name from an entry stored in the vehicle phonebook.
 - "Call History": Select a telephone number from recent incoming, outgoing or missed calls.
 - "Dial Number": Enter the phone number manually using the keypad displayed on the screen.



RECEIVING/ENDING A CALL

- To accept the call, press the  or  button on the steering wheel or touch the  Answer key on the display.
- To hang up, press the  or  button on the steering wheel or touch the  Hang up key on the display.
- To reject the call, touch the  Decline key on the display.




*Some jurisdictions prohibit the use of cellular telephones while driving.


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started (section 1)", "Audio system (section 3)", "Hands-Free Phone (section 7)", "Voice recognition (section 8)" and the "Troubleshooting guide (section 10)" of your NissanConnect® Manual (for Leaf) or please visit www.NissanUSA.com/bluetooth.

BLUETOOTH® SYSTEM WITH NAVIGATION* (if so equipped for models with 40 kWh battery)

CONNECTING PROCEDURE

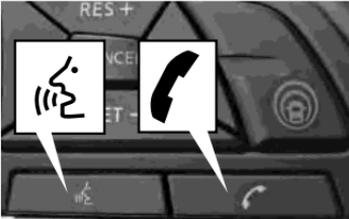- The vehicle must be stationary when connecting the cellular phone.
 1. Press the  button on the steering wheel and touch the "Connect Phone" key on the center display.
 2. Initiate connecting from the cellular phone.
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible cellular phones, please visit www.NissanUSA.com/bluetooth.
 - When prompted, confirm the PIN on the display with the PIN shown on the handset. If your device does not support Secure Simple Pairing and requests you to input a PIN, enter "1234" from the handset.
 - Some cellular phones may require you to accept certain permissions in order to enable features on your Bluetooth® system. During the Bluetooth® pairing process, please check your cellular phone's display for a pop-up with the request to grant phonebook access.
 - Granting phonebook access permission will allow your contacts to be downloaded to the vehicle's Bluetooth® system. A pop-up may display on your cellular phone stating that the Bluetooth® system would like to access your contacts and call history. Please select "Allow" or "Yes" to grant this permission.

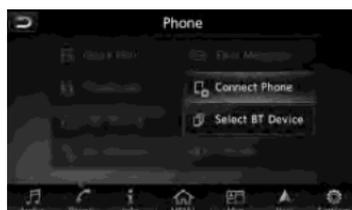

SYSTEM GUIDE

- If your cellular phone presents the option to not show the message again, please make sure that this item is checked. Doing so will ensure that any changes to your phonebook will be synced with the Bluetooth® system automatically.
 - Some cellular phones may incorrectly state that the connection was unsuccessful. Please verify that the touch-screen displays that the connection is successful, or touch  Settings > "Bluetooth" > "Select BT Device" > "Phone" and confirm that your cellular phone is listed.
3. When connecting is complete, the screen will return to the "Phone" menu.



PHONEBOOK SETUP

- Press the **MENU** button on the control panel.
- Touch the  Settings key on the Launch Bar and touch the "Phone" key. Next touch the "Phonebook" key on the "Phone" menu screen.
- Depending on your cellular phone, the system may automatically download your cellular phone's entire phonebook to the vehicle's Bluetooth® system. During the Bluetooth® pairing process, please check your cellular phone for any requests to download your phonebook or contacts to the vehicle system. If your cellular phone requests permission to download your contacts, please select "Allow" or "Yes". For additional information, refer to "Connecting Procedure" in this section.

- The "Quick Dial" phonebook can also be set for up to twenty entries that can be used with your cellular phone.

1. Press the  button on the steering wheel and touch the "Quick Dial" key.
2. Touch the "Add New" key at the top of the display. There are different methods to input a phone number. Select one of the following options:


- **Copy from Call History** to save a number from the Outgoing, Incoming or Missed Calls lists.
- **Copy from the Phonebook** to save a number that has been downloaded from your handset to the vehicle.
- **Enter Number by Keypad** to input the number and name manually.

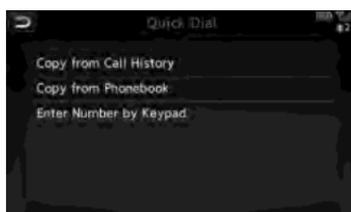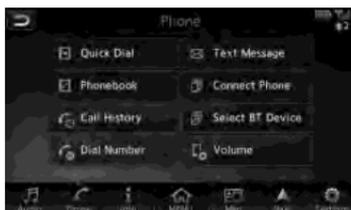

MAKING A CALL

To make a call, follow this procedure:

1. Press the  button on the steering wheel. The Phone menu will appear on the control panel display.
2. Touch the "Quick Dial", "Phonebook", "Call History" or "Dial Number" key.
3. Touch the desired entry from the list.
4. Touch the phone number to start dialing.

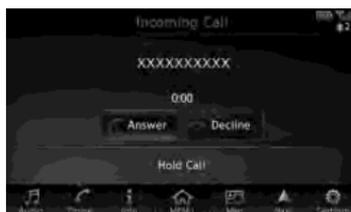

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

RECEIVING/ENDING A CALL

- To accept the call, press the  button on the steering wheel or touch the "Answer" key on the display.
- To hang up, press the  button on the steering wheel or touch the  Hang up key on the display.
- To reject the call, touch the  Decline key on the display.



*Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started (section 1)", "Audio (section 4)", "Hands-Free Phone (section 7)", "Voice recognition (section 8)" and the "Troubleshooting guide (section 10)" of your NissanConnect® Manual (for Leaf) or please visit www.NissanUSA.com/bluetooth.

BLUETOOTH® SYSTEM WITH NAVIGATION* (if so equipped for models with 62 kWh battery)

CONNECTING PROCEDURE

1. Select the  Settings key **1** on the Launch Bar.
2. Touch the "Connections" key **2**.
3. Touch the "Bluetooth" tab **3** and touch "Add New".
4. Touch "Yes" to connect a cellular phone. Touch "No" to connect an audio device and operate as guided by the system. (Operations may differ depending on the device).



VEHICLE PHONEBOOK

To access the vehicle phonebook:

1. Press the  button on the steering wheel or touch the  Phone key on the Launch Bar.
2. Touch the "Phonebook" key **4**.
3. Choose the desired entry from the displayed list.



MAKING A CALL

1. Press the  Phone key on the Launch Bar. The "Phone" screen will appear on the display.




SYSTEM GUIDE

2. Select one of the following options to make a call:
 - "Quick Dial": Select a telephone number registered as a Quick Dial.
 - "Phonebook": Select the name from an entry stored in the vehicle phonebook.
 - "Call History": Select a telephone number from recent incoming, outgoing or missed calls.
 - "Dial Number": Enter the phone number manually using the keypad displayed on the screen.

RECEIVING/ENDING A CALL

- To accept the call, press the  button on the steering wheel or touch the  Answer key on the display.
- To hang up, press the  button on the steering wheel or touch the  Hang up key on the display.
- To reject the call, touch the  Decline key on the display.

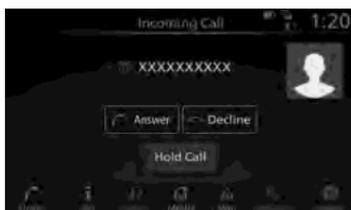


*Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started (section 1)", "Audio system (section 3)", "Hands-Free Phone (section 7)", "Voice recognition (section 8)" and the "Troubleshooting guide (section 10)" of your NissanConnect® Manual (for Leaf) or please visit www.NissanUSA.com/bluetooth.

HANDS-FREE TEXT MESSAGING ASSISTANT* (for models with 40 kWh battery)

- This text messaging feature allows for sending and receiving text messages through the vehicle's interface.
- Using predefined or custom messages, send a text to an entry stored in your Bluetooth® Hands-free Phone System.
- Once enabled, the date, sender and delivery time are shown on the control panel display when the vehicle speed is less than 5 mph (8 km/h).
- Text messages have the option of being read aloud at all speeds.
- Once the vehicle is in motion, text messages can only be replied to using the Voice Recognition  or  button on the steering wheel.
- Text messages can be created manually when the vehicle is not in motion.
- Custom text messages must be created in advance.
- Many cellular phones may require special permission to enable text messaging. Check the cellular phone's screen during Bluetooth® pairing. For some cellular phones, you may need to enable "Notifications" in the cellular phone's Bluetooth® menu for text messages to appear on the touch-screen display. For more detailed information and instructions, refer to your cellular phone's Owner's Manual.

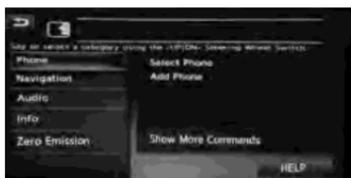

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

- Text message integration requires that the cellular phone support Message Access Profile (MAP) for both receiving and sending text messages. Some cellular phones may not support all text messaging features. Please see www.NissanUSA.com/bluetooth for compatibility information as well as your device's Owner's Manual.


*Laws in some jurisdictions may restrict the use of "Text-to-Speech". Some of the applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the your NissanConnect® Manual (for Leaf).

HANDS-FREE TEXT MESSAGING ASSISTANT* (for models with 62 kWh battery)

- This system allows for sending and receiving text messages through the vehicle's interface.
- Using predefined or custom messages, send a text to an entry stored in your Bluetooth® Hands-free Phone System.
- Once enabled, the date, sender and delivery time are shown on the control panel display when the vehicle speed is less than 5 mph (8 km/h).
- Text messages have the option of being read aloud at all speeds.
- Once the vehicle is in motion, text messages can only be replied to using the Voice Recognition  or  button on the steering wheel.
- Text messages can be created manually when the vehicle is not in motion.
- Custom text messages must be created in advance.
- Many cellular phones may require special permission to enable text messaging. Check the cellular phone's screen during Bluetooth® pairing. For some cellular phones, you may need to enable "Notifications" in the cellular phone's Bluetooth® menu for text messages to appear on the touch-screen display. For more detailed information and instructions, refer to your cellular phone's Owner's Manual.
- Text message integration requires that the cellular phone support Message Access Profile (MAP) for both receiving and sending text messages. Some cellular phones may not support all text messaging features. Please see www.NissanUSA.com/bluetooth for compatibility information as well as your device's Owner's Manual.

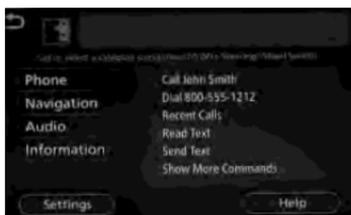

*Laws in some jurisdictions may restrict the use of "Text-to-Speech". Some of the applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the your NissanConnect® Manual (for Leaf).

SYSTEM GUIDE

BLUETOOTH® STREAMING AUDIO*

- If you have a compatible Bluetooth® device with streaming audio (A2DP profile), you can set up the wireless connection between your Bluetooth® device and the in-vehicle audio system. This connection allows you to listen to audio from the Bluetooth® device using your vehicle's speakers.
- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.


BLUETOOTH AUDIO WITHOUT NAVIGATION SYSTEM (if so equipped for models with 40 kWh battery)

To connect your Bluetooth® audio device to the vehicle, follow the procedure below:

1. Press the **ENTER/SETTING** button.
 2. Press the **ENTER/SETTING** button again to select "Bluetooth".
 3. Use the **TUNE/SCROLL** knob to select "Add Phone." This same screen can be accessed to remove, replace or select a different Bluetooth® device.
 4. The system acknowledges the command and asks you to initiate connecting from the cellular phone handset. The connecting procedure of the cellular phone varies according to each cellular phone model. For additional information, refer to the cellular phone's Owner's Manual for details. You can also visit www.NissanUSA.com/bluetooth for instructions on connecting Nissan-recommended cellular phones.
- To switch to the Bluetooth® audio mode, press the **MEDIA** button repeatedly until the Bluetooth® audio mode is displayed on the screen.

BLUETOOTH AUDIO WITH NAVIGATION SYSTEM (if so equipped for models with 40 kWh battery)

1. Touch the  Audio key and touch the "Bluetooth Audio" key.
2. A prompt to connect your device will display.
 - If the device is already paired:
 - a. Touch the "Select Devices" key to play from an already paired device.
 - b. Select the desired device and touch the "Connect" key **1**.
 - c. The last played audio will start playing once the device is connected.
 - If the device needs to be connected:
 - a. Touch the  Settings key.
 - b. Touch the "Bluetooth" key.
 - c. Touch the "Connect Device" key.
- Touch the "BT Menu" key to view track listing, artist, songs or albums.
- Touch the "BT Settings" key to change which device is playing audio.

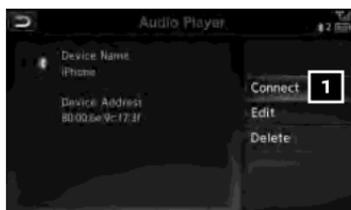


BLUETOOTH AUDIO WITHOUT NAVIGATION SYSTEM (if so equipped for models with 62 kWh battery)

- If the device needs to be connected, refer to the connecting procedure within this guide.
- To use Bluetooth® streaming audio:
 - Touch the  Audio key **1** on the launch bar, then touch the “BT Audio”



BLUETOOTH AUDIO WITH NAVIGATION SYSTEM (if so equipped for models with 62 kWh battery)

- If the device needs to be connected, refer to the connecting procedure within this guide.
- To use Bluetooth® streaming audio:
 - Touch the  Audio key **1** on the launch bar, then touch the “BT Audio” key.

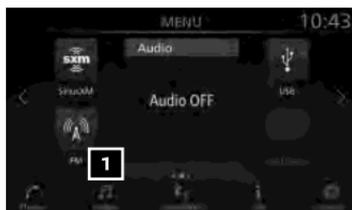

*Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the your NissanConnect® Manual (for Leaf or www.NissanUSA.com/bluetooth).



NAVIGATION SYSTEM (if so equipped for models with 40 kWh battery)

- Your Navigation System can calculate a route from your current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.

SYSTEM GUIDE

- To help promote safe driving, some functions cannot be operated or have limited operation when the vehicle speed is above 5 mph (8 km/h). The on-screen text and keys for these restricted functions will be grayed-out or muted and cannot be selected while driving. These functions will become available again when the vehicle speed is reduced to 5 mph (8 km/h). Voice commands may be available for some of the restricted functions. For more information, refer to your NissanConnect® Manual (for Leaf).

- 1 MENU** - Touch to access all available shortcut and widget items in the menu screen.
- 2 Touch-screen**
- 3 Map Menu** - Touch to access different options related to either a selected location by touch or one that you have navigated to. Some options include "Save Location", "Nearby POIs", "Map Icons" or "New Destination".
- 4 ▲ Navi** (Navigation) - Touch to access the Navigation function.
- 5 i Info** (Information) - Touch to display the vehicle, traffic (if so equipped) and weather (if so equipped) information.
- 6 ZOOM OUT**, **7 ZOOM IN** - Touch to adjust the map scale. When parked, you can pinch in or out to zoom on the screen.
- 8  Map** - Touch to display the map.
- 9  Settings** - Touch to display the system settings.

SETTING A DESTINATION

You can set a destination with your Navigation System using the touch-screen display or Voice Recognition.

- Touch-screen Display
 - Touch the **▲ Navi** key on the Launch Bar.
 - When a destination is set, touch the "New Destination" key and then select one of the displayed options for choosing your destination.
- Voice Recognition
 - Press the  button on the steering wheel, and after the tone, say "Navigation". From here, the system will give you the options available for setting a destination.

SETTING A DESTINATION USING POINTS OF INTEREST (POI)


- Touch-screen Display
 - Touch the **▲ Navi** key on the Launch Bar, and if a destination is already set, touch the "New Destination" key.
 - Touch the "Points of Interest" key and then select one of the displayed options for choosing your destination. To find a specific location, touch the "Spell Name" key and type the desired location's name using the on-screen keyboard.

■ Voice Recognition

- Press the  button on the steering wheel, and after the tone, say "Navigation" then say "Points of Interest". From here, the system will give you the options available for setting a POI.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to your NissanConnect® Manual (for Leaf).

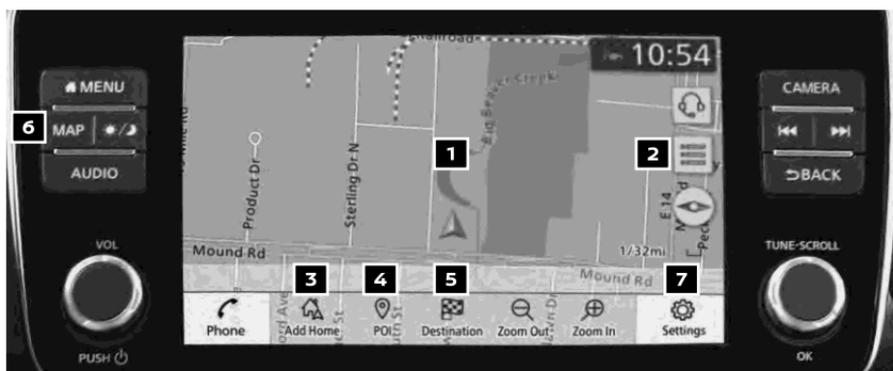

NAVIGATION SYSTEM (if so equipped for models with 62 kWh battery)

- Your Navigation System can calculate a route from your current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.
- To help promote safe driving, some functions cannot be operated or have limited operation when the vehicle speed is above 5 mph (8 km/h). The on-screen text and keys for these restricted functions will be grayed-out or muted and cannot be selected while driving. These functions will become available again when the vehicle speed is reduced to 5 mph (8 km/h). Voice commands may be available for some of the restricted functions. For more information, refer to your NissanConnect® Manual (for Leaf).

1 Touch-screen

2 Map Menu - Touch to access different navigation options such as "Save Location", "Points of Interest", "Map Icons" and "Cancel Route".

3 "Add Home" - Use to set home location. After location is set, this icon will display "Go Home".

4 "POI" - Searches for a Points of Interest to set as a destination.

5 "Destination" - Displays the destination menu.

SYSTEM GUIDE

6 **MAP** - Press to display the map.

7  **Settings** - Touch to display the system settings.

SETTING A DESTINATION

You can set a destination with your Navigation System using the touch-screen display or Voice Recognition.

■ Touch-screen Display

- Touch the "Destination" key on the Launch Bar and touch "Enter POI / Street Address". Enter a nearby location name or the street address of the desired location.

■ Voice Recognition

- Press the  button on the steering wheel, and after the tone, say "Navigation". From here, the system will give you the options available for setting a destination.

SETTING A DESTINATION USING POINTS OF INTEREST (POI)

■ Touch-screen Display


- Touch the "POI" key and then select one of the displayed options for choosing your destination. To find a specific location, touch the "Spell Name" key and type the desired location's name using the on-screen keyboard.

■ Voice Recognition

- Press the  button on the steering wheel, and after the tone, say "Navigation". Next, say "Nearby" or "POI by category". The system will give you the options available for setting a POI.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to your NissanConnect® Manual (for Leaf).

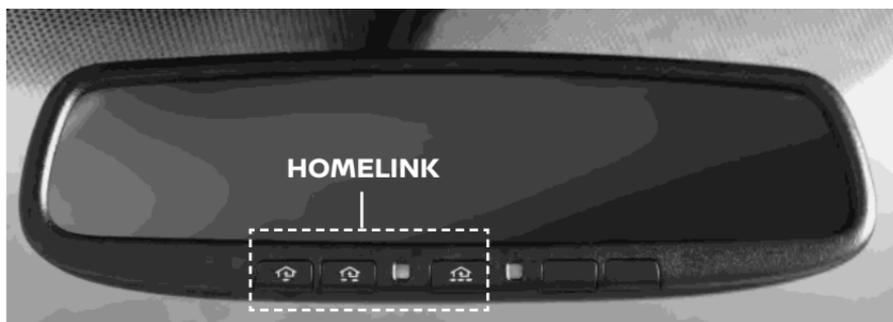

HOMELINK® UNIVERSAL TRANSCEIVER (if so equipped)

- The HomeLink® Universal Transceiver can learn and consolidate the functions of up to three different hand-held transmitters, operating items such as garage doors, property gates, outdoor and indoor lights or alarm systems.

- To program the HomeLink® Universal Transceiver:
 - Position the handheld transceiver 1-3 in (2-8 cm) away from the HomeLink surface, keeping the HomeLink indicator light in view.
 - Press and hold the desired HomeLink button and the handheld transmitter button simultaneously until the HomeLink indicator light flashes slowly and then rapidly.
 - Both buttons may be released when the indicator light flashes rapidly.
- To verify the programming is complete, press and hold the HomeLink button and observe the indicator light:
 - A solid, continuous light indicates the programming is complete and the HomeLink button will activate your device.
 - A blinking light that turns to a solid, continuous light after 2 seconds indicates additional steps are required to complete the programming.
- An additional person may make the remaining steps easier. To complete the programming process:
 - At the receiver of the device that you are programming to the HomeLink button, press and release the learn or smart button (the name may vary by manufacturer, but it is usually located near where the hanging antenna wire is attached to the unit). You have approximately 30 seconds to initiate the following step.
 - Press and hold the programmed HomeLink button for 2 seconds and release.
- You may have to repeat the previous two steps up to three times to complete the programming process. HomeLink should now activate your device.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual, the HomeLink website at www.homelink.com or call 1-800-355-3515.

MEMO

MEMO

MEMO

MEMO

MEMO



Helpful Resources

Below is a list of helpful resources that can be used to learn more about the vehicle's systems and feature operations.

- Vehicle Owner's Manual
- NissanConnect® Manual (for Leaf)
(if so equipped)
- Printed Quick Reference Guide (this document)
- www.NissanUSA.com/bluetooth
- www.NissanUSA.com/connect
- www.youtube.com/user/NissanUSA
- Nissan Consumer Affairs: 1-800-647-7261
- Electronic Quick Reference Guide
(Use Quick Response (QR) code or URL below.)
- Nissan Quick Guide (available in the App Store® or Google Play™ store for download to your smartphone)



To view detailed instructional videos,
go to www.nissanownersinfo.mobi/2019/leaf
or snap this barcode with an appropriate barcode reader.



This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain, with this Quick Reference Guide, all revision updates sent to you by NISSAN to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the NISSAN website at <https://owners.nissanusa.com/owners/navigation/manualsGuide>. If you have questions concerning any information in your Owner's Manual, contact NISSAN Consumer Affairs. See the NISSAN CUSTOMER CARE PROGRAM page in the Owner's Manual for contact information.

Nissan, the Nissan Brand Symbol, Z and Nissan model names are Nissan trademarks.

© 2018 Nissan North America, Inc.

QR19EA OZETU1

Printing: December 2018

